

IMPORTANT SAFETY INSTRUCTIONS


- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.

INSTALLATION INSTRUCTIONS

1. Measure Canopy (D) height with measuring tape. Adjust hex nut on Nipple (E) furthest away from Mounting Plate (A) to the height of measured Canopy (D) plus 1/4" to allow Nipple (E) to protrude through Canopy (D) during installation.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Nipple (E) pointing away from junction box.
3. Place Canopy (D) against the ceiling by inserting Nipple (E) through the appropriate hole located on Canopy (D). Adjust Nipple (E) and hex nut until 1/4" of the threaded portion is visible. Remove Canopy (D) and Mounting Plate (A) from the ceiling and set them aside.
Note: If 1/4" of Nipple (E) is not visible, remove Canopy (D) and re-adjust hex nut on Nipple (E) to proper length.
4. Secure Side Panels (L) to Top Frame (J) and Bottom Frame (K) with Side Caps (N).
5. Determine hanging length by selecting desired Downrods (G). Secure them together, then secure Sloped Ceiling Adapter (I) on top.
6. Thread Wires (H) from top of Bottom Frame (K) up through Downrods (G) and Sloped Ceiling Adapters (I). Secure Downrods (G) to the top of Bottom Frame (K). Pull through any necessary Wires (H).

7. Thread Wires (H) through one of the holes in Canopy (D). Ensure the threading from both Sloped Ceiling Adapters (I) protrude through Canopy (D).
8. Slide Lock Washers (L) over the threading of each Sloped Ceiling Adapter (I) until flush with Canopy (D).
9. On Sloped Ceiling Adapter (I) with Wire (H), slip end of Support Cable (M) down towards Lock Washer (L). Screw Hex Nut (P) over Support Cable (M) and secure tightly in place.
10. Screw Hex Nut (P) over Lock Washer (L) on remaining Sloped Ceiling Adapter (I) to secure in place.
11. Use wire cutters to cut Wire (H) 10" beyond the length of Downrods (G) to allow for easier wire connection.
12. With a drill, make a hole in your junction box and insert plastic anchor. With the help of a friend, lift fixture.
13. Thread Support Cable (M) through Mounting Plate (A). Attach Washer (N) and Support Cable (M) from Canopy (D) onto the junction box using Screw (O). Secure tightly.
14. Re-secure Mounting Plate (A) to the junction box using Mounting Screws (B) provided.
15. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).

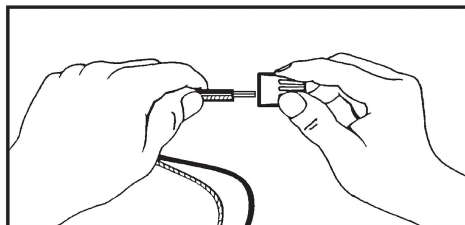

Connect to BLACK house wire	Connect to WHITE house wire
BLACK 	WHITE 
PARALLEL WIRE (ROUND & SMOOTH) 	PARALLEL WIRE (RIBBED / RIDGED) 
WHITE OR GREY WITH TRACER 	WHITE OR GREY WITHOUT TRACER 
BROWN, GOLD OR BLACK WITHOUT TRACER 	BROWN, GOLD OR BLACK WITH TRACER 

- A. Connect the ground wire (bare copper or green) from your fixture to the:
 - 1) ground wire in the junction box, or
 - 2) ground screw in the junction box
- B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).
- C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

16. Place all Wires (H) and Wire Connectors (C) back into the junction box.
17. Place Canopy (D) against the ceiling, ensuring Nipple (E) is protruding through the hole in Canopy (D). Secure the fixture in place to Nipple (E) with Decorative Cap (F).
Note: If fixture doesn't sit flush against ceiling, remove fixture and readjust Nipple (E) and hex nut.
18. Install bulbs (not included) into the Sockets (K).

Enjoy your new fixture!

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

