




 



 








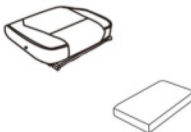

Assembly Instruction



Accessories List

(1) Central Base Buckle	(2) Central Base Tube	(3) Split Base Tube	(4) 5 Castors	
				
(5) Air Rod	(6) Base Plate	(7) 2 Armrests	(8) Backrest	
				
(9) Seat Cushion	(10) Steel plate	(11) 4 Decoration Caps	(12) Hexagon Wrench	
				
(13) 5 Screws (M6x25)	(14) 4 Screws (M8x35)	(15) 3 Screws (M8x20)	(16) 4 Screws (M6x25)	(17) 4 Screws (M6x25)
 M6×25	 M8×35	 M8×20	 M6×25	 M6×25
				(18) 4 Screws (M6x20)  M6×20

Notice

Do not stand in this chair or use the chair as a step ladder use it as chair only. This chair is designed for one person to use at a time.

This chair is designed for one person weighing up to 300lb(136kg).

Do not use this chair unless all bolts, screws and knobs are firmly secured.

Check all bolts,screws and knobs every 90days.Tighten if any are loose.

Failure to follow these instructions may result in serious injury or death of yourself and people around you.

Some of the parts are heavy and/or have shape edge,please install it carefully to avoid hurting you and people around you.

Instructions for Use



Upward adjustment



Downward adjustment



Backrest adjustment




300LB(136kg)

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order.After the assembly, keep the instruction properly. Make sure all the parts are included (17kinds in total).

Assembly Instruction

Step 1


Take out Split Base Tube(3), Central Base Tube(2) and Central Base Buckle(1). Insert Split Base Tube(3) into Central Base Tube(2) as shown. You can see there are screw holes. Align with the holes, tighten Screws M6X25mm(13) with Hexagon Wrench (12) to fix 5 Split Base Tube (3) to Central Base Tube (2). Repeat it five times. Finally, attach the Central Base buckle (1) to the Central Base Tube (2).

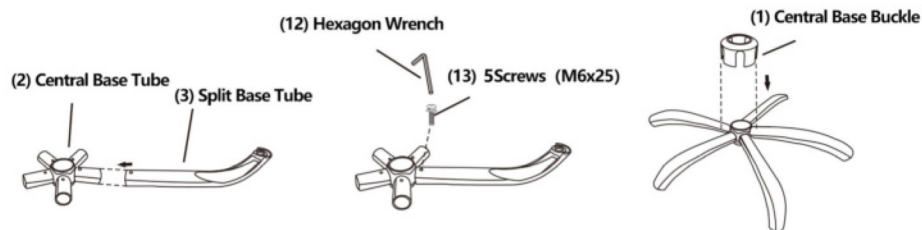

Step 2


Take out Castors (4). Insert Castors (4) into part of Step 1 as shown. There are 5 Castors(4) need to be inserted.

* Caution: Confirm Castors (4) must be inserted deeply, Otherwise the castors could easily fall out and the chair could fall down.
Take out Air Rod (5). Put Air Rod (5) into the hole of Central Base Tube (2) as shown. Put it aside and we'll use it in Step 5.

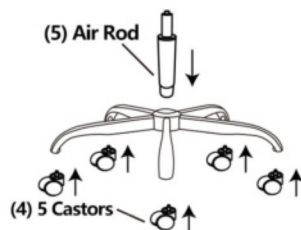

Step 3


Fix Base Plate (6) to the bottom of Seat Cushion (9). Tighten the Screws M6X25(16) with Hexagon Wrench (12) firmly. Fix footrest Cushion to the footrest frame, Tighten the Screws M6x20(18) with Hexagon Wrench(12) firmly.

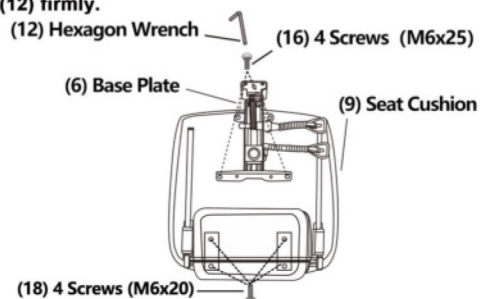

Step 4

First fasten the cushion (9) with steel plate (10) and tighten the M8X25 (15) screw with Hexagon Wrench (12). Then connect the backrest (8) and steel plate (10) and tighten the M6X25 (17) screws with Hexagon Wrench (12). Pick up the air rod (5) and the center base tube (2) from step 2. Insert the air rod (5) into the base plate (6), The base plate (6) has holes in the middle. Press the cushion (9) from top to bottom, with all the strength of your body.

Please note: The Steel Plate has 3 holes, and the Base Plate has 5 holes (the two holes at the lower end do not need to be used; only align the 3 holes of the Steel Plate).

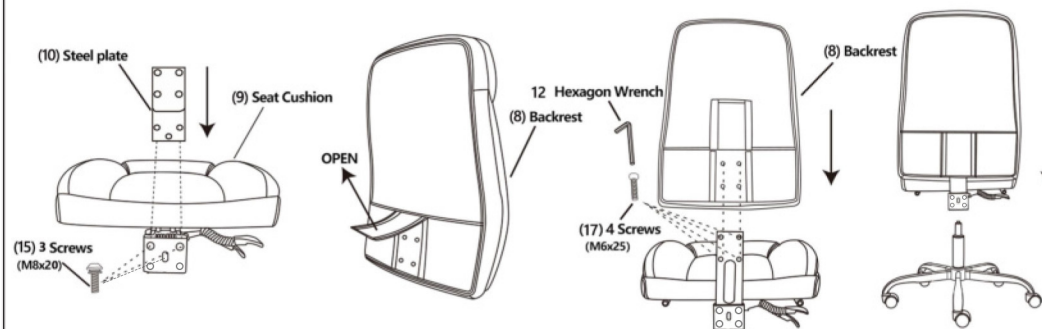

Step 5

Tighten the Screws M8X45(14) with Hexagon Wrench (12) and fix the 2 armrests (7) between the backrest (8) and the seat cushion (9). Tighten the 4 screws firmly and then cover the screws with Decoration Caps(11). The assembly is complete now.

*Caution: When you connect the armrest with the cushion, if the hole position of the armrest is not aligned with the hole position of the cushion, please force the armrest to align with the hole position of the cushion and install the screw.

*Caution: After the product is fully assembled, check the screws for tightening.

