 


Assembly Instructions

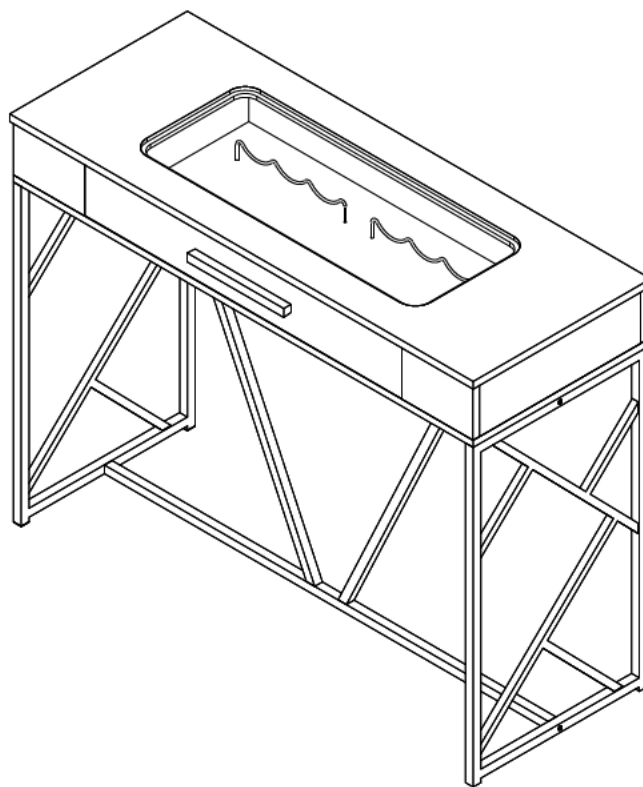

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

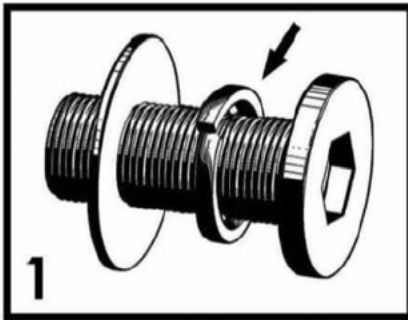

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

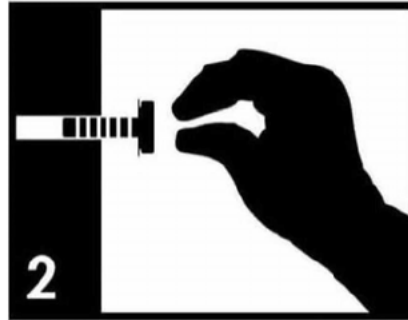

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step 1s completed or when instructed to do so.

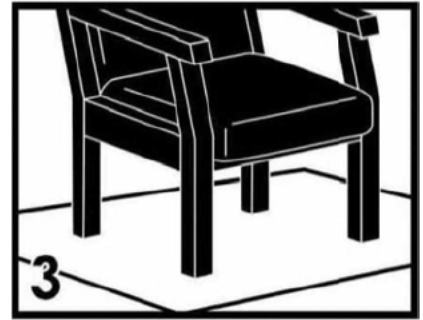

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

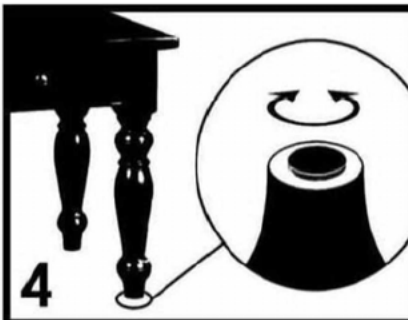

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

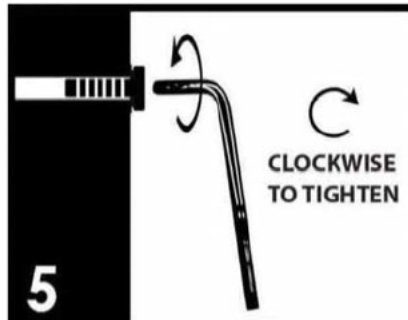

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

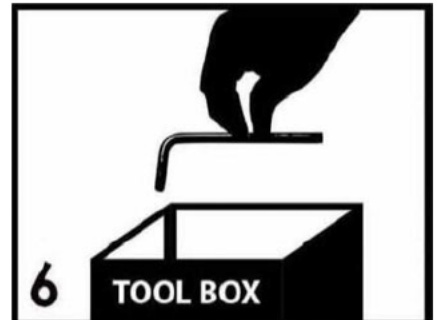


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

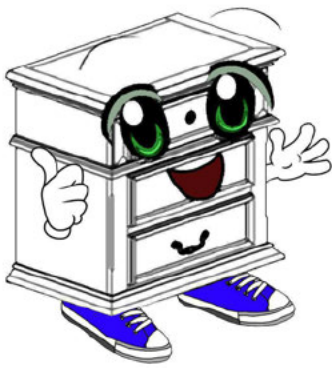

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List

	#1 x 1pc Top Panel
	#2 x 1pc Left Panel
	#3 x 1pc Right Panel
	#4 x 1pc Middle Left Panel
	#5 x 1pc Middle Right Panel
	#6 x 1pc Back Panel
	#7 x 2pcs Front Panel
	#8 x 1pc Bottom Panel

Parts List

	#9 x 1pc Front Drawer
	#10 x 1pc Left Drawer
	#11 x 1pc Right Drawer
	#12 x 1pc Back Drawer
	#13 x 1pc Bottom Drawer
	#14 x 1pc Glass
	#15 x 2pcs Small Wine Holder
	#16 x 2pcs Large Wine Holder

Parts List



#17 x 1pc
Left Slide Rail



#18 x 1pc
Right Slide Rail



#19 x 1pc
Handle



#20 x 1pc
Top Crossbar



#21 x 1pc
Bottom Crossbar



#22 x 2pcs
Support Crossbar



#23 x 2pcs
Side Frame

Hardware List



#A x 16pcs
Bolt 3/16" X 40mm



#B x 16pcs
Nut ϕ 15 X 12mm

 


#C x 12pcs
Wood Dowel ϕ 8X30mm

Hardware List



#D x 10pcs
Screw 12mm



#E x 28pcs
Screw 1/4"x32mm



#F x 2pcs
Bolt 3/16" X 21mm



 
#G x 2pcs
Bolt 1/4"x12mm



#H x 7pcs
Bolt 1/4"x28mm



#I x 4pcs
Bolt 1/4"x47mm



#J x 4pcs
Cap 20x20mm



 
#K x 1pc
Glue




#L x 1pc
Allen Wench 4mm



#G x 2pcs
#H x 2pcs

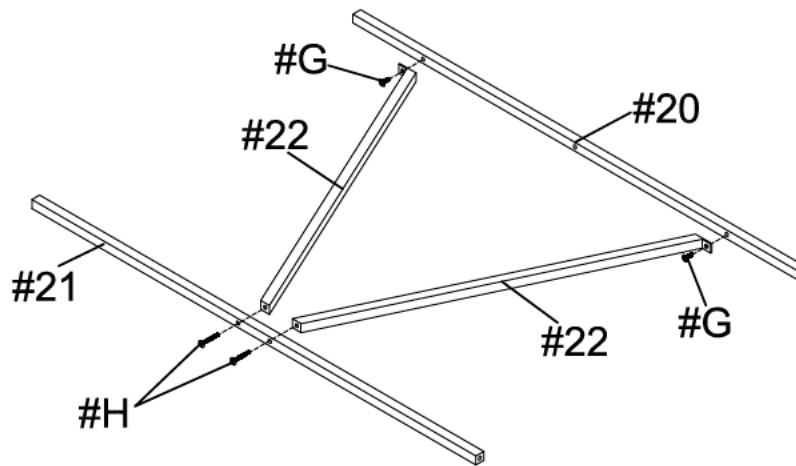


#I x 4pcs
#J x 4pcs

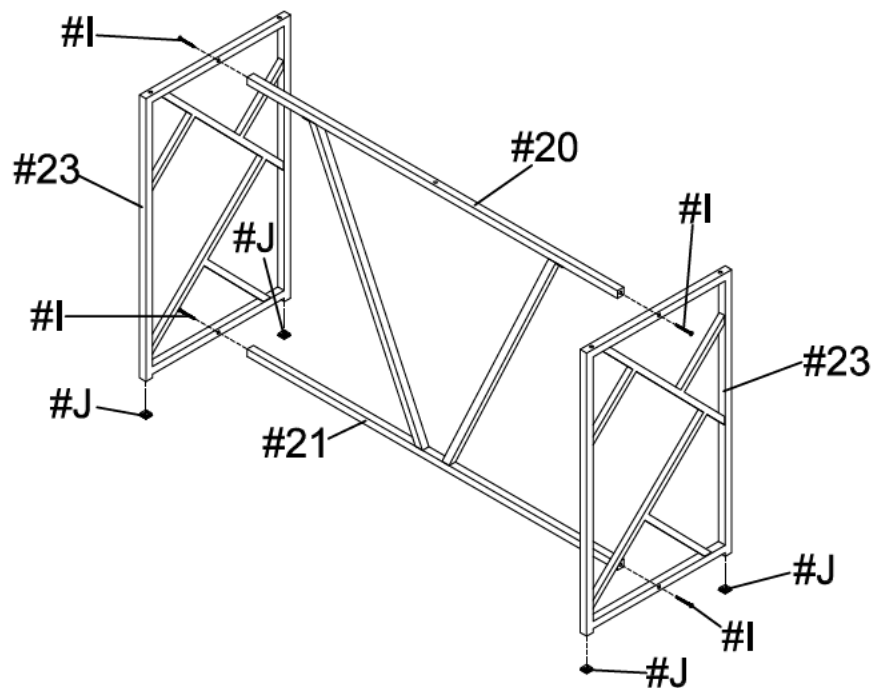 




#A x 9pcs
#C x 10pcs

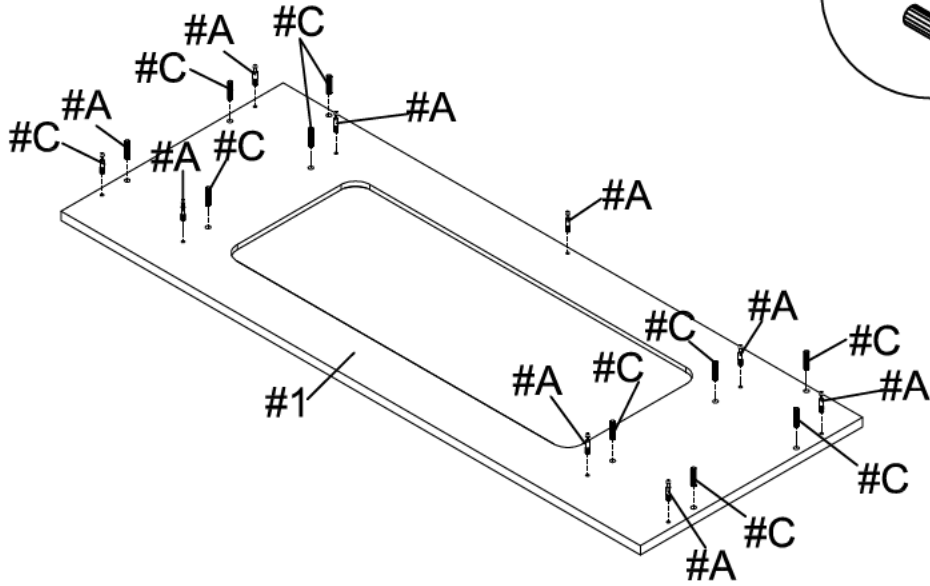 


#D x 6pcs

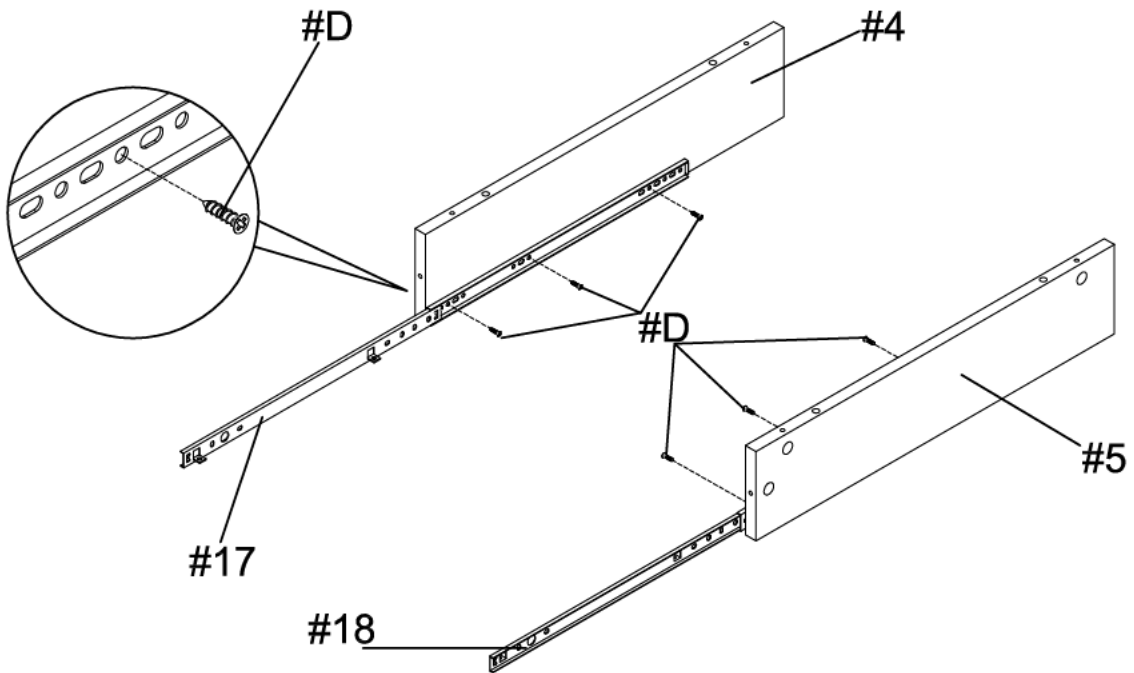 




#B x 9pcs

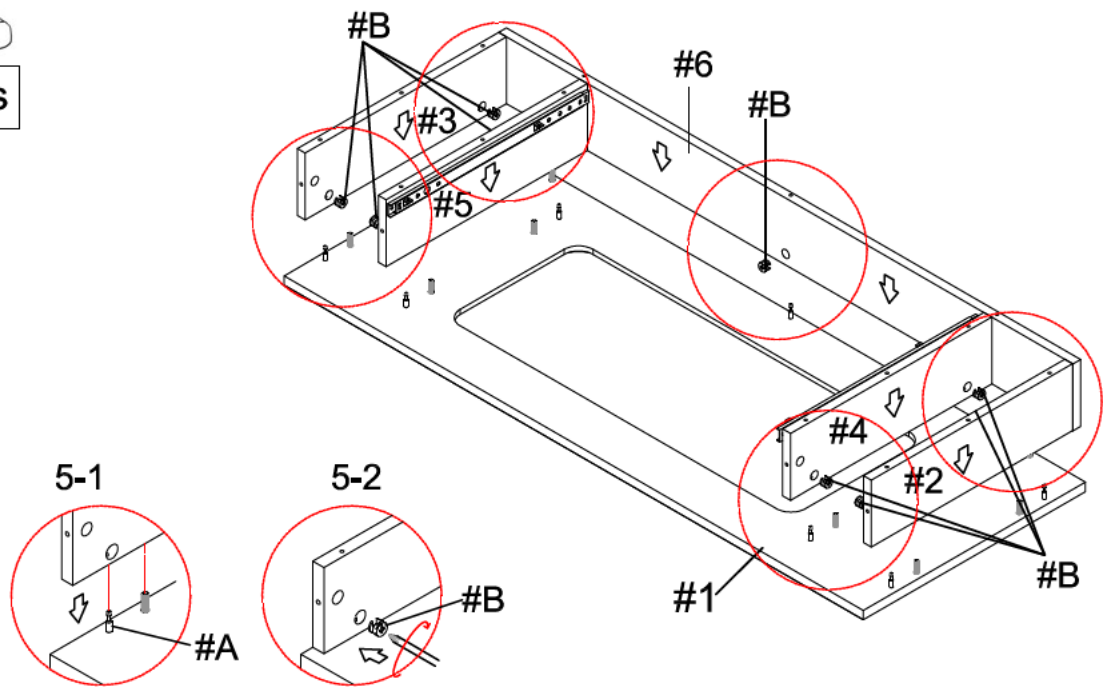 


#A x 4pcs
#B x 4pcs

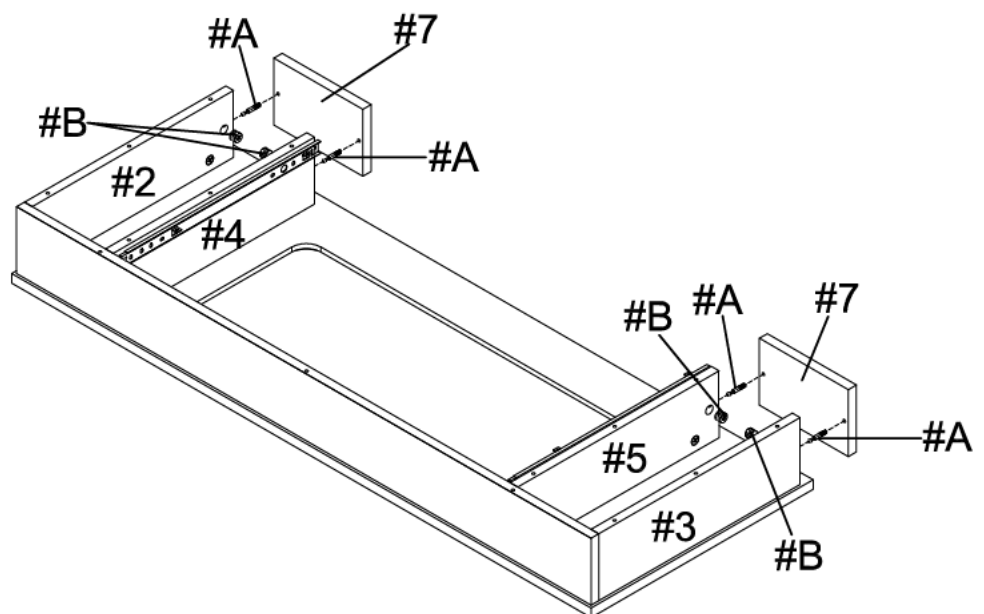 




#E x 15pcs

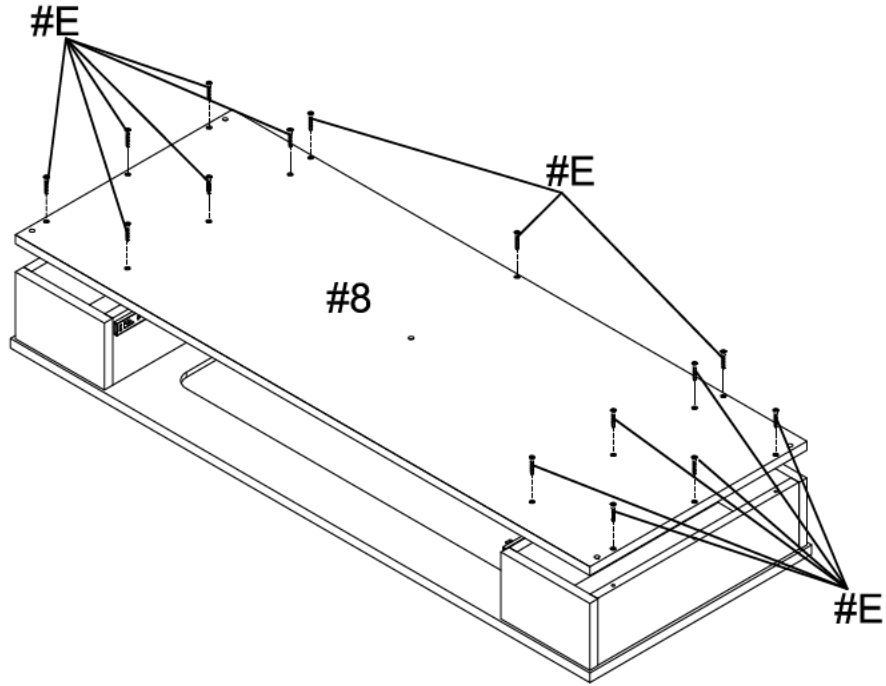 


#A x 3pcs
#C x 2pcs

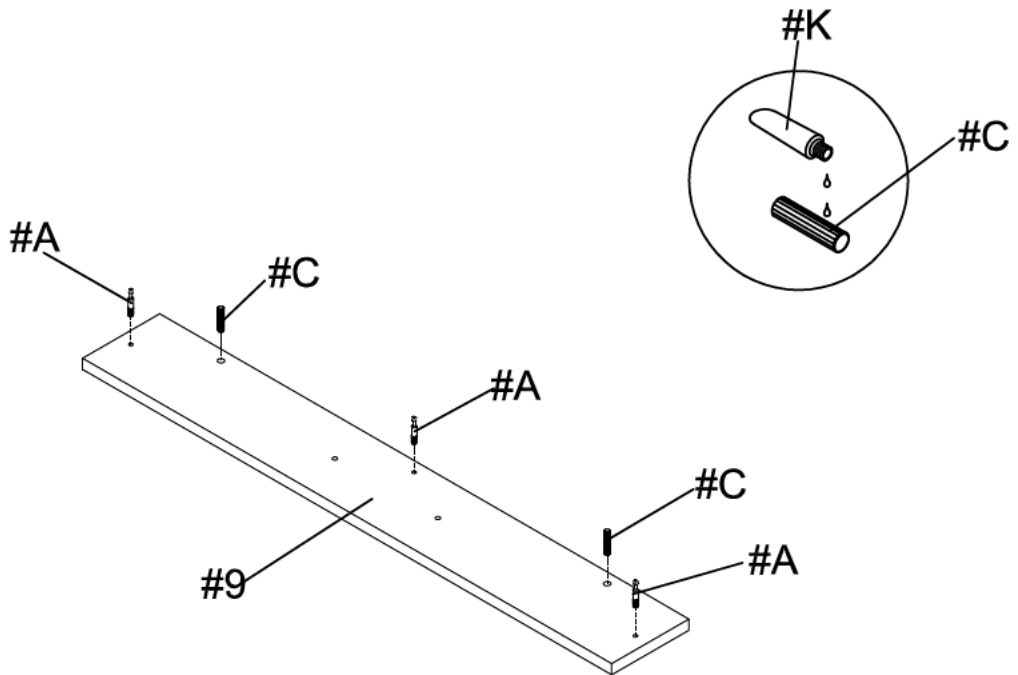 




#B x 2pcs
#E x 4pcs
#F x 2pcs

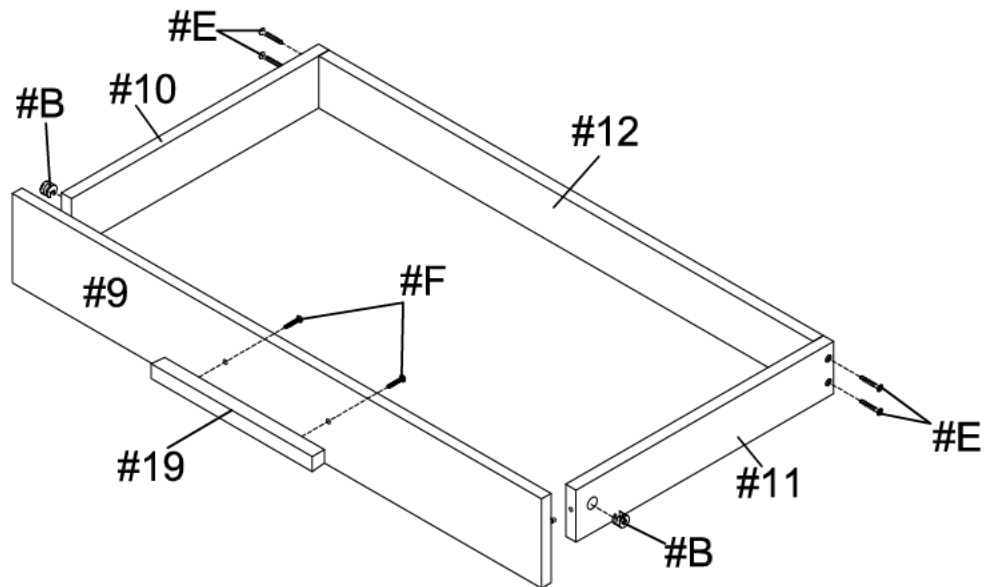 


#B x 1pc
#E x 9pcs

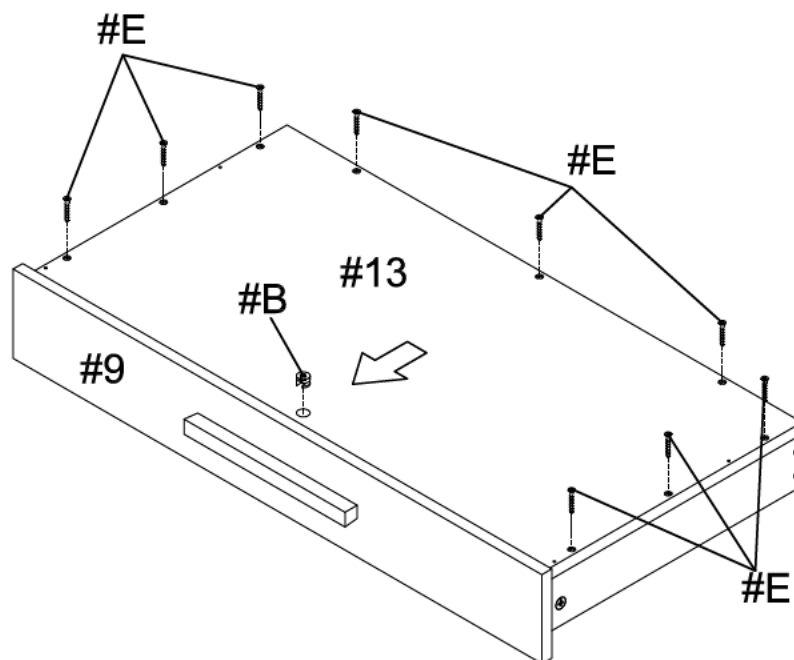 



#11
 
#H x 5pcs

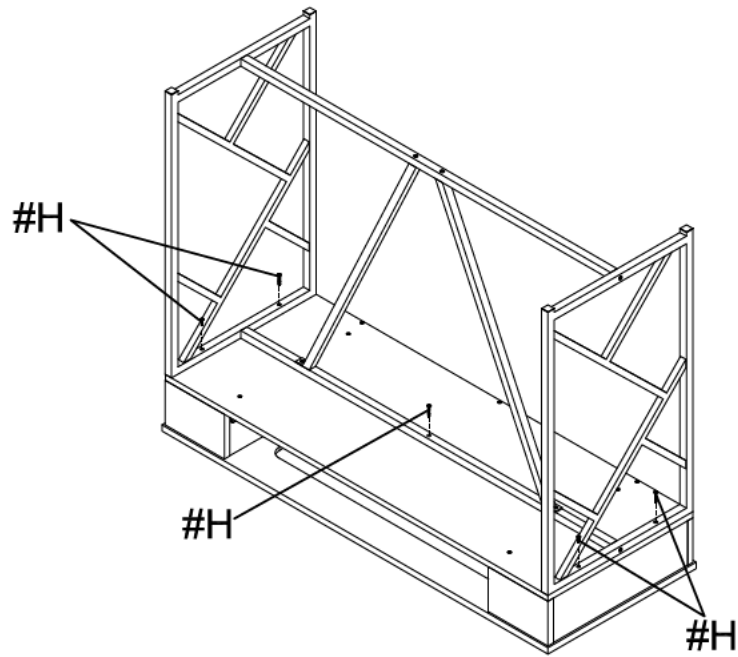

#12

#D x 4pcs

