







 





CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.
Remove wooden furniture from standing water. Dust regularly with small brush or vacuum
Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		1X
B	Leg Frame		2X
C	Back frame		1X
D	Cross bar of leg		2X
E	Cross bar of leg		1X
H1	Screw -1	 6x50mm	4X
H2	Allen bolt L	 6X70mm	4X
H3	Allen bolt L	 6x55mm	7X
H4	Horizontal spread		6X
H5	Allen tandu L		4X
H6	Wood dow		2X
H7	Allen key		2X

Product Dimensions:22.83" W x 39.37" D x 40.55" H

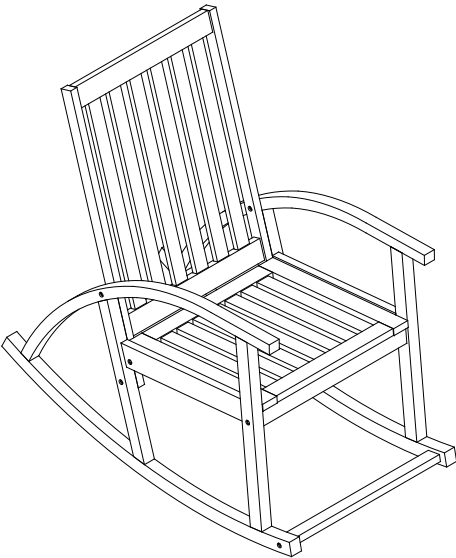


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

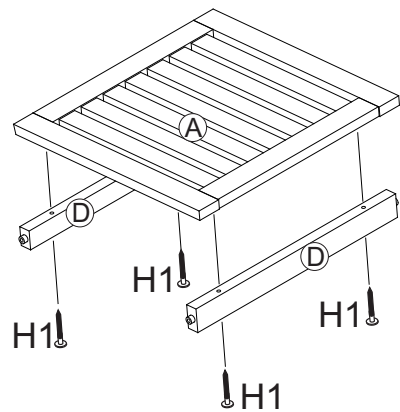

Step 1

Attach seat frame (A) to crossbars of leg (D), use screws-1 (H1) and tighten with allen key(H7)


2

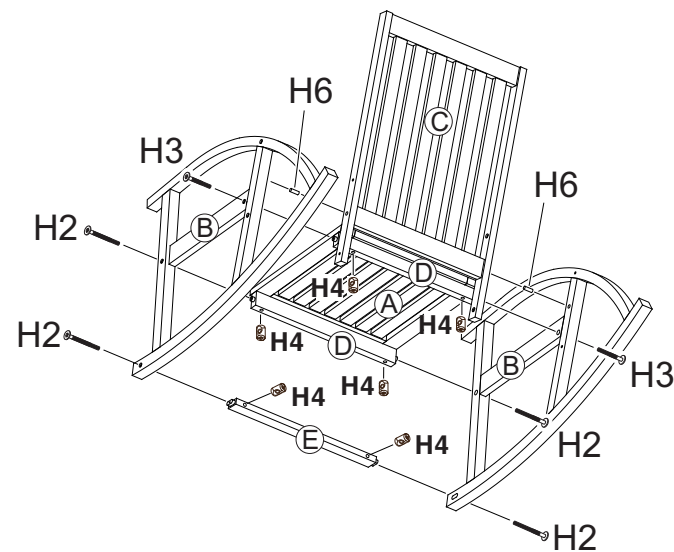

Step 2

Insert wood dows (H6) into the holes on (C), attach (B) to (A) by using (H3), then use (H2) to connect (B) and (E).

3

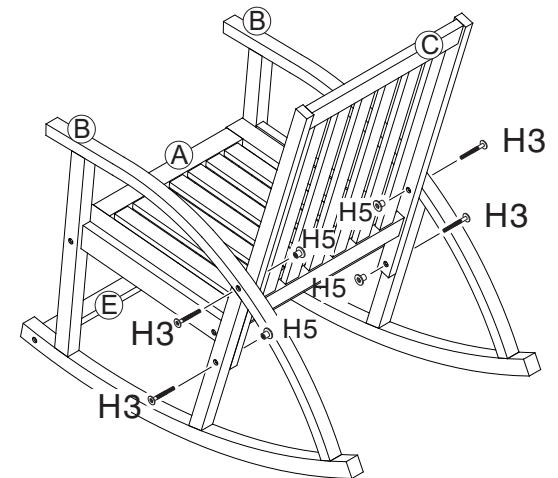

Step 3

Use allen bolts (H3) and allen tandus(H5) to connect (C) and (B)