 
 

 






Description	Instruction	Qty
Radiator		1
Bracket		4
Washer		4
Fixing Screw	 57mmx10mm	8
Air Vent		1
End Plug		1



SINGLE



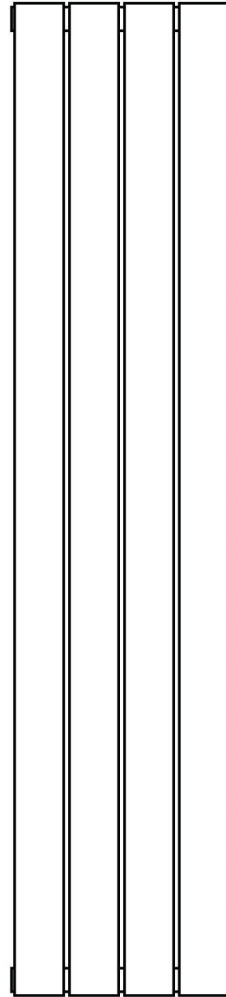DOUBLE

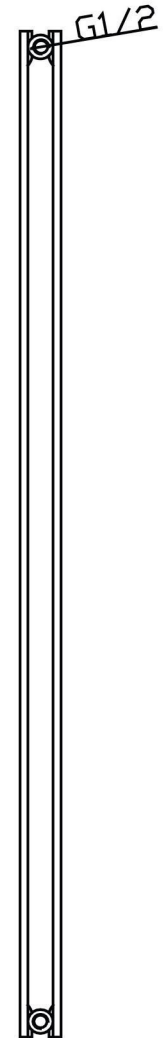

Prior to installation

Check that all of the parts are enclosed as per the contents table.

Ensure that the radiator is positioned so that it can easily be connected to the central heating system.

1. Select desired position for radiator - ensuring that the wall is strong enough to support the weight.
2. Mark out where brackets need to be positioned - checking that the top and bottom pair are level.
3. Drill hole and insert rawl plug into it. Use diameter of 10mm's drill machine.
4. Insert the screw through the washer then the bracket and into the rawl plug.
5. Repeat this for all 4 brackets.
6. Insert the air vent and the end plug into the top two threads on the radiator.
7. Hang radiator on brackets and plumb into your central heating.
8. Bleed out any air bubbles once plumbed in using the air vent plug.

