Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.


Club Chair

Parts List				
Label	Picture	Description	QTY	
Α		Backrest	1	
В		Chair Seat	1	
С		Seat Cushion	1	
D		Front Leg	2	
E		Hind Leg	2	

Hardwares				
Label	Picture	Description	QTY	
1)		Gasket	7	
2		Screw(M8*40mm)	1	
3		Silicon Gasket	3	

Assembly Preparation

Before Begining Assembly:

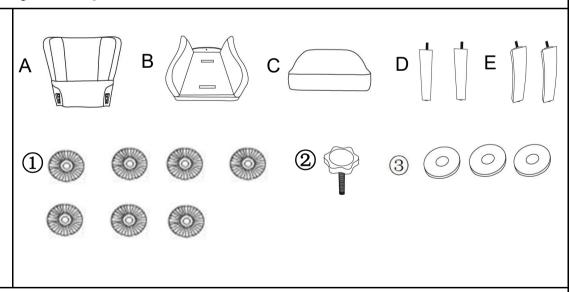



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-



· Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

Assembly Steps Backrest (A) Chair Seat (B) Seat Cushion (C) Front Leg(D) **FRONT FACING**

This Club Chair has multiple parts and may require up to 30 minutes to assemble.

To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1


Position the Chair Seat(B) on a clean, non-marring surface, as shown.

Do not place on surface that can scratch or damage the upholstery.

Unzip to open and remove the 4 legs and Hardware.

Close the pouch before assembling.

Step 2

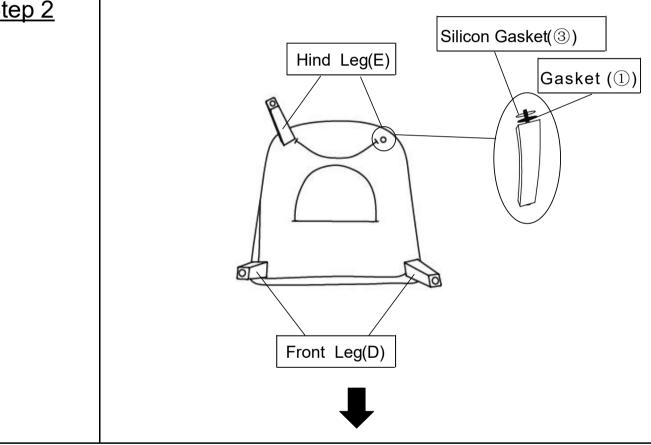

Install the first Front leg(D) onto the Chair(B) by placing one Gasket(1) onto the threaded stem. Insert the threaded stem of the Front Leg(D) into one of the front mounting positions of the Chair(B), then tighten by turning the Leg clockwise until it is completely secure.

Repeat this process with the remaining Front Leg(D).


Install the Hind leg(E) into the Chair(B) by placing one Gasket(①) and one Silicon Gasket(③) onto the threaded stem.

Insert the threaded stem of the Hind Leg(E) into one of the back mounting positions of the Chair(B), then tighen by turning the Leg clockwise until it is completely secure.

Repeat this process with the remaining Hind Leg(E).

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobble.

Some Legs may need more than one whilst some legs may not need any.

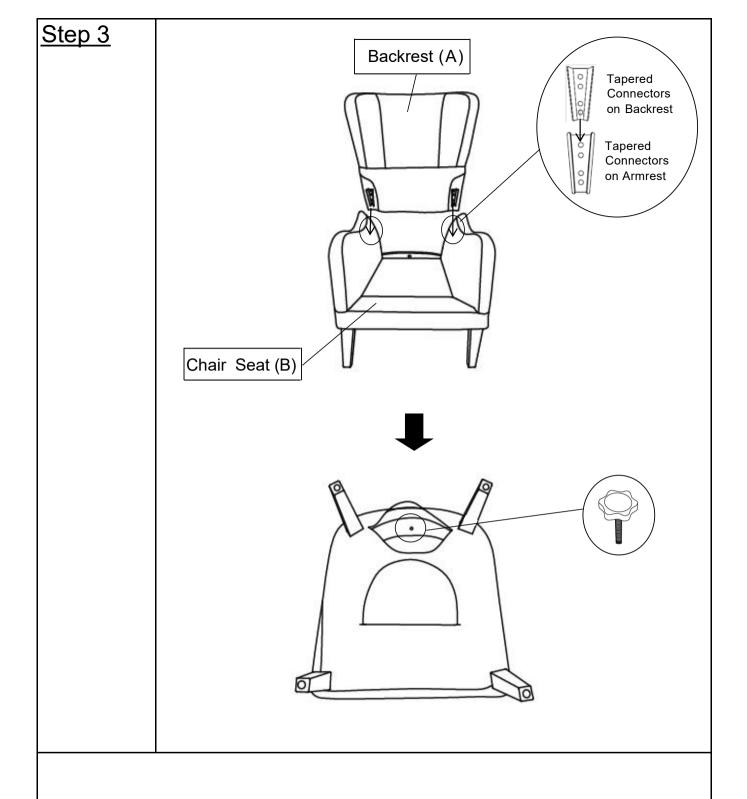

With assistance from an adult partner, lift the Backrest(A) up. Align the Tapered Connectors on the Backrest(A) and the Chair Seat(B).


Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.

Put the Club Chair facedown as pictured above. Lock Seat(B) to Backrest(A) using a Screw(②). Tighten the Screw fully.

Note: Make sure the Tapered Connectors on the Backrest(A) fully lock into the Tapered Connectors on the Seat(B).

Note: If the bottom of the Backrest (A) completely touches the Seat (B) edge, and it feels secure, not loose, when pushing the Backrest(A) backwards, then the Backrest(A) is fully locked in position.

Step 4

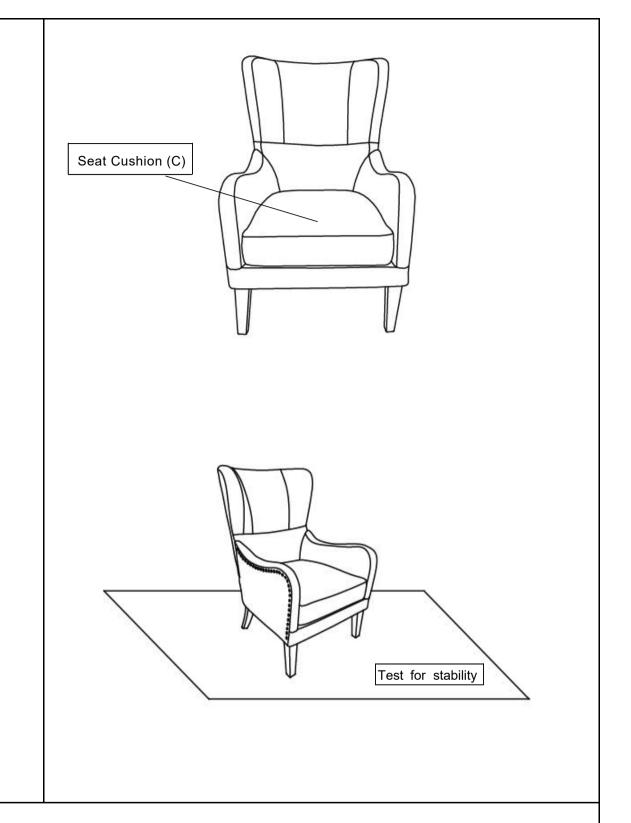

Place the Seat Cushions(C) onto the Club Chair.

Your Club Chair is ready for use.
This Club Chair can only be used on a flat, level surface.