 


FARINI

Assembly Manual

TV Stand


TS011

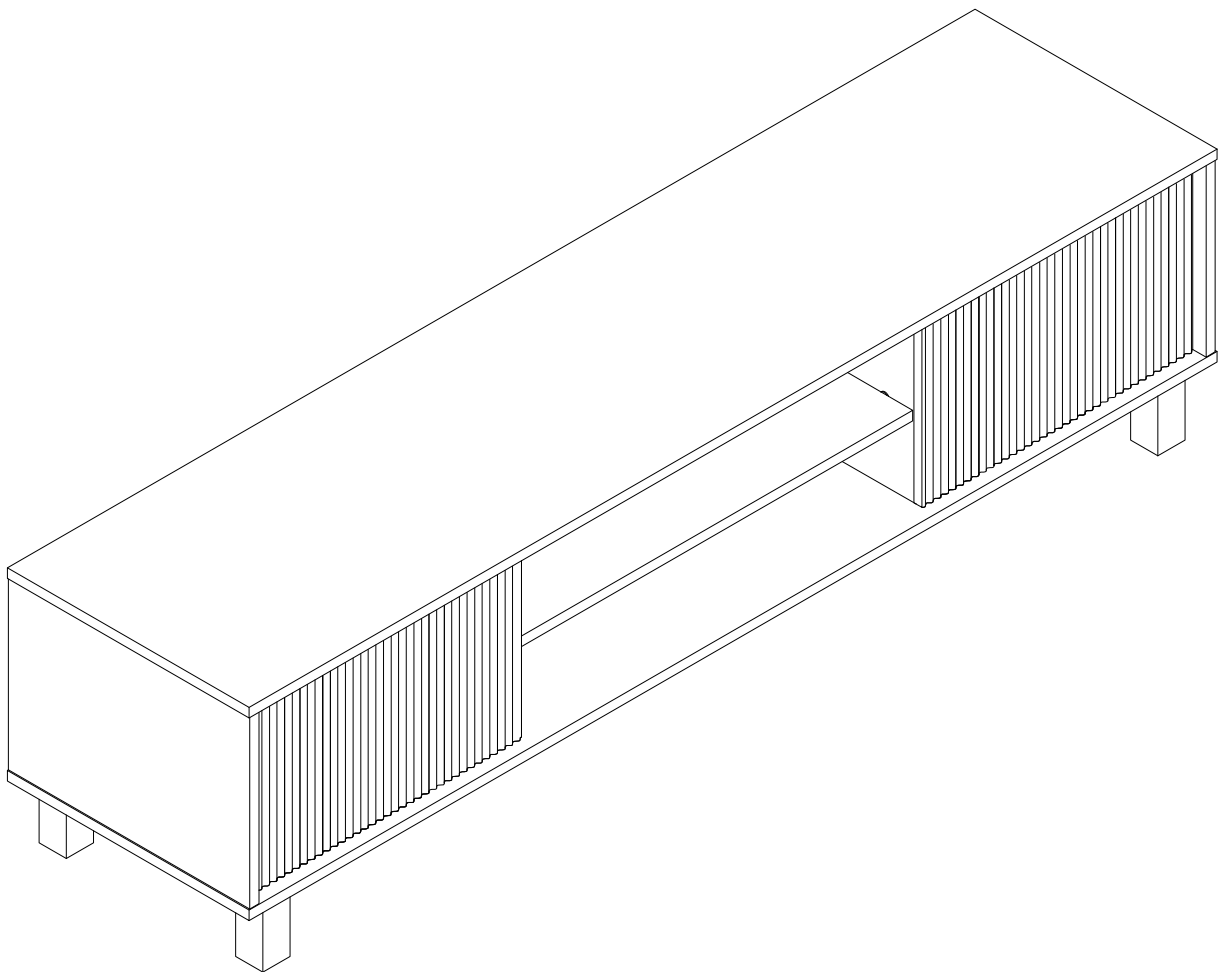

Please read this manual carefully before any operation and keep it properly for future use.


Customer Service: ecservice@isunon.com

 Exploded View

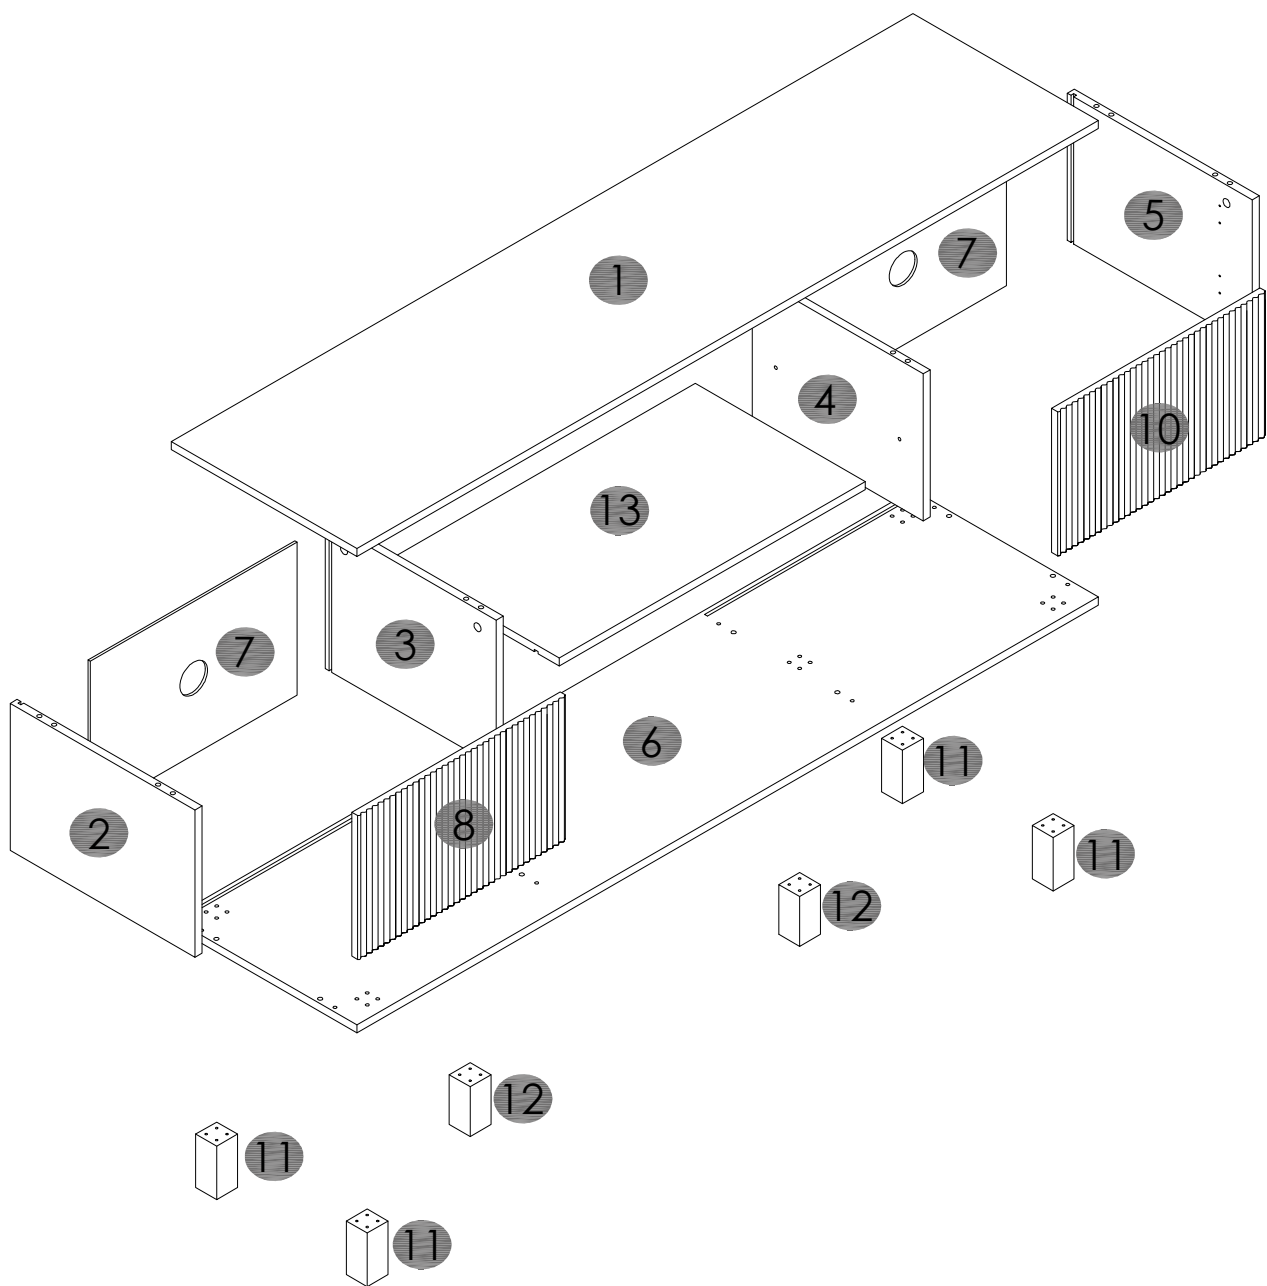


Warnings

  ATTENTION:

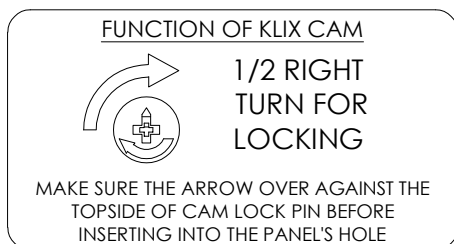

 
 
 
 

 

 
 


IMPORTANT!

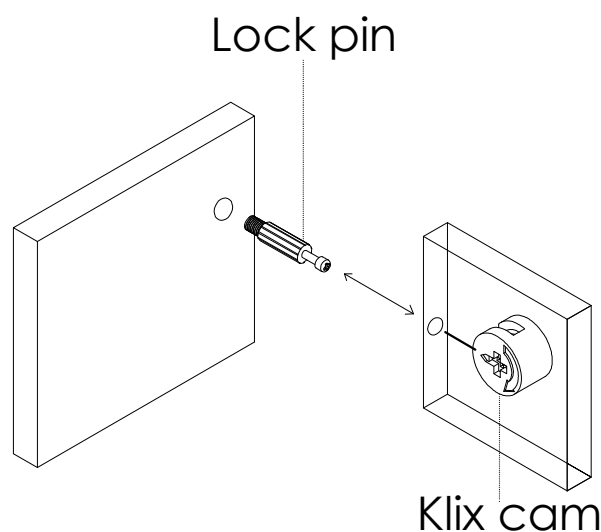After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.




Components List
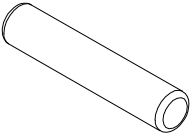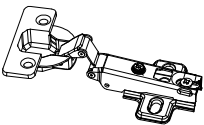
| | | | |
|---|---|--|---|
|  |  |  |  |
| A Cam lock pin (M6*40(*8+2)) | B Klix cam (Ø15*9.5(*8+2)) | C Screw (M5*40(*32+2)) | D Screw (M4*14(*16+2)) |
|  |  |  |  |
| E Wooden pin (*16+2) | F Hinge(*4) | G Shelf support (*4) | H Adjuster foot (*2) |
|  |  |  | |
| I felt pad(*4) | J backboard fastener (*8) | Z Screwdriver (*1) | |

Components List


45_{min}

 Assembly Time




Two People

 1

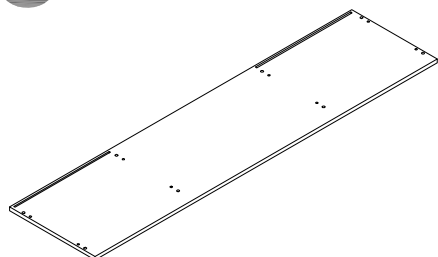


1PC

 2

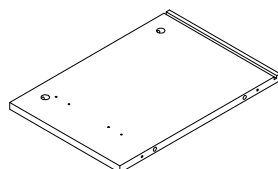


1PC

 3

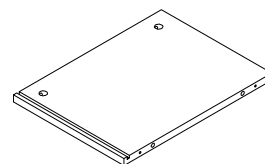


1PC

 4

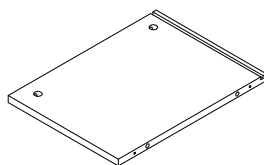


1PC

 5

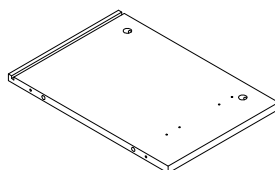


1PC

 6

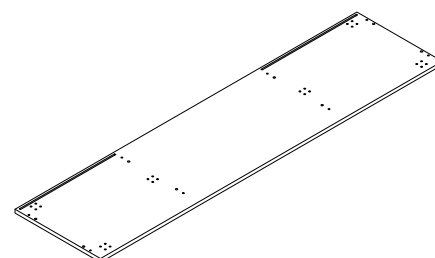


1PC

 7

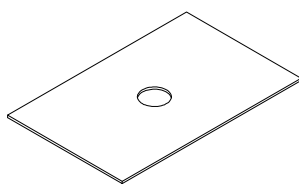


2PCS

 8

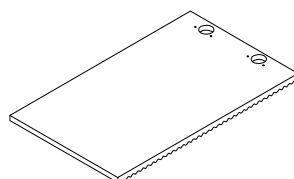


1PC

 10

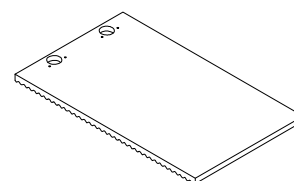

4PCS

 11




4PCS

12



2PCS

 
13

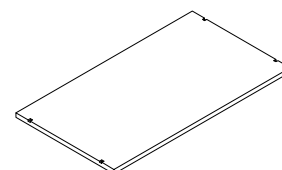

1PC


Assembly Instruction

 STEP 1 Insert the wood chips(E) into the boards(2&3).

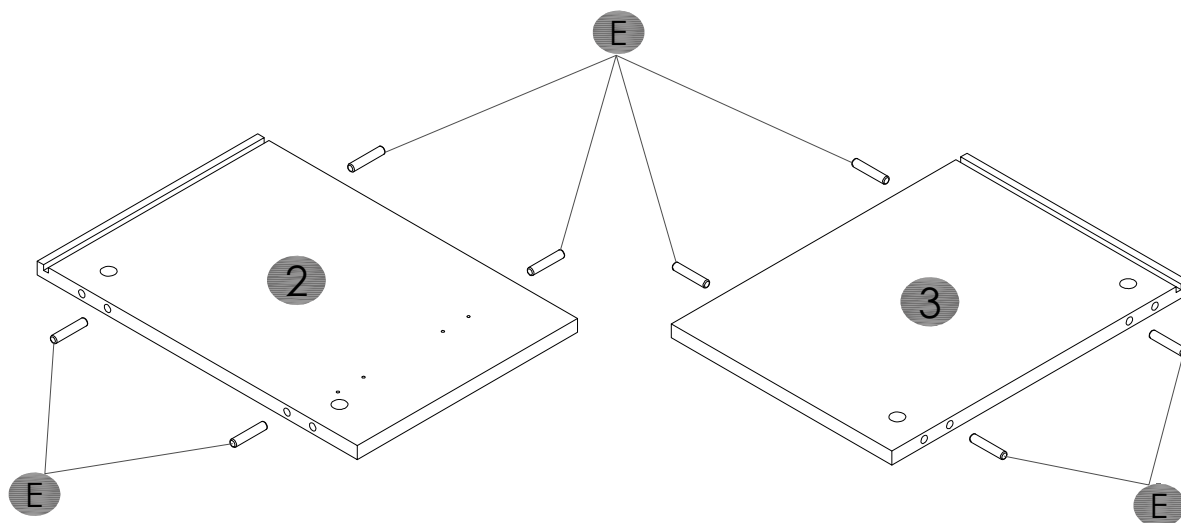

E  X 8

 STEP 2 Insert the wood chips(E) into the boards(4&5).

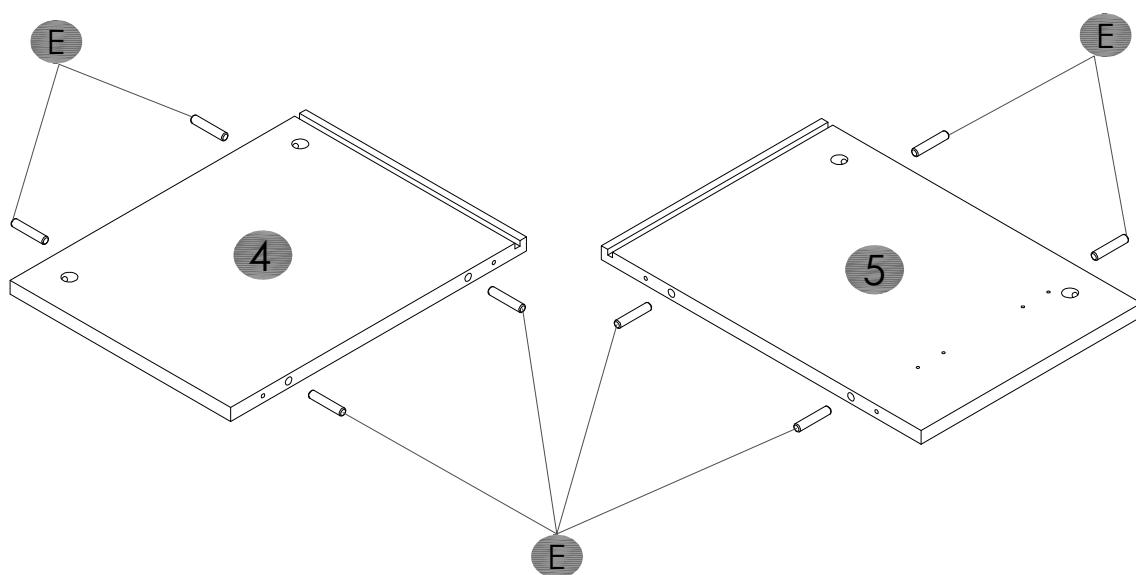


E  X 8

Assembly Instruction

STEP 3

 Attach solid wood legs(11&12) to board(6) using screws(C).

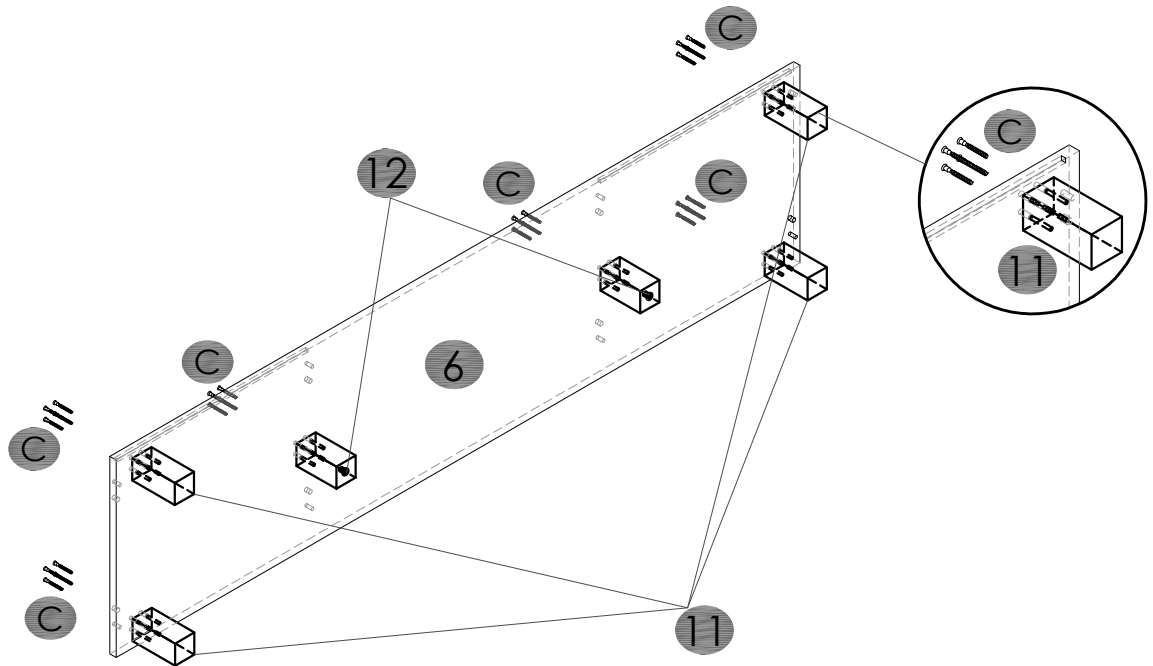


C



X 24

STEP 4

 As shown in the figure, install the adjustment feet(H) onto the solid wood legs (12).then peel off the sticker on the foot pad (I) and stick it to the other end of the solid wood legs(11).

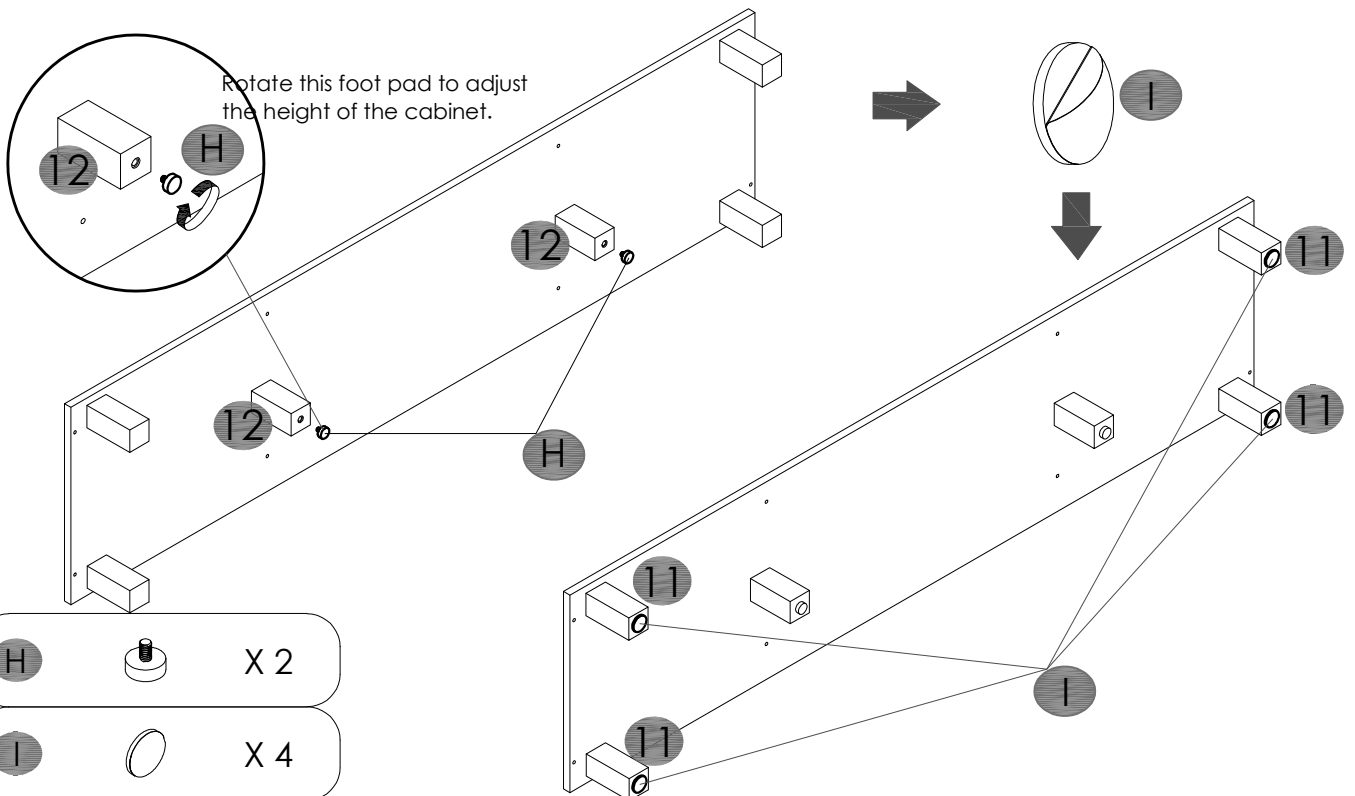

H



X 2

I

 


X 4


Assembly Instruction

STEP 5

Attach boards(2&3&4&5) to board(6) using screws(C).

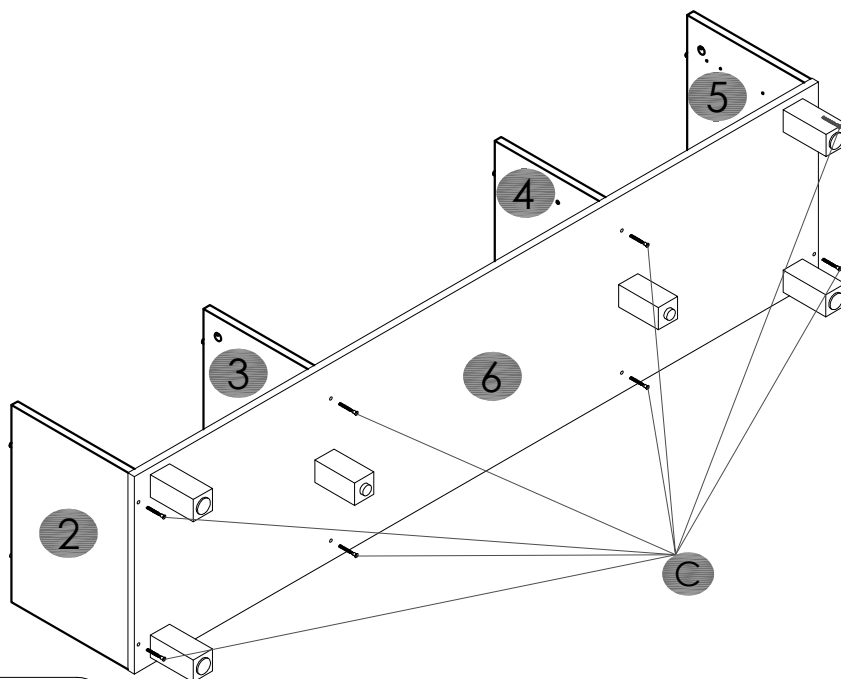


C

 

X 8

STEP 6

 
Insert board(7) into slots on boards(2&3&4&5&6).After completing this step, please place the cabinet upright.

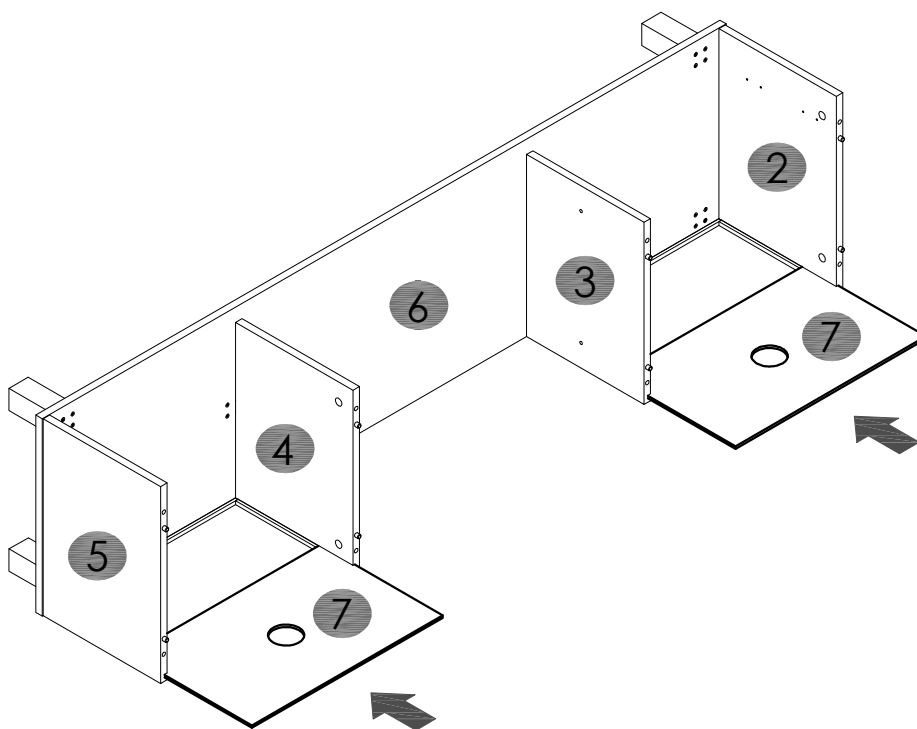


Assembly Instruction

STEP 7

 
Screw cam lock pins(A) into holes on board(1).

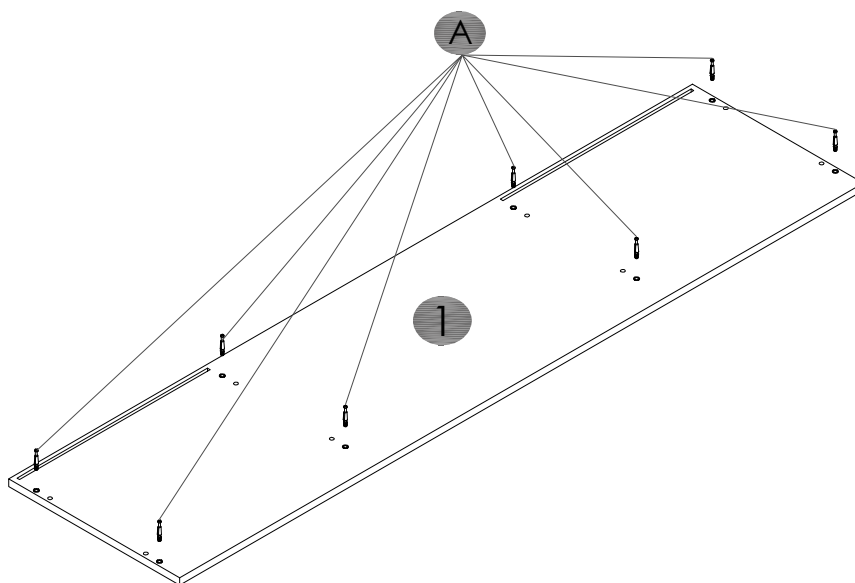

A  X 8

STEP 8

 Attach board(1) to boards(2,3&6), then lock them in place by turning the Klix cams (B). Regarding the usage of Klix cam, please refer to warning on Page 2.

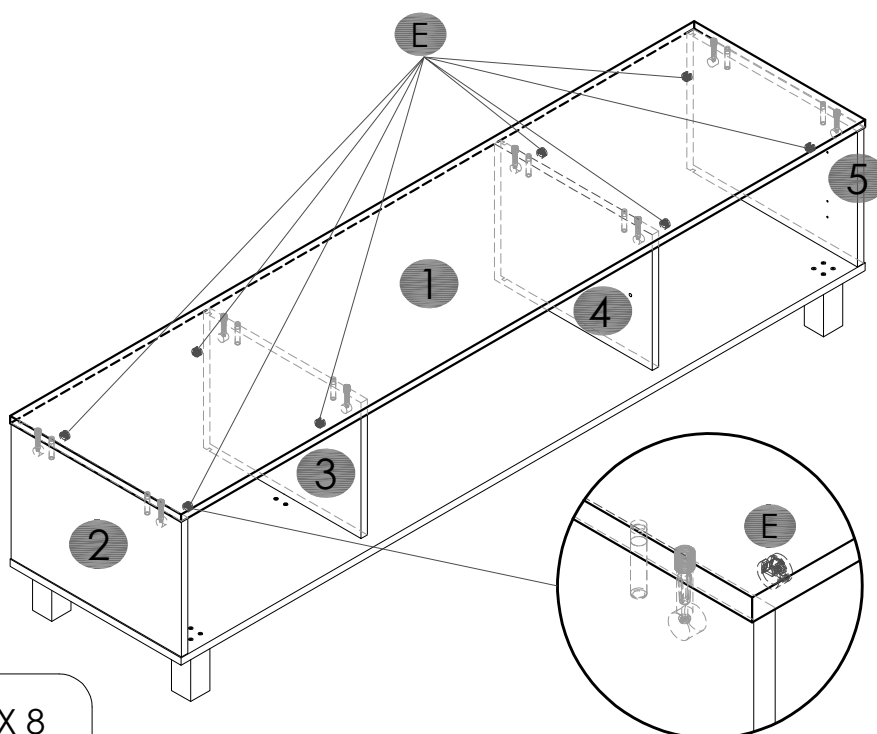


B  X 8

Assembly Instruction


STEP 9

 Fix the hinges(F) onto the boards(8&10) with screws (D).

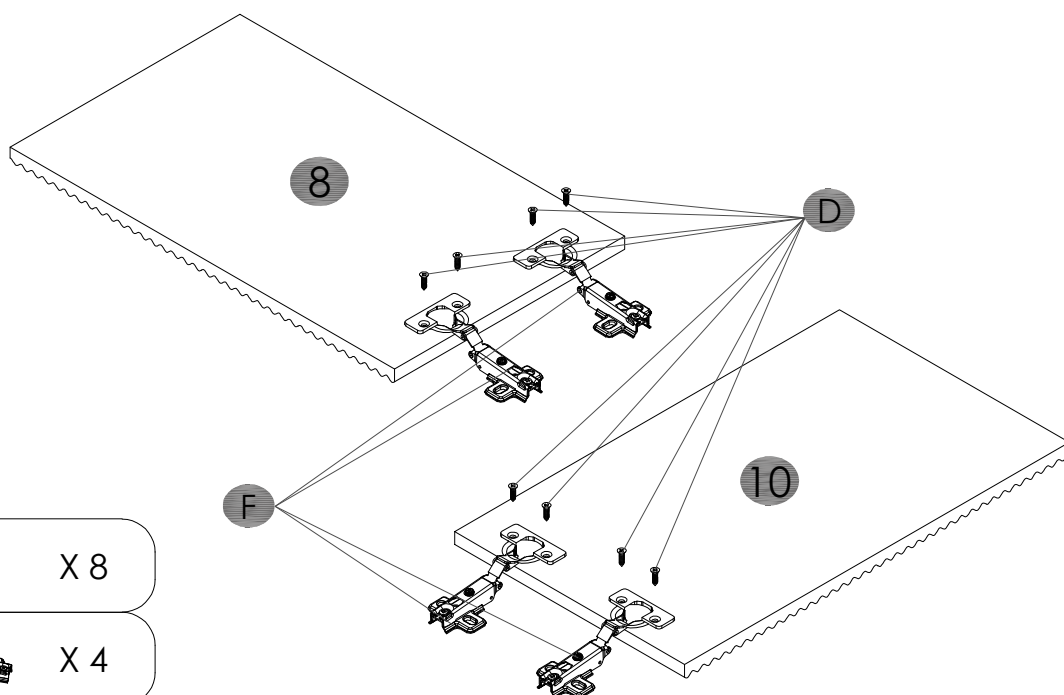

STEP 10

 Fix the hinges on board(8) to board(2) with screws(D), then fix the hinges on board(10) to board (5) with screws(D) as shown below.

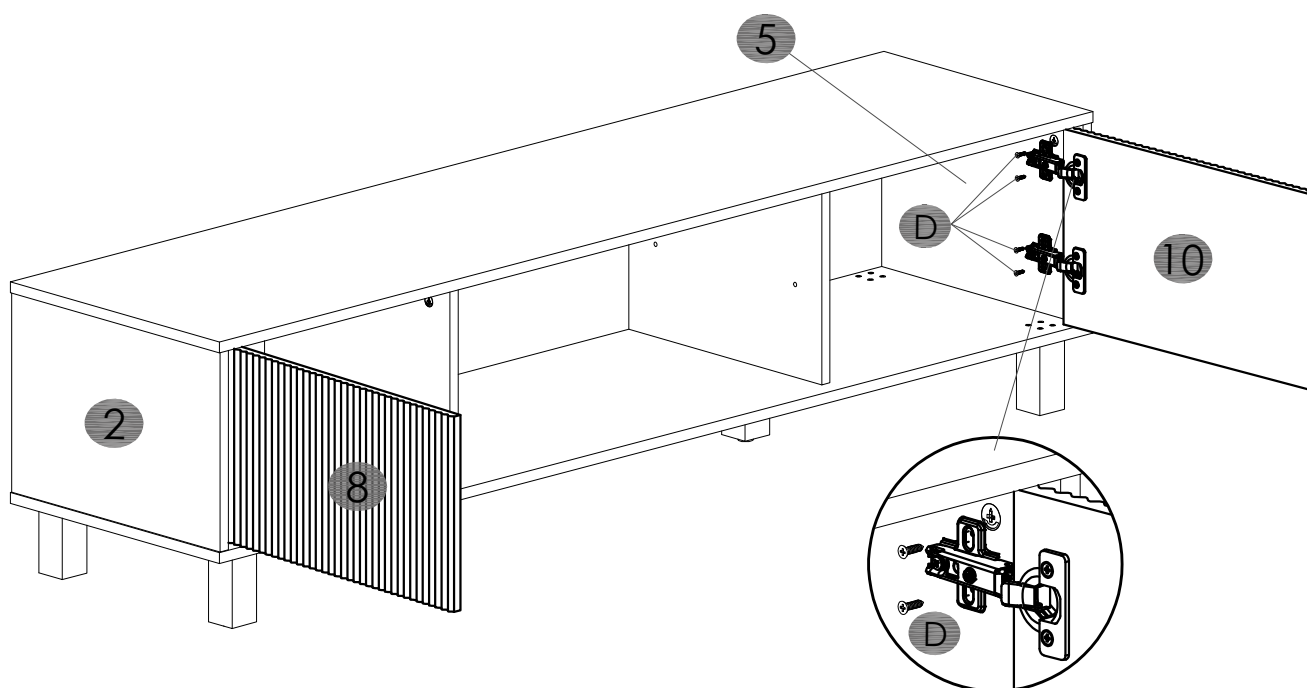


D (screw) X 8

Assembly Instruction

STEP 11

 Place the support pins(G) into its respective hole. Then place board(13) on (G).

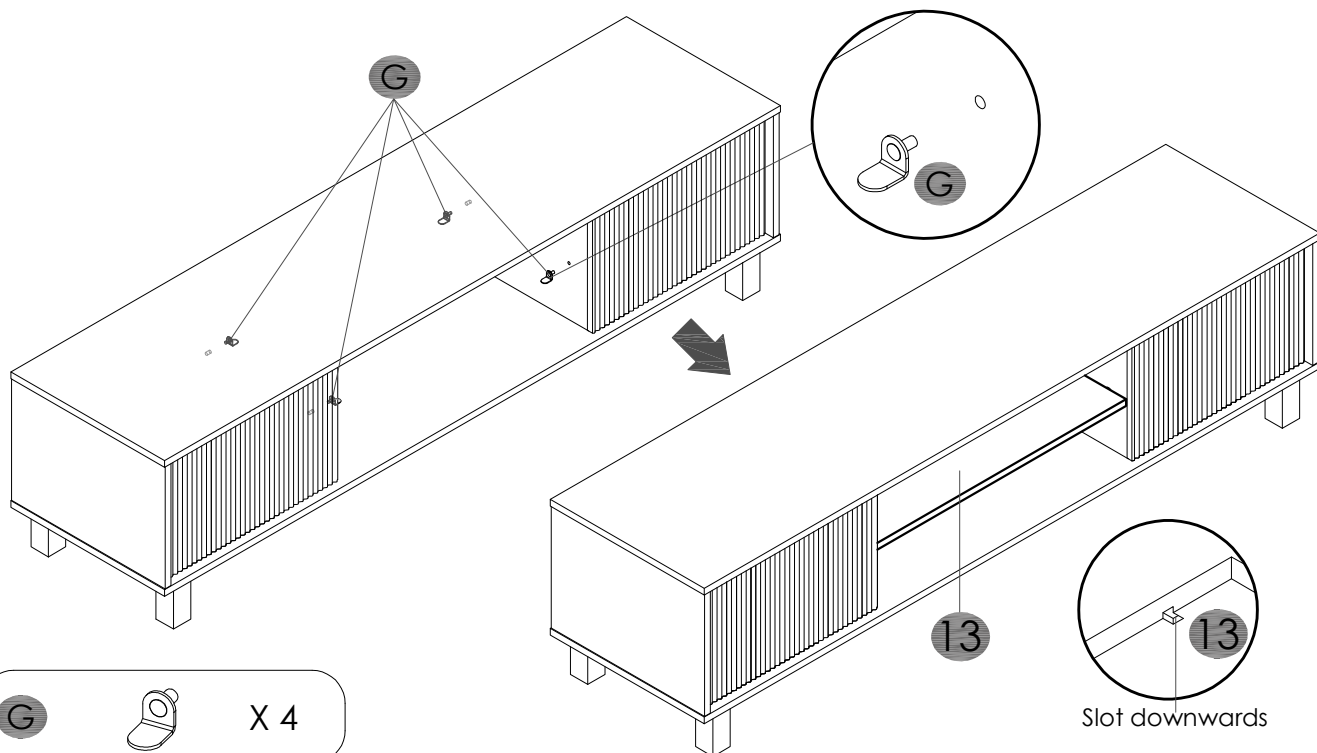

STEP 12

Install the backboard fasteners(F) onto the backboard as shown below.

