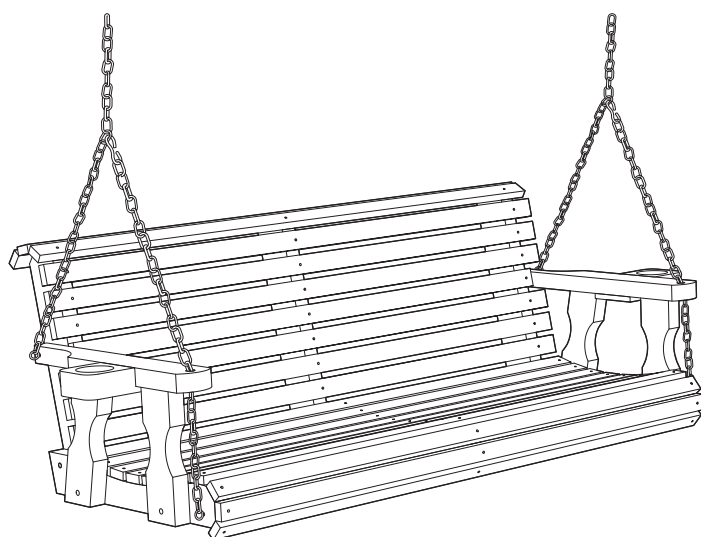



Owner Manual

Porch Swing - Chains

Roll Back Porch Swing



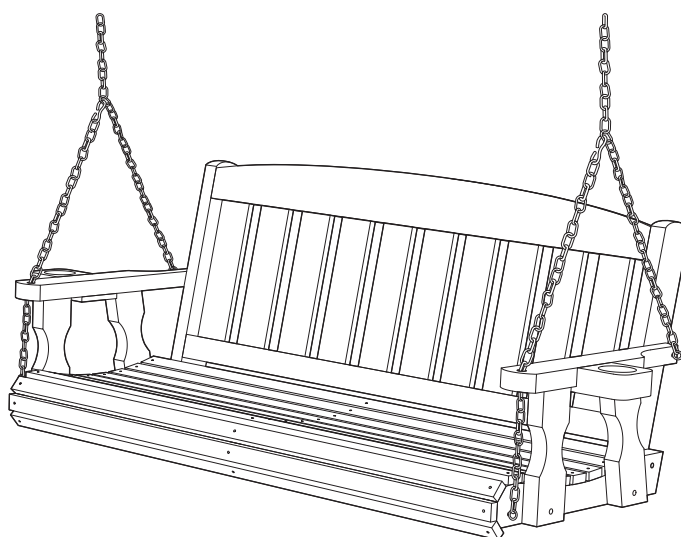Mission Porch Swing








PRE-ASSEMBLY PREPARATION:




DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT

- Please read through these instructions before beginning assembly.
- Two adults are recommended for assembly.
- Clear out an open space for assembly and lay all items on the Parts and Hardware List on a padded surface to protect the finish. Extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children until fully assembled.
- Please check for any loose screws and tighten them before you use.

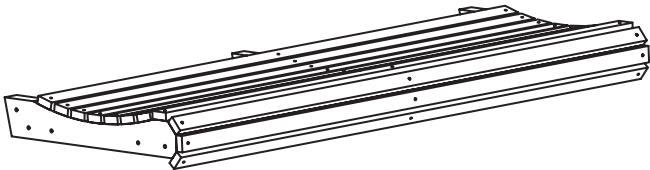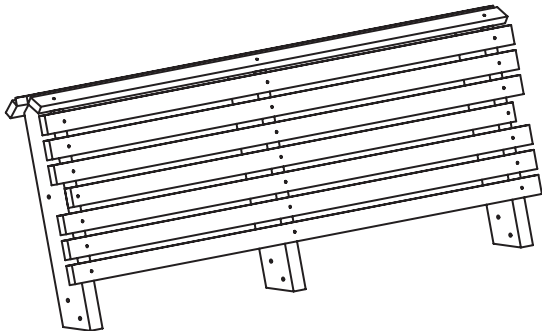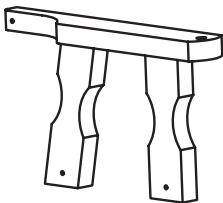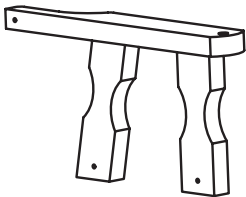
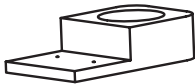
PARTS LIST:

ID	PHOTO	DESCRIPTION	QTY
A		Swing Seat	1
B		Swing Back *Please note the Roll Back and Mission porch swings follow the same assembly instructions.	1
C		Right Arm	1
D		Left Arm	1
E		Cupholders (Optional)	2

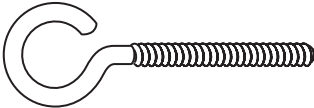HARDWARE LIST:


ID	PHOTO	DESCRIPTION	QTY
1		27" Swing Chains	2
2		68" Swing Chains	2
3		1/4" x 3 1/4" Bolts	10
4		5/16" x 3 1/4" Eye Bolts	2
5		5/16" x 4 1/2" Eye Bolts	2
6		1/4" Flange Nuts	10
7		5/16" Flange Nuts	4
8		E-Hooks	2

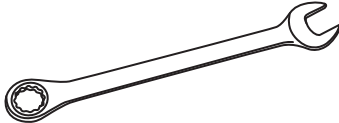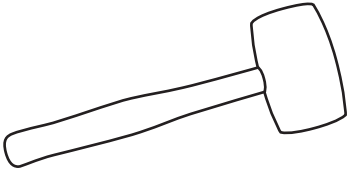TOOLS LIST:

		
1/2" Socket or Wrench	7/16" Socket or Wrench	Rubber Mallet


STEP-BY-STEP ASSEMBLY:

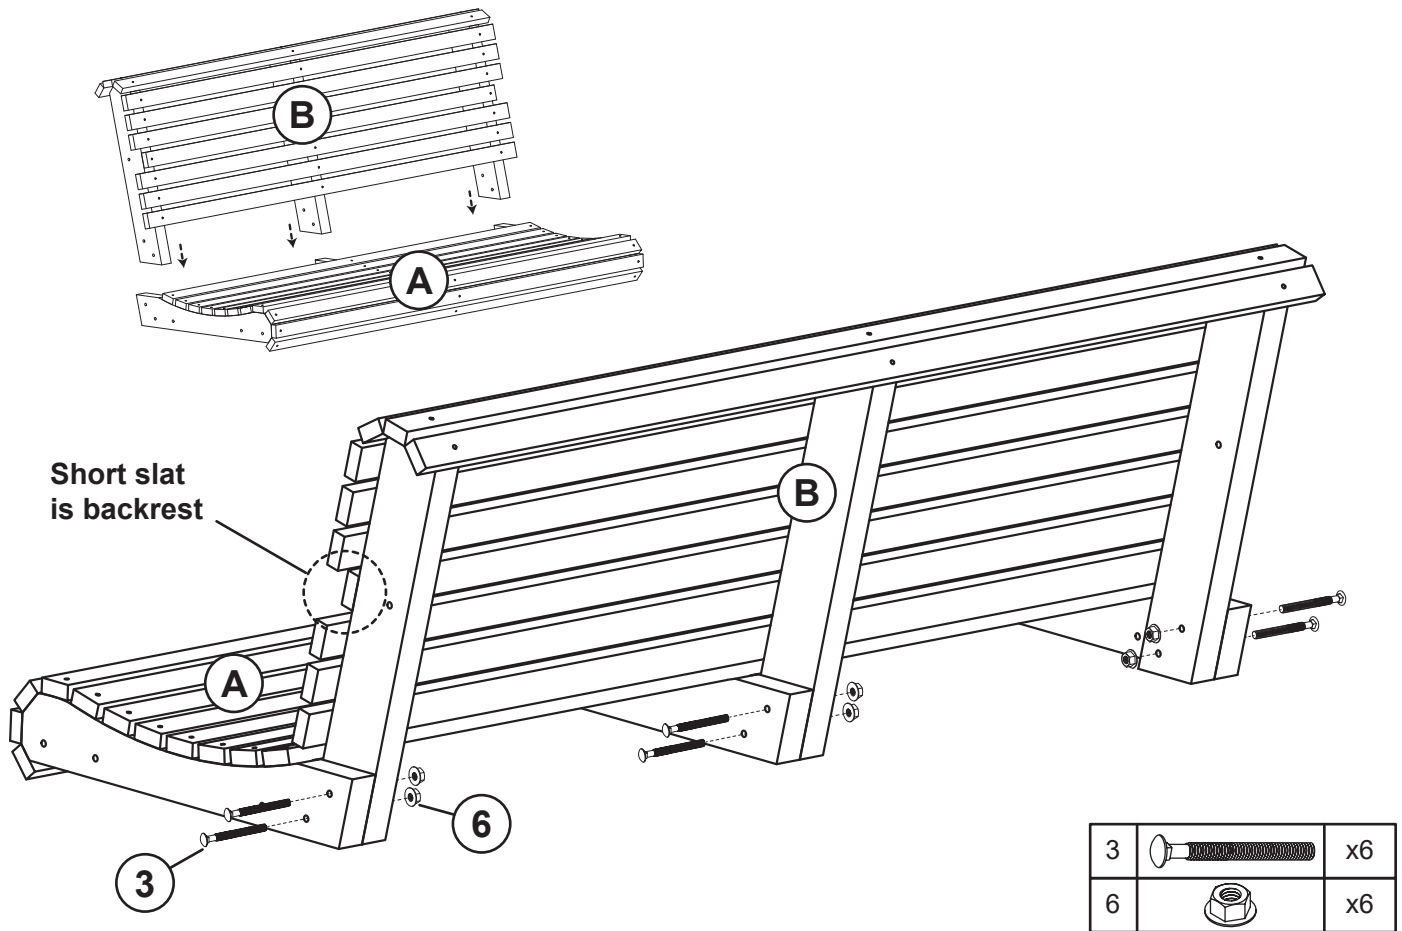- 1 Lay Swing Seat (A) on flat surface. Take the Swing Back (B) and put between Swing Seat (A). Line up the holes and put two 1/4" x 3 1/4" Bolts (3) on each side and in the center piece of seat and back support. Hand tighten a 1/4" Flange Nuts (6) on each end of 1/4" x 3 1/4" Bolts (3).



- 2 If you have ordered Cupholders (E) with your swing you can attach them to the bottom of arms now or wait until you have arms attached. Fasten with 1 1/2" Screws. Screws are located inside the cupholders.

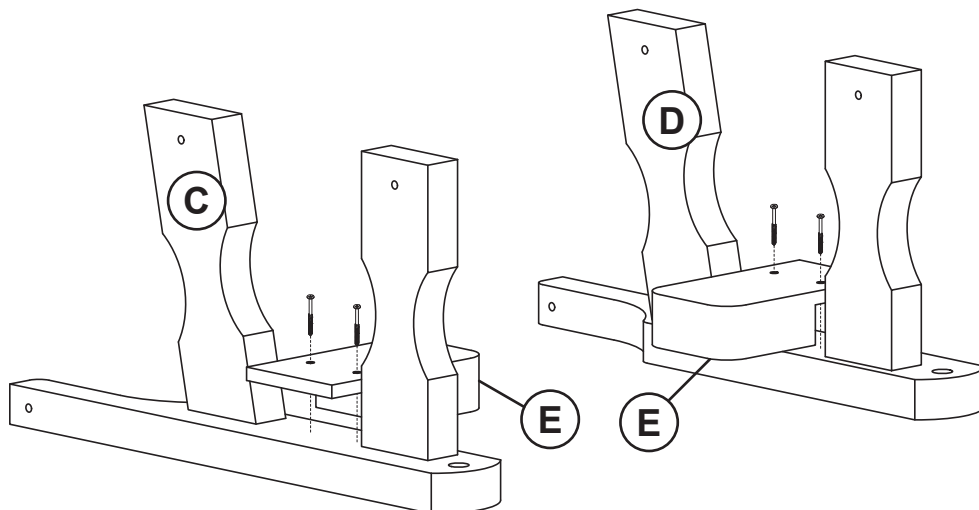Note: Cupholders (E) are optional, if you did not order them with your swing they will not be inside the box.




STEP-BY-STEP ASSEMBLY:

3

Next get the Right Arm (C) and two 1/4" x 3 1/4" Bolts (3) and put them in the legs of Right Arm (C), lining them up with holes in Swing Seat (A). You may have to align arm a little. Repeat for Left Arm (D).

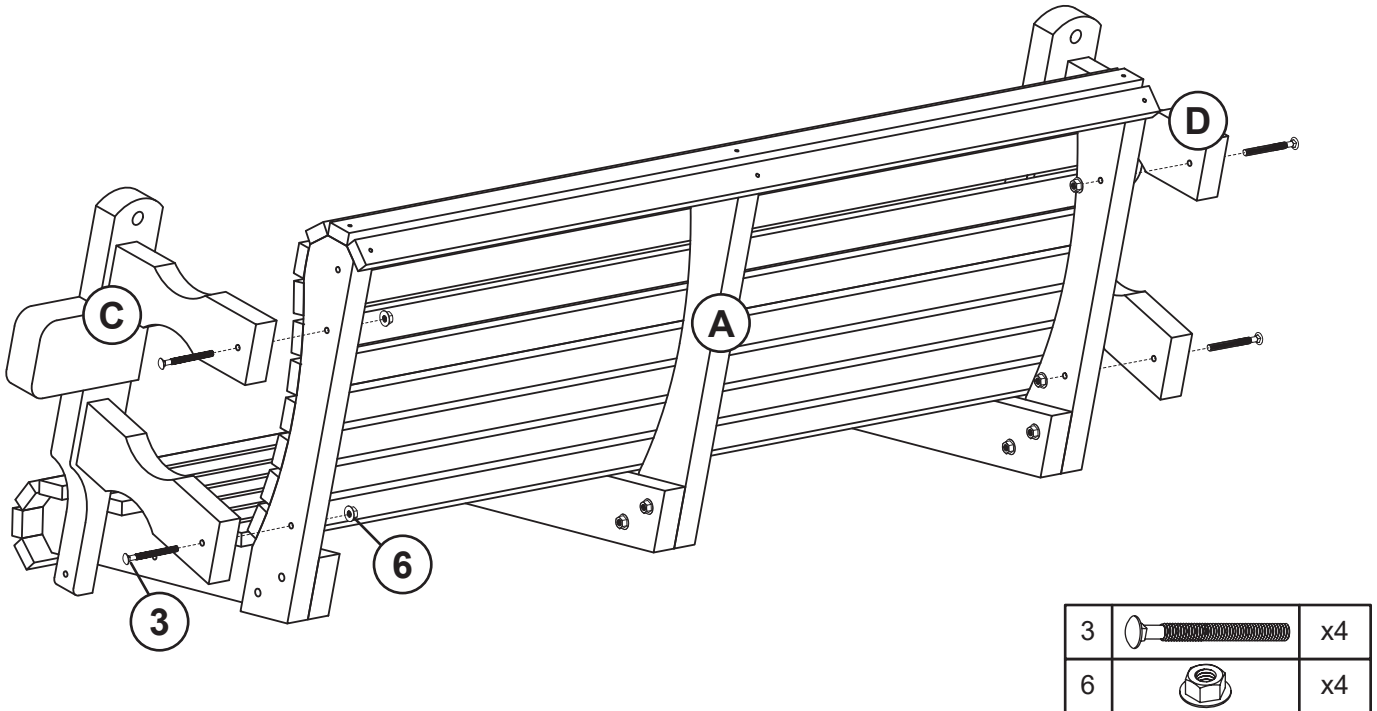
Note: Do not put a bolt in the back of armrest where it connects to the backrest. This is where the 5/16" x 4 1/2" Eye Bolts (5) is inserted. Hand tighten a 1/4" Flange Nuts (6) on each end. Fasten the Left Arm (D) in the same manner.



4

Install two 5/16" x 3-1/4" Eye Bolts (4) and two 5/16" x 4-1/2" Eye Bolts (5) as shown. Hand tighten four 5/16" Flange Nuts (7) on each end of the eyebolts.

****VERY IMPORTANT** Open end of the eye bolt should always be face down.**

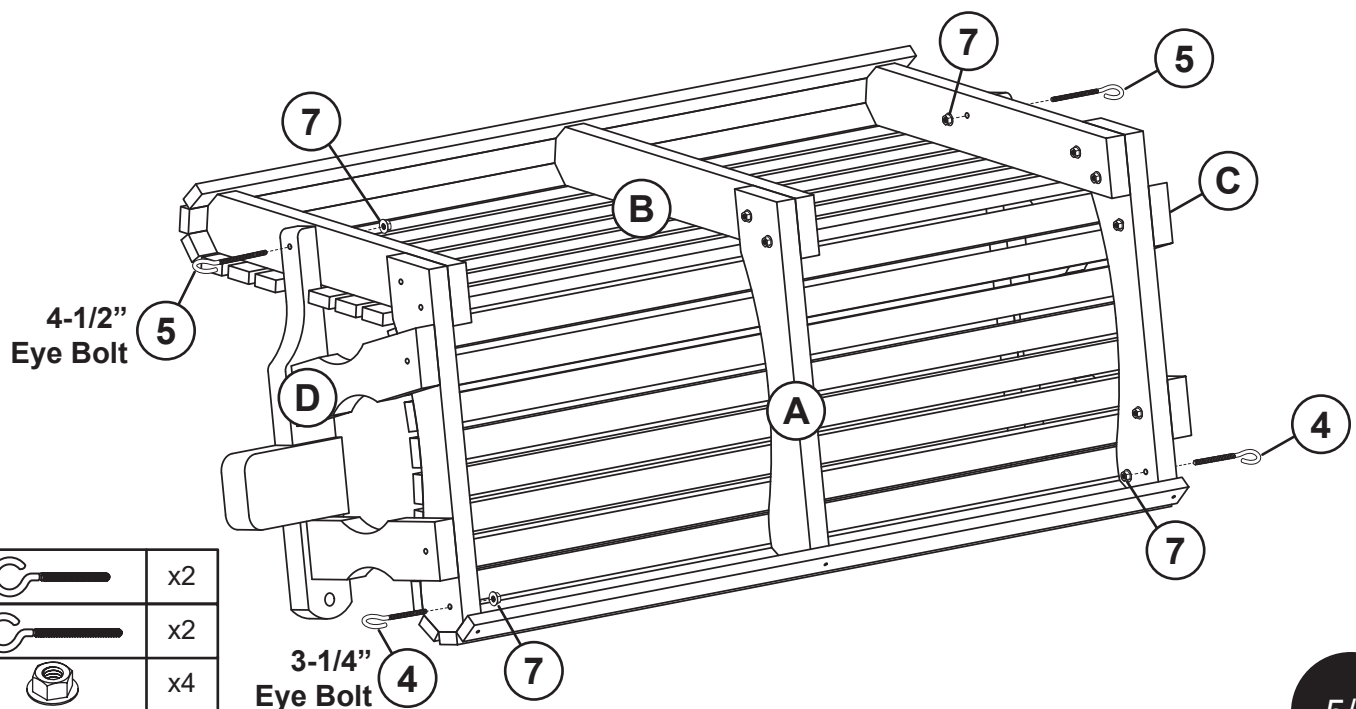


STEP-BY-STEP ASSEMBLY:

5

Attach the 68" Swing Chains (2) to the back eyebolt. Then attach the 27" Swing Chains (1) to the front eyebolt. Take the other end of the 27" Swing Chains (1) and use the E-hooks (8) to hook it on to the 68" Swing Chains (2). You can adjust where the short chain attaches to the long chain to find the most comfortable seat angle for you. Standard is around 17 links counting up from the back eyebolt. Tighten all Flange Nuts (6&7) with 7/16 or 1/2" Socket or Wrench. Bolt heads should be slightly inside hole.

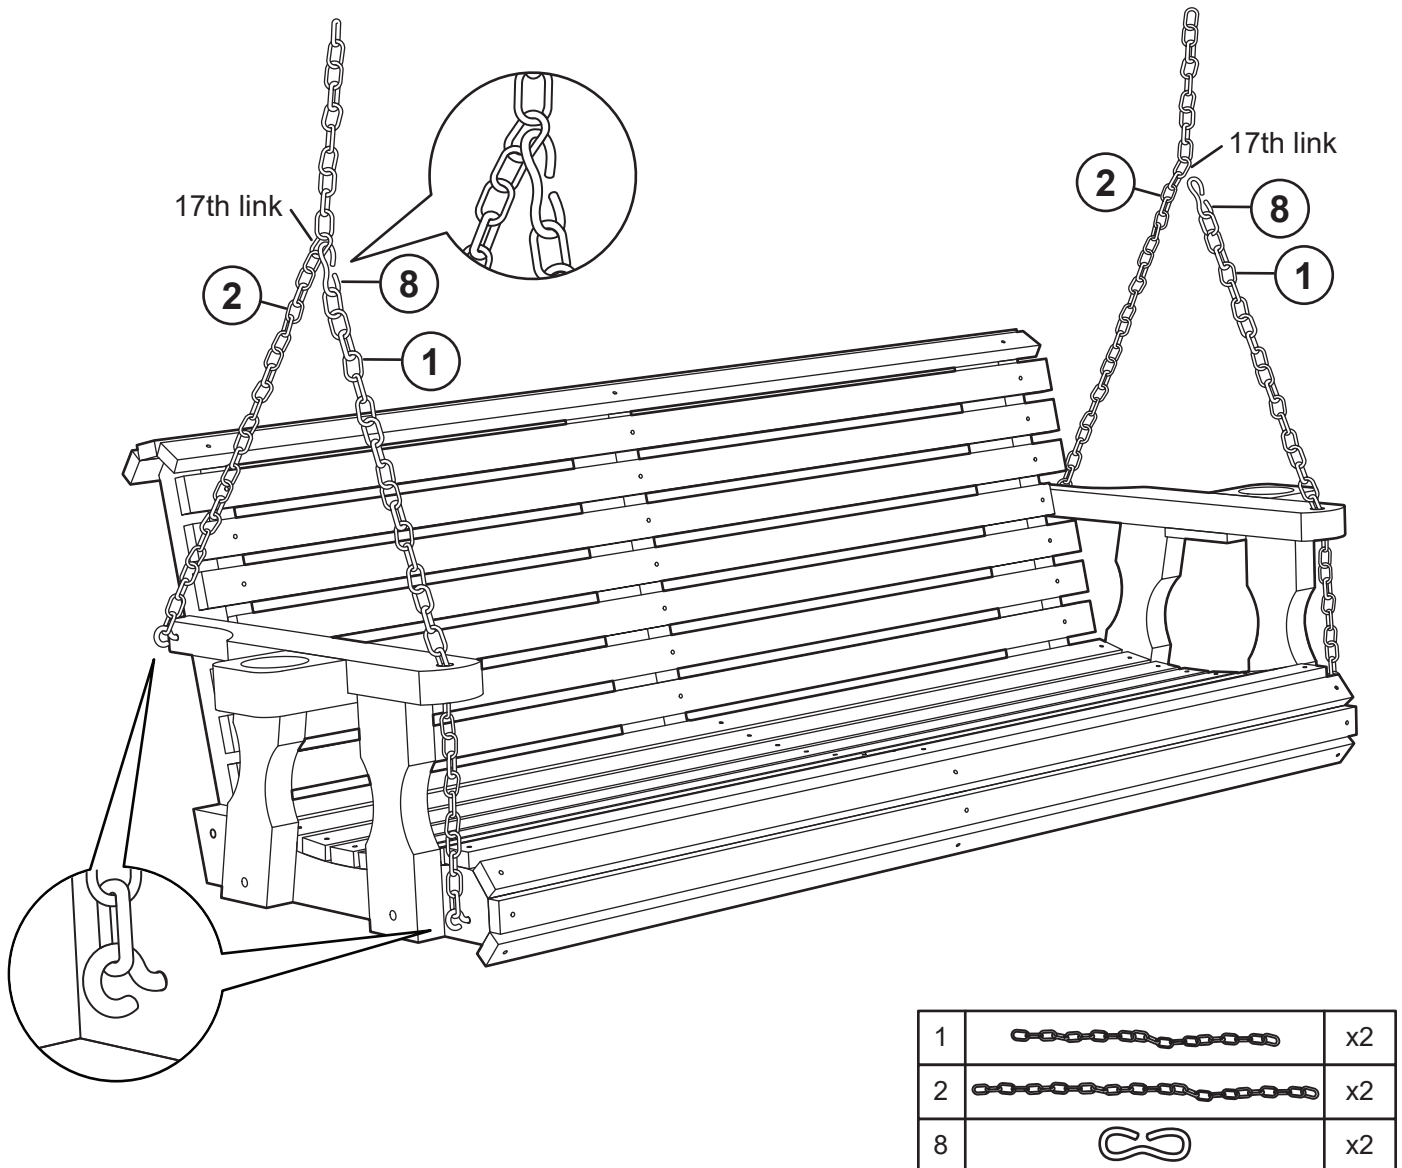Hang and enjoy!





Easy Covers

Protect your new products with our line of custom fit outdoor furniture covers by Easy Covers.



Limited Manufacturer Warranty

We warrant all pressure treated wood products for a period of 90 days from date of purchase against structural failure, woodrot and insect infestation.

The original consumer is entitled to receive new wood replacement parts within the warranty period.

[View our complete warranty details](#)

View our complete recommendations to care for your outdoor furniture as well as details about our Maintenance Kits

Use & Care

The entire line is constructed of kiln-dried pressure-treated pine and is designed for outdoor use. Our Amish craftsmen work with commercial-grade exterior finishes by Sherwin Williams for optimum outdoor durability. These water-based finishes provide adequate protection for covered porches that get occasional weather exposure (rain, etc...). The less exposure your wood furniture has to direct sun, wind, rain, and snow, the longer it will last. If you plan to use your furniture outdoors in full weather exposure, we recommend adding a polyurethane, varnish, or lacquer coating. We recommend contacting your local paint shop for their specific recommendation. Their insight will be best-suited for your local climate and weather conditions.

Care & Cleaning

Dirt build-up leads to deterioration, so keeping your outdoor wood furniture clean will give it a longer life. Clean it well two or three times per year with water, mild soap, and a soft cloth. (This is also the perfect time for a periodic hardware check.) Hose it down before you start to remove cobwebs and caked-on dirt. Do not use abrasive cleaners, bleach, or scouring products that will affect the finish. Dry the furniture thoroughly when done.

Consider one of our Maintenance Kits to help keep your product looking fresh! Includes 1 quart of water-based semi-transparent or semi-solid wood stain, sponge sander, dust cloth, and a foam brush.

WARNING: California's Proposition 65

This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65WARNINGS.ca.gov/furniture