 


Assembly Instruction

N719P384787 / N719P384788

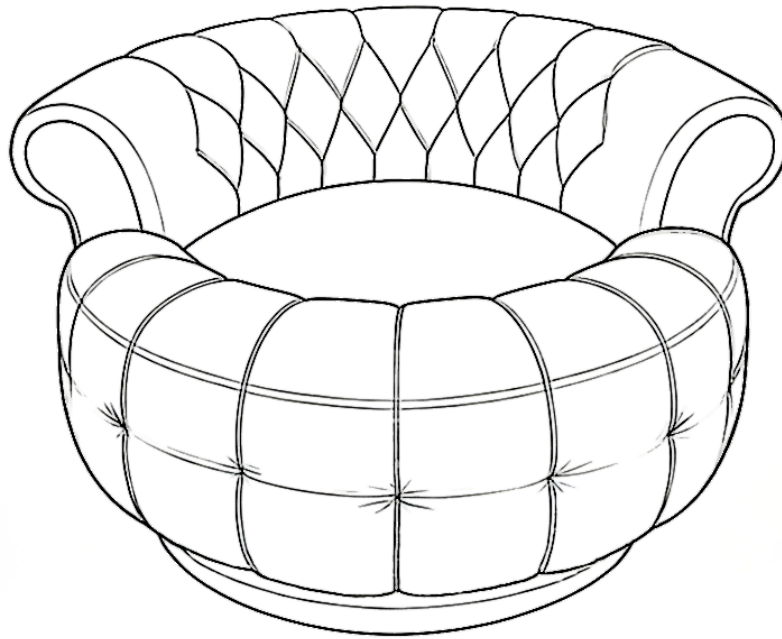

It is important to note that, given the compression sofa requires a 72-hour recovery period, if it fails to fully restore during this timeframe, please provide both photographic and video evidence showing the rebound condition at two distinct time points: 6 hours and 72 hours after unsealing the compression packaging.

Please be advised that if the submitted evidence does not clearly include observations from both time periods, we regret that we will be unable to proceed with any after-sales service.

 
Return & Warranty policy:


- We strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts/or service as needed.**
- If the item is damaged or defective, please take photos as evidence for replacements and refunds.**
- Please do not return to store, contact the seller if you have any trouble with this product.**


TIPS:




1. The sectional sofa comes in 2 separate boxes, might be delivered at different times. Please wait several days patiently.
2. Due to differences of light effects, the actual color of the materials might be slightly different from the pictures.
3. Due to package compression for better shipment, the fabric may have wrinkles.
4. Please take all packages out and pat every part to make it rebound better and fluffy, so that it can restore to picture-like status.
5. Please keep children away from the plastic bags.







PARTS LIST

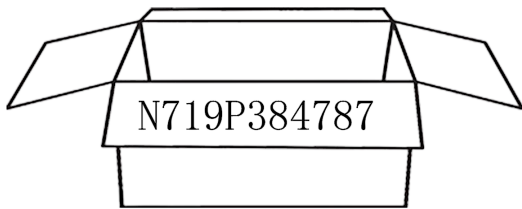

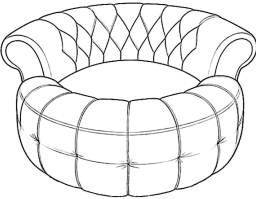
A		Round Chair	1 PC
---	---	-------------	------

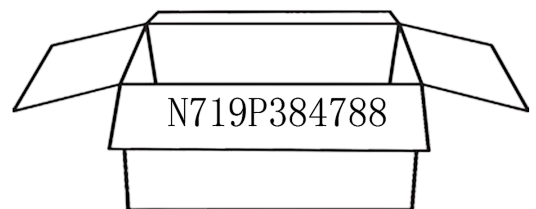

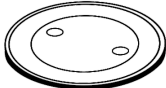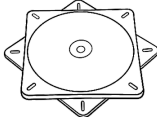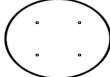
B		Round bottomed board	1 PC
C		Metal turntable	1 PC
D		Screw	8 PCS
E		Wooden board	2PCS
F		Guide-Rail Wheel	4 PCS
G		Round wooden base	1 PC

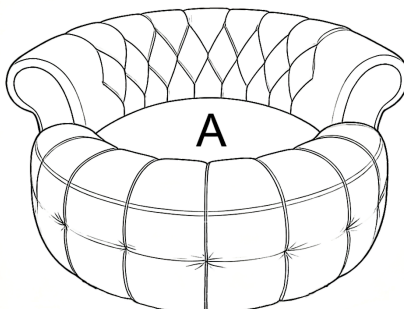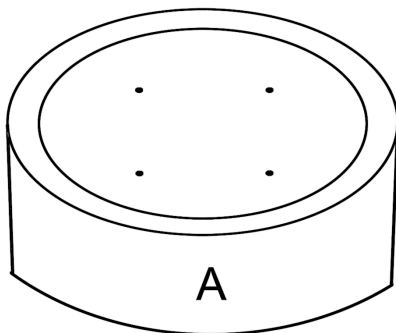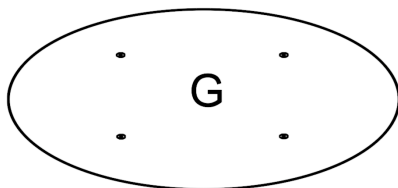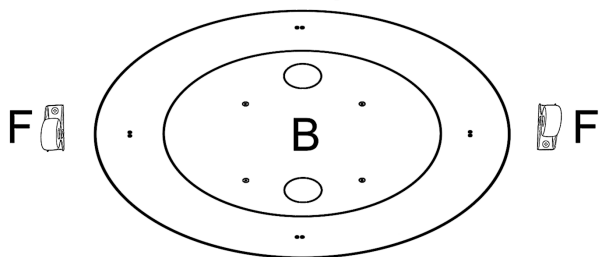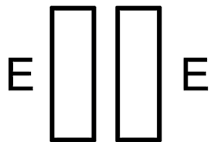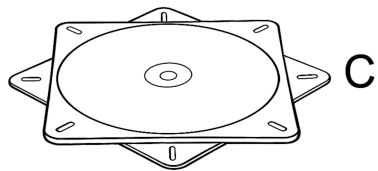


Step 1: Remove the fixed metal rotating disk screw and carefully extract it from the sofa base.

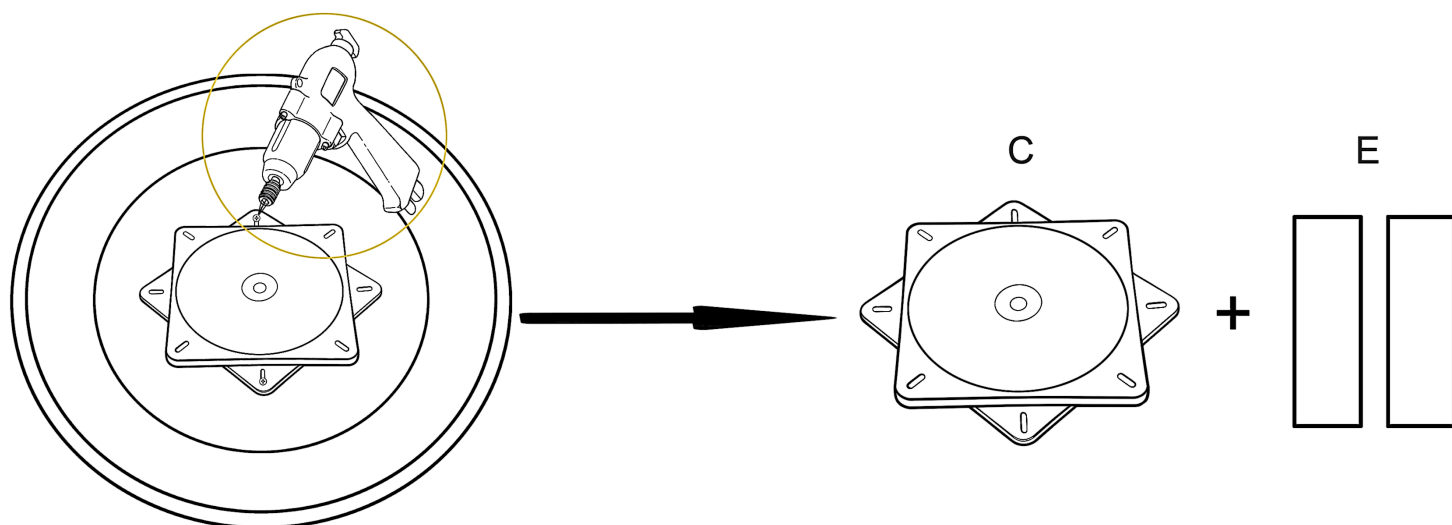






Step 2: Position two wooden boards at the bottom of the metal rotating disk, then securely attach the disk to the opposite plane of the sofa base using screws.

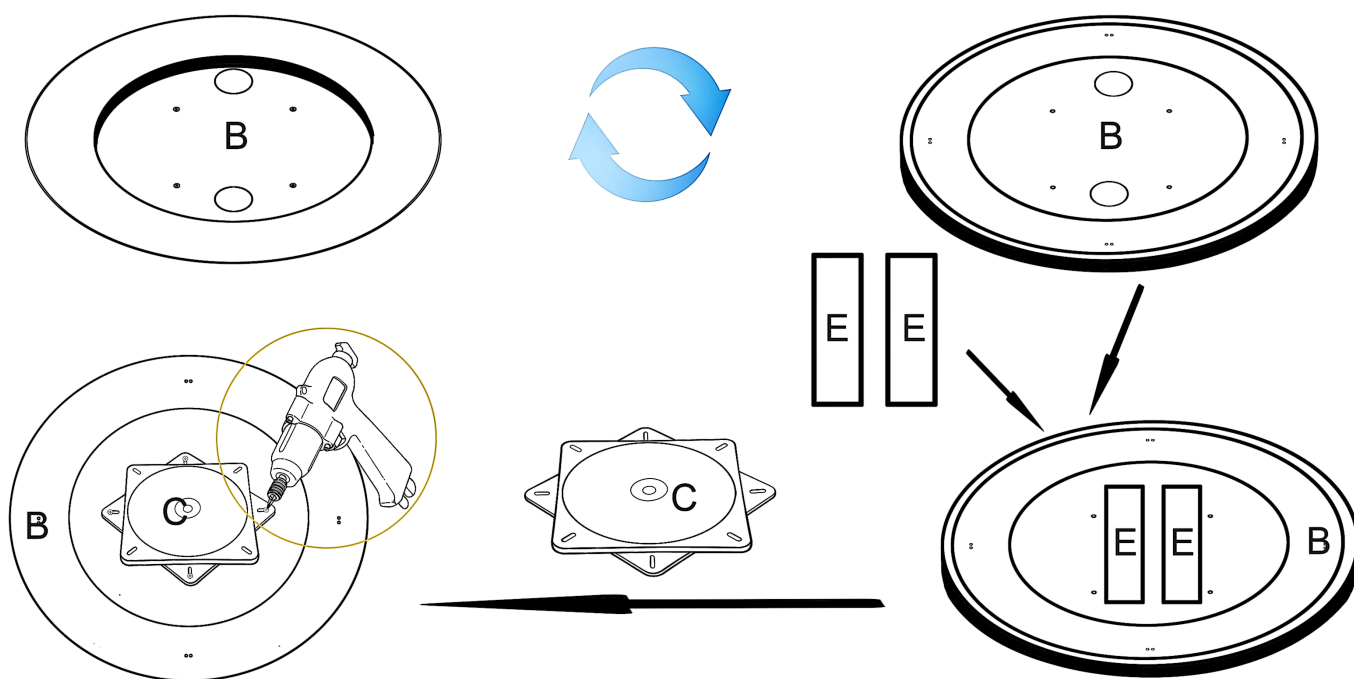

Step 3: Install the four wheels at the pre-marked locations on the base using the provided screws.

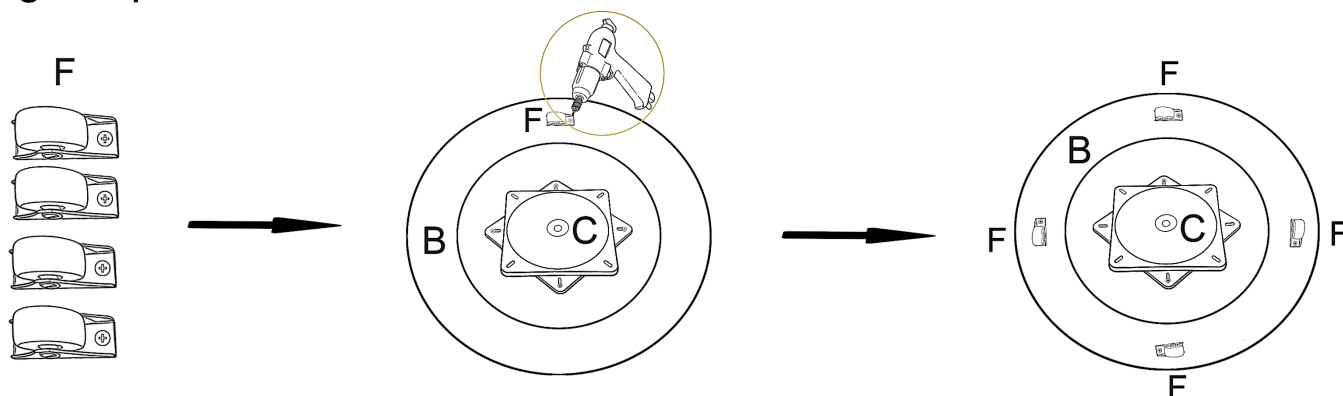

Step 4: Place the round plate beneath the sofa and ensure the zipper is fully closed.

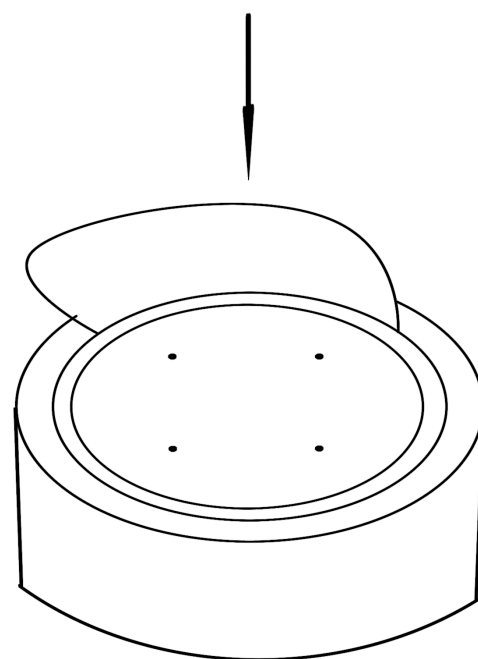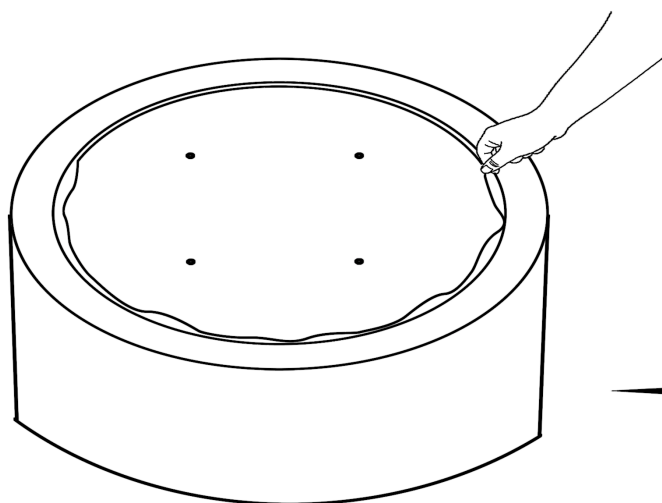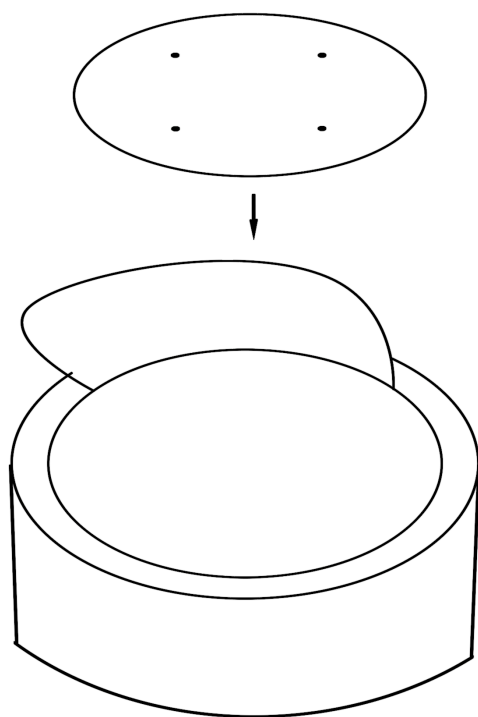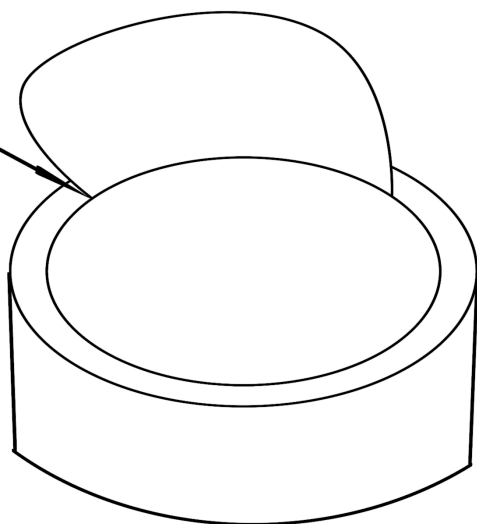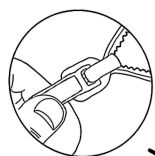

Step 5: With the foam sofa inverted stand upright on a flat surface, attach the remaining end of the metal rotating disk—already secured to the wooden frame base—to the underside of the foam sofa.

