

# Everyday Home Motion Sensor LED light

## CAUTION:

1. All batteries must be same type and size
2. Do not mix old and new batteries
3. If battery contents are leaking,discontinue use and discard
4. Remove old batteries
5. Remove batteries if them is not going to be used for an extended period of time

## Battery Installation:

1. Open battery compartment by removing all screws (located on back of fixture)using a philips screw driver (not included)
2. Insert 4\*AA batteries (not included) as indicated inside battery compartment and replace battery cover and screws

**NOTE:**Make sure rubber gasket lines up with battery cover before replacing screws

## Mounting Instructions:

1. Drill a 1/8' hole on wall,1/2' deep.If wall is hollow drill through with a 1/4' drill bit and insert and anchor into hole.Tap in wall anchor lightly with a hammer until anchor is flush with wall surface.If wall stud is hit use only enclosed screws
2. Thread screw into wall anchor/stud leaving a minimum of a 1/8 unthreaded to secure fixture
3. Align mounting holdes and screw heads,press fixture against screw heads and slide down ward to secure

**NOTE:** Sensor detects motion best if fixture is installed in an area where people will walk across fixture and not towards it

## Use instruction

1. Press ON/OFF switch to On position
2. Adjust each spotlight to illuminate a desired location
3. Lights will turn on when motion is dected and stay on for approximately 40 seconds
4. Motion sensor will detect motion up to 10 feet away