







Assembly Instructions

   Caution: You must read this before you proceed.






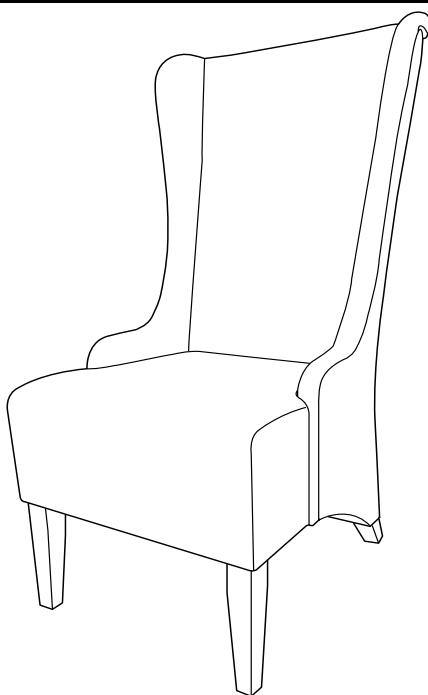

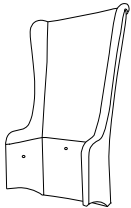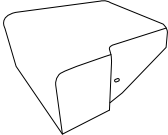

Dining Chair

 

Parts List

Label	Picture	Description	QTY
A		Chair Back	1
B		Seat	1
C		Front Leg	2
D		Left Back Leg	1
E		Right Back Leg	1

 
Hardware

Label	Picture	Description	QTY
①		Bolt (M8X60)	3
②		Bolt (M8X35)	7
③		Washer M8*2.1MM	10
④		Washer M8*1.6MM	3
⑤		Spring Washer	13
⑥		Allen Key	1
⑦		Screw Arbor	4
⑧		Spanner	1
⑨		Nut	4

Assembly Preparation

Before Beginning Assembly:

Unpack all the parts for a clear overview.

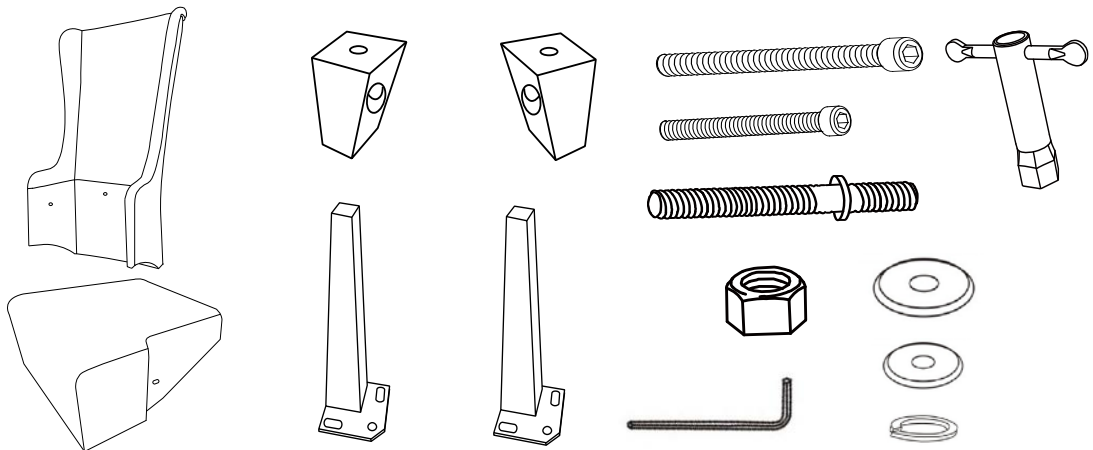

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

OVERVIEW

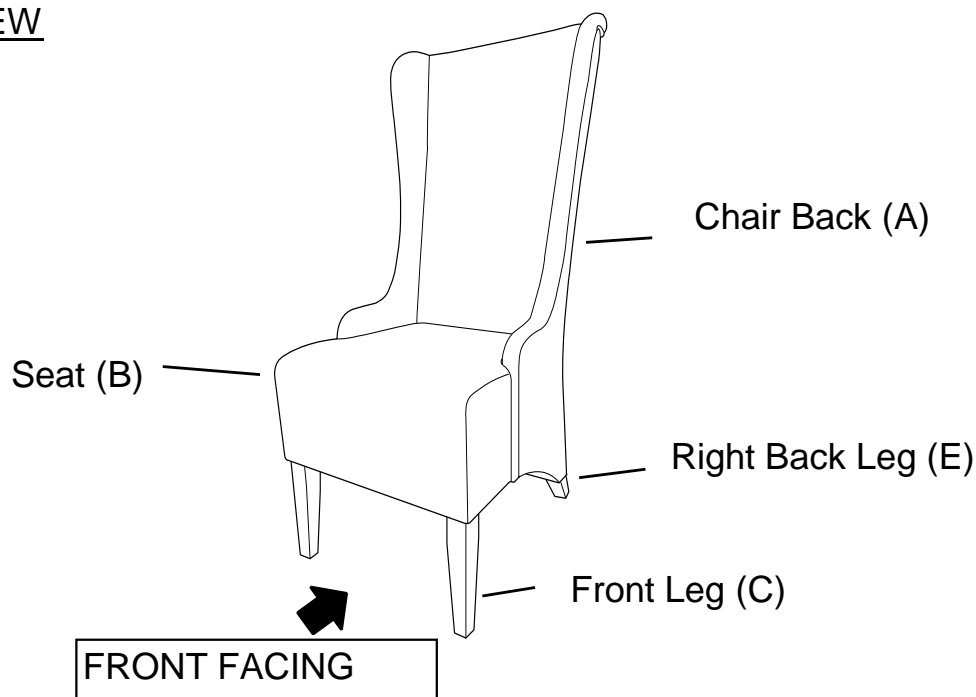

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

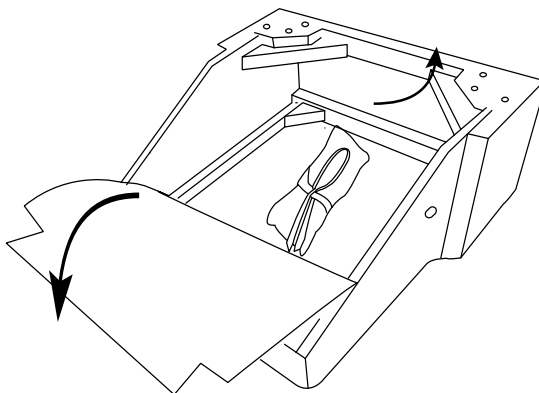


Carefully remove the Seat Base Cover from the Seat(B).
Take out the Legs and Hardware.

Step 2

Step 2.1

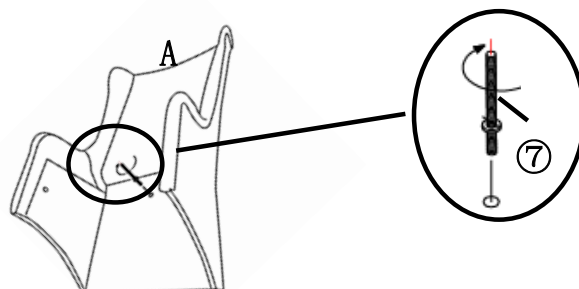


Step 2.2

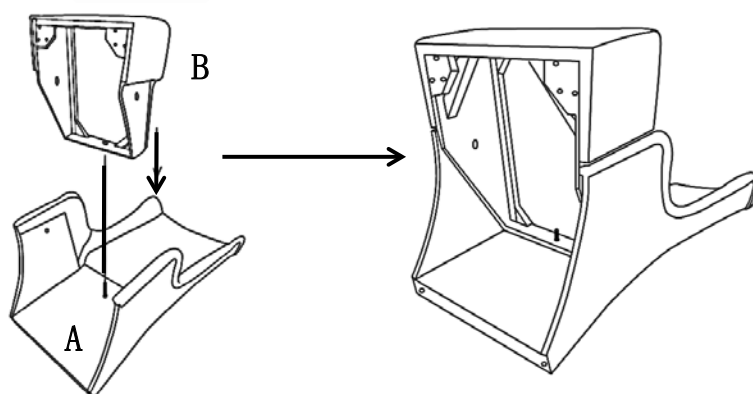

Step 2.1 Screw the Screw Arbor(⑦) into Chair Back(A) by turning clockwise as shown.


Step 2.2 After Step 2.1, Push down the Seat(B) using a good amount of pressure to make the Seat(B) connect with Chairback(A) through the Screw Arbor(⑦) of Chair Back(A) as shown.

Step 3

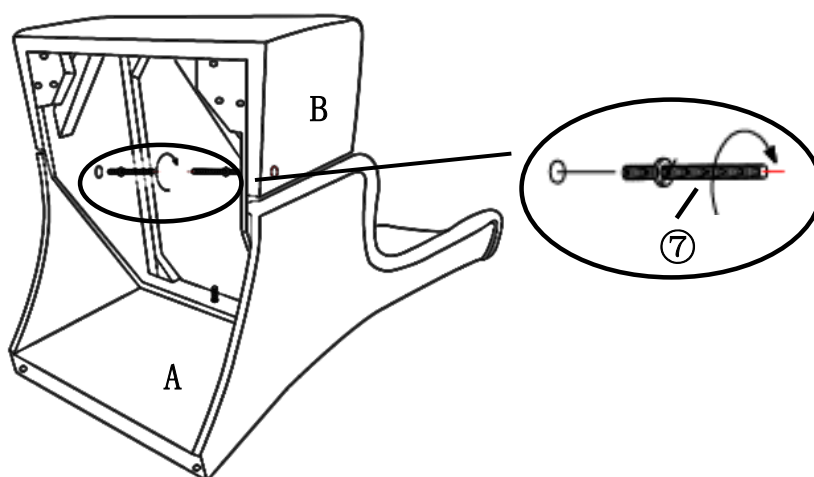


Connect Chair Back(A) with Seat(B) using Screw Arbor(⑦) and tightening tighten by turning the Screw Arbor(⑦) clockwise, as shown.

Step 4

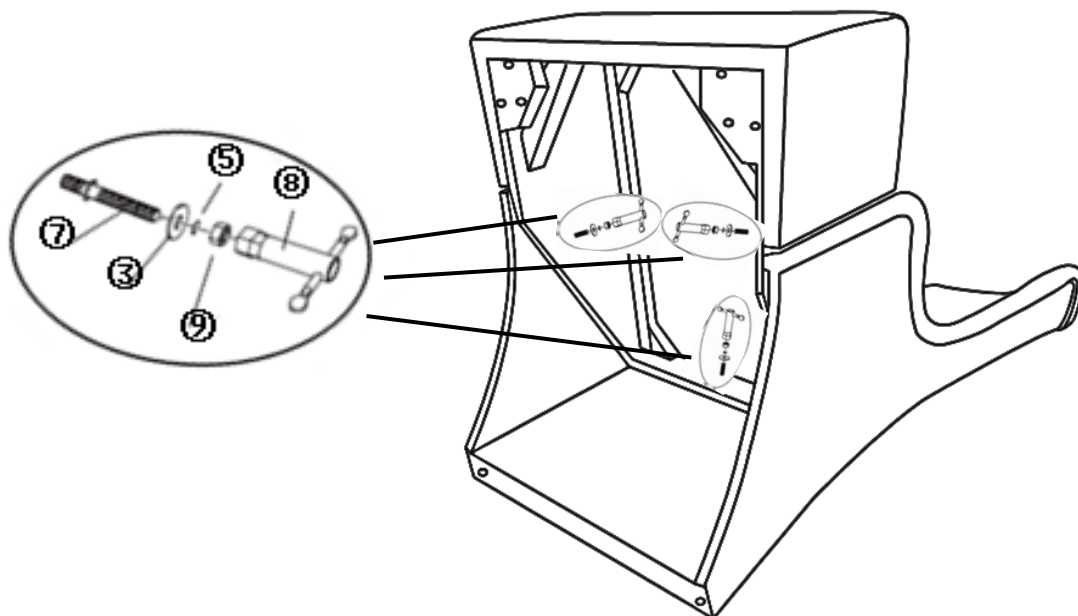

Align the mounting positions on the right ,middle and left of Chair Back(A) and Seat(B); using the Spring Washers(⑤) , Washers(③), Nut(⑨) mounted on Screw Arbor(⑦) with Spanner(⑧).

Step 5

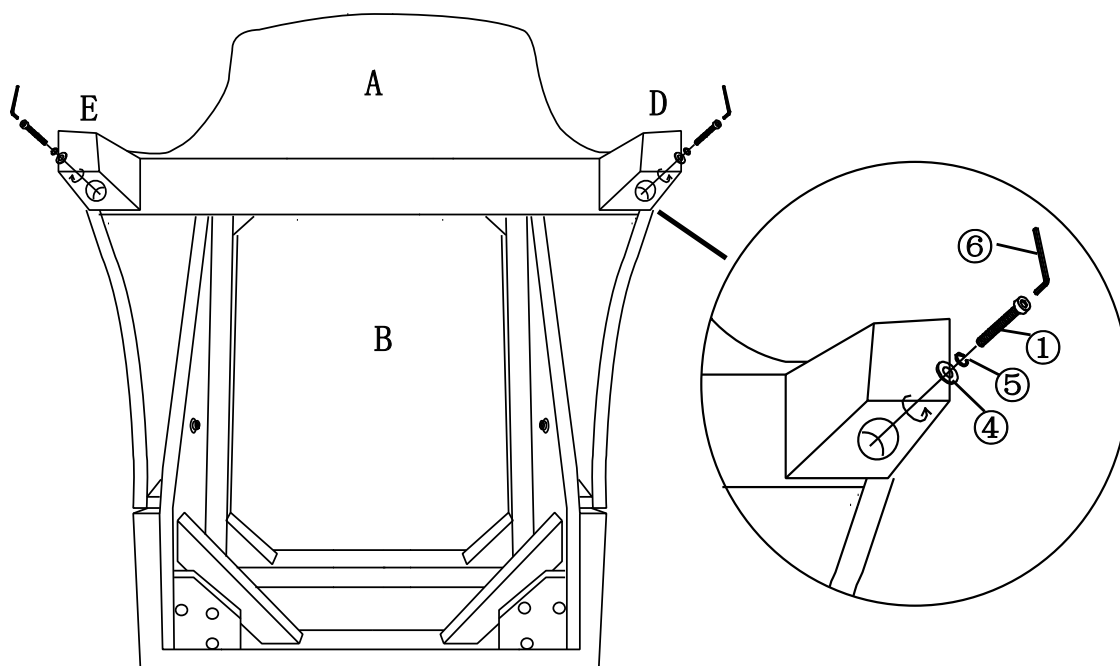


Attach Back Leg(D) to the bottom of the Chair Back(A) using Bolt(①), Spring Washer(⑤) and Washer(④) with Allen Key(⑥).

Do not fully tighten the Bolts.

Repeat the same process with Back Leg(E).


Step 6

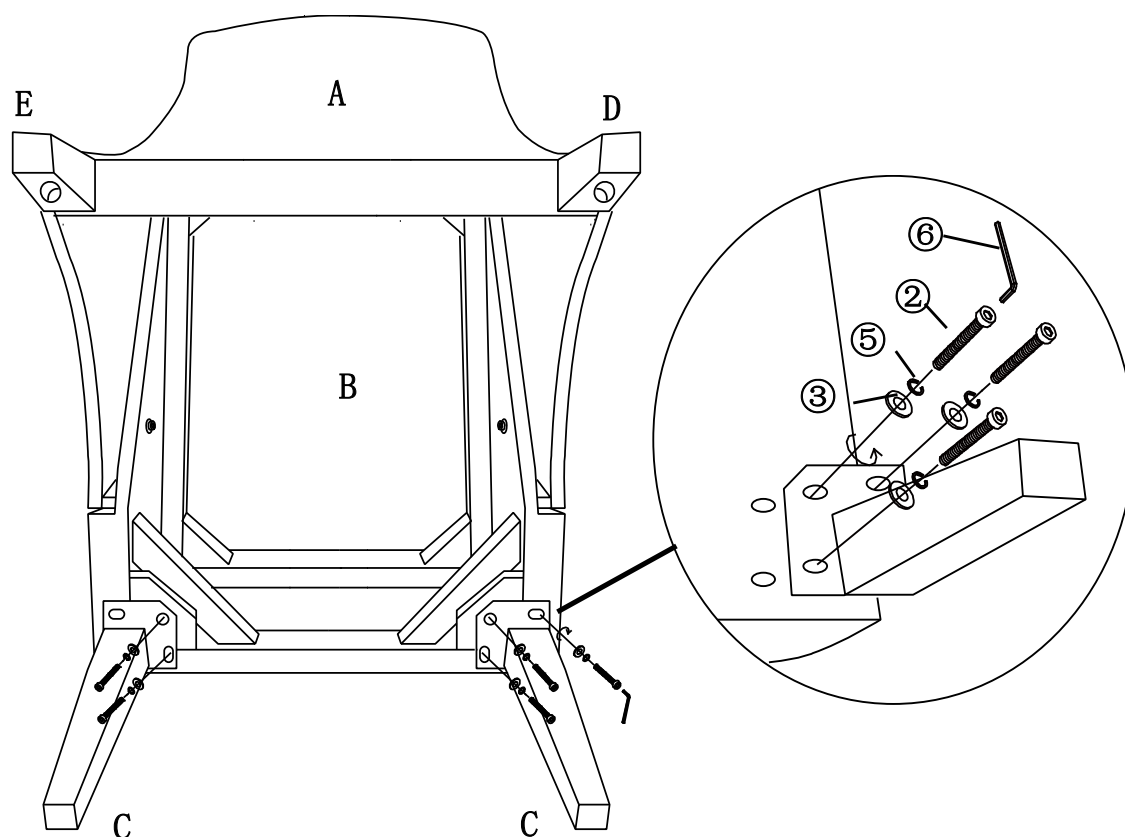

Align the mounting positions of Front Legs(C) to Seat(B), then attach using Bolts(②), Spring Washers(⑤) and Washers(③) with Allen Key(⑥).

Do not fully tighten the Bolts.

Step 7

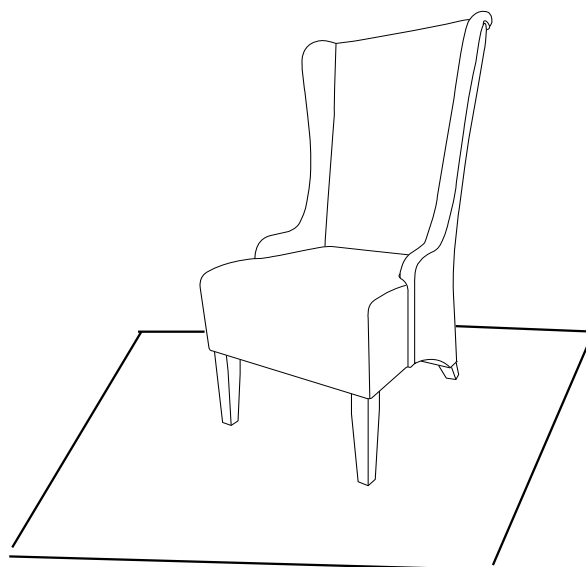

Place Dining Chair on flat, level surface.


Stand the Chair up and place on flat, level surface.

Carefully and gently sit onto the Chair. This will help properly align all parts at all joints and remove any gaps.

Carefully get off the Chair and gently turn it over.


Tighten all Bolts at all joints. When tightening the Bolts, tighten in a sequential manner

Step 8

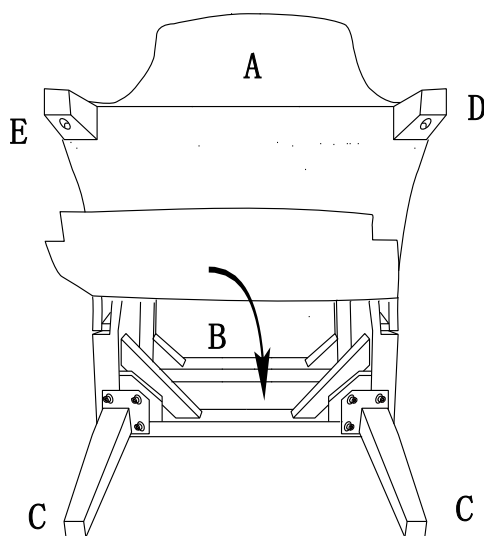





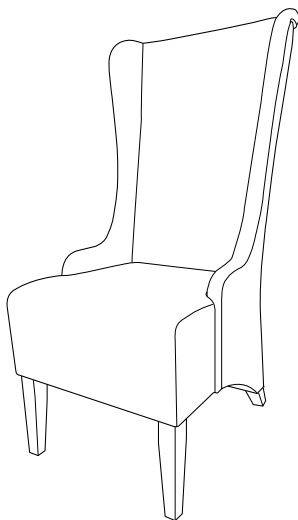













Smooth down the Seat Base Cover your hand along the Magic Tape on all four sides at the edge of the Seat.
Make sure all parts are connected and securely locked into position.

Step 9



Your Dining Chair is ready for use.
This Dining Chair can only be used on a flat, level surface.

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
-   ● Do not clean furniture with harsh cleansers or polish.
-   ● Do not place furniture under direct sunlight.
-   ● Do not place furniture near heating or cooling vents.
-   ● Do not write on furniture without a padded barrier to protect the surface.
-   ● Do not place furniture outside . For indoor use only .
-   ● Not for commercial use. For residential use only .
-   ● Stains may be removed with mild soap solution and damp cloth.
-   ● Children should not climb or jump on the furniture.

-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

