


ASSEMBLY INSTRUCTIONS

- 1.FASTEN FRONT B ONTO THE BASE A, THEN FASTEN FRONT C ONTO FRONT B, FASTEN FRONT D ONTO FRONT C .
- 2.FASTEN SOCKET ASSEMBLY E ONTO FRONT D. BE CAREFULLY NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
- 3.PLACE HARP ONTO SADDLE.
- 4.PLACE SHADE ONTO HARP AND TIGHTEN WITH FINIAL.
- 5.PLEASE USE ON/OFF100W BULB ON THE LAMP (BUT BULB NOT INCLUDED).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER)AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY.IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET,REVERSE THE PLUG. IF IT STILL DOES NOT FIT,CONTACT A QUALIFIED ELECTRICIAN NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED.DO NOT ALTER THE PLUG.

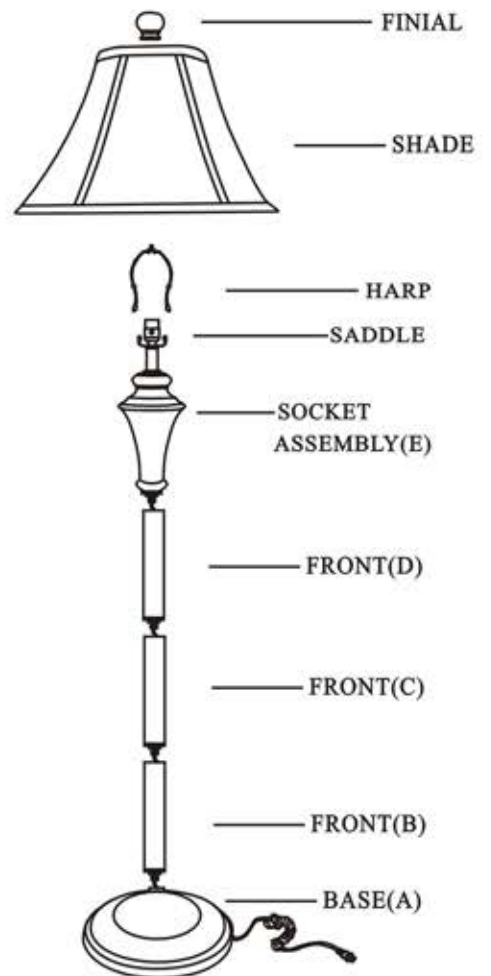

ASSEMBLY INSTRUCTIONS

- 1.FASTEN SOCKET ASSEMBLY ONTO BASE, BE CAREFUL NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
- 2.PLACE HARP ONTO SADDLE.
- 3.PLACE SHADE ONTO HARP AND TIGHTEN WITH FINIAL.
- 4.PLEASE USE ON/OFF100W BULB ON THE LAMP (BULB NOT INCLUDED).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER)AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY.IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET,REVERSE THE PLUG. IF IT STILL DOES NOT FIT,CONTACT A QUALIFIED ELECTRICIAN NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED.DO NOT ALTER THE PLUG.

