OWNER'S MANUAL



SLIDING WIRE BASKET 2-pack

PARTS LIST


Your Sliding Wire Basket should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact our Customer Service. Parts can also be requested online at our customer center.

You will need a Phillips screwdriver for assembly. A rubber mallet is also recommended.

Note: There are two options for installation:

- 1) In cabinet go to page 2-3
- 2) On wire rack go to page 4-5

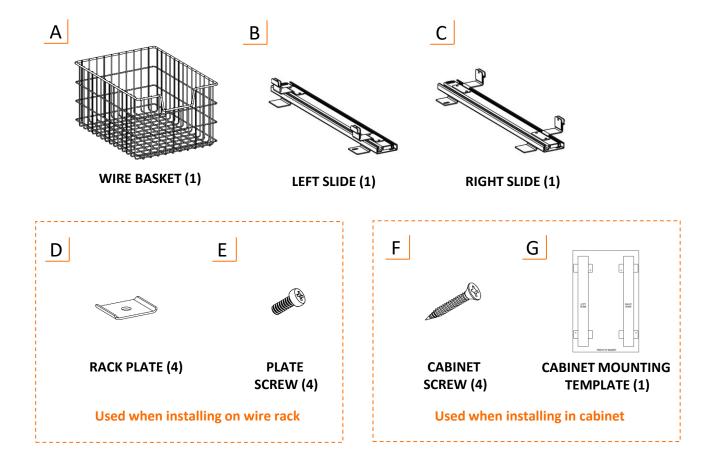



INSTALLATION INSTRUCTIONS – In Cabinet

STEP 1

Place CABINET MOUNTING TEMPLATE (G) inside your cabinet. Using a pencil, mark the location where you plan to install the CABINET SCREWS (F).

 • To ease the installation you can pre-drill small holes at the marked locations.



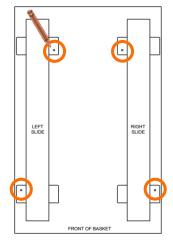

STEP 2


Identify LEFT & RIGHT SLIDES (B) & (C).

• Note that the BACK end of each SLIDE (B) & (C) has a black tip and the FRONT end does NOT.

B (1) C(1) F (4)

Place LEFT & RIGHT SLIDES (B) & (C) in their proper orientation and desired position inside the cabinet.

Extend the SLIDES (B) & (C) slightly and align the center of the oval slots to your marking in the cabinet. Use the self-tapping CABINET SCREWS (F) to fasten the LEFT & RIGHT SLIDES (B) & (C) in your cabinet.

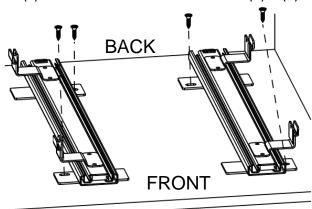

INSTALLATION INSTRUCTIONS – In Cabinet


STEP 3

Align WIRE BASKET (A) at the marked location and push it into the clips of the LEFT & RIGHT SLIDES (B) & (C).



A (1)

<u>Installation Suggestion:</u> With the WIRE BASKET (A) resting on top of the clips, brace the top of the WIRE BASKET (A) with one hand and, with a rubber mallet, lightly tap each bottom corner of the WIRE BASKET (A) to secure the WIRE BASKET (A) into the clips.

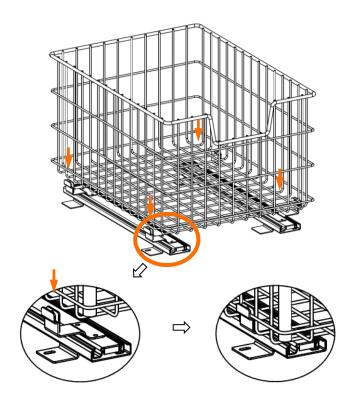


INSTALLATION INSTRUCTIONS – On Wire Rack

STEP 1

Identify LEFT & RIGHT SLIDES (B) & (C).

 
 Note that the BACK end of each SLIDE (B) & (C) has a black tip and the FRONT end does NOT.



Place SLIDES (B) & (C) on desired wire shelf. Make sure the FRONT of the SLIDES (B) & (C) is lined up with the FRONT of the shelf.

Line up the slides along the wires in the wire shelf to ensure they are straight. Make sure the front edge of the WIRE DRAWER (A) lines up to the edge of the shelf so they are flush.

CLIPS should be on the OUTSIDE.

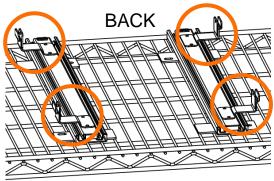

FRONT

STEP 2


Rest WIRE BASKET (A) on top of the CLIPS to ensure proper SLIDE spacing.

 Note: For ease of installation, do NOT clip the WIRE BASKET (A) into the LEFT & RIGHT SLIDES (B) & (C) until Step 4.



A (1)


Position as such:

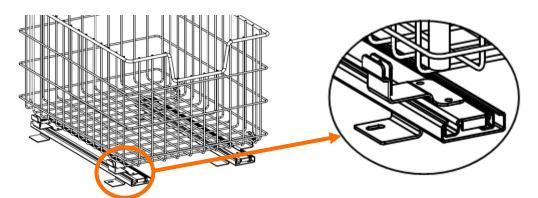


INSTALLATION INSTRUCTIONS – On Wire Rack

STEP 3

 With a Phillips screwdriver, secure the SLIDES (B) & (C) to the wire shelf by putting PLATE SCREWS (E) through the slots and fasten to the RACK PLATES (D).




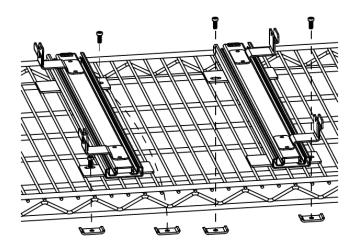

STEP 4

Attach the WIRE BASKET (A) to the clips in the LEFT and RIGHT SLIDES (B) & (C) until it clicks into the clip.

<u>Installation Suggestion:</u> With the WIRE BASKET (A) resting on top of the CLIPS, brace the top of the WIRE BASKET (A) with one hand and, with a rubber mallet, lightly tap each bottom corner of the CLIPS to secure the WIRE BASKET (A) into the CLIPS.

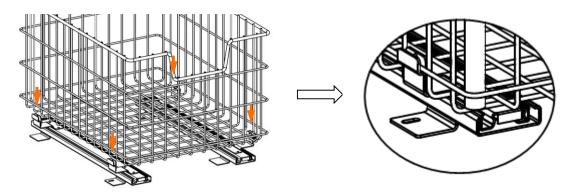


SERVICE PARTS LIST

Customer Service provides the following replacement parts:

Description

- 1) Wire Basket
- 2) Right Slide
- 3) Cabinet Screw
- 4) Template
- 5) Plate Screw
- 6) Rack Plate
- 7) Left Slide

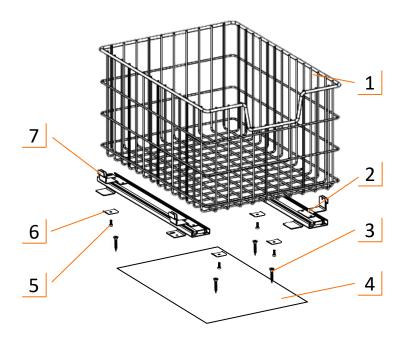

WARNINGS

- Read and understand all instructions. Failure to follow all instructions may result in injury and/or damage.
- 2. The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur. The user must always be aware of their environment and ensure that they use the product in a safe and responsible manner.
- Do NOT modify the product in any way. Unauthorized modification may impair the function and/or safety of the product, and may affect the life of the product.
- 4. Check for damaged parts. Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect the operation of this product. Replace damaged or worn parts, and never use this product with a damaged part.
- Do NOT overload the product. Each basket holds up to 50 lbs. with equal weight distribution.
- 6. Do NOT allow children to climb or play in the basket.

CARE AND MAINTENANCE

- Avoid harsh, abrasive cleaners, and other corrosive chemicals
- Keep dry and avoid damp environments

PRODUCT REGISTRATION

Thank you for purchasing a Sliding Wire Basket. In order to register your product and receive streamlined customer service, please fill out the following Product Registration Form and (1) fax the form (2) complete the Product Registration Form online or (3) scan and email the form. Include a copy of your original receipt with your submission.

First Name:	Last Name:
Address:	
City:	State: Zip Code:
Email Address:	Phone:
Product Model #:	Purchase Date: / /
Location of Purchase:	
Please rate the importance of each feature (1=least important; 10=most important) Quality Price Size/Capacity Appearance Other	
How did you hear about our product? Magazine Ad Catalog [Internet Store Display [Salesperson Word of Mouth Other
Marital Status: Single Household Income: Below Education: High S Primary Residence: Own Comments/Suggestions:	\$50,000\$50,000-\$150,000\$150,000+

1 YEAR LIMITED WARRANTY

Bamboo Shoe Rack (2 Pack)

We warrant to the original consumer purchaser ("Purchaser") of this Bamboo Shoe Rack (2 Pack) ("Product") that each Product shall be free from defects in workmanship and materials for a period of 1 year from the date of original purchase. Our obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, at the option of us, during the warranty period. All replaced parts and Products become the property of us and must be returned to us.

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User's Manual, or alteration by any one other than us. The warranty period of 1 year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

CONTACT US

QUESTIONS? NEED PARTS? WE ARE HERE TO HELP!

Please feel free to contact us. There are no questions too small, or any problems too big. We're committed to providing our customers with the highest level of service.