 
 


D18

 
Assembly Instruction

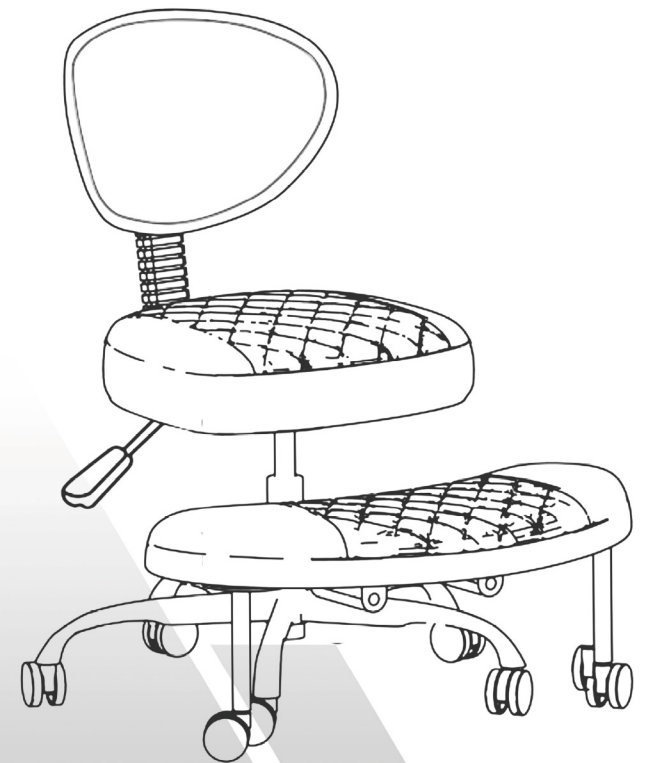


(1) Backrest

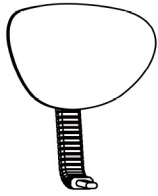


(2) Seat Cushion



 (3) Split Base Tube

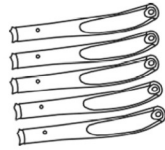

 (4) Central Base Tube

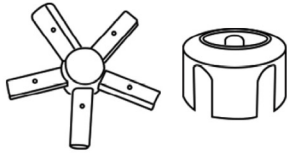


(5) 7 Castors




(6) Air Rod



 
(7) Footrest

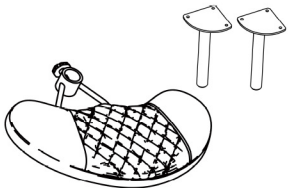

 
(8) Base Plate

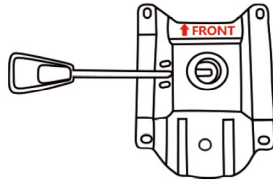

 (9) 5 Screws
(M6X20mm)



 (10) 10 Screws
(M6X18mm)




(11) Hexagon Wrench




(12) Backrest Knob



 
Instructions for Use

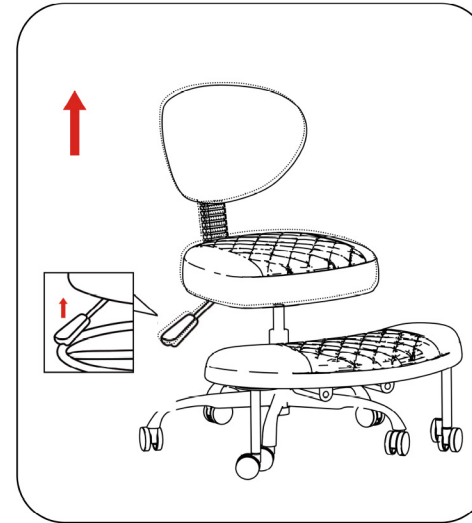

Upward adjustment

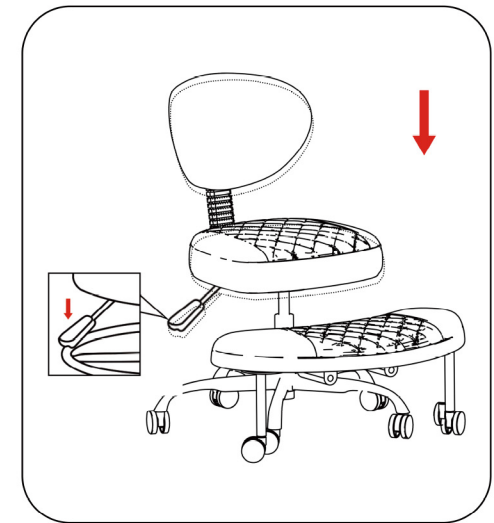 

Downward adjustment

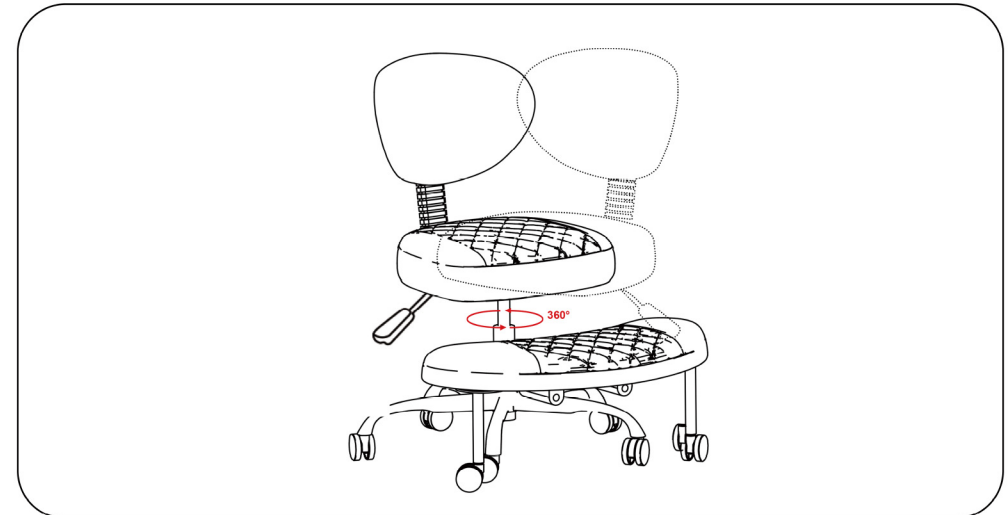 

360° Rotation

Notice

- Firmly secure all parts before use.
- Reconfirm that all parts are secure every 90 days.
- Do not use or store this item or its parts in the proximity of open flame or flammable/combustible chemicals.
- Do not expose this product to water.
- Do not stand on the chair.
- Do not let small children or pets near during assembly.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

 
Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (12 kinds in total).

Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Take out Split Base Tube (3) and Central Base Tube (4). Insert Split Base Tube (3) into Central Base Tube (4) as shown. You can see there are screw holes. Align with the holes, tighten Screws M6X20mm (9) with Hexagon Wrench (11) to fix 5 Split Base Tube (3) to Central Base Tube (4). Repeat it five times.

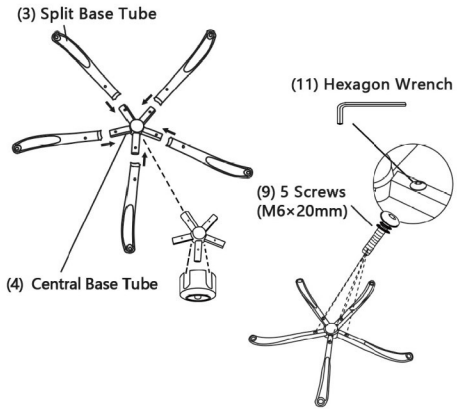

Step 2


Take out Castors (5). Insert Castors (5) into part of Step 1 as shown. There are 5 Castors (5) need to be inserted.

 * Caution: Confirm Castors (5) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

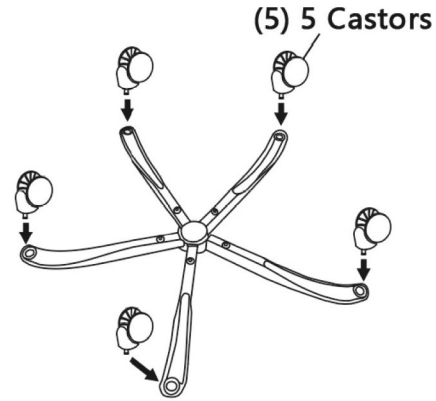

Step 5

 
Insert the Footrest into the assembled Air Rod (6) at your desired height. But at least one inch from the top of the outer circle of Air Rod (6) as shown. Put it aside and we'll use it in Step 8.

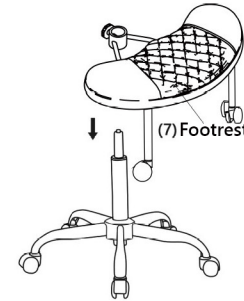

Step 6


Fix Base Plate (8) to the bottom of Seat Cushion (2). Tighten the 4 M6X18mm (10) Screws with Hexagon Wrench (11) firmly.

 * Caution: There is a "FRONT" sticker on the front of Seat Cushion (2). Tighten the screws to 50% first and then tighten them when all the screws are in place.

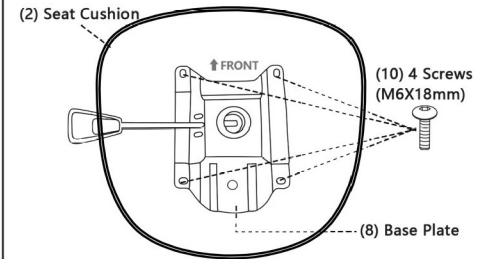

Step 3

 
Take out Air Rod (6). Put Air Rod (6) into the hole of Central Base Tube (4) as shown.

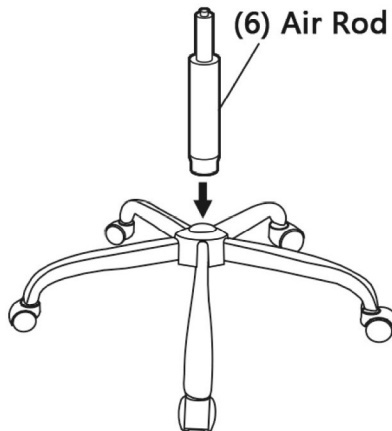

Step 4


Align the holes and attach the Footrest (7) by tightening the 6 M6X18mm Screws (10) with the Hexagon Wrench (11). Insert the Castors (5) into the Footrest (7) as shown. It is necessary to insert 2 Castors (5). Hand tighten the knobs on the Footrest (7) in the direction of the arrows until the Footrest (7) are secure.

 * Caution: Tighten the screws to 50% first and then tighten them when all the screws are in place.

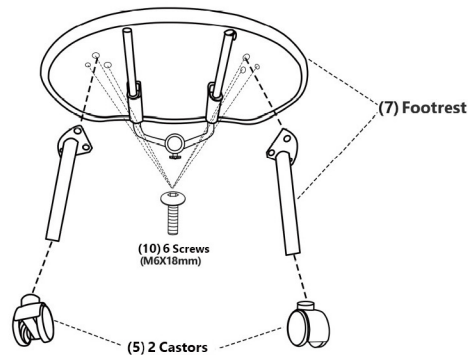

Step 7

 Use the Backrest Knob (12) to link the Backrest (1) to the Seat Cushion (2) until the Backrest (1) is secured.

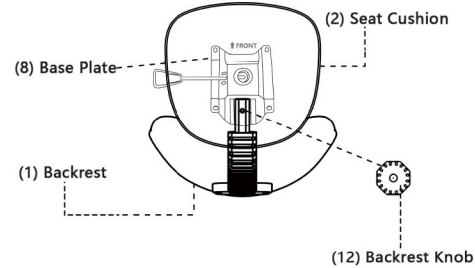

Step 8

Pick up the Step 5's Air Rod (6) and Central Base Tube (4). Insert the Air Rod (6) into Step 7's Base Plate (8). There's a hole in the middle of Base Plate (8). Press the Seat Cushion (2) from top to bottom, use your whole body's strength to insert it firmly, the assembly is complete now.

