


 
 

 

 
 


INSTRUCTION MANUAL

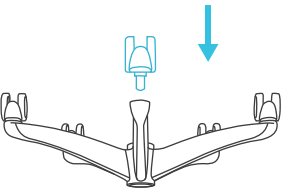
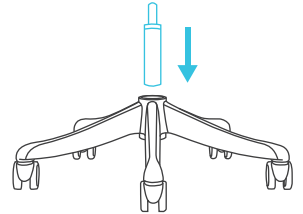
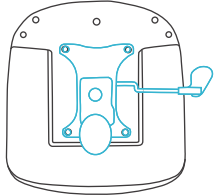
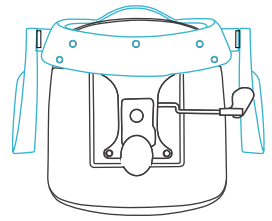
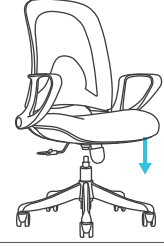



Parts list (Subject to actual size; each type of screws and washers has one spare)

					
Wheel x5	Chair Base x1	Hydraulic Cylinder x1	Mechanism x1	Seat x1	Backrest With Arms x1
					
Allen Wrench x2	Washer (M6) x9	Mechanism Screw (M6*30) x4	Backrest Screw (M6*45) x5		

Note: Before installing the chair, please sort the screws and measure the length of the screws for installation

Assembled instructions (Subject to Actual Size)

		
1 Press the wheels into the chair base.	2 Put the hydraulic cylinder into the hole of the chair base.	3 Secure the mechanism and seat with mechanism screws (M6*30) and washers (M6). Pay attention to the direction of installation.
		
4 Secure backrest and seat with backrest screws (M6*45) and washers (M6).	5 Set the upper part of assembled chair on the hydraulic cylinder.	
		

Note: Before installing the chair, please sort the screws and measure the length of the screws for installation