

FRASER HILL FARM[®]

Thank you for your purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions, please contact us directly.

✉ **Holiday@FraserHillFarm.com** (Anytime)
☎ **855-591-7451**

(9AM to 9PM Eastern Time, Monday - Friday)
(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

 
Please do not return this item to the retailer.

Please call our toll-free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

ENJOY YOUR HOLIDAY!


8 Functions LED Pre-Lit Tree with Instant Connect

Please read instructions carefully before use. Retain for future reference.

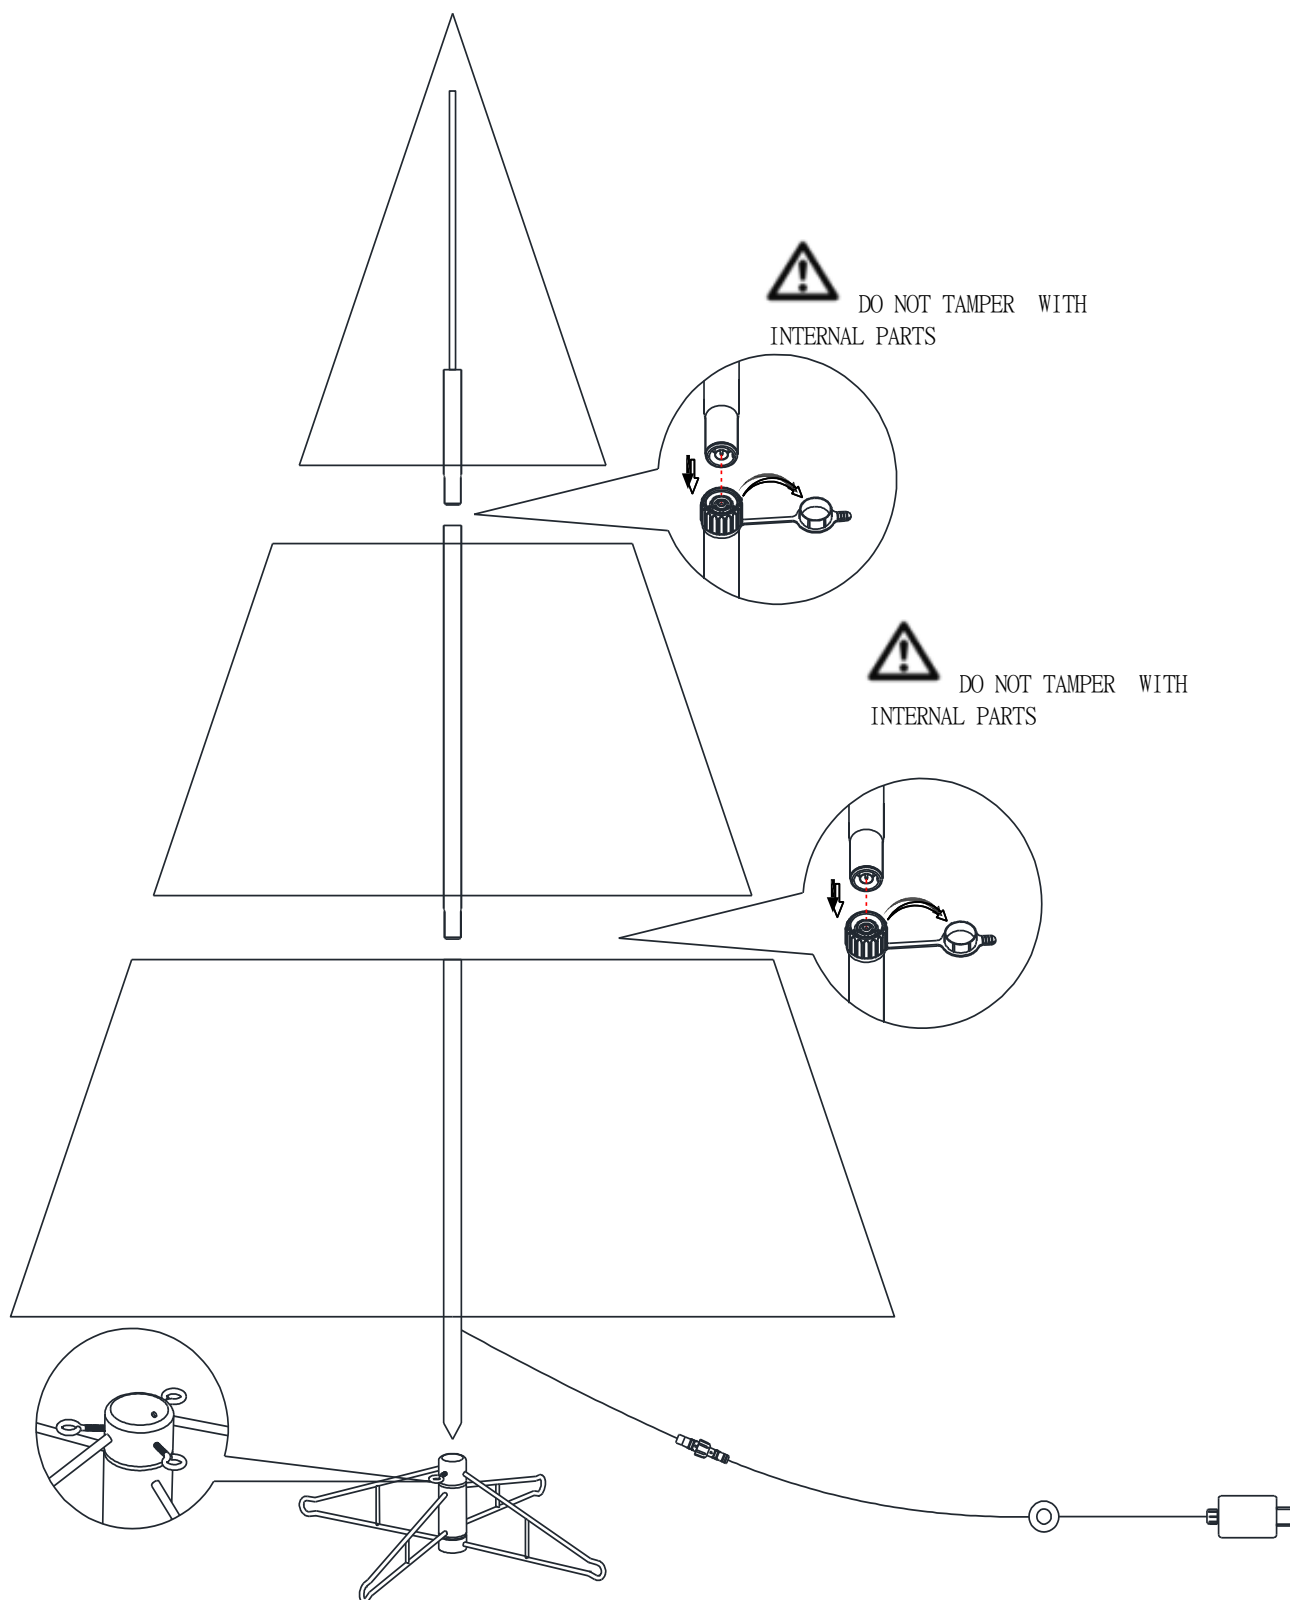


Thank you for purchasing this Instant Connect Tree. This tree includes the proprietary lighting power system (PAT.-US 8905771 B2)certificated by UL/CUL. Carefully follow the instruction below to quickly and easily set up your new tree. Before assembly, choose the appropriate set up location near a wall outlet .

 
1. Assemble the tree stand on a level surface as seen in the diagram below.

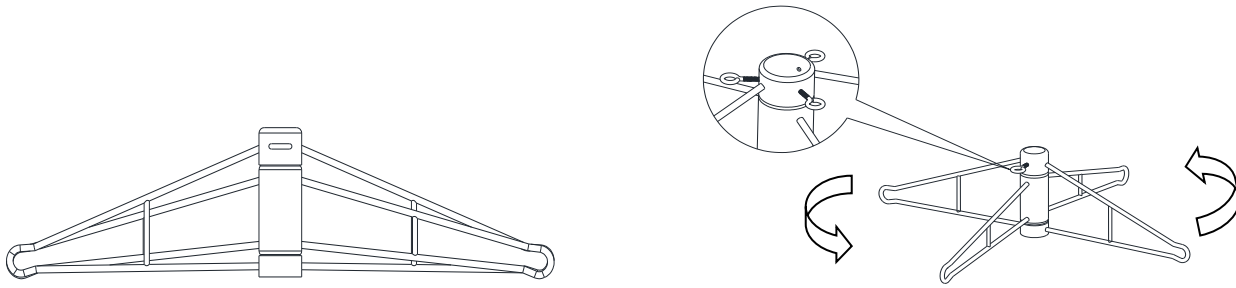

2. Each tree section is numbered with a tag (e.g. SECTION A, B, C). Please identify all sections before assembling.
3. Insert the bottom section (C) into the assembled stand. Make sure the pole is firmly inserted and secured into the stand.
4. Please open the cap before assembling the poles. Insert the middle section (B) to the bottom section (C), then insert the top section (A) into the middle section (B).
5. Once the tree sections are put together, gently shape all branches and tips into place. When adjusting branches make sure all wires are free of the branch hinges.
6. To shape the branches, start with tips located closest to the pole. For each branch, position one tip to the right, one to the left, and one at the center of the main stem, as illustrated. Repeat this pattern for each branch until complete.

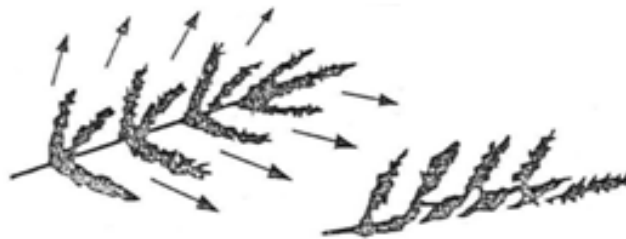 

 7. String Light Plug - Anti-Reverse Design
 - a. Check the plug: Each plug has a flat side and a curved side.
 - b. Align the plugs: Match flat side to flat side and curved side to curved side when connecting male and female plugs.
 - c. Fully insert: Push the plugs firmly together until fully seated to ensure normal lighting with no color distortion.

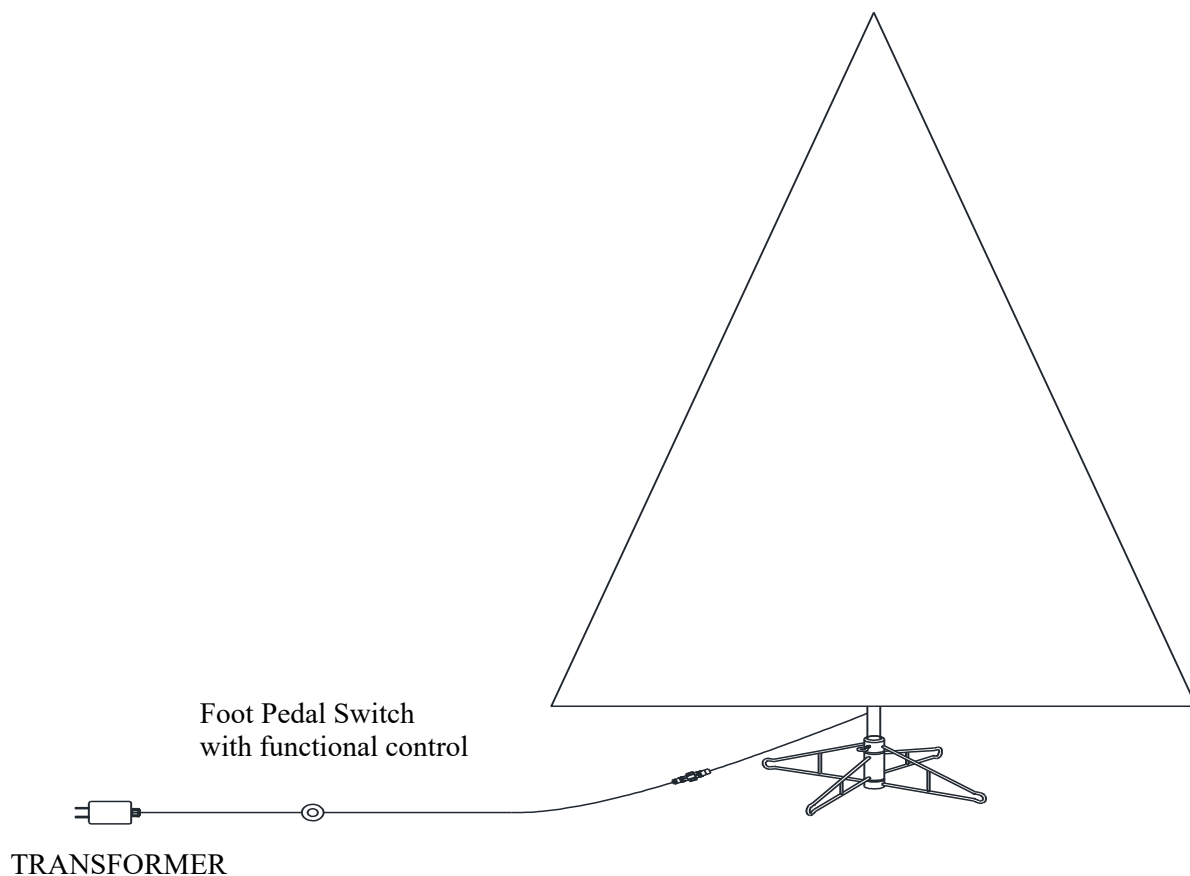

TRANSFORMER PLUG

 
Plug this (UL/GS/SAA/BS) Transformer into your outlet.

FOOT PEDAL SWITCH

Once the tree is plugged in, you may change the color of the lights by pressing the button of the Foot Pedal Switch to cycle through the available lighting Features.

★ MODE – 8 Functions

- ✧ Combination
- ✧ In Wave
- ✧ Sequential
- ✧ Slow Glow
- ✧ Chasing/Flash
- ✧ Slow Fade
- ✧ Twinkle/Flash
- ✧ Steady On

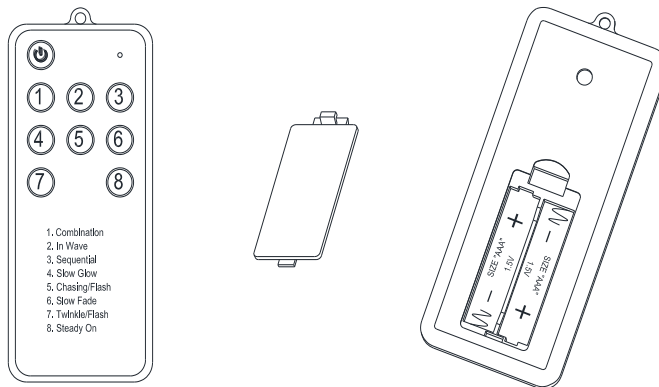

REMOTE CONTROL USE AND BATTERY INFORMATION

You may also change the lighting functions using the included remote control and two AAA battery. Begin by placing the included battery in the remote control. Remove cover of the battery compartment and insert the battery according to the +/- directions. After ensuring the tree is plugged in and turned on using the foot pedal switch, press the button on the remote to cycle through the 8 lighting functions, listed on the next page.

TROUBLE SHOOTING:

If your tree does not light up, please check the following:

1. Check that all plugs are properly connected.
2. Check wall outlet for power.
3. Check for loose, missing, or broken bulbs.

IF PLUG DOES NOT FIT:

 
This product contains an extension cord with a polarized plug (one prong is wider than the other). This feature reduces the risk of electrical shock. If the plug does not fit fully into the outlet, reverse the plug as it is designed to only fit one way. If the plug still does not fit, contact a qualified electrician. Do not use this product with an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.

BASIC PRECAUTIONS SHOULD BE FOLLOWED WHEN USING THIS PRODUCT:

(Inspect product carefully before using or re-using):

1. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury, or electrical shock it should not be played with.
2. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
3. Do not cover product with cloth, paper or any material when product is in use.
4. Do not hang ornaments or other objects from the cord, wire, or light strings. Hang ornaments only on the tree branches.
5. For your safety, unplug the product if left unattended.
6. Do not let bulbs rest on the supply cord or on any wire.
7. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.

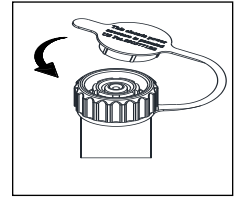

This product is for indoor use only.

FRASER HILL FARM®

Register your product today!

Congratulations on your new Fraser Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://fraserhillfarm.com/register-your-product>



Warranty Information

Fraser Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

Contact Warranty Services at: 1-855-591-7451

Email us at: *Holiday@FraserHillFarm.com*

www.FraserHillFarm.com

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com