 


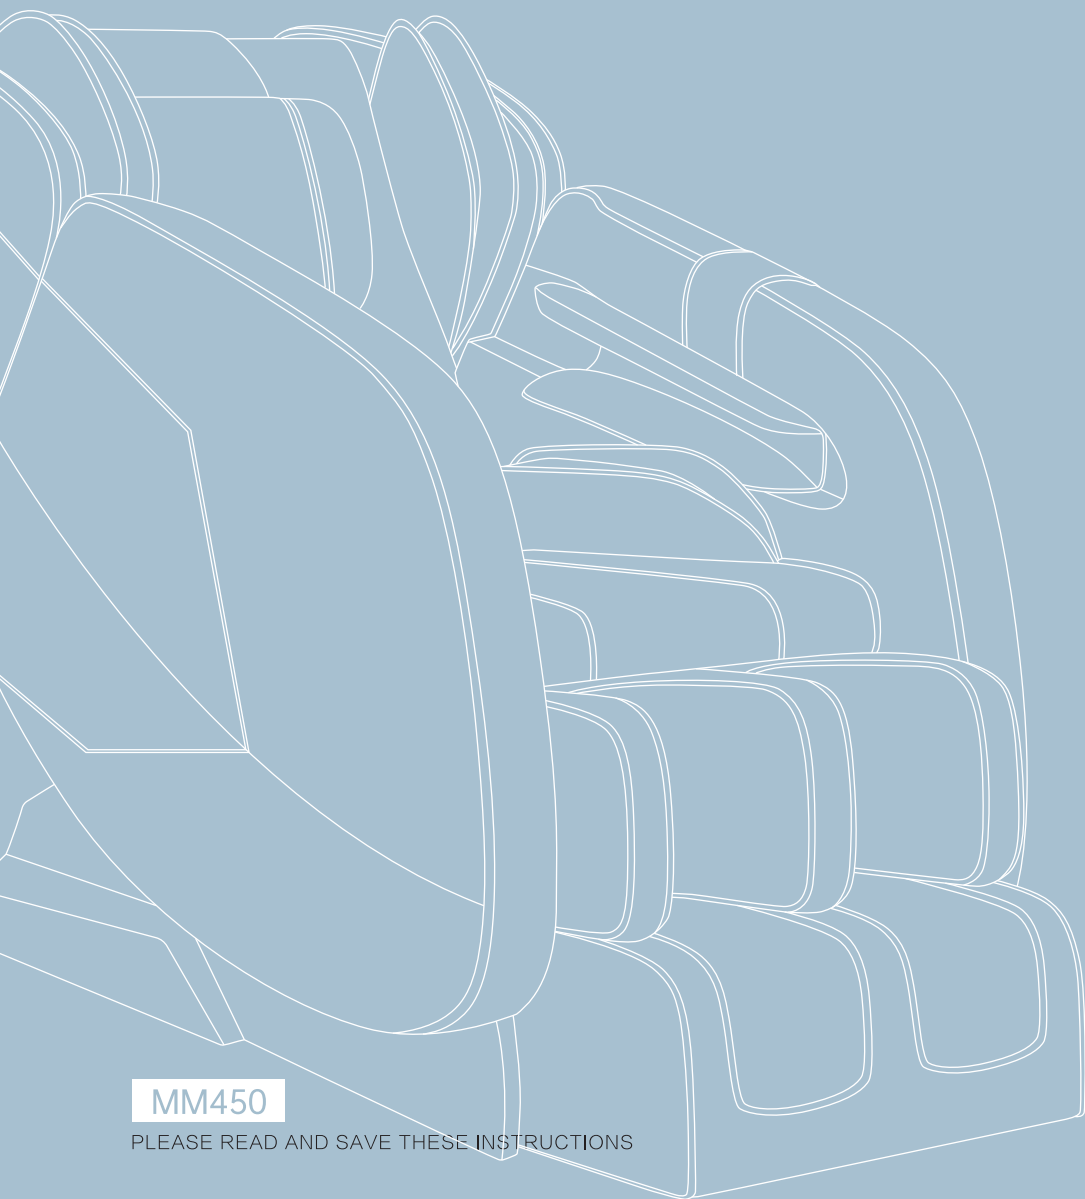

MM450

PLEASE READ AND SAVE THESE INSTRUCTIONS

MASSAGE CHAIR USER MANUAL

TABLE OF CONTENTS

- Thank you for your purchase of this product. Before using, please read this USER MANUAL carefully, and pay special attention to the safety precaution to ensure proper operation and use.
- Please keep this USER MANUAL properly for further reference.

SAFETY PRECAUTIONS	CONTENTS	01
	NOTICE	01
	IMPORTANT	01-02
COMPONENTS AND DESCRIPTION	EXTERNAL STRUCTURE	03
	INTERNAL STRUCTURE	04
	ABOUT INTRODUCTION OF THE REMOTE CONTROL	05
	MUSIC SYSTEM.....	06
	HOW TO USE	06
	AUTO MODE	07
	SELECT AUTO MASSAGE MODE	07
	ADJUSTING THE RECLINING ANGLE	07
	LEG EXTENSION SETTINGS	07
	CUSTOM MASSAGE MODE	08
PREPARATION BEFORE USING	ABOUT THE REMOTE CONTROL PANEL	08
	ACCESSORIES FROM BOX	09
	INSTALLATION INSTRUCTIONS	10-14
PRODUCT STORAGE AND MAINTENANCE	INSTALLATION POSITION	15
	THE MAIN POWER	15
	MAINTENANCE	16
	TROUBLE SHOOTING	16
	TURN ON POWER SUPPLY	17
	HOW TO KEEP DISTANCE FROM THE WALL	18
	GROUNDING INSTRUCTIONS	19
	AFTER USING THE CHAIR	19
	METHODS OF STORAGE	19
TROUBLESHOOTING GUIDE	MAINTENANCE	19
	KIND REMINDING	20
	TROUBLESHOOTING INSTRUCTIONS	20
	PLEASE KEEP THE ORIGINAL PACKAGING FOR OUR CUSTOMER SERVICE	21

SAFETY PRECAUTIONS

Thank you very much for purchasing our massage chair. This operating manual contains important information about how to use the chair safely and correctly. Be sure that you have read all safety precautions thoroughly before using your chair. Keep this manual nearby so that you can refer to it anytime.

We reserves the right to change the product design at any time without notice. Pictures are for reference only and may vary from actual product.

CONTENTS

Safety Precautions and Maintenance
Components and Description
Main Features
Operations
Specifications

NOTICE

Our massage chair is 100% tested before leaving the factory.

 
 
IMPORTANT

1. Make sure the chair is connected to an outlet having the correct voltage. Make sure that the power cord is seated fully into the power outlet. Otherwise it may result in fire or electric shock.
2. Do not modify the plug provided with the product if it will not fit the outlet.
3. Do not use the chair outdoors.
4. Do not use the chair in any way not prescribed by the Operating Manual.
5. Do not install the chair in an area of high humidity such as a sauna.

6. Persons with the following conditions should seek medical advice before using the chair:
 - Those in the early stages of pregnancy or immediately after giving birth.
 - People with weak bones, osteoporosis, or spinal fractures.
 - People with sensory impairment caused by circulatory or other serious ailments.
 - People suffering from heart disease.
 - People have a pacemaker or other medical devices prone to electronic interference.
 - People who are heat sensitive.
 - People under a doctor's care, or those experiencing unusual physical discomfort.
 - Persons who are suffering from any other serious impairment or illness.
7. Keep massage sessions to no more than 30 minutes and rest after every massage.
8. If you begin to experience pain or other physical discomfort while using the chair, immediately discontinue use.
9. Do not fall asleep in the chair during a massage.
10. Do not use the chair after consuming alcohol.
11. If the chair does not start, or if there is any type of malfunction, please stop the chair immediately and turn the main POWER switch to the OFF position.
12. Contact us for assistance regarding professional repairs or maintenance.
13. Make sure to turn the main POWER switch to OFF after every use and to unplug the chair from the power outlet.
14. Make sure to turn the main POWER switch to OFF and unplug the chair from the power outlet during cleaning.
15. Never plug or unplug the chair from a power source (surge protector, wall outlet, ect.) with wet hands.
16. Never use a wet cloth to clean the power switch, power cord, or any other electronic component.


COMPONENTS AND DESCRIPTION

EXTERNAL STRUCTURE

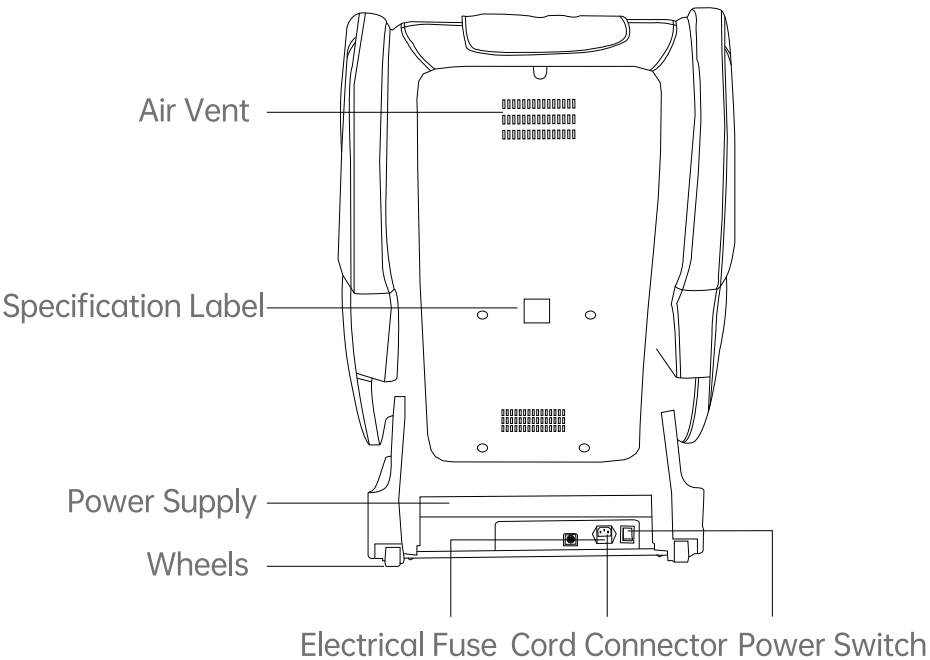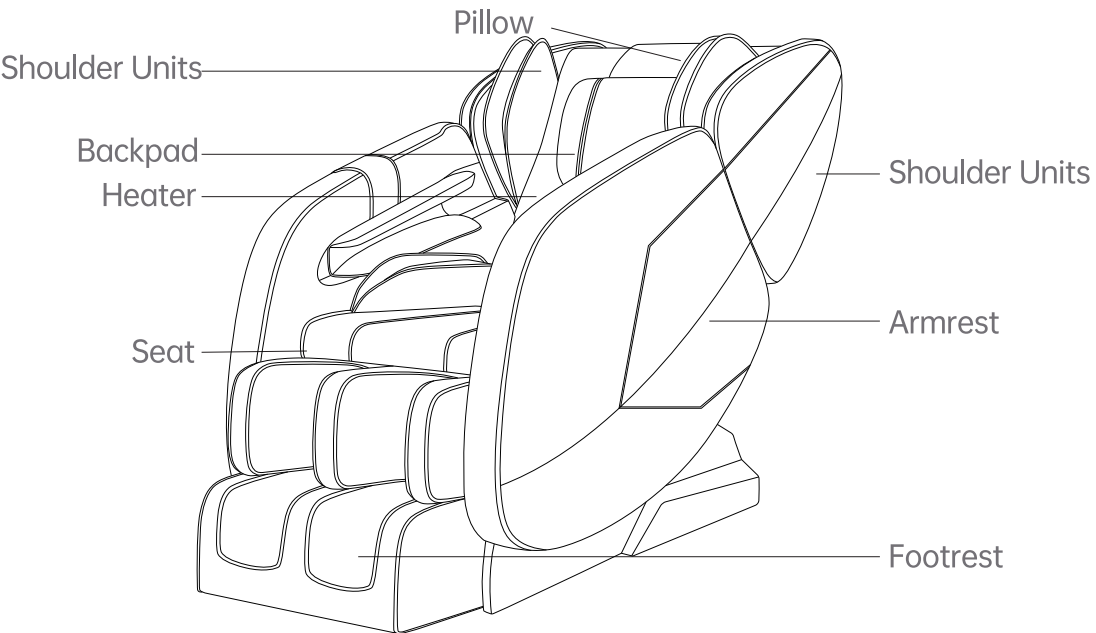

INTERNAL STRUCTURE

- | | |
|-----------------------------|-----------------------------|
| 1 Shoulder Air Massage Unit | 6 Back Massage Points |
| 2 Armrest Air Massage Unit | 7 Waist Massage Points |
| 3 Seat Air Massage Unit | 8 Back Heat |
| 4 Foot Air Massage Unit | 9 Slide Rail |
| 5 Sole Air Massage Unit | 10 Foot Roller Massage Unit |

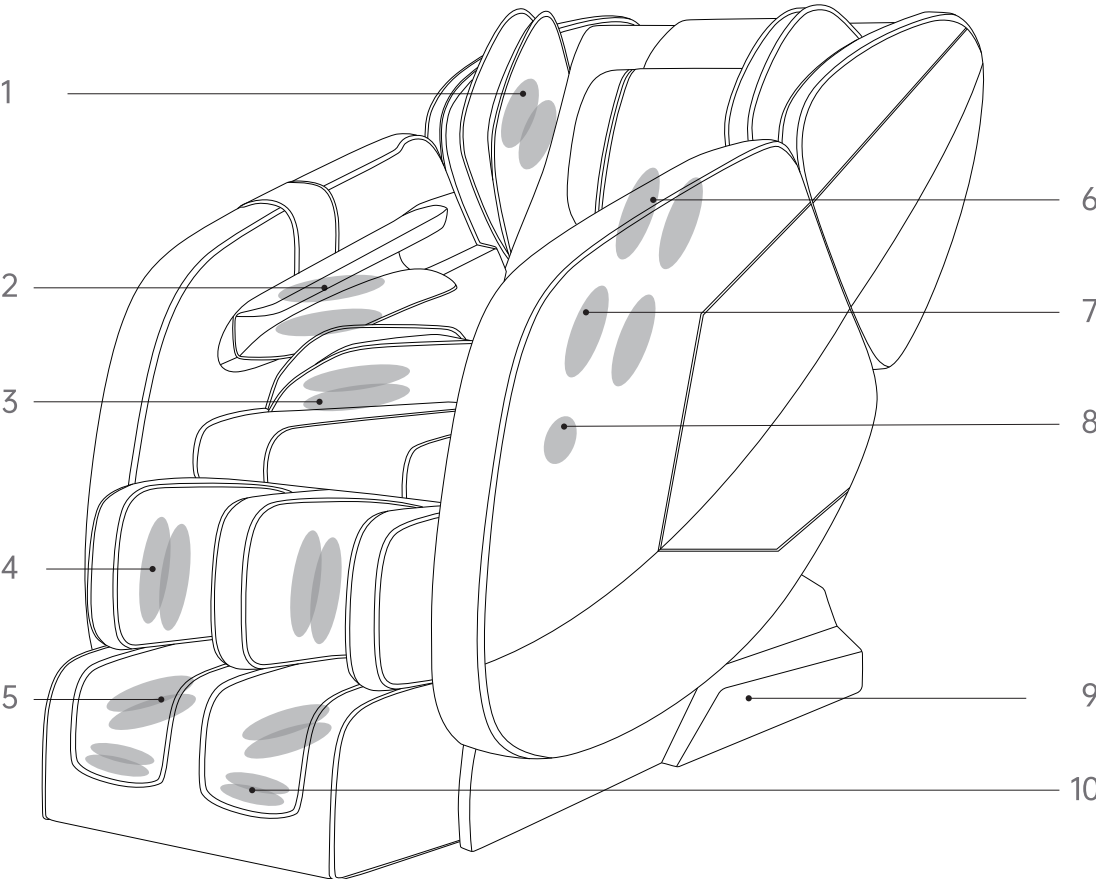 

ABOUT INTRODUCTION OF THE REMOTE CONTROL

1 TFT Display

2 Massage Rollers speed+

3 Back Massage ON/OFF

4 AUTO Programs Switch

5 Back Massage Forward and Reverse

6 Foot Massage ON/OFF

7 Buttock Airbags ON/OFF

8 Calf Airbags ON/OFF

9 Backrest UP

10 Heater ON/OFF

11 Power Button

12 Massage Rollers speed-

 
13 Waist Massage ON/OFF

14 Waist Massage Forward and Reverse

15 Foot Roller Speed

16 Airbags Strength+

17 Arm Airbags ON/OFF

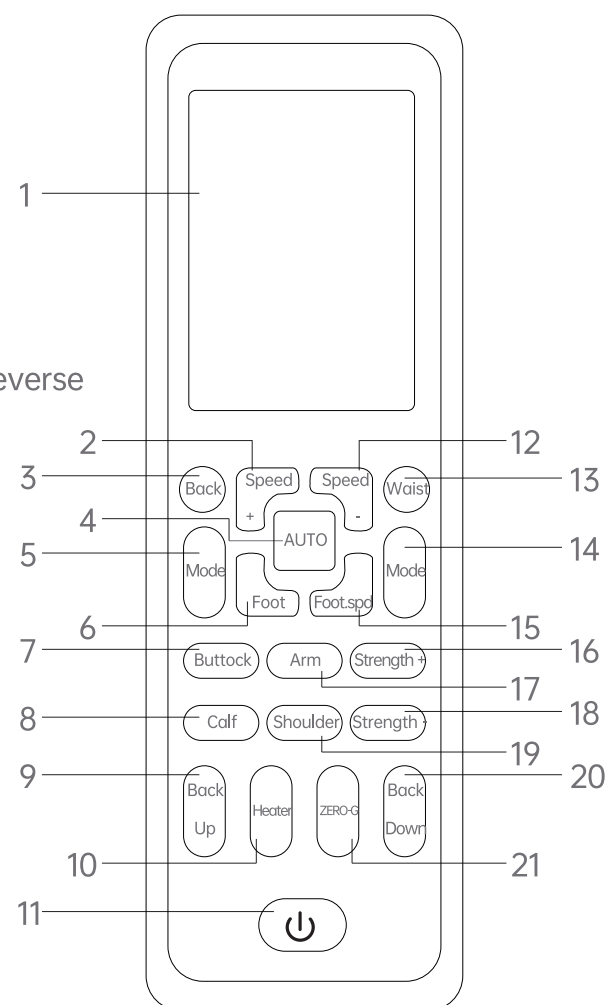

18 Airbags Strength-

19 Shoulder Airbags ON/OFF

20 Backrest Down

 
21 One-button Zero-Gravity

MUSIC SYSTEM


Our product is designed with Bluetooth audio connection function. It can play music through connection with your smart phone, tablet computer or other audio devices.

HOW TO USE:

1. Open mobile-phone/ipad/computer BLUETOOTH capabilities, and access to the search state, your device will automatically search neighboring BLUETOOTH devices.
2. In a few seconds, our massage chair name will show up under the device list, select massage chair name, and the connection complete.

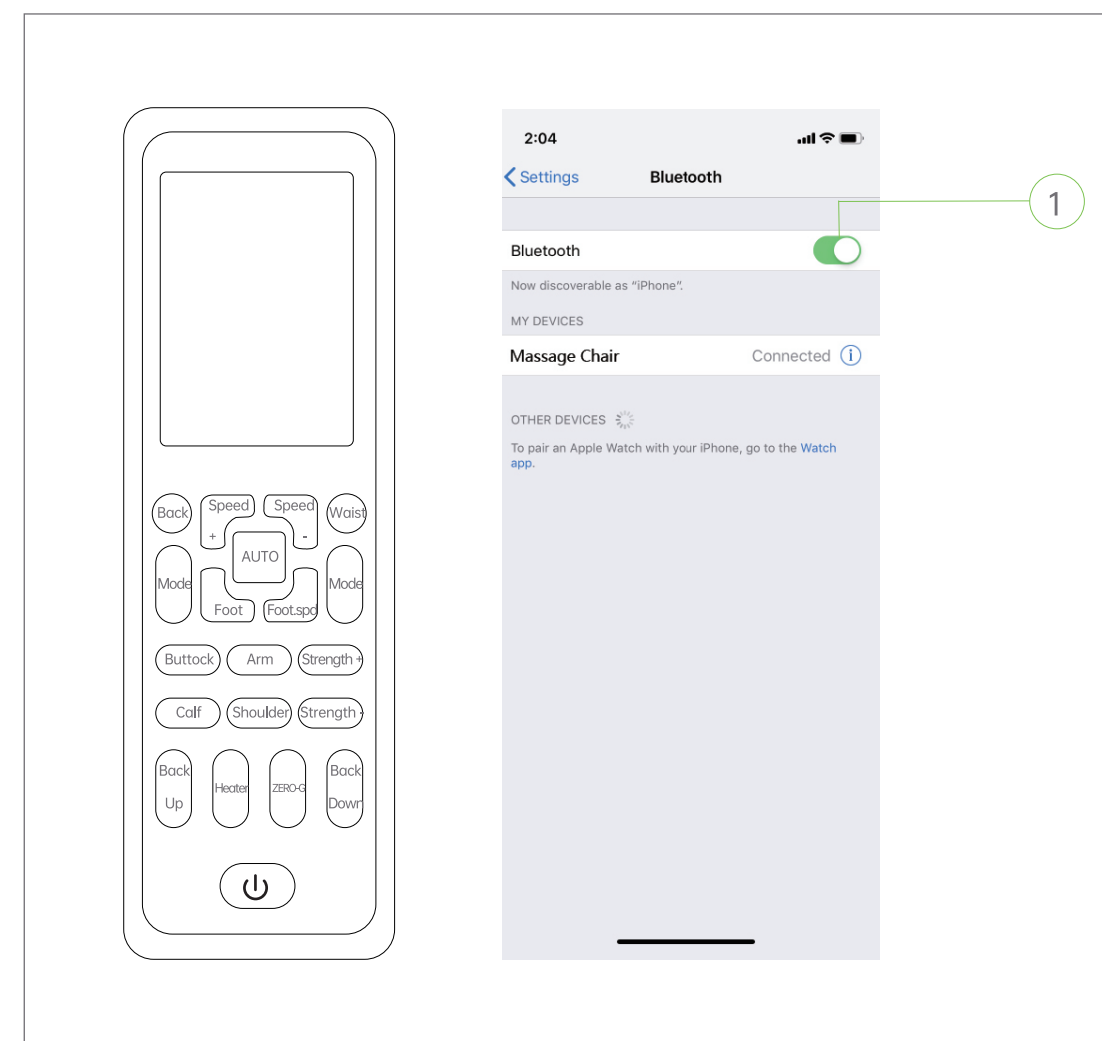

AUTO MODE

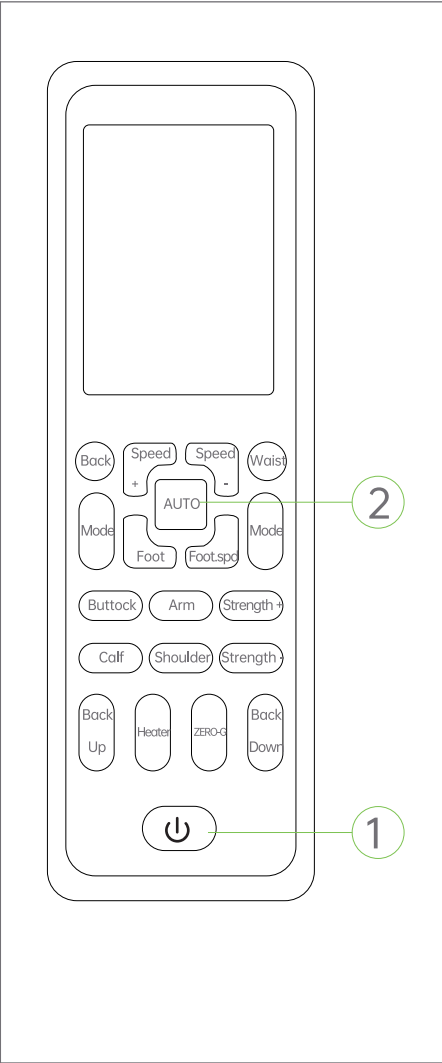 

SELECT AUTO MASSAGE MODE

- 1. Power: when the unit is turned on it will automatically start to massage. In automatic massage modes intensity and strength cannot be adjusted. If you would like to adjust intensity and strength please select a specific area .such as: arm , foot, or shoulders.
Press "Power" to switch time from 15/20/25/30
- 2. Press Power button for 3 seconds to turn off massage chair
We have six Automatic modes, press "AUTO" to switch six modes. Press "AUTO" to switch six modes: Auto massage mode will stop automatically after 15/20/25/30 minutes.

ADJUSTING THE RECLINING ANGLE

- Adjust the angle between backrest and footrest.

LEG EXTENSION SETTINGS

- Footrest unit will automatically extend to suit taller individuals.

CUSTOM MASSAGE MODE

- By selecting a single massage area, auto massage will stop
You can turn on a single massage area, or multiple areas.
- This allows you to give yourself a complete customizable massage.
- You can also adjust the strength of the air bags and intensity of the rollers.

ABOUT THE REMOTE CONTROL PANEL

	On/Off: press power button to turn on the chair or adjust the time, press for more than 2 seconds to turn off.
	Back: manual mode up back massage
	Waist: manual mode waist massage
	Mode: up back , waist forward and reversal
	Speed + and Speed -: back roller speed adjustment
	AUTO: auto mode switch
	Foot and Foot.spd: foot roller and speed adjustment
	Buttock: hips air bag switch
	Calf: calf air bag switch
	Arm: arm air bag switch
	Shoulder: shoulder air bag switch
	Strength + and Strength -: airbag strength adjustment
	Heater: turn on heat function
	ZERO-G: recline till zero gravity
	Back Up and Back Down: backrest recline and forward adjustment when the chair working (can be adjusted to find the best position for rest when the hand controller is off.)

PREPARATION BEFORE USING

ACCESSORIES FROM BOX



Our chair is shipped in three boxes.



Main Unit



Cushion



Armrest



Backrest



Clip Shoulder

 
Components





INSTALLATION INSTRUCTIONS

1

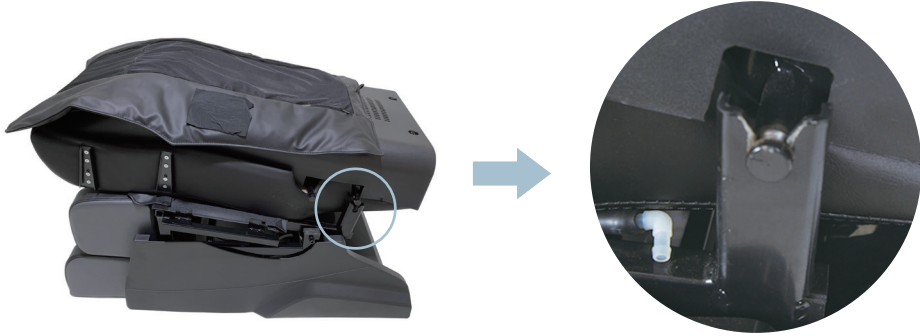

Press the backrest to connect with the 'U' type solt.

2



Make the backrest vertical to the ground.

 
 
3



Connect the air tubes of the armrests and insert them into the host

INSTALLATION INSTRUCTIONS

4

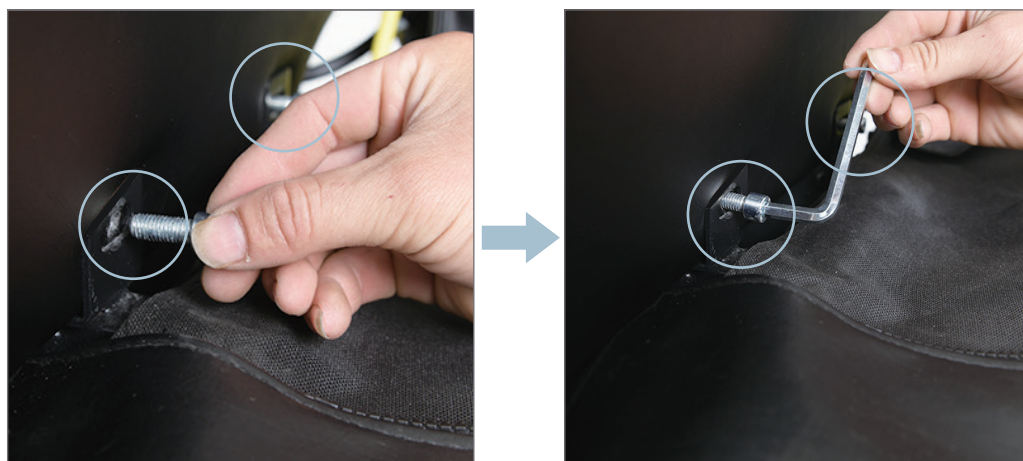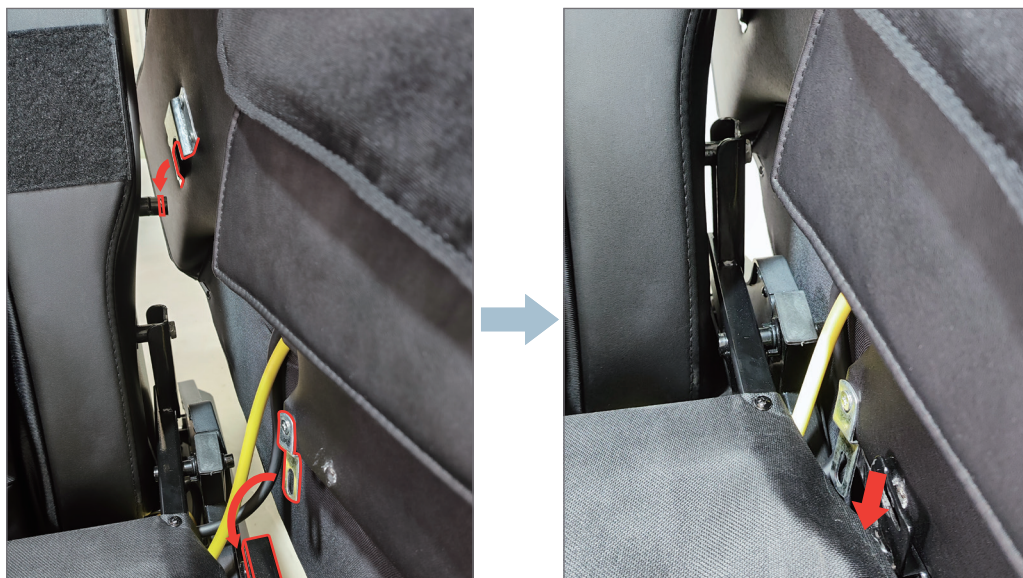

As shown in the figure, connect the armrest to the host with screws securely

INSTALLATION INSTRUCTIONS

5



Pull the headrest pillow up and connect the shoulder air tube with the host

 
6



Connect back cushion heat wire.

INSTALLATION INSTRUCTIONS

7

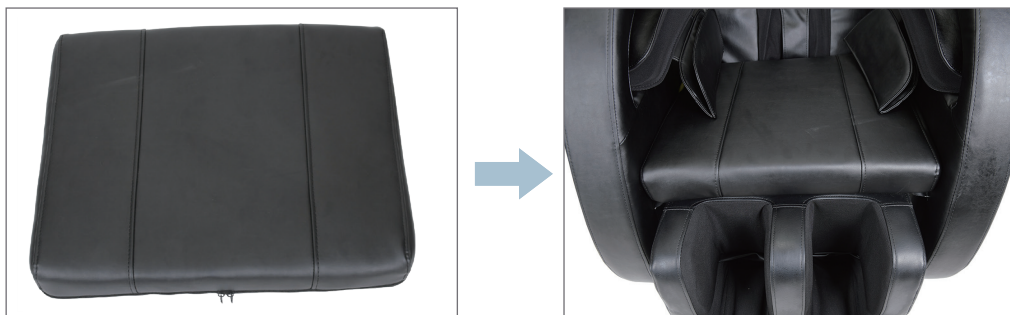

Put seat cushion into the chair.

 
8



Connect the air tube of the backrest.


INSTALLATION INSTRUCTIONS

9

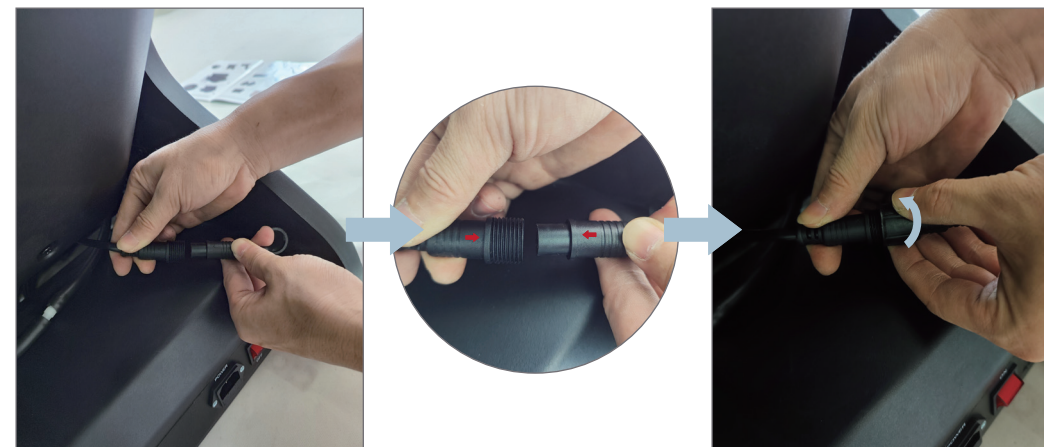

Connect the backrest wire
(please plug it into the aligned position and screw the nut firmly).

 
10

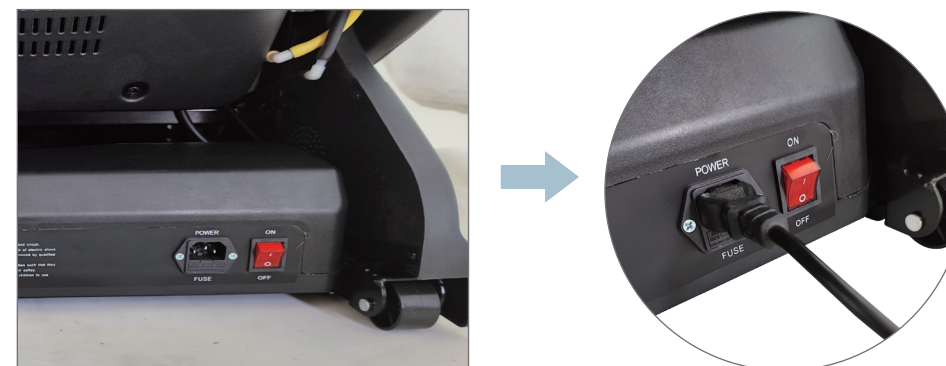


Connect power wire.

PRODUCT STORAGE AND MAINTENANCE

 INSTALLATION POSITION

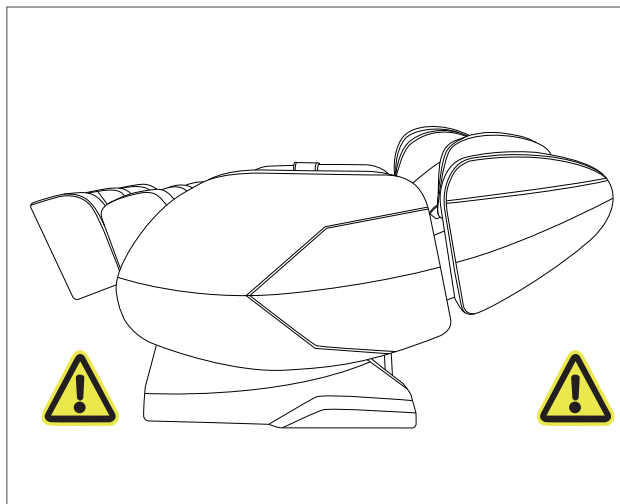


 Make sure children, pets, and foreign objects are away from the chair.

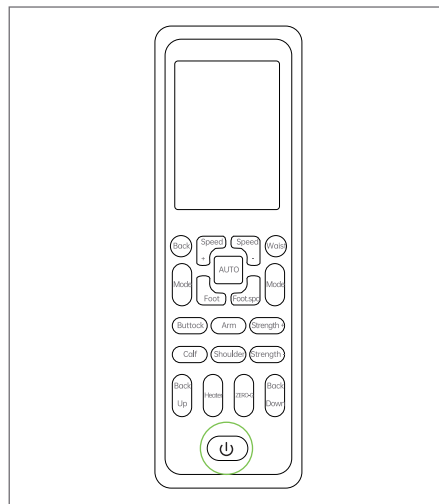

Turn off the power, the reclining seat will return to its storage position

 THE MAIN POWER

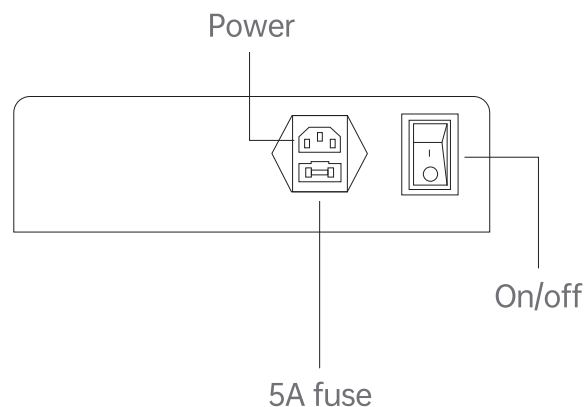

Shut down the main power

MAINTENANCE

 
1. Anyone other than an authorized service person must not repair or disassemble the chair.
2. Stop the main power after massage is finished.
3. If you are not going to use the product for some time, store the power cord in a dry and clean place.
4. Do not leave the chair outdoors, in direct sunlight, in a high temperature environment, or near fire.
5. Use a piece of soft, dry cloth to clean the chair. Do not use alcohol or household cleaners on the chair.
6. Do not operate the chair continuously for long periods of time.

TROUBLE SHOOTING

1. Check the power connector is fully plugged into the wall outlet if the chair doesn't work after the main power is connected.
2. The sound of the motor during operation is a normal part of the product's operation.
3. The chair will automatically power off after a massage. Press the power button to return the chair to an ON state.

TURN ON POWER SUPPLY


1. Plug the power cord into three core socket with well grounding.
2. Turn on the power switch on the bottom of the massage chair.

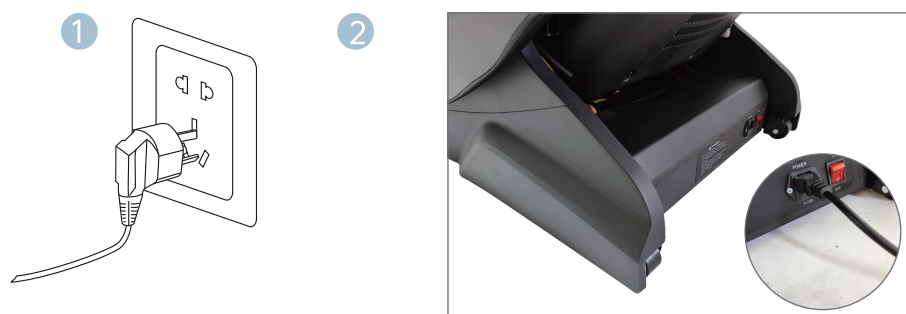

- Before switching on the chair, please make sure there is no damage on the power wire and other exposed wires.
- Make sure the power switch is off before the chair is connected to electricity.

MOVE METHOD

 - There are moving rollers at the bottom of the chair.
- Raise the back to the highest point.
- Switch off and plug out the chair.
- Lift the front part of the chair as shown in the figure (one person raises the front part via holding a moving holder, another person pushes the chair when holding the top of the chair), move the chair by the rollers.

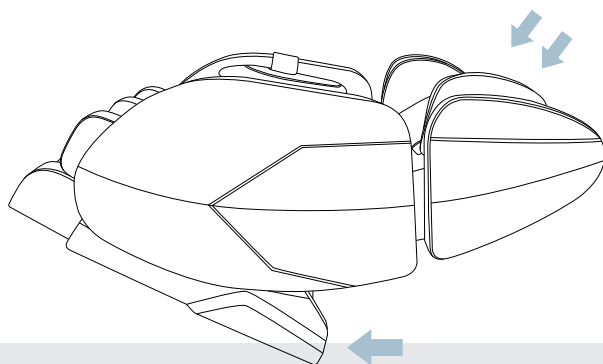


- Don't move it when there are people in it.
- Don't use the armrest while moving the chair, only hold the moving holder in the back and front.

HOW TO KEEP DISTANCE FROM THE WALL

Please leave the space around the massage chair when preparing the massage.

 - (1) Place a massage chair in a place where there is enough space for the back of the chair to recline and the stand to rise.
- (2) Make sure that there is at least 20 cm in the back of the massage chair and at least 30 cm in front of the massage chair. In order to prevent from signal interference, please keep at least 1m away from the TV, radio and other video and audio devices.

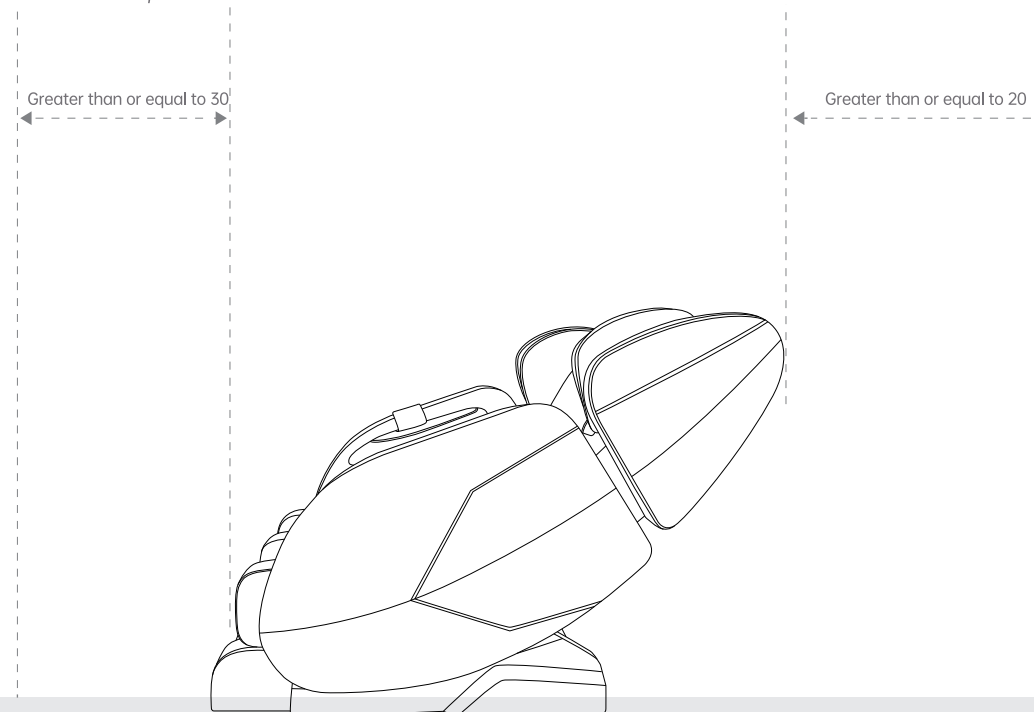

Before using, please tidy up well the cables to avoid twining or damage. When the whole chair makes slide movement forward or backward to original position, please check first whether there are kids, pets or any other objects to avoid accidents. Please put carpet or other pad under the massage chair, in order to avoid any unpredictable impression on the floor.

SURROUNDING ENVIRONMENT



Keep the massage chair away from damp places (for example: bathroom) to avoid electric leakage.



Keep the massage chair away from high temperatures sources (for example: stove) to avoid fire or damage to leather material.

⚠️ GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

⚠️ AFTER USING THE CHAIR

- Please power off the chair and unplug power cable from the power supply socket after using. Disconnect the controller and store carefully.
- Please power off the chair and unplug the chair from the power supply socket when the chair is not in use, to avoid children from starting the chair accidentally.
- Please store the chair well if it is not in use for a long time.

⚠️ METHODS OF STORAGE

- Do not dismount the back of the chair.
- Cover the chair with dust-free cloth to prevent dust from collecting.
- Keep the massage chair free of dust.
- Do not store in a hot, humid, damp place or in direct sunlight or heat.
- Do not store in an overly cold place.

⚠️ MAINTENANCE

- Before cleaning, unplug from electrical source to avoid shock.
- Clean the cloth surface with neutral detergent or special mild detergent for cloth.
- Dust can be cleaned off with a damp cloth of mild detergent and air dry.
- Do not spray pesticide on device.
- Specified cleaner can be used on the leather, plastic, and dried with a cloth.
- Do not use a damp cloth on the electronic components which can cause shock and damage.
- The leather covers (headrest, seat cushion, foot cushion) can be removed for cleaning.

TROUBLESHOOTING GUIDE

⚠️ KIND REMINDING

During daily use, please check whether the following phenomenon exists: Scorched smell

When touch the wire, the power is on, but sometimes off

The power supply cord is hot

Other abnormal phenomenon



If problems happen above, please turn off power supply and contact the distributor or manufacturer for assistance.

⚠️ TROUBLESHOOTING INSTRUCTIONS

Problems/Issues	Possible Cause	Trouble shooting Method
Sounds like tapping or hum sounds	Sounds from air pump, motor or other mechanical parts	Normal phenomenon
Suddenly stops working	1. Bad power connection 2. Auto program timer is up	1. Unplug and reinsert power cord to the chair 2. Normal
Does not work after power up	1. Power switch is not turned on 2. Bad connection between plug and socket 3. Massage remote is not turned on 4. Have broken power wire plug 5. Bad fuse 6. Control unit for functioning properly	1. Turn power switch on 2. Connect power cord again 3. Press power button on remote 4. Contact professional technician 5. Replace fuse 6. Contact professional technician
Roller height changes	Rollers work alternately	Normal phenomenon
Abnormal sounds suddenly while working	Maybe from over working the massage chair	1. Cut down usage 2. Contact professional technician
Can not recline the chair	Obstruction - be sure that the chair is allowed enough room to fully recline	Stop chair operation, and move obstruction
Can not restore position after reclined	Problem on electric motion pole or plug under bad connection	Contact professional technician



If problems are not from the above reasons, please turn off the power supply and contact the distributor or manufacturer for assistance.

Note: Do not dismantle the product by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation!

⚠ PLEASE KEEP THE ORIGINAL PACKAGING FOR OUR CUSTOMER SERVICE

Our Chairs and accessories (the "Products") are warranted for a period of One(1) years (the "Warranty Period") against:

- Do not dismount the back of the chair
- Cover the chair with dust-free cloth to prevent dust from collecting
- Keep the massage chair free of dust
- Do not store in a hot, humid, damp place or in direct sunlight or heat
- Do not store in an overly cold place

The warranty services include the followings if your chairs is under warranty and inartificial:

- i. Provide free accessories and parts.
- ii.Customer pays for the back and forth shipping cost to return for maintenance.
- Note1: If you require a return service, please show the valid warranty card and complete product package, and bear the freight of returning.
If your product cannot be repaired, we offer the following options:
- Option 1. You can contact our customer service for the depreciation and deduction of your purchased massage chair, and directly purchase any model of massage chair on our official website.
- Option 2. You can check the depreciation and deduction of your massage chair with our customer service and exchange for the equivalent cash coupon to offset our official website for the future purchase.
- Note2: We do not accept unjustified returns with non-quality problems.

Subject to the following:

- Any replacement parts shall be fully provided by Realrelax and any shipping costs shall be half-borne by the consumer;
- To benefit under this warranty,Realrelax must be notified of any defect within 14 days of the occurrence of such defect via an image or video of the relevant defect sent electronically to service@realrelaxmassage.com;
- This warranty shall be warranted for the remainder of the original Warranty Period, or 30 days, whichever is longer.
- Damaged caused by a drop, rough or careless handling, or other negligent action.

Warranty not covered:

- Wear and tear of Pu leather, including but not limited to cuts, scratches or damage caused by accident, abuse, misuse, water, flood, fire and other acts of nature or external causes.
- Consequential or incidental damage.
- Damage caused by personal modification or altering without permission from REAL RELAX.

⚠ ATTENTION

For more warranty and products information, please visit our website: www.realrelaxmassage.com

MM450

FUNCTIONS



Auto



Arm



Foot



Zero-g



Air Squeeze



Music



Heating

Measurement: 40.6" * 25.2" * 17.5"

39.8" * 22.8" * 18.1"

G.W/N.W: 83.6LB / 71LB

65.7LB / 57.3LB

Rated Power: 100W

Rated Voltage: 110V-60Hz

