



Portable Dance Pole User Manual

Safety Instructions

1. Never use oil and/or lotion on your hands or body before using the dance pole. The oil and/or lotion transferred onto the pole will make it slippery and hard to hold, which might cause serious bodily injury.
2. The dance pole should not be installed under false or suspended ceilings that are not sturdy enough.
3. Never place a carpet under the dance pole as it could affect the stability of the product.
4. Before the installation, all protecting film covering the parts must be removed.
5. The horizontal weight capacity of this product is 280 kg/617 lbs. The vertical weight capacity of this product is 500 kg/1102 lbs. Never apply any weight over the weight capacity on this dance pole.
6. Ensure that the 3.5 meter peripheral area of the dance pole is free of any objects.
7. We recommend the assembly of this product should be carried out by two people.

Package Contents



Base x 1



Top Dome x 1



Base Pole x 1




Extension Pole C x 1



Extension Pole D x 1



Iron Cover x 1

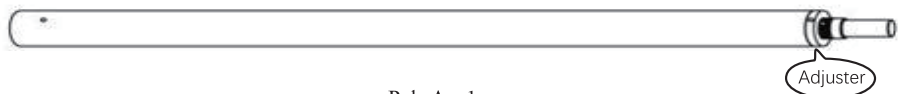

Pole A x 1



Pole B x 1



Iron Rod x 2




Allen Key x 1

Specifications

Adjustable Height	82" x 108" (from 207 to 275 cm)
Overall Dimensions (L x W x H)	9" x 9" x 108" (23 x 23 x 275 cm)
Horizontal Weight Capacity	280 kg/617 lbs
Vertical Weight Capacity	500 kg/1102 lbs

Assembly Instructions

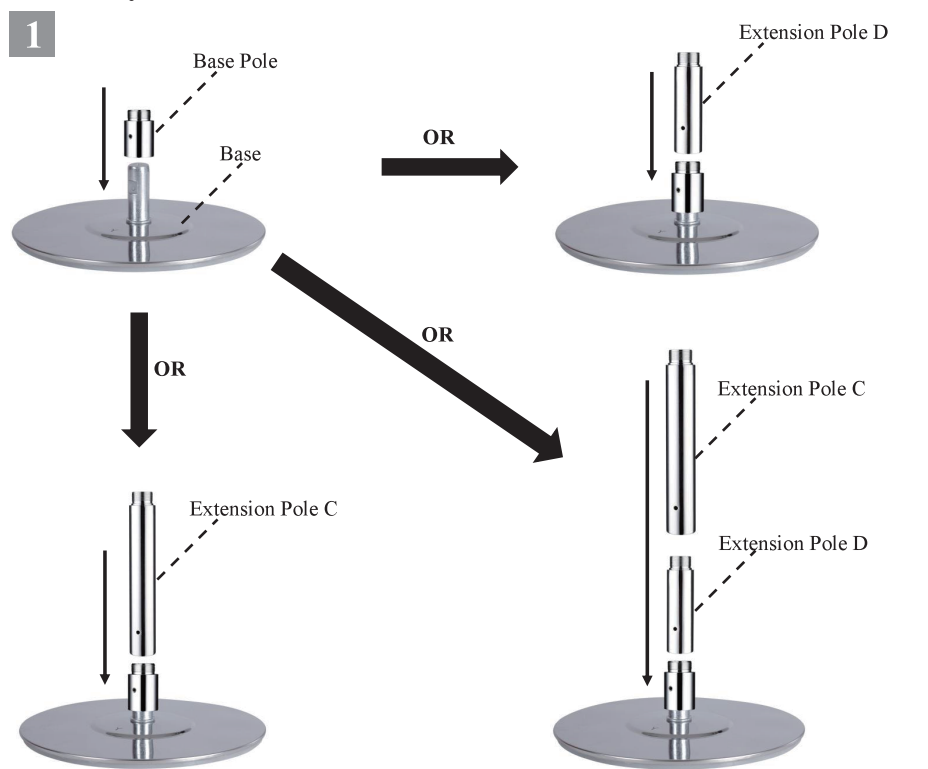

1. Use the allen key to loosen the screws on the base pole and install the base pole on the base. Ensure one of the screws on the base pole is aligned to the “Y” letter on the base (Fig 1). After that, retighten the screws.
2. Measure the distance between your ground and ceiling and refer to the diagram below to decide if you need to install either the extension pole D or extension pole C or both of them, or none of them on the base. In the following steps, we will take scenario of installing Extension Pole C only as an example.



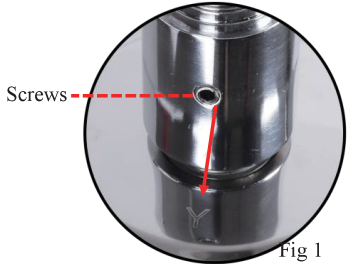


Fig 1

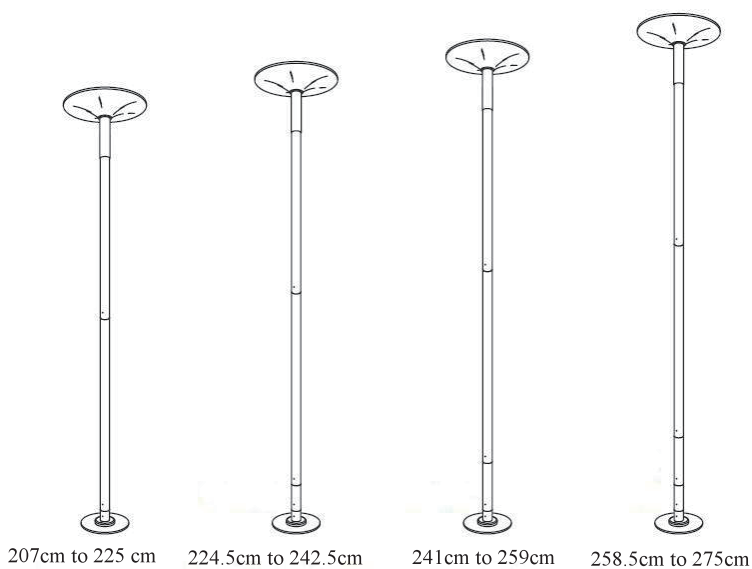


2

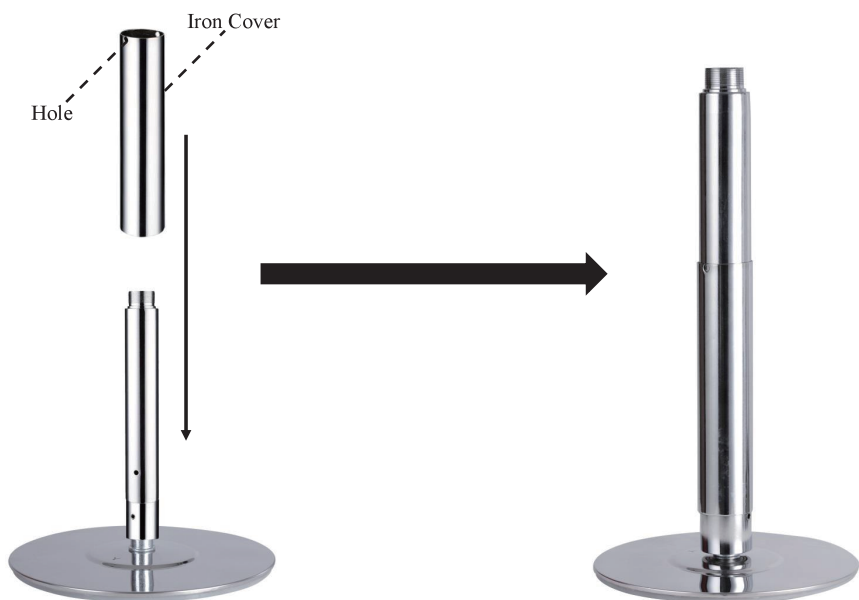


Slide down the iron cover through the pole and leave it on the base first. Ensure the end with two holes faces upward.

3

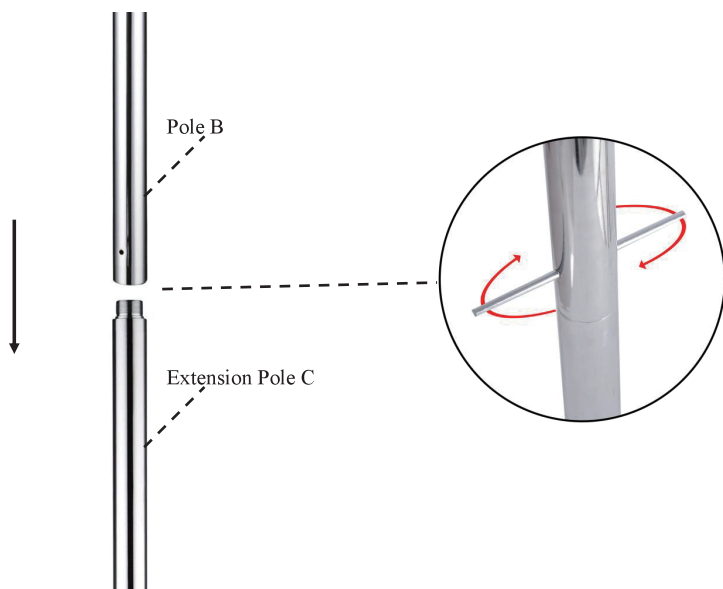

Install the pole B on the extension pole C as shown above. Fasten the connection with the iron rod.

4

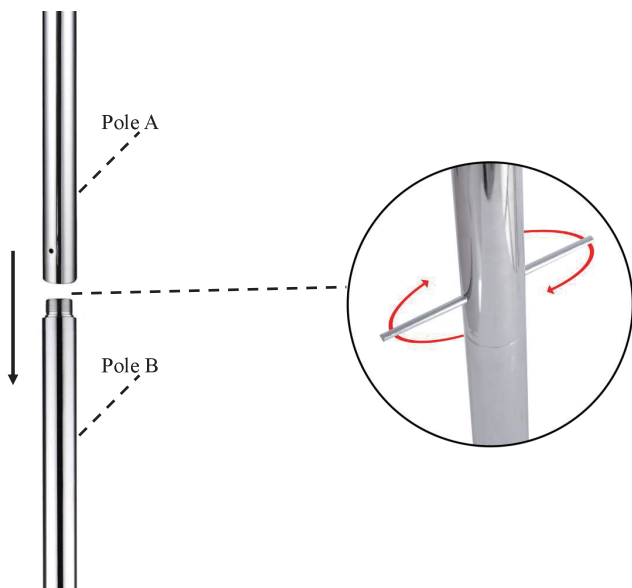


Install the pole A on the pole B as shown above. Fasten the connection with the iron rod.

5





6

Install the top dome on the top of pole A as shown above. Rotate the top of pole A anticlockwise until the hole of the inner pole shows up.

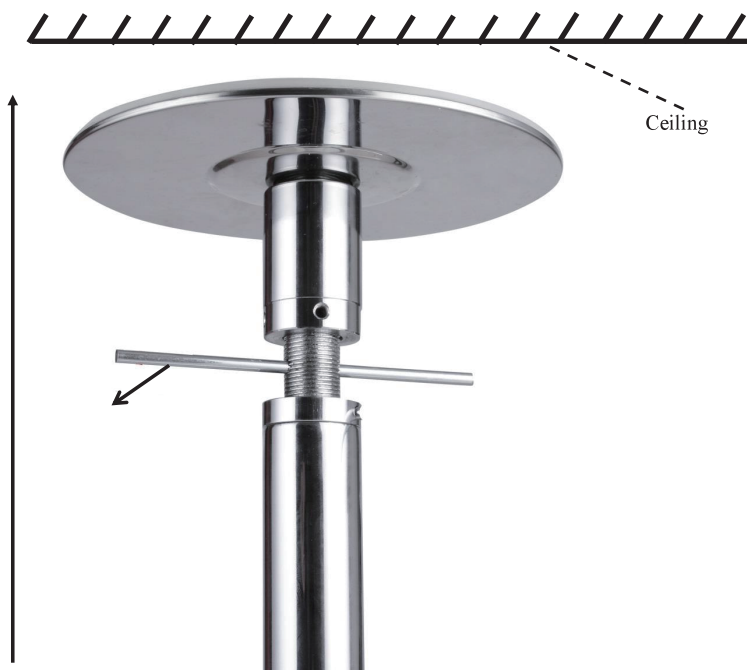

Use an iron rod to rotate the inner pole anti-clockwise until the upper base could not go up further against the ceiling. Please make sure that the pole is vertical between the ground and the ceiling and that the upper base is flat against the ceiling as shown in the pictures below.

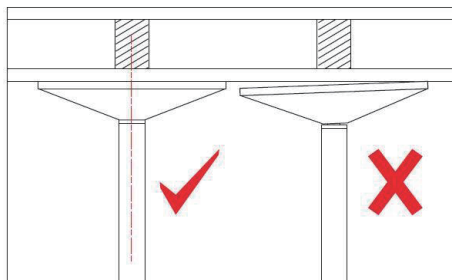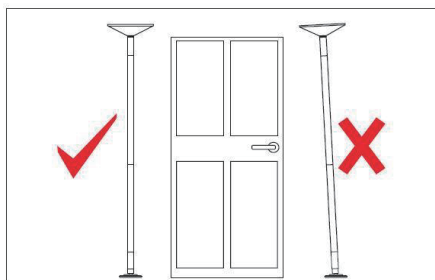

7



Use an iron rod to rotate the iron ring on the pole A clockwise to secure the dance pole.



Ensure that the dance pole is set up firmly between your ceiling and ground. After that, slide the iron cover from the bottom base to the upper base. Fasten it with the two screws.

Switching between Static & Spinning Mode



1. To set the dance pole into the spinning mode, loosen the two screws from the base pole.
2. To set it back to static mode, fasten the two screws back and ensure that one of them is aligned to the “Y” letter on the base.