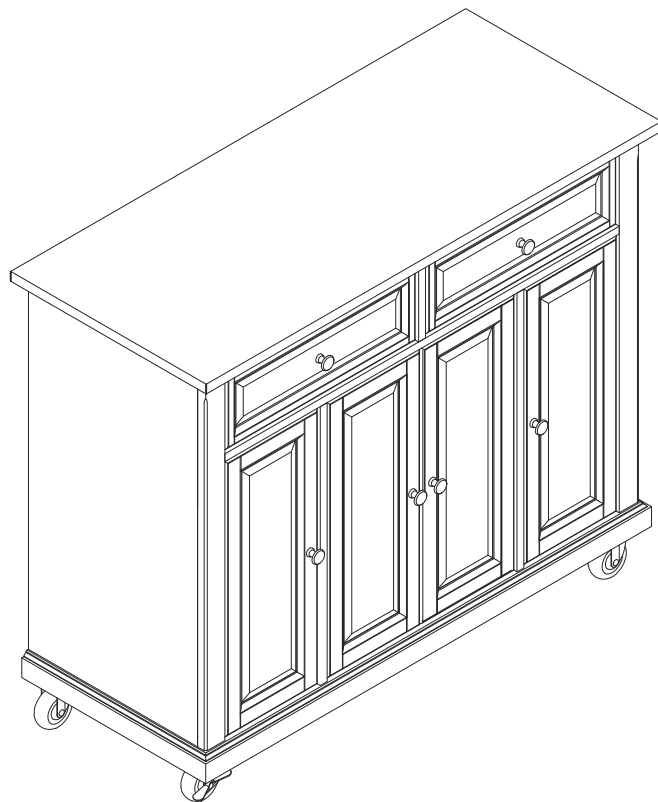

























CROSLEY

FURNITURE


Kitchen Island CF3021



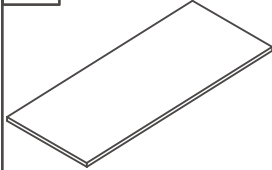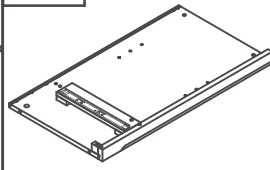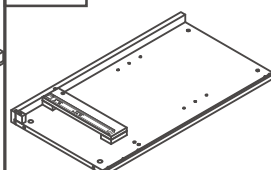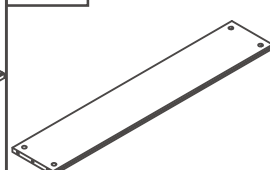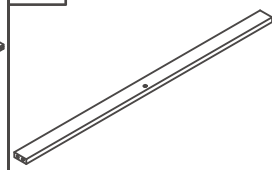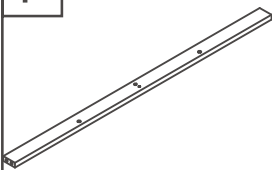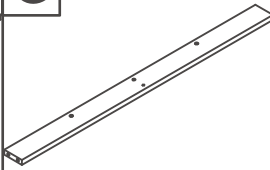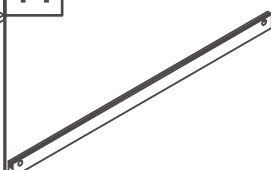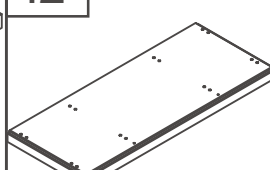
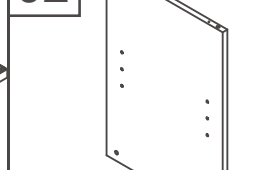
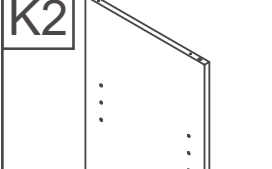
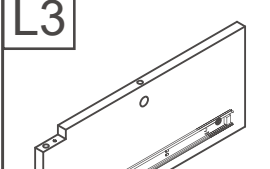
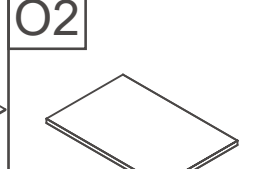
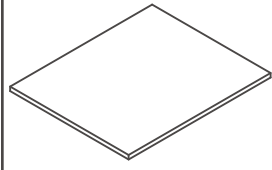
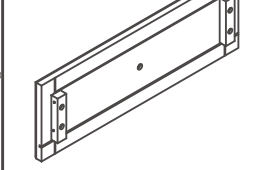
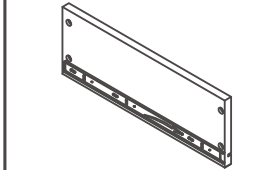
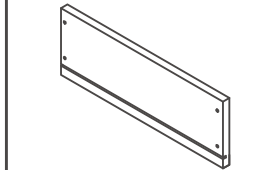
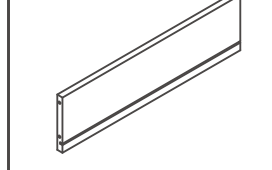
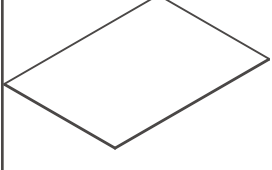
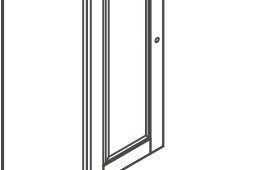
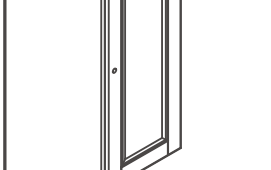
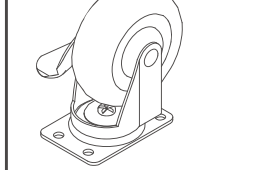
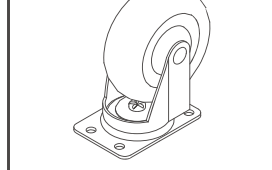
PART LIST

A 	B2 	C2 	D2 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Back Top Panel 1 PC	Front Top Rail 1 PC
F 	G 	H 	I2 	J2 
Back Top Rail 1 PC	Front Middle Rail 1 PC	Back Bottom Rail 1 PC	Bottom Panel 1 PC	Left Partition Panel 1 PC
K2 	L3 	M 	N2 	O2 
Right Partition Panel 1 PC	Top Vertical Panel 1 PC	Back Partition Panel 2 PCS	Back Panel 3 PCS	Adjustable Shelf 2 PCS
P2 	Q 	R3 	S3 	T2 
Middle Adjustable Shelf 1 PC	Drawer Front Panel 2 PCS	Drawer Left Panel 2 PCS	Drawer Right Panel 2 PCS	Drawer Back Panel 2 PCS
U2 	V 	W 	X2 	Y2 
Drawer Bottom Panel 2 PCS	Left Door Panel 2 PCS	Right Door Panel 2 PCS	Locking Caster 2 PCS	Caster 2 PCS

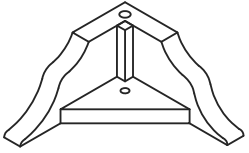PART LIST


Z

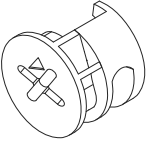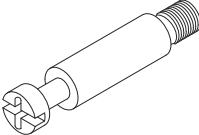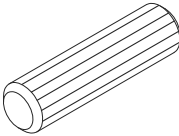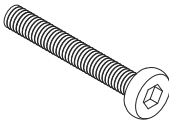       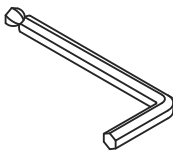   Leg
4 PCS

HARDWARE LIST

#1 	#2 	#3  Ø8*D30mm	#4  2"*Ø1/4"*D11mm	#5  1"* Ø 4*D8mm
Cam Lock 17 PCS (Extra 2)	Cam Bolt 17 PCS	Wood Dowel 45 PCS (Extra 1)	Long Bolt 8 PCS	Screw 16 PCS (Extra 1)
#6 	#7 	#8 	#9  3/4"* Ø 5/32"*D9mm	#10 
Barrel Nut 8 PCS	Shelf Holder 12 PCS	Knob 6 PCS	Round Head Bolt 6 PCS	Large Round Head Screw 16 PCS (Extra 1)
#11 	#12 	#13  12mm* Ø 3*D6mm	#14 	#15  1-1/4"* Ø 4*D8mm
Double Magnet 1 PC	Magnet 2 PCS	Round Head Screw 6 PCS (Extra 1)	Allen Wrench 1 PC	Long Screw 7 PCS (Extra 1)
#16  1-1/2"*Ø5/16"*D13mm	#17 	#18 	#19 	 (Spare Part)
Short Bolt 4 PCS (Extra 1)	Flat Washer 4 PCS (Extra 1)	Spring Washer 4 PCS (Extra 1)	Adjustable Leveler 4 PCS	Pin Hinge (Extra 4)

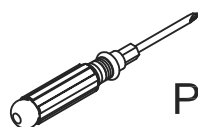ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

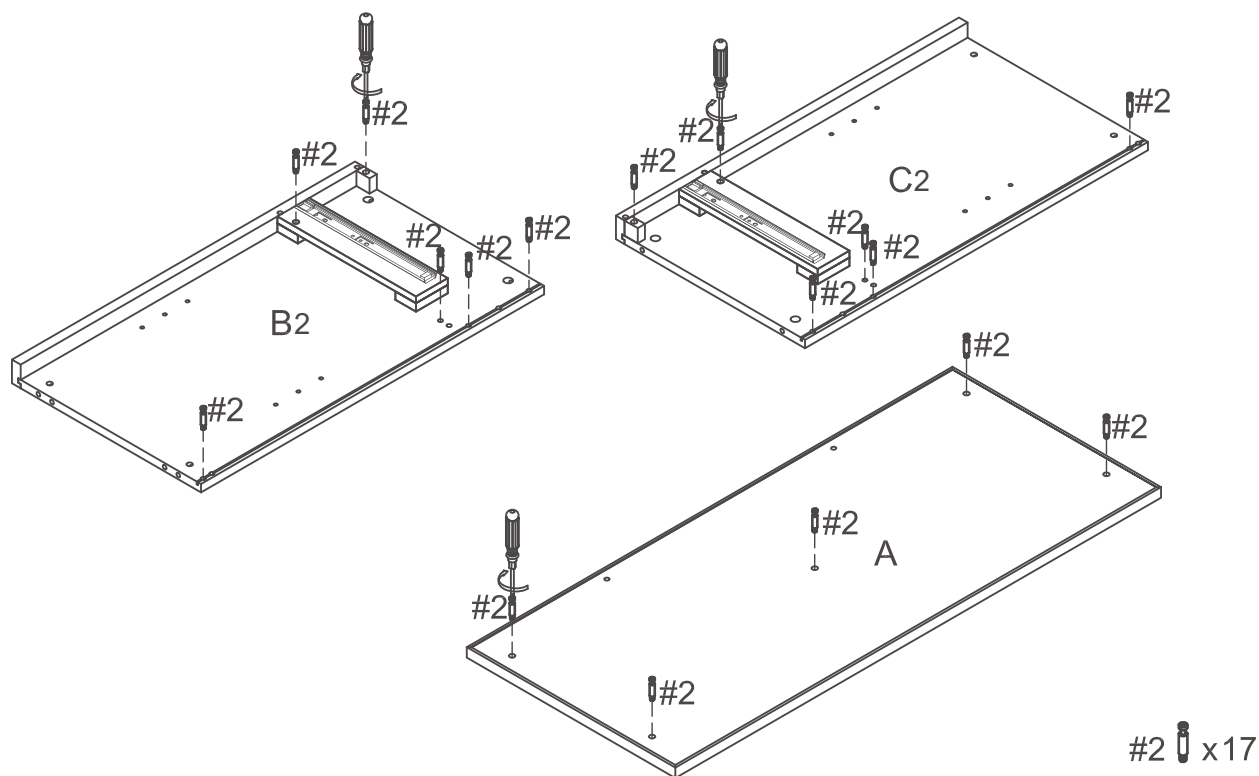


Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #2) into top panel (part A), left panel (part B2) and right panel (part C2) using phillips head screwdriver.

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




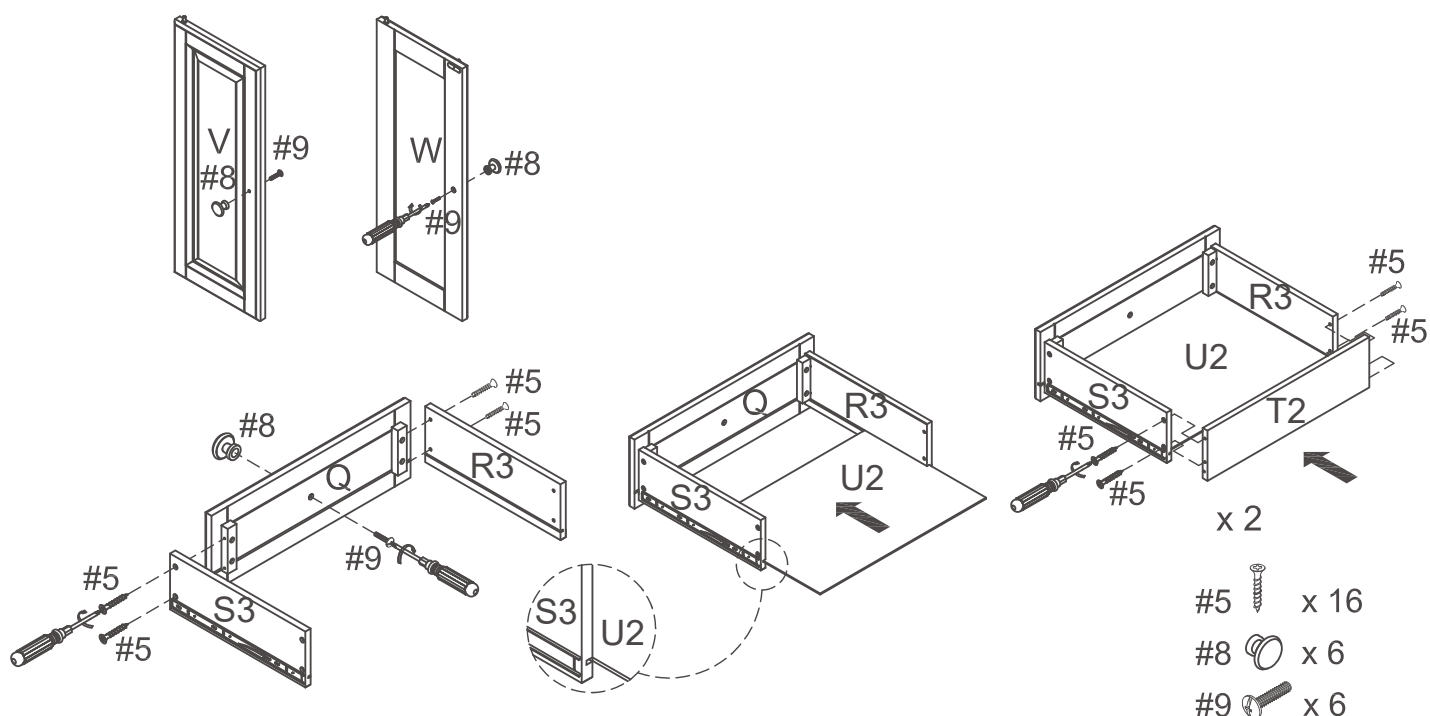Step 2. Attach knobs (part #8) to drawer front panels (part Q) and door panels (parts V & W) using round head bolts (part #9) and phillips head screwdriver. Attach drawer panels (parts R3 & S3) to drawer front panel (part Q) using screws (part #5) and phillips head screwdriver. Slide drawer bottom panel (part U2) into grooves of assembled unit (parts Q, R3 & S3). Attach drawer back panel (part T2) to assembled unit (parts R3, S3 & U2) using screws (part #5) and phillips head screwdriver. Repeat for remaining drawer.




Step 3. Attach front top rail (part E) to top vertical panel (part L3) using wood dowel (part #3), long screw (part #15) and phillips head screwdriver. Attach front middle rail (part G) and back top rail (part F) to top vertical panel (part L3) using wood dowels (part #3), long screws (part #15) and phillips head screwdriver.

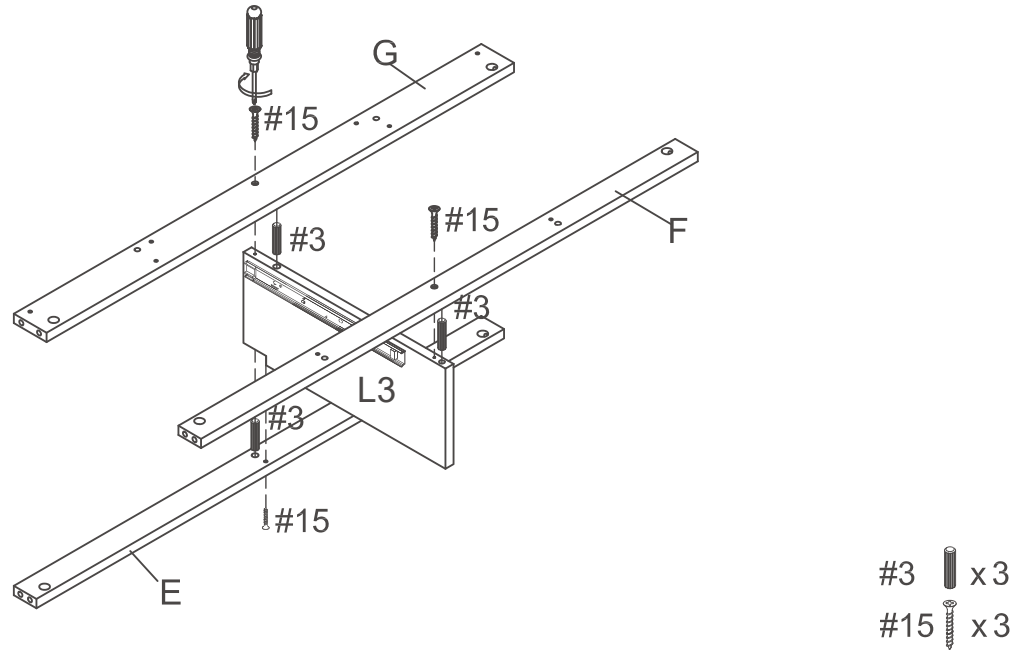NOTE: Please ensure screws are aligned with the pre-drilled holes in top vertical panel (part L3) before tightening.




Step 4. Attach assembled unit (parts E, F & G) to right panel (part C2) using wood dowels (part #3), cam locks (part #1) and phillips head screwdriver. Attach back top panel (part D2) to right panel (part C2) using wood dowels (part #3), cam locks (part #1) and phillips head screwdriver.

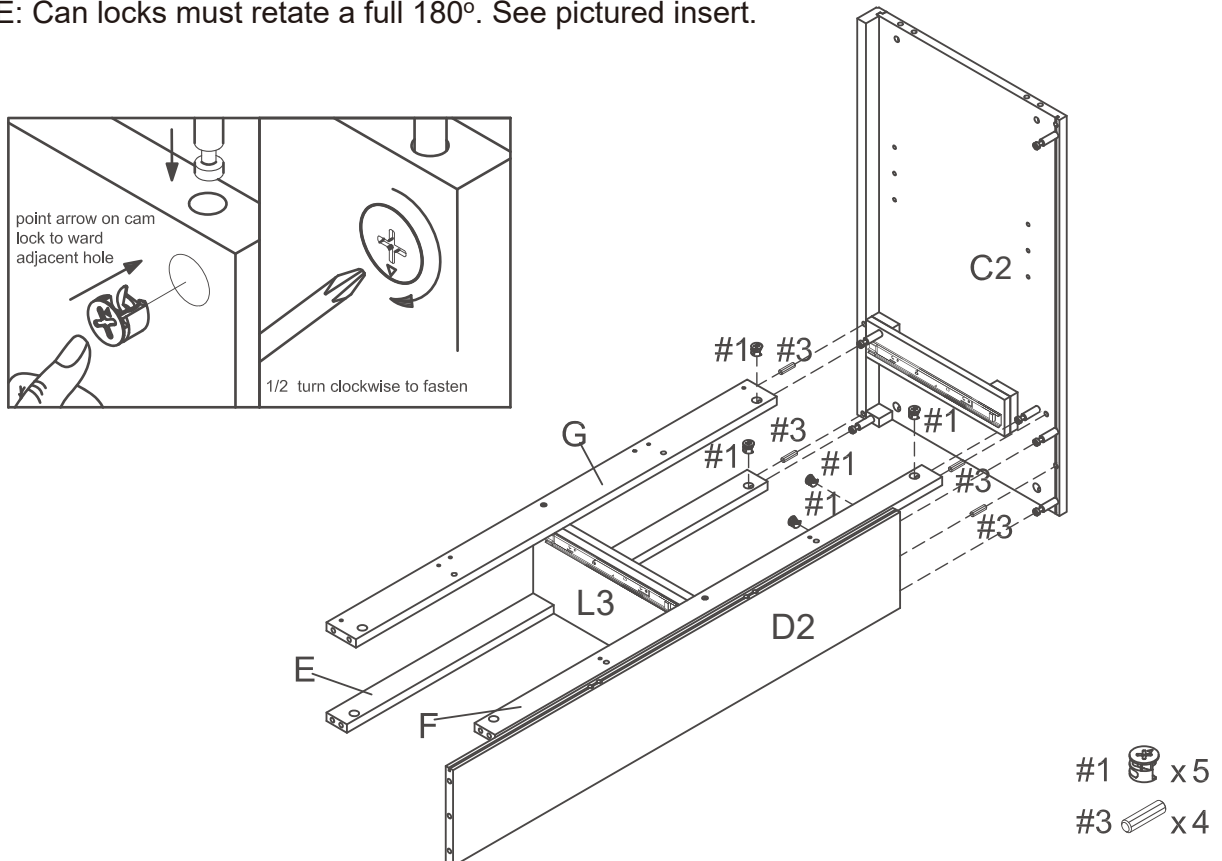NOTE: Can locks must rotate a full 180°. See pictured insert.




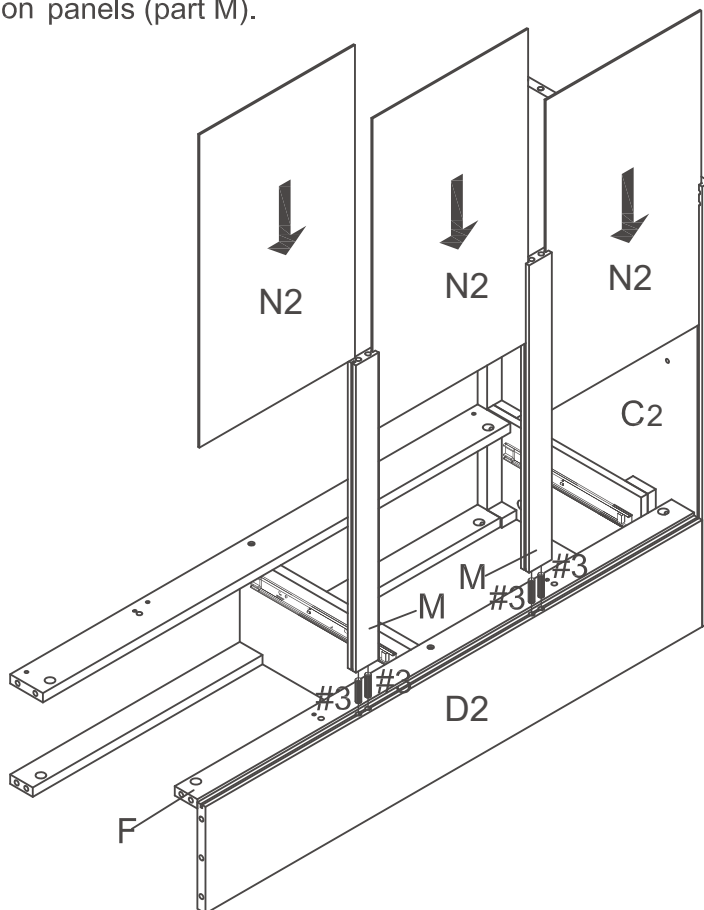
Step 5. Attach back partition panels (part M) to back top panel (part D2) using wood dowels (part #3). Slide back panels (part N2) into grooves of right panel (part C2), back top panel (part D2) and back partition panels (part M).



#3  x4

Step 6. Attach back bottom rail (part H) to back partition panels (part M), back panels (part N2) and right panel (part C2) using wood dowels (part #3), cam locks (part #1) and phillips head screwdriver.

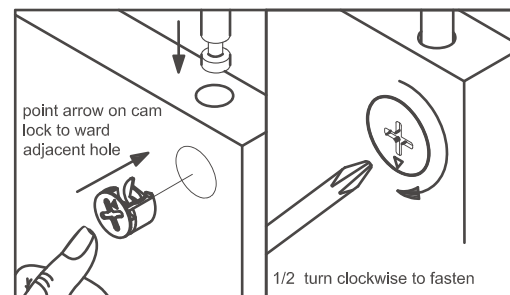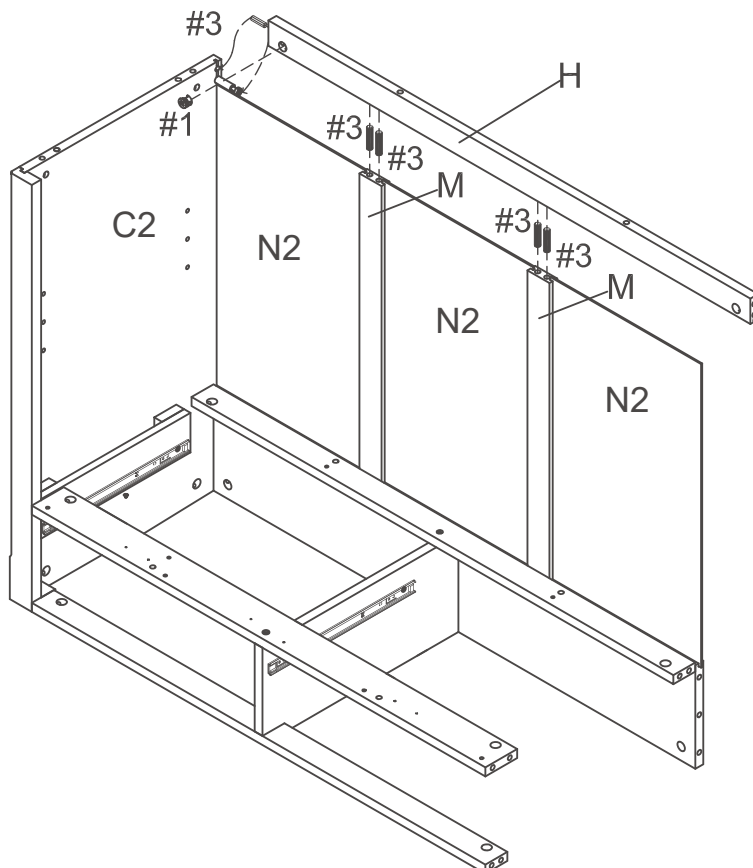NOTE: Can locks must rotate a full 180°. See pictured insert.





#1  x1

#3  x5


Step 7. Attach left panel (part B2) to assembled unit (parts D2, E, F, G, H & N2) using wood dowels (part #3), cam locks (part #1) and phillips head screwdriver.

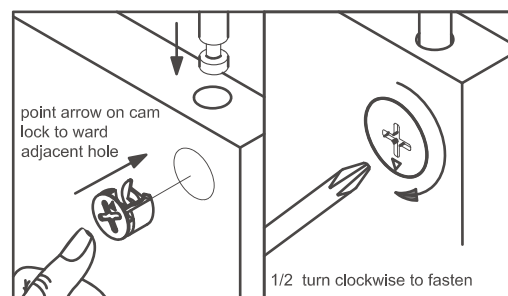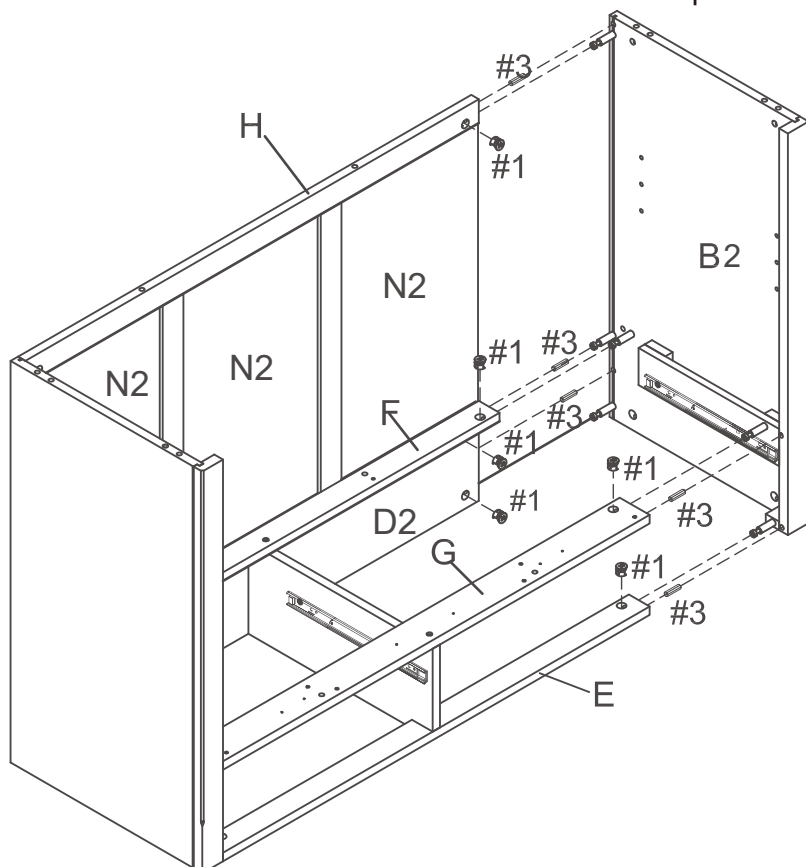NOTE: Can locks must rotate a full 180°. See pictured insert.




#1  x6
#3  x5

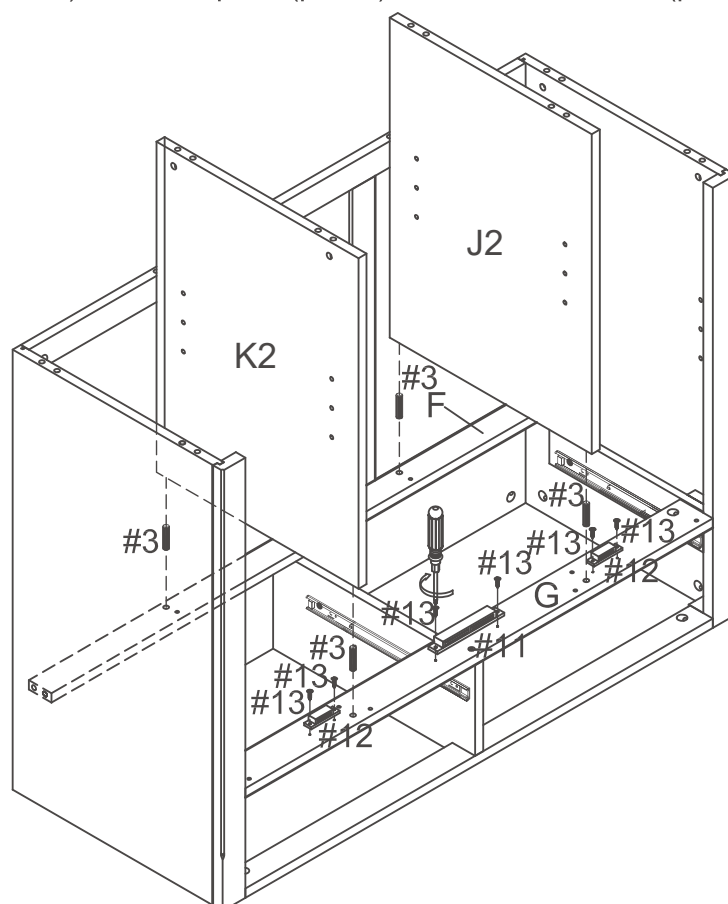Step 8. Attach double magnet (part #11) and magnets (part #12) to front middle rail (part G) using round head screws (part #13) and phillips head screwdriver. Attach left partition panel (part J2) and right partition panel (part K2) to back top rail (part F) and front middle rail (part G) using wood dowels (part #3).




#3  x4
#11  x1
#12  x2
#13  x6

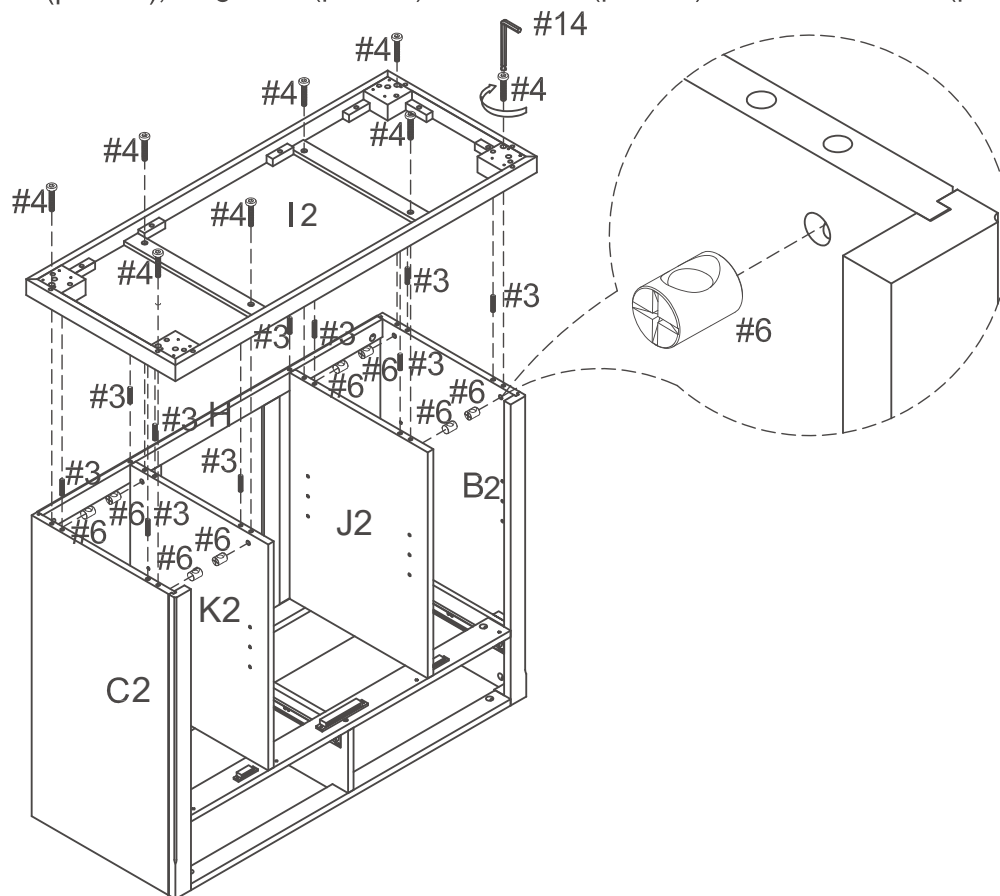Step 9. Attach bottom panel (part I2) to assembled unit (parts B2, C2, H, J2 & K2) using wood dowels (part #3), long bolts (part #4), barrel nuts (part #6) and allen wrench (part #14).




Step 10. CASTER INSTALLATION

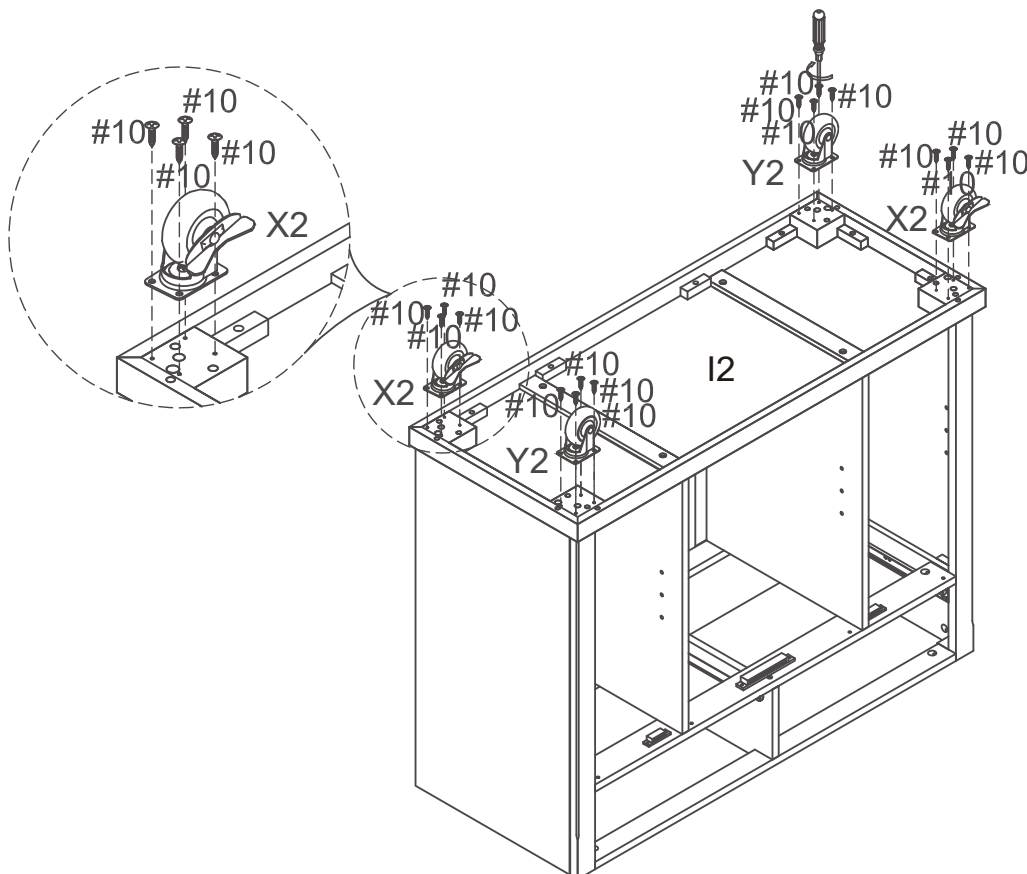Attach locking casters (part X2) and casters (part Y2) to bottom panel (part I2) using large round head screws (part #10) and phillips head screwdriver.




Step 11. LEG INSTALLATION

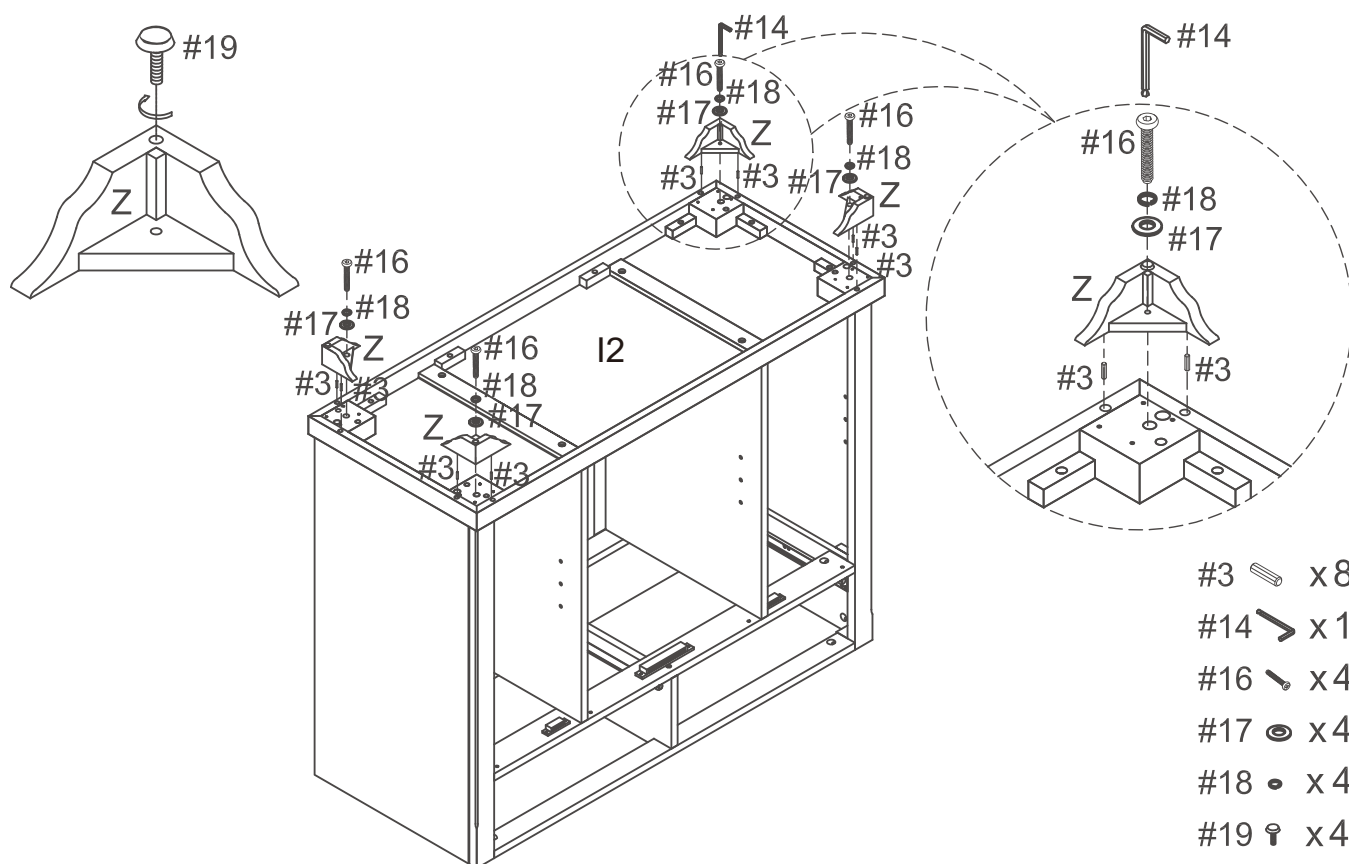Attach adjustable levelers (part #19) to legs (part Z). Attach legs (part Z) to bottom panel (part I2) using wood dowels (part #3), flat washers (part #17), spring washers (part #18), short bolts (part #16) and allen wrench (part #14).





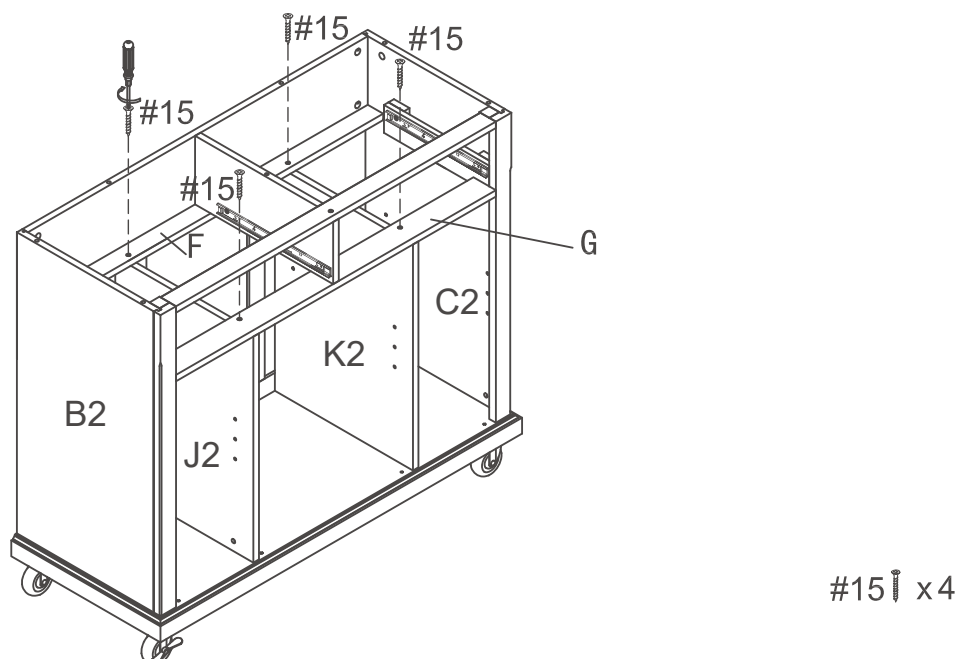Step 12. Carefully turn unit upright. Secure left partition panel (part J2) and right partition panel (part K2) to back top rail (part F) and front middle rail (part G) using long screws (part #15) and phillips head screwdriver.



Step 13. Attach top panel (part A) to assembled unit (parts B2, C2, D2, E & L3) using wood dowels (part #3), cam locks (part #1) and phillips head screwdriver.

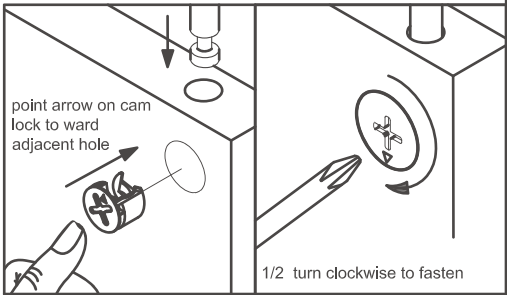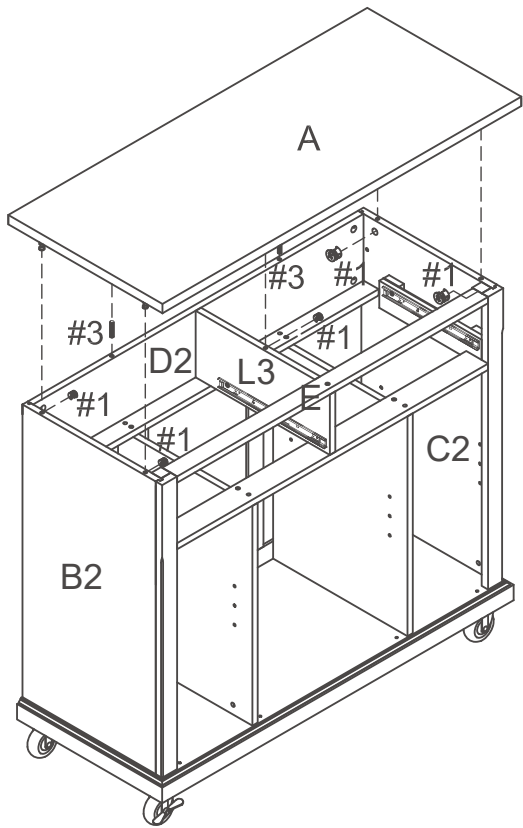
NOTE: Cam locks must rotate a full 180°. See pictured insert.



- #1  x5
- #3  x2

Step 14. Attach door panels (parts V & W) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part I2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of front middle rail (part G). Place shelf holders (part #7) into desired position.

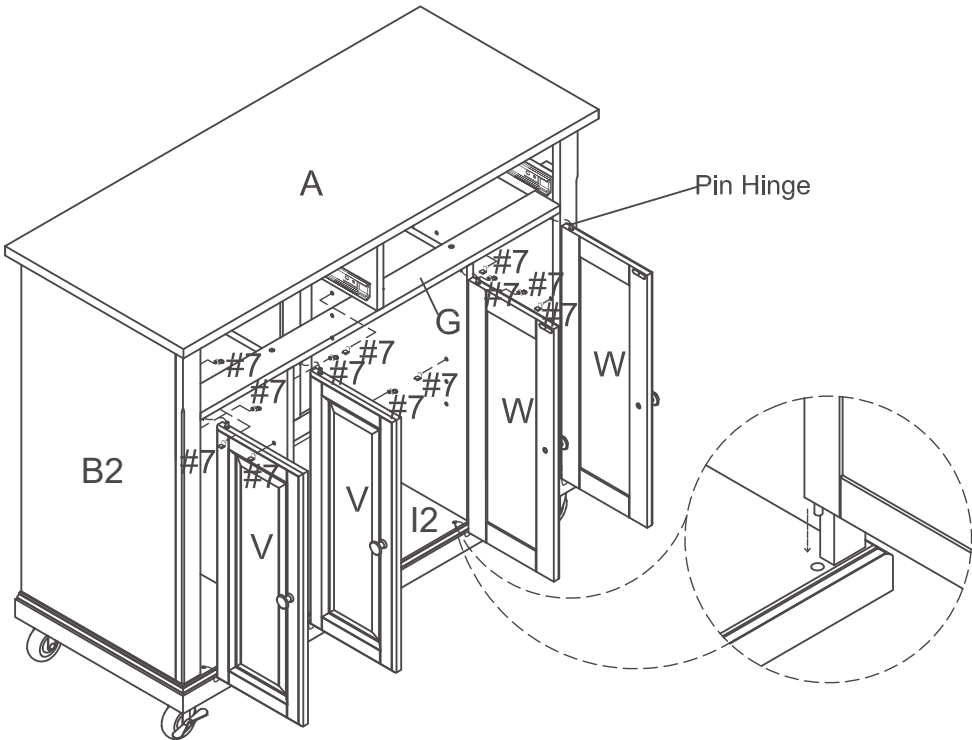
NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.



- #7  x12

Step 15. Slide assembled drawers into place. Slide adjustable shelves (part O2) and middle adjustable shelf (part P2) into place.

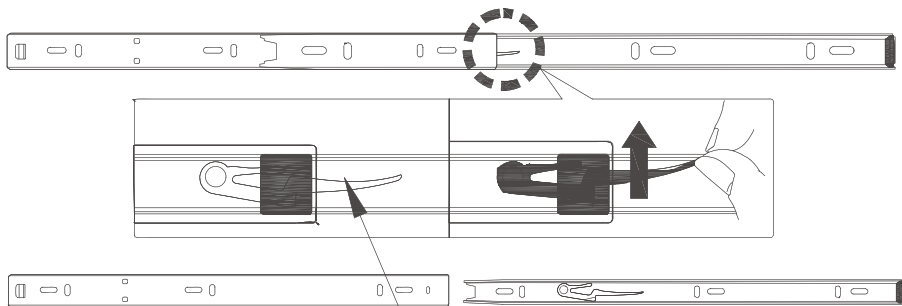Note: To release trigger disconnect levers push one side up and the other down.



Trigger Disconnect Lever

