


- 3** Enjoy your new Accent chair. You Can re-tighten step 2 periodically if the chair becomes loose.


Model: \_\_\_\_\_

Lot No: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

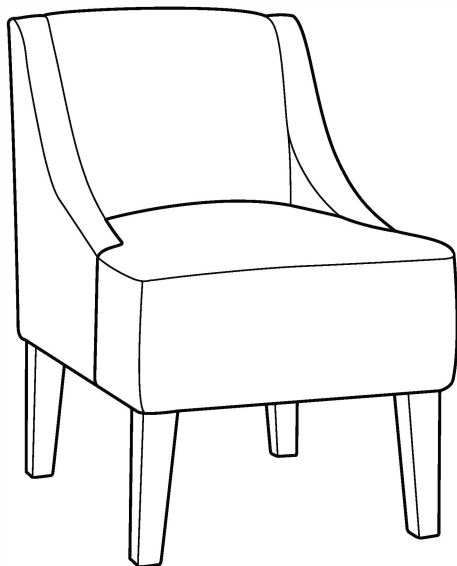

## ACCENT CHAIR

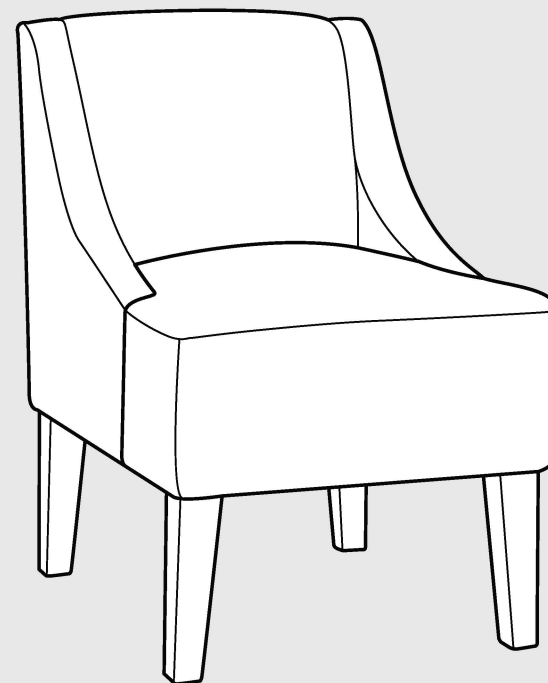

### ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll- free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.



**WARNING:** This product may contain small components, please ensure they are kept away from small children.





## PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Open the Zippered closure on the bottom of the Seat Body.

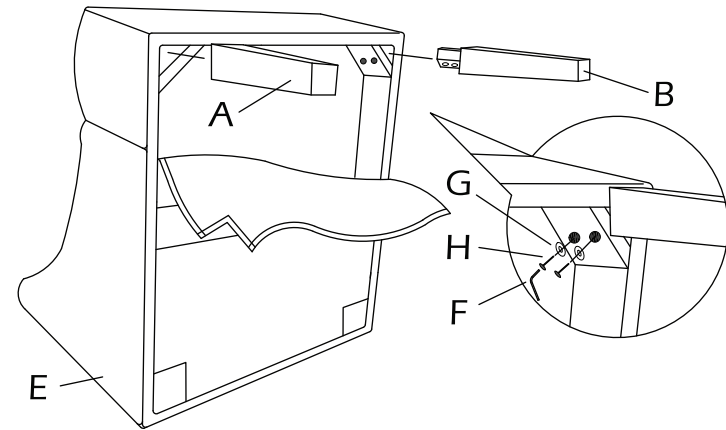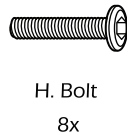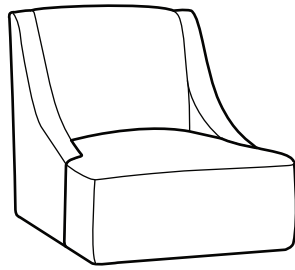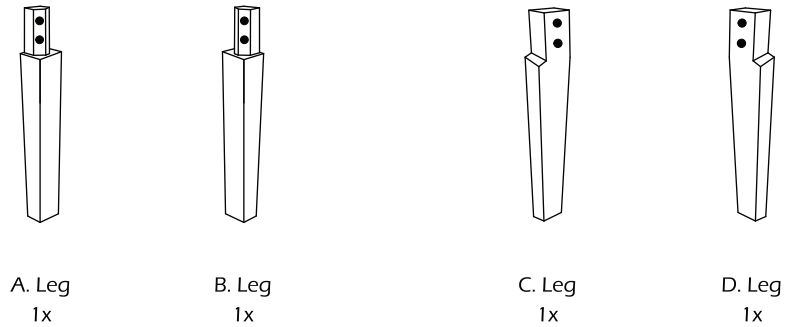

- 2 Attach the Legs (A-D) to the corresponding marked locations on the bottom of the seat body. Each leg attaches using 2 Bolts (H) with 2 Washers (G). Tighten using provided Allen Key.

