

INSTALLATION

Product Manual

Version: 500012US-01-25A-LHJ



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

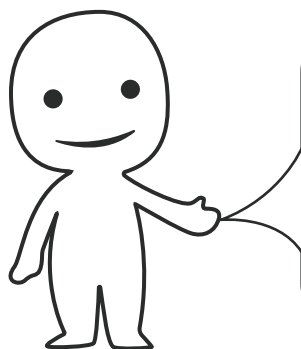


Please prepare the following tools

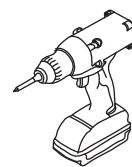    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 
A x 38

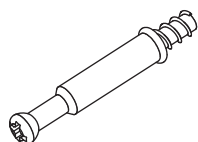

B x 38




 C x 72




Ø 6 x 30 mm

 D x 48



Ø 4 x 40 mm

 E x 3

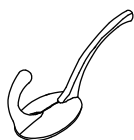


F x 6




Ø 4 x 14 mm

 G x 4

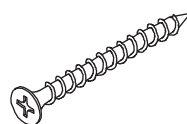

Ø 4 x 50 mm

 H x 18



Ø 4 x 30 mm

I x 30



Ø 3 x 12 mm

J x 56

 


K x 56



Ø 3 x 14 mm

L x 3

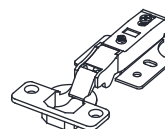

M x 18

 


Ø 4 x 14 mm


N x 12




O x 4

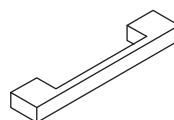




P x 2

 

Ø 4 x 30 mm

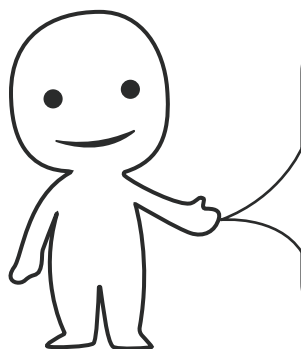 


Please prepare the following tools

   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Q x 6




Ø 4 x 20 mm

 
CL x 3

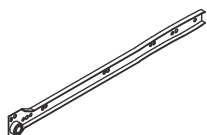


CR x 3

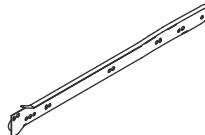 

DL x 3

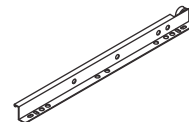 


DR x 3

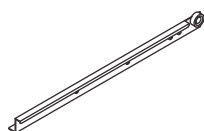 

R x 1



 S x 4

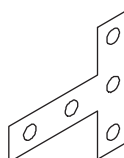


T x 32





Ø 4 x 14 mm

 U x 2

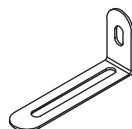

V x 2

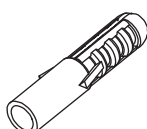 

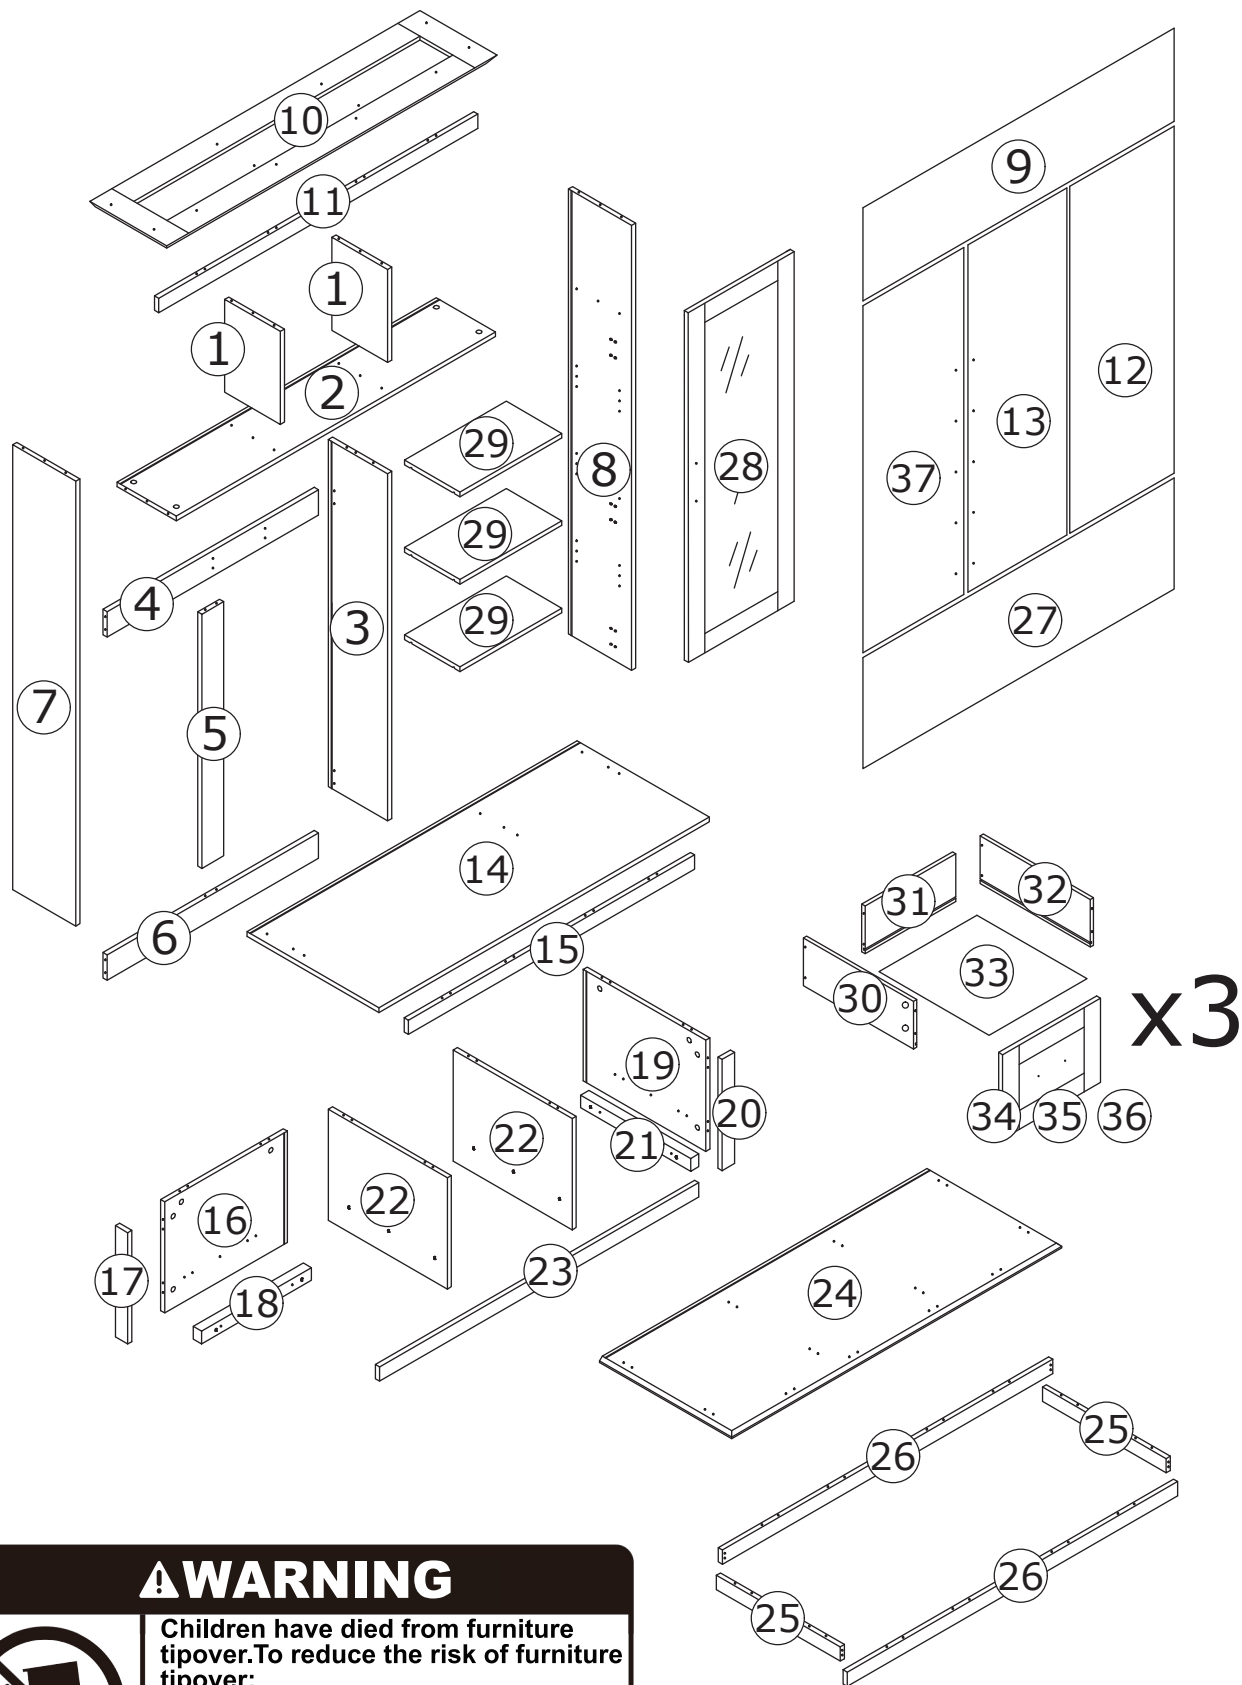 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

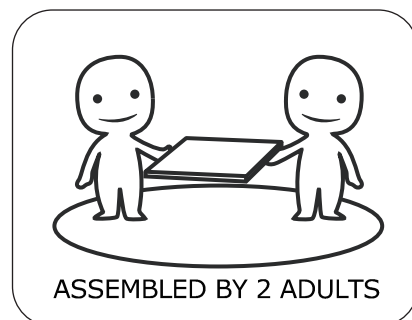


1

 
 
 
A x 6

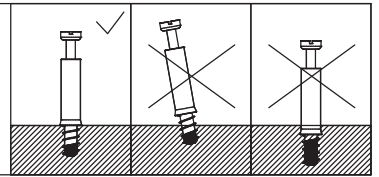


Attach screws (A) to parts 2 and 3.

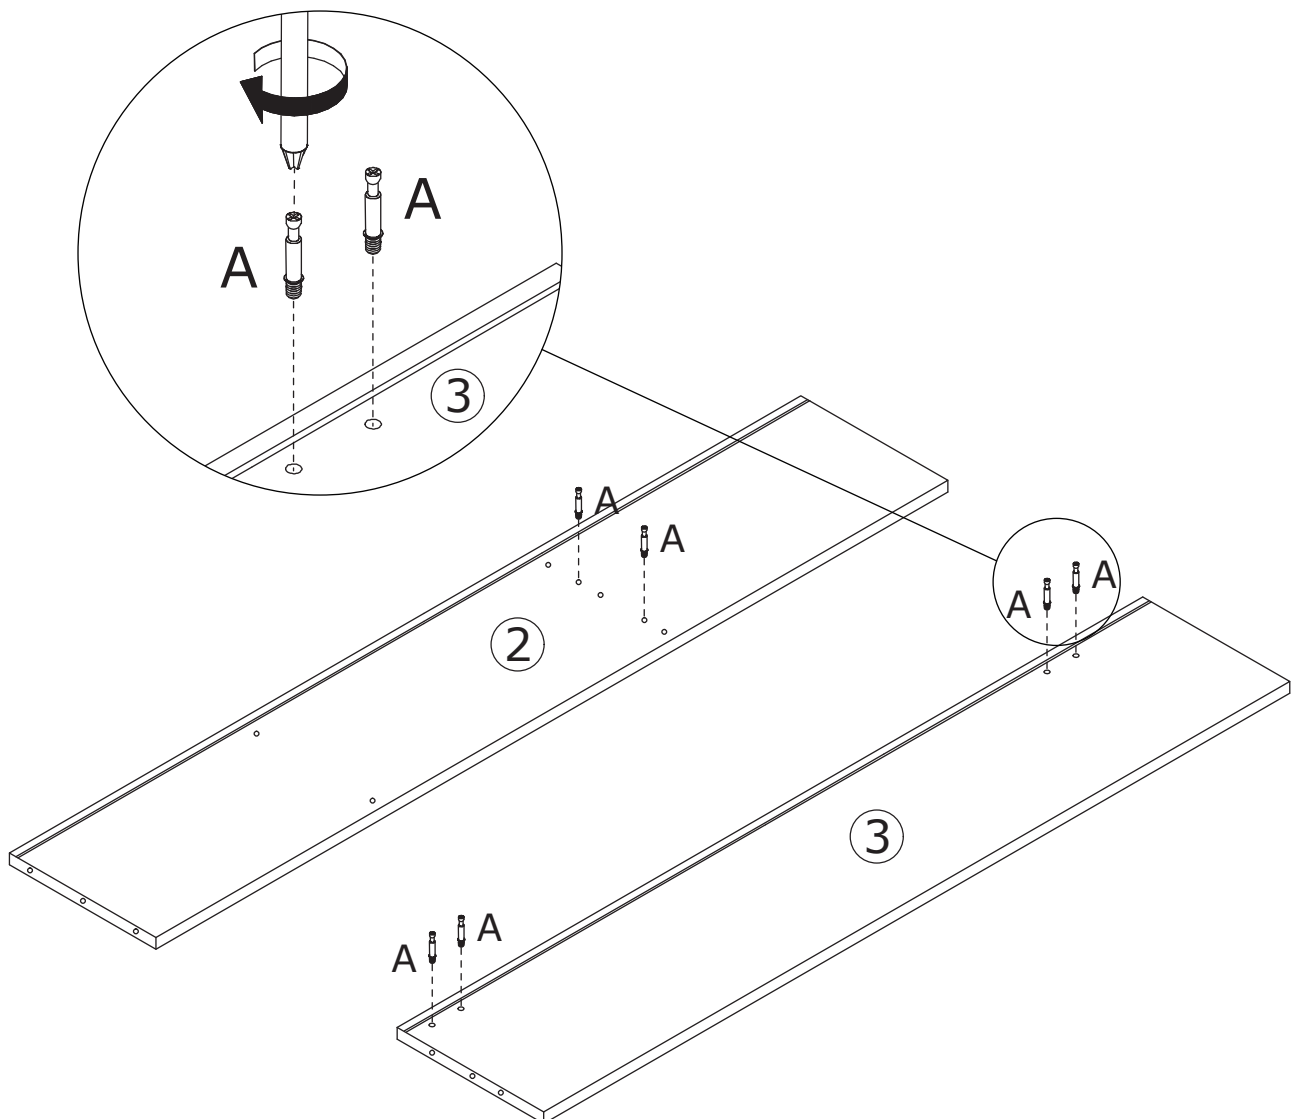 

2

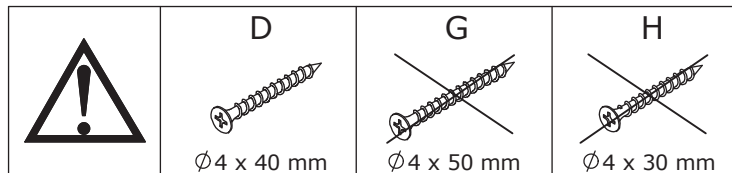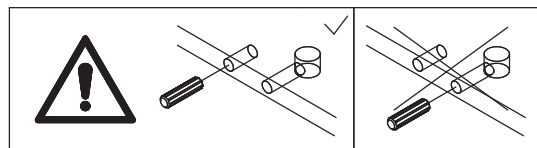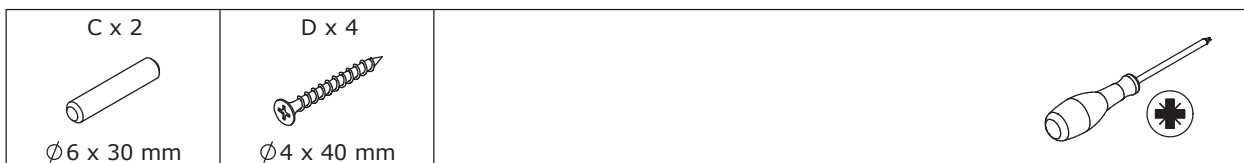   

 Attach part 1 to part 2 using dowel (C) and screws (D).

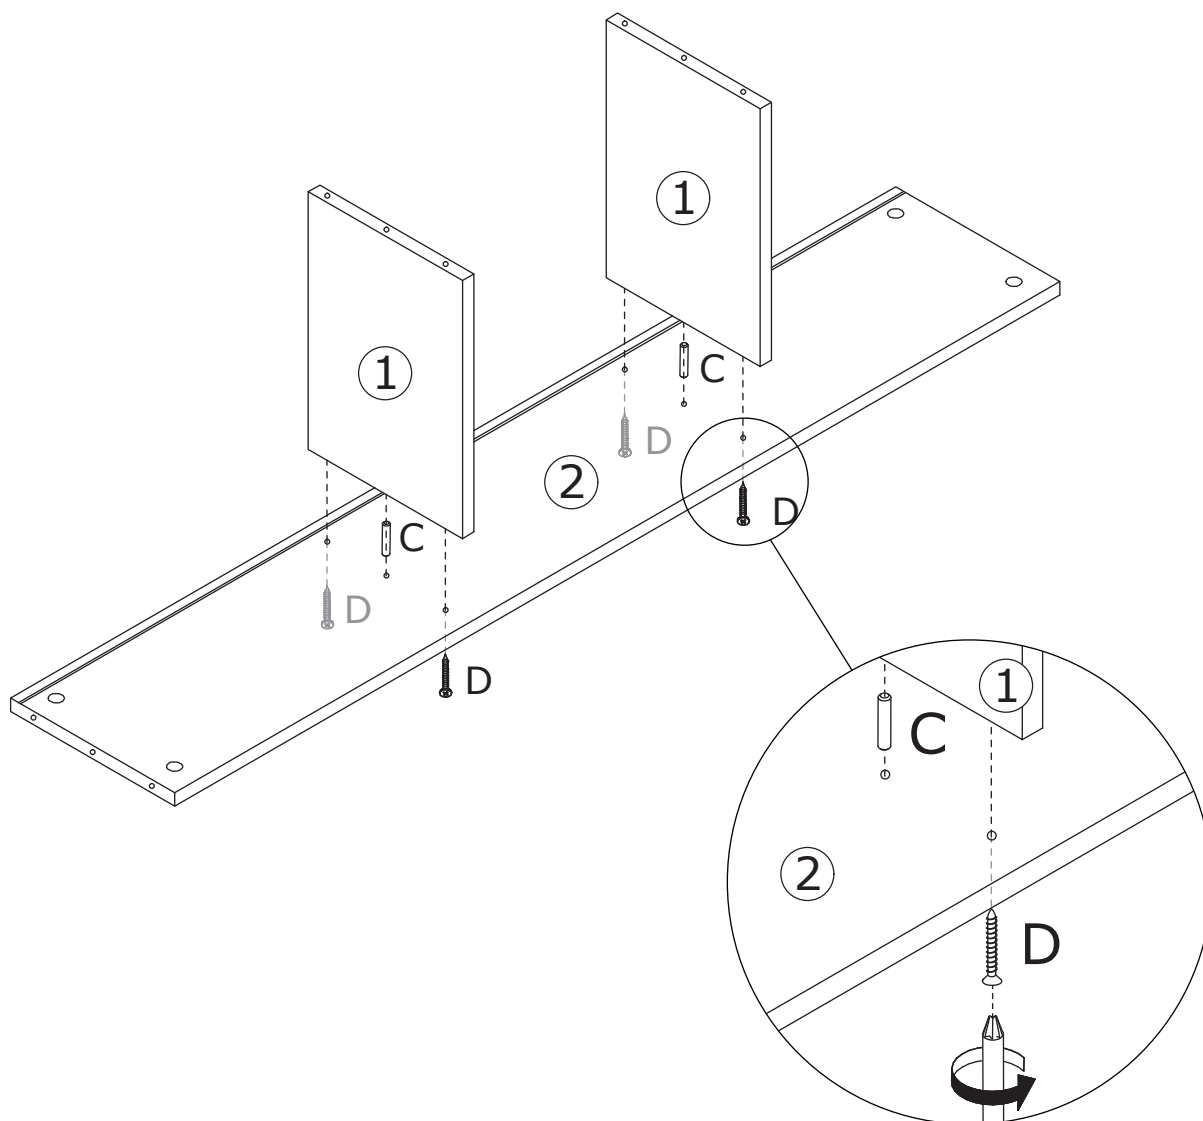

3

 
 
B x 2




C x 1



Ø6 x 30 mm

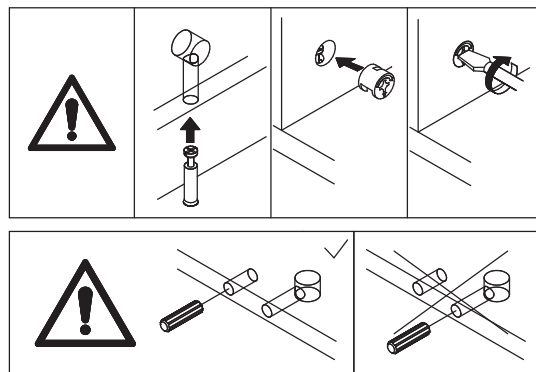


 Attach part 3 to part 2 using the dowel (C) and tighten the cam lock by turning it clockwise using the cam lock (B).

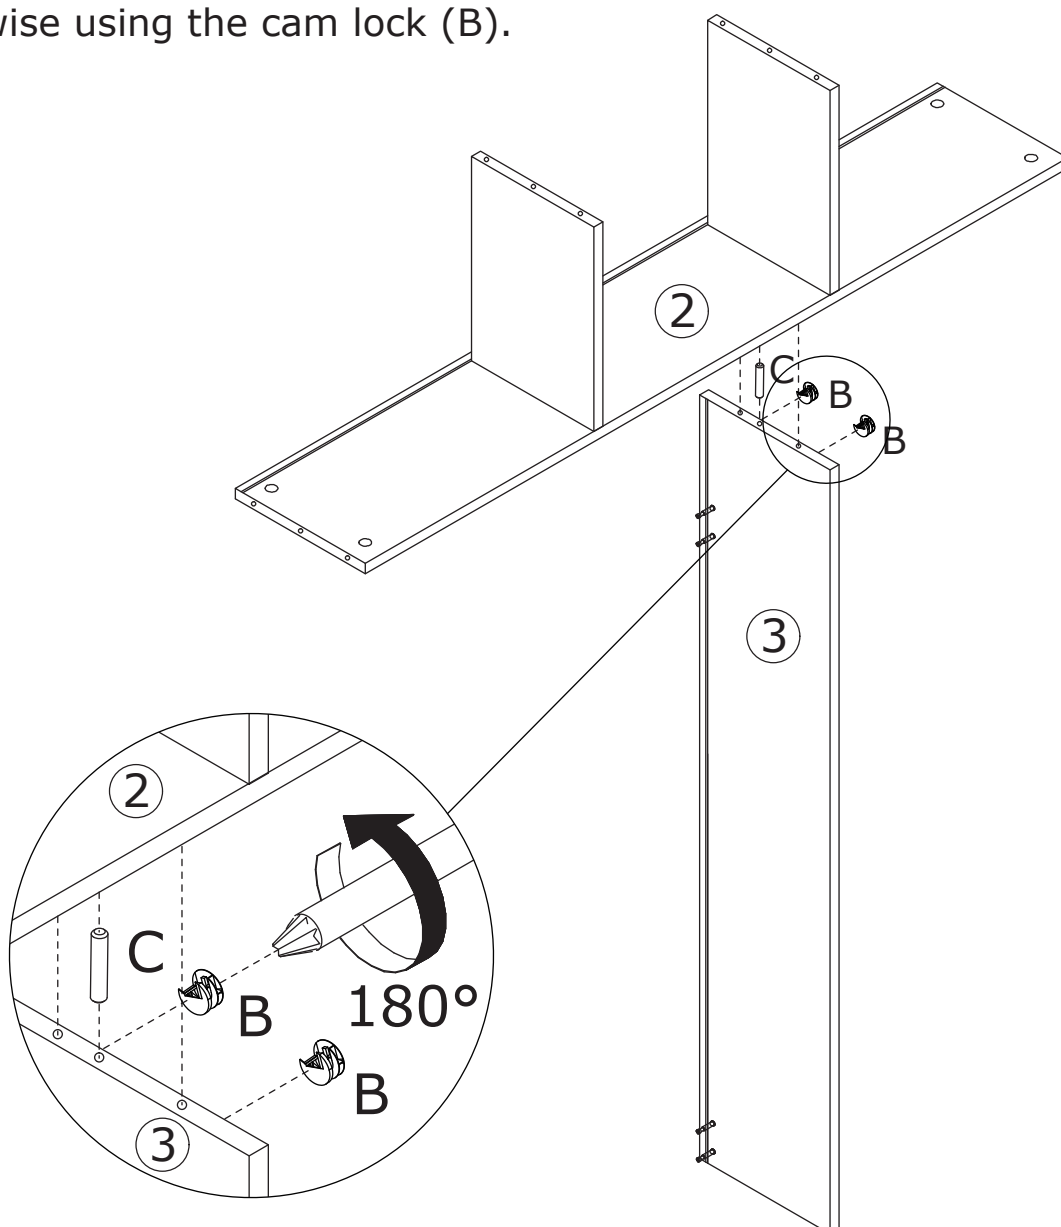

4




 
C x 4






E x 3



   F x 6

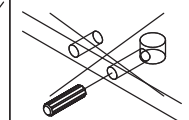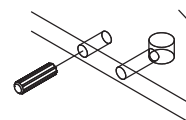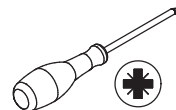



   Attach hook (E) to part 4 using screw (F), connect part 4 to part 5 using dowel (C), and connect part 6 to part 5 using dowel (C).

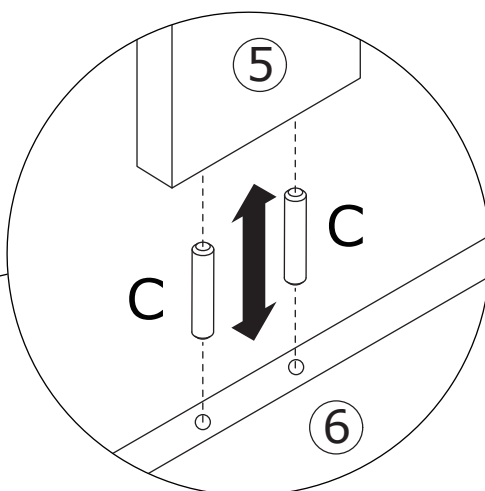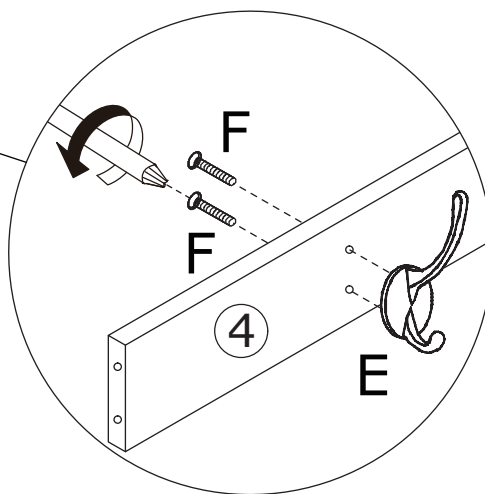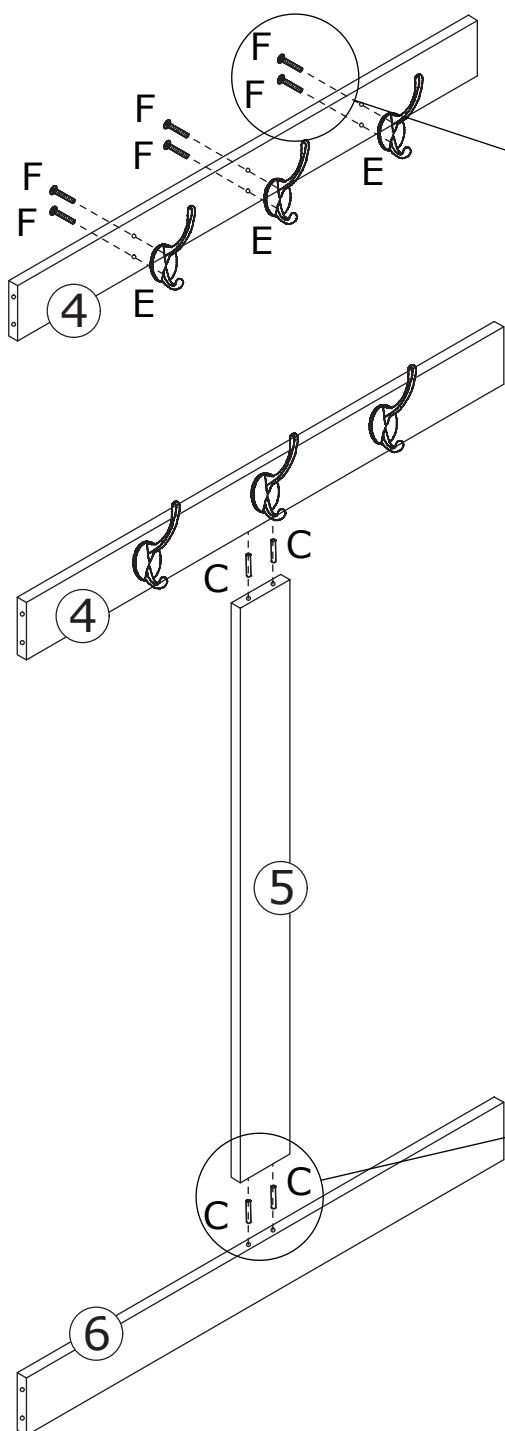


5

 
 
B x 4

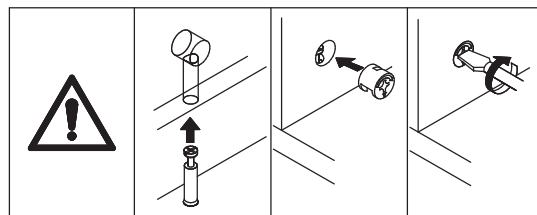

 
Attach part 3 to parts 4 and 6, use cam lock (B) to tighten by turning the cam lock clockwise.

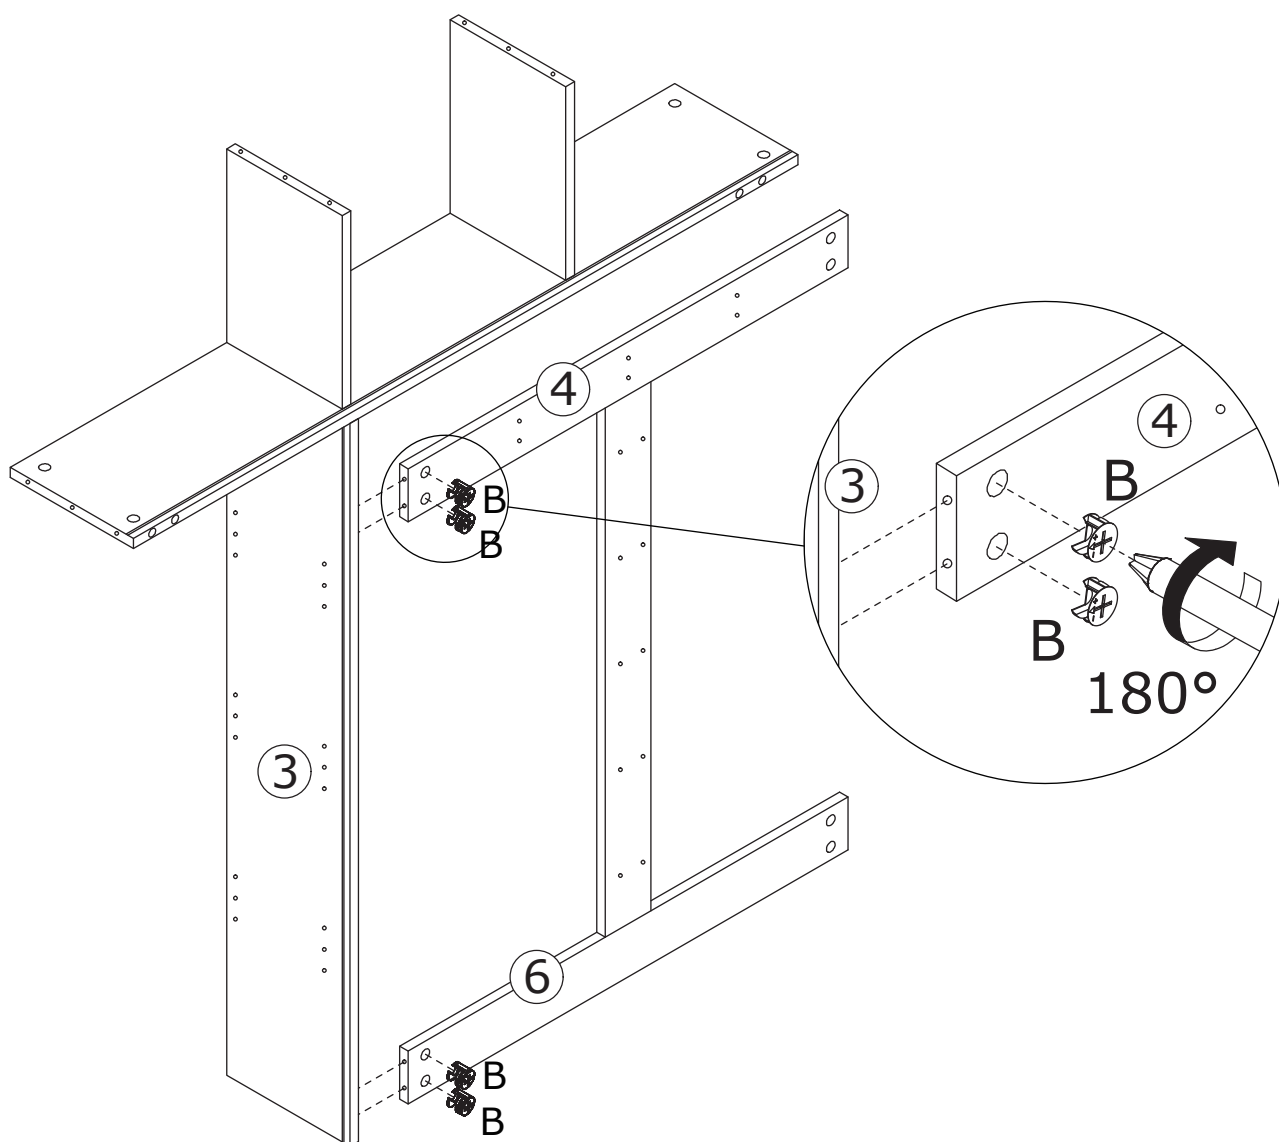

6

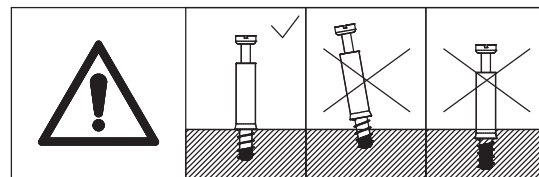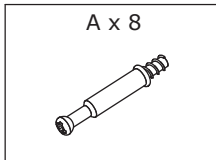  

Attach screws (A) to parts 7 and 8.

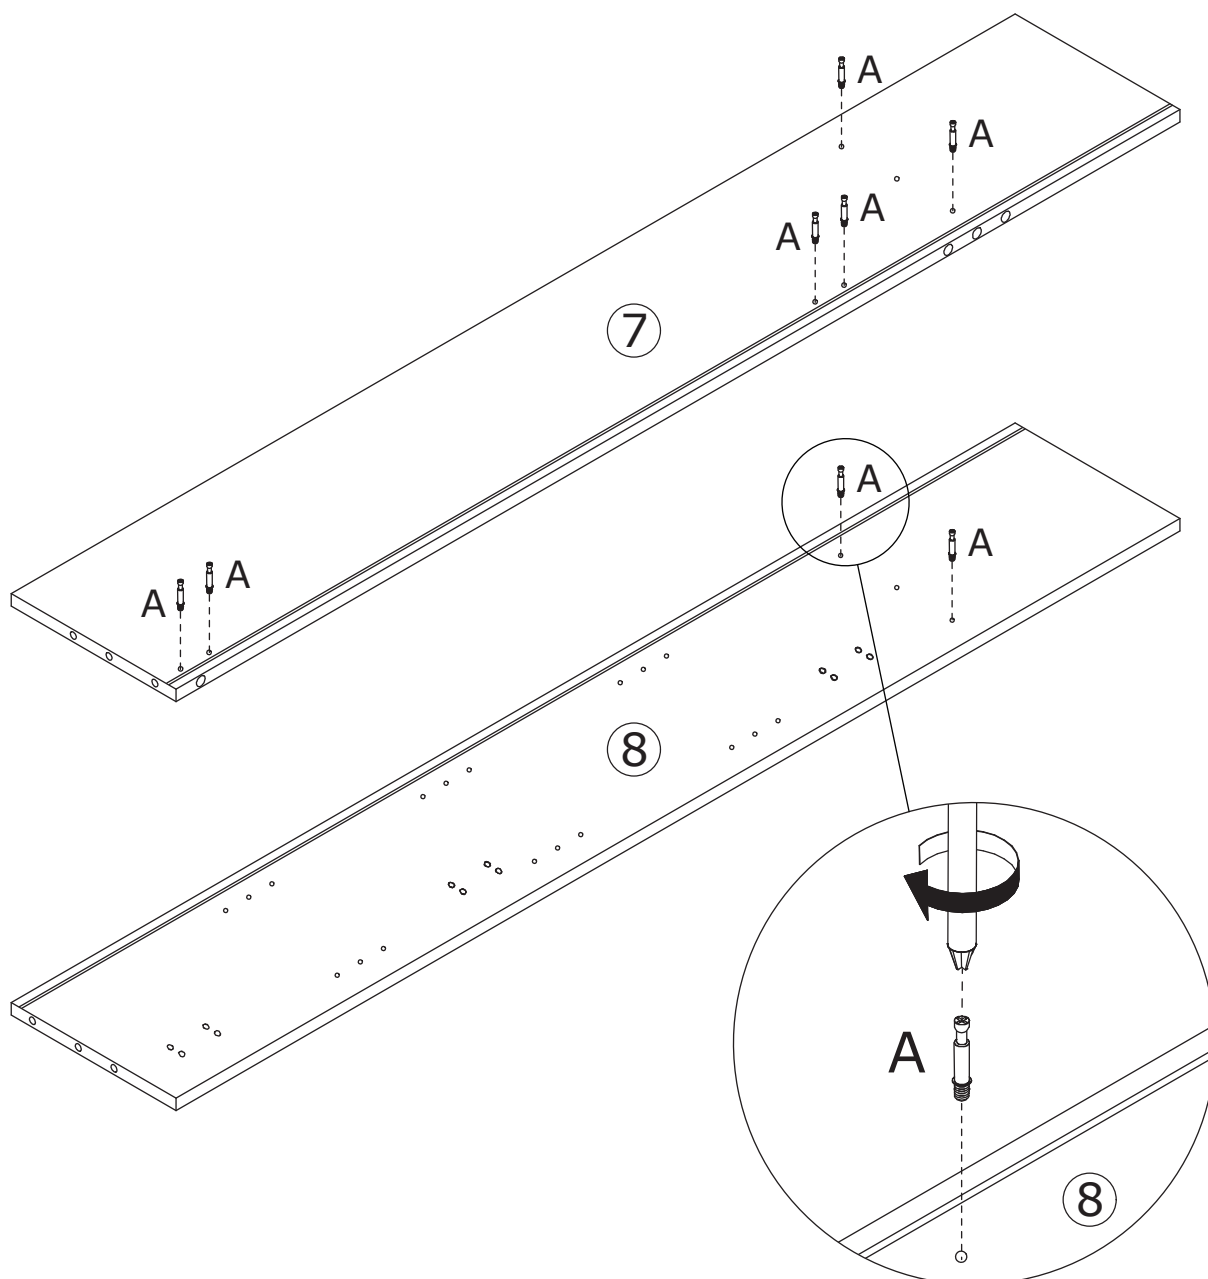 

7

 
 
B x 6




C x 1



Ø6 x 30 mm

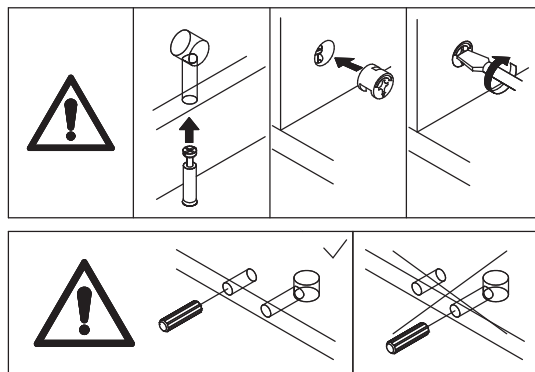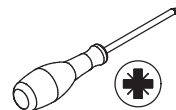


 Attach part 7 to parts 4, 6 and 2 using the dowel (C) and tighten by turning the cam lock clockwise using the cam lock (B).


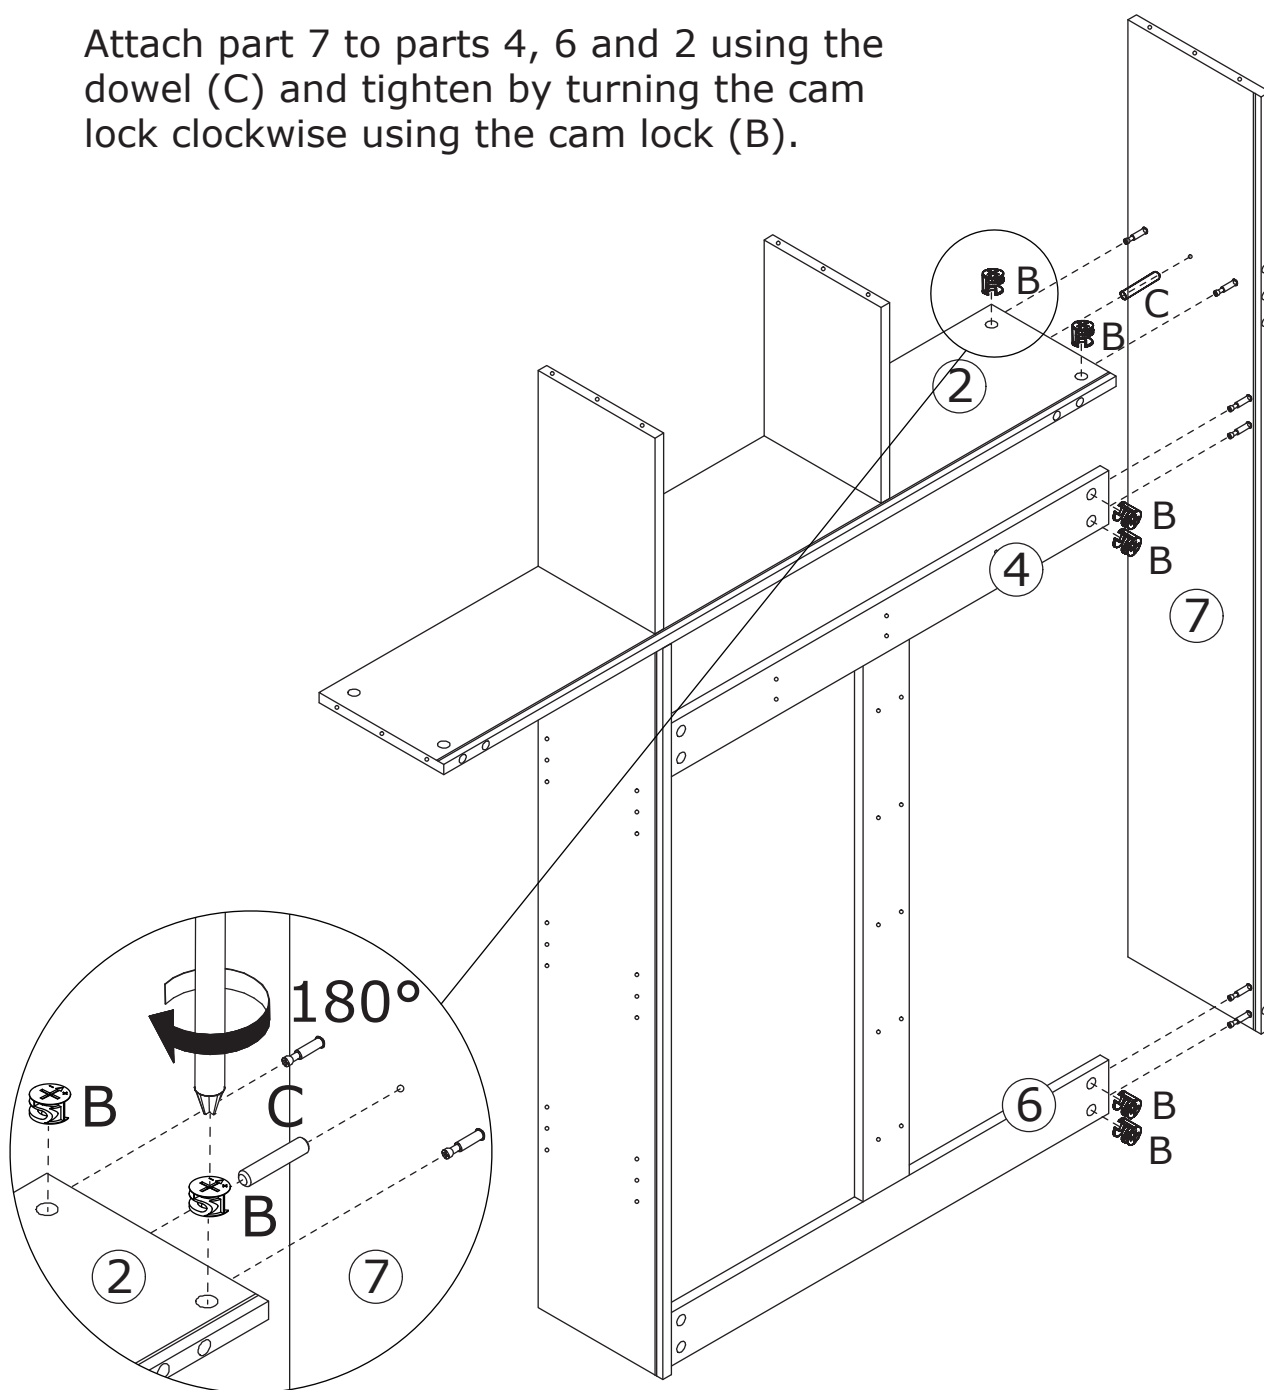


8

<p>B x 2</p> 	<p>C x 1</p>  <p>Ø6 x 30 mm</p>	
--	--	---

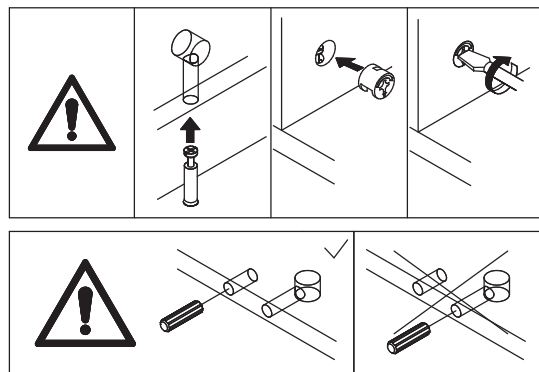 


  Attach part 8 to part 2 using the dowel (C) and tighten the cam lock by turning it clockwise using the cam lock (B).

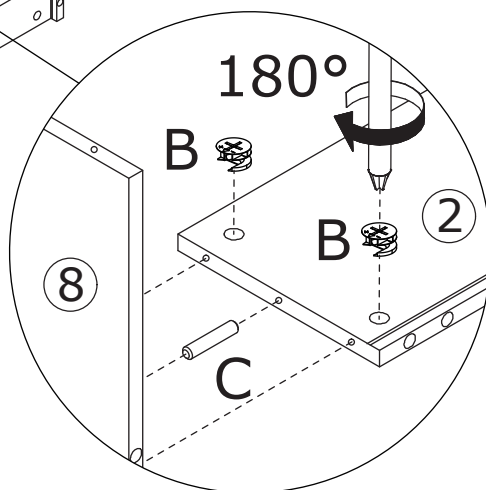
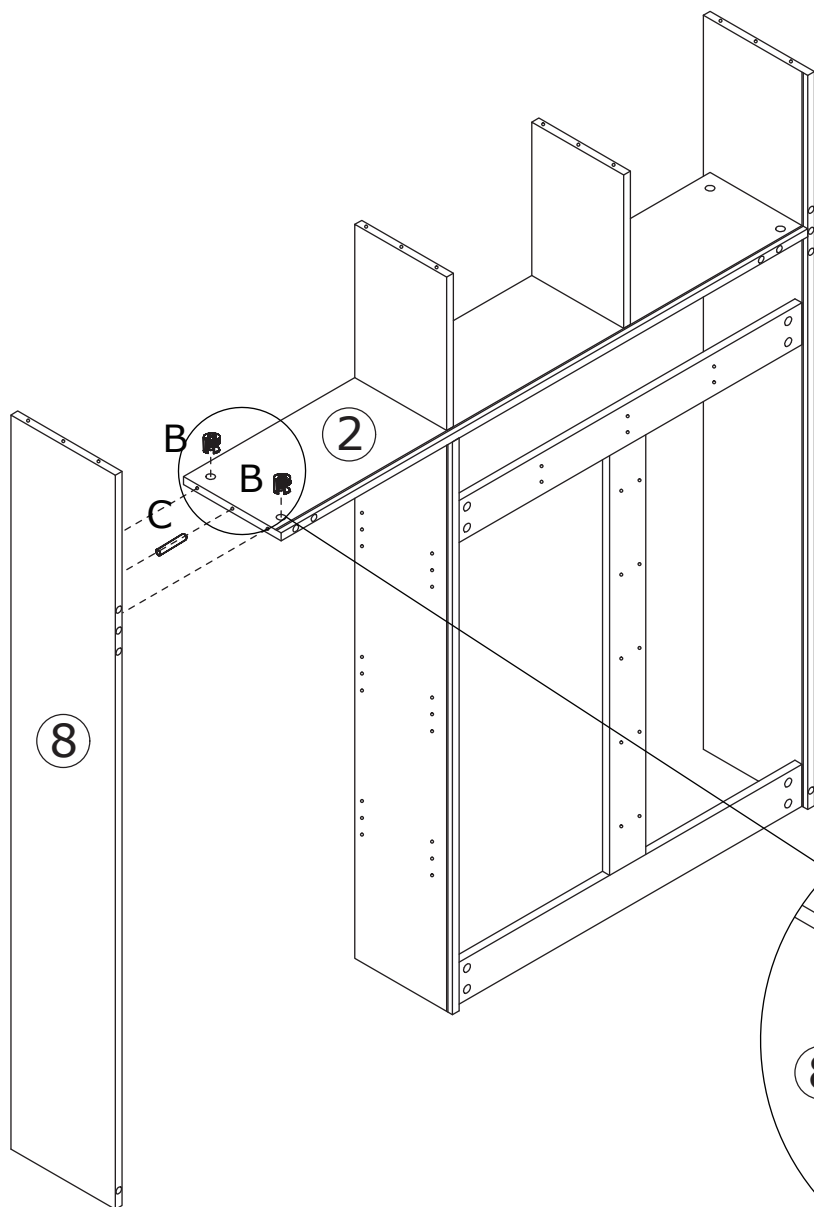


9

 
Insert part 9 into parts 2, 7 and 8.

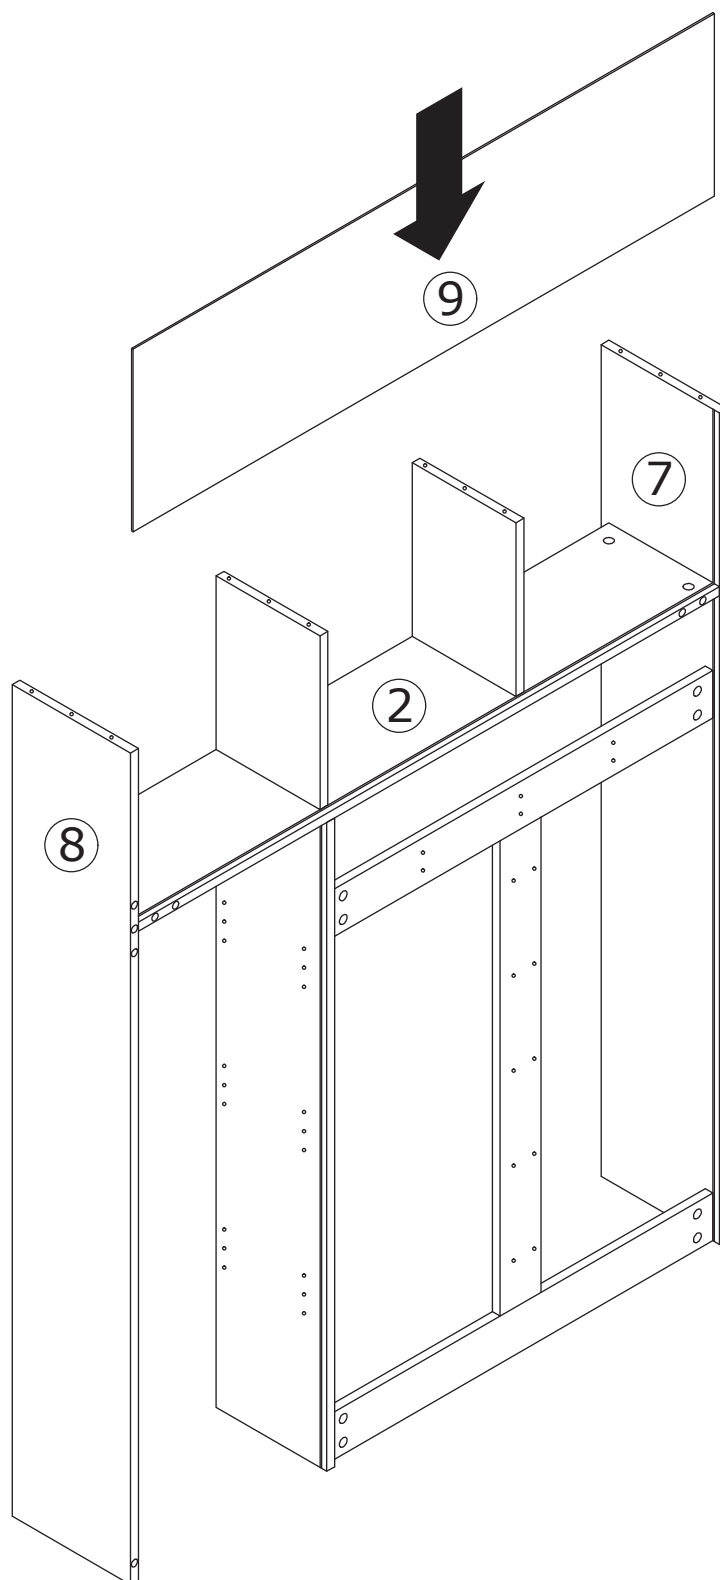

10

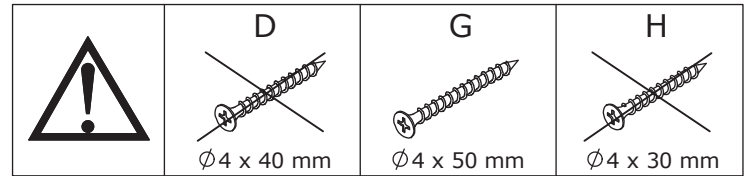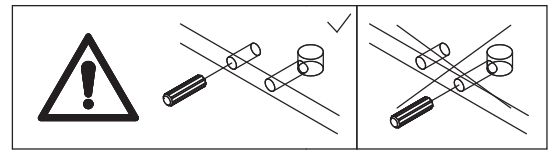  


 Secure part 11 to part 10 using dowels (C) and screws (G).

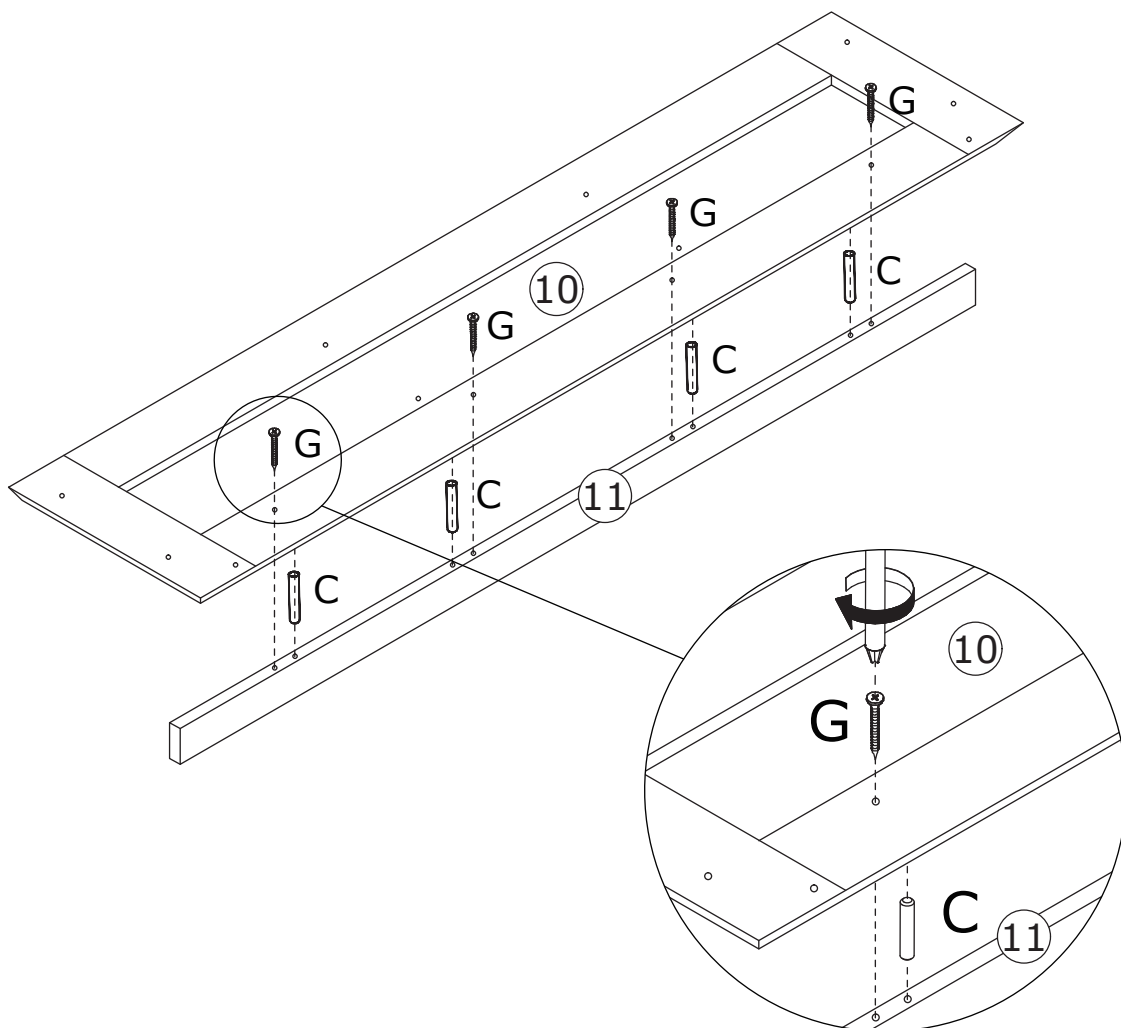

11

 C x 4




Ø6 x 30 mm



D x 8



 
Ø4 x 40 mm



  Attach part 10 to parts 1, 1, 7, 8 using dowel (C), secure part 10 to parts 1, 1, 7, 8 using screw (G) and screw (D).

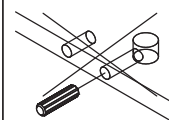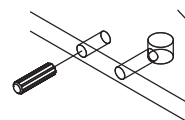


D

 


Ø4 x 40 mm

 G





Ø4 x 50 mm

 H




Ø4 x 30 mm

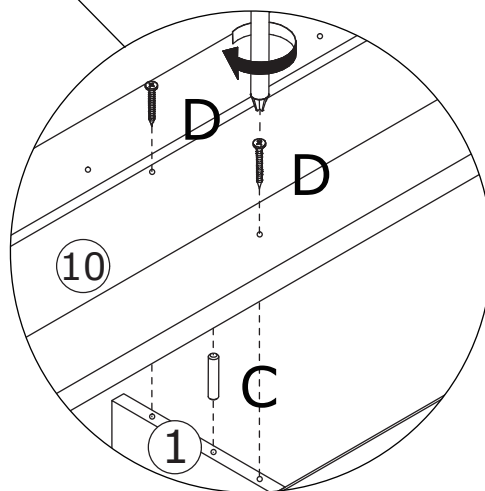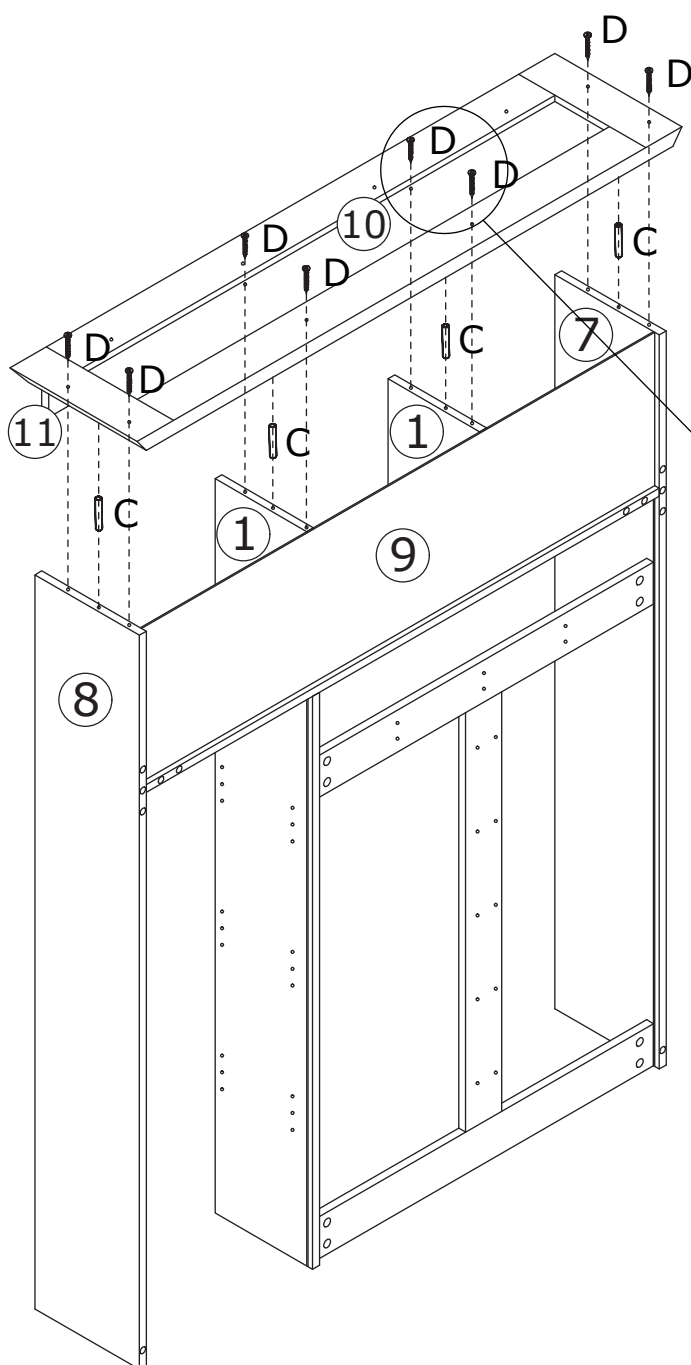  

12

 Connect parts 13 and 37 using part R. Insert parts 12, 13 and 37 into parts 3, 7 and 8.

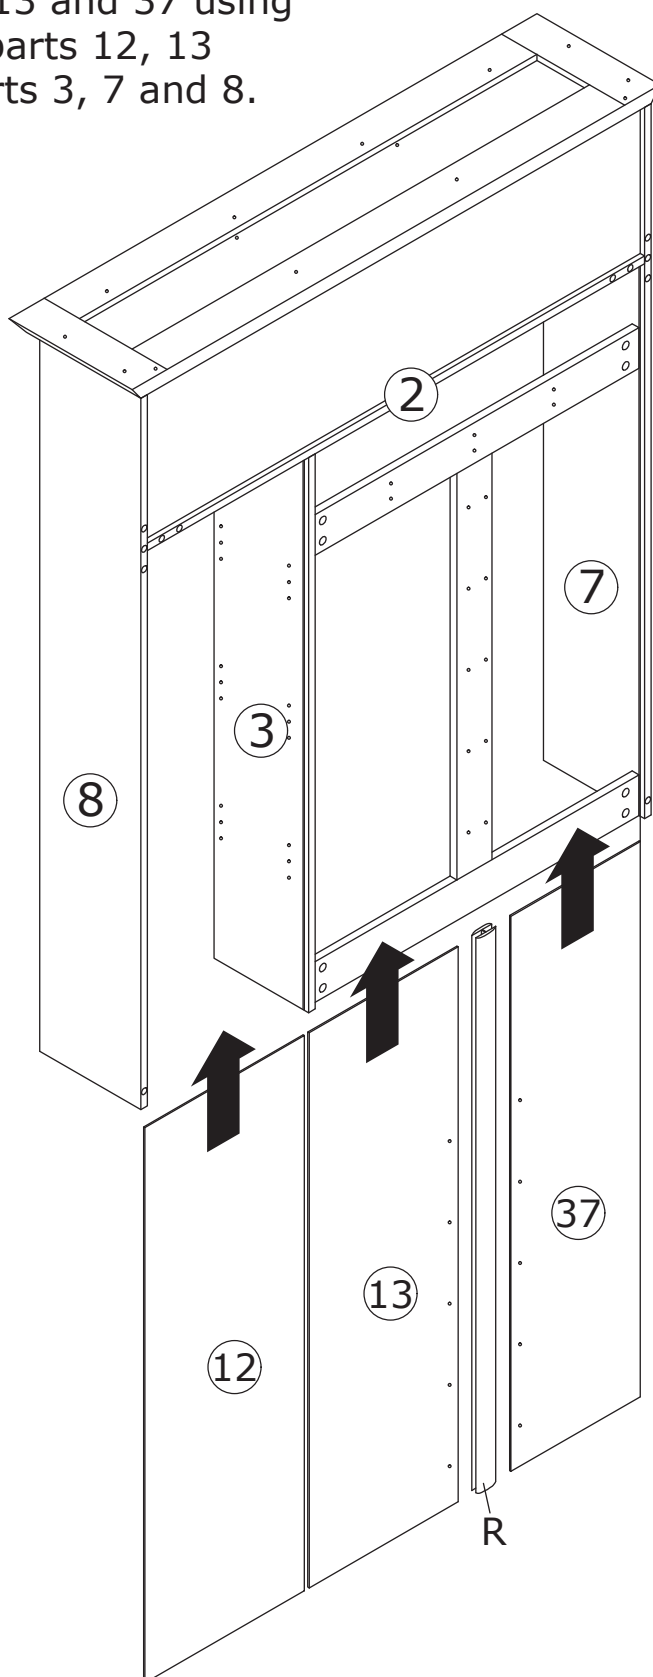


13


T x 10



 Ø4 x 14 mm






 Use screws (T) to attach
parts 13, 37 to part 5.

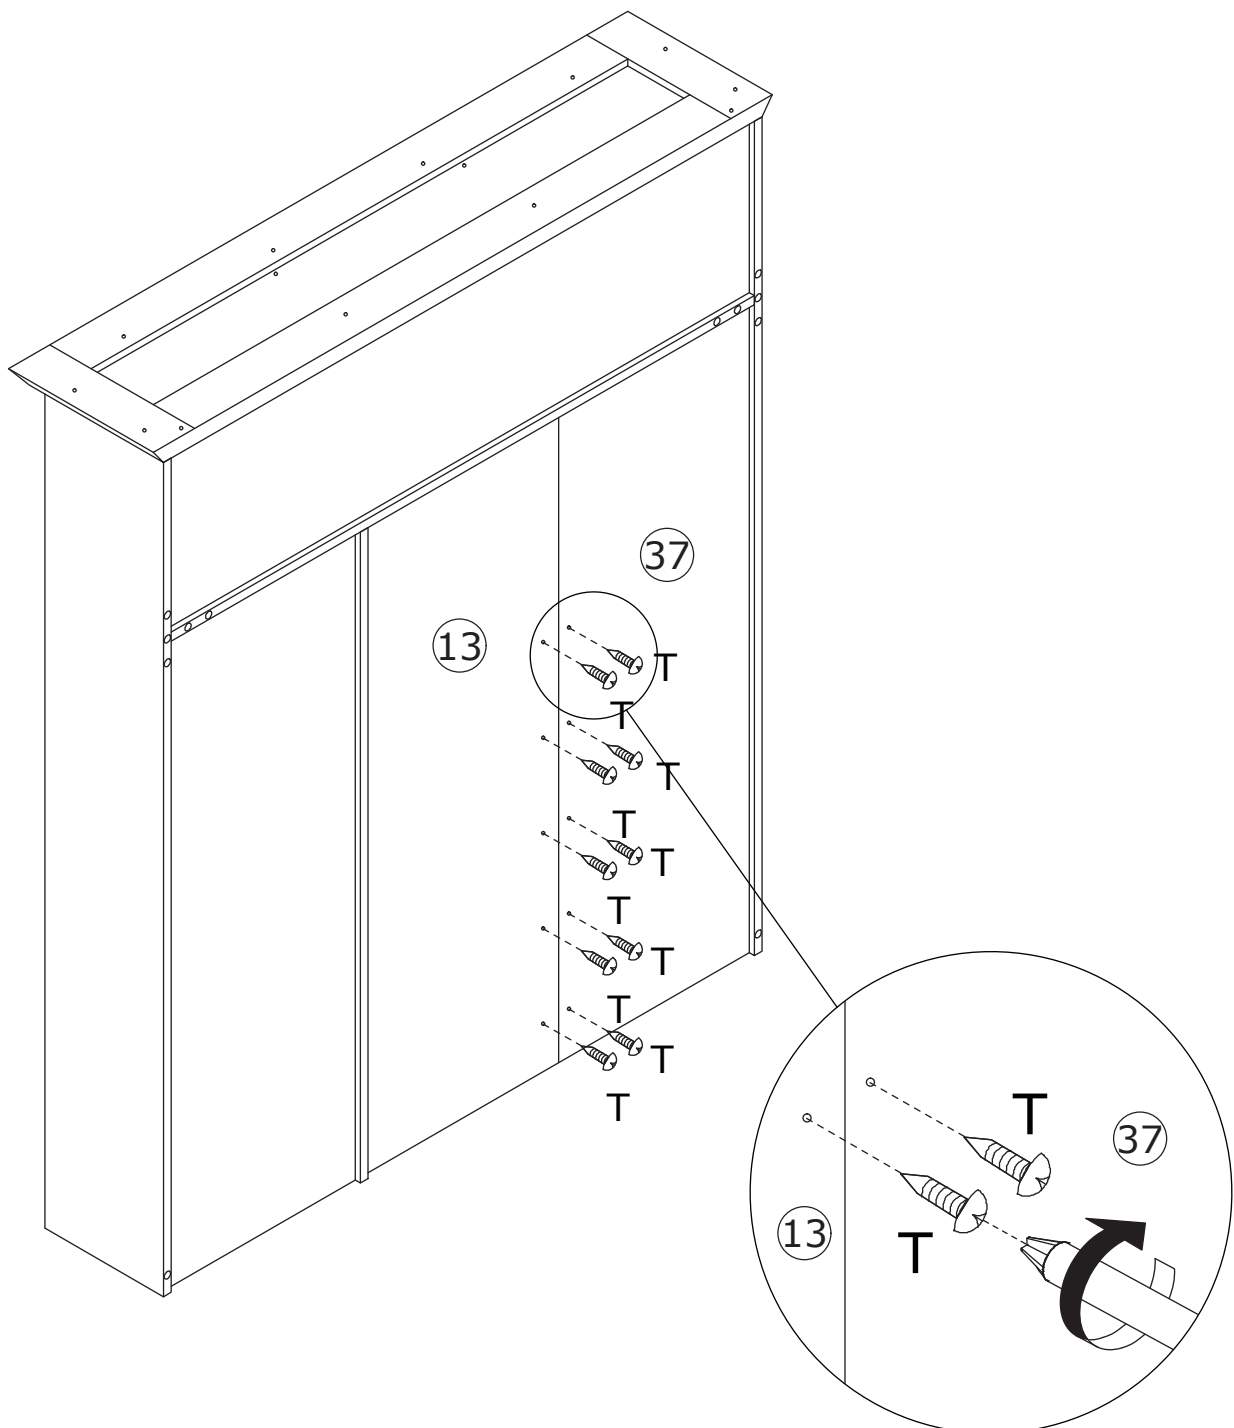


14

    A x 8

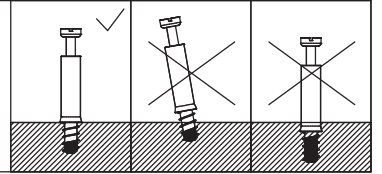


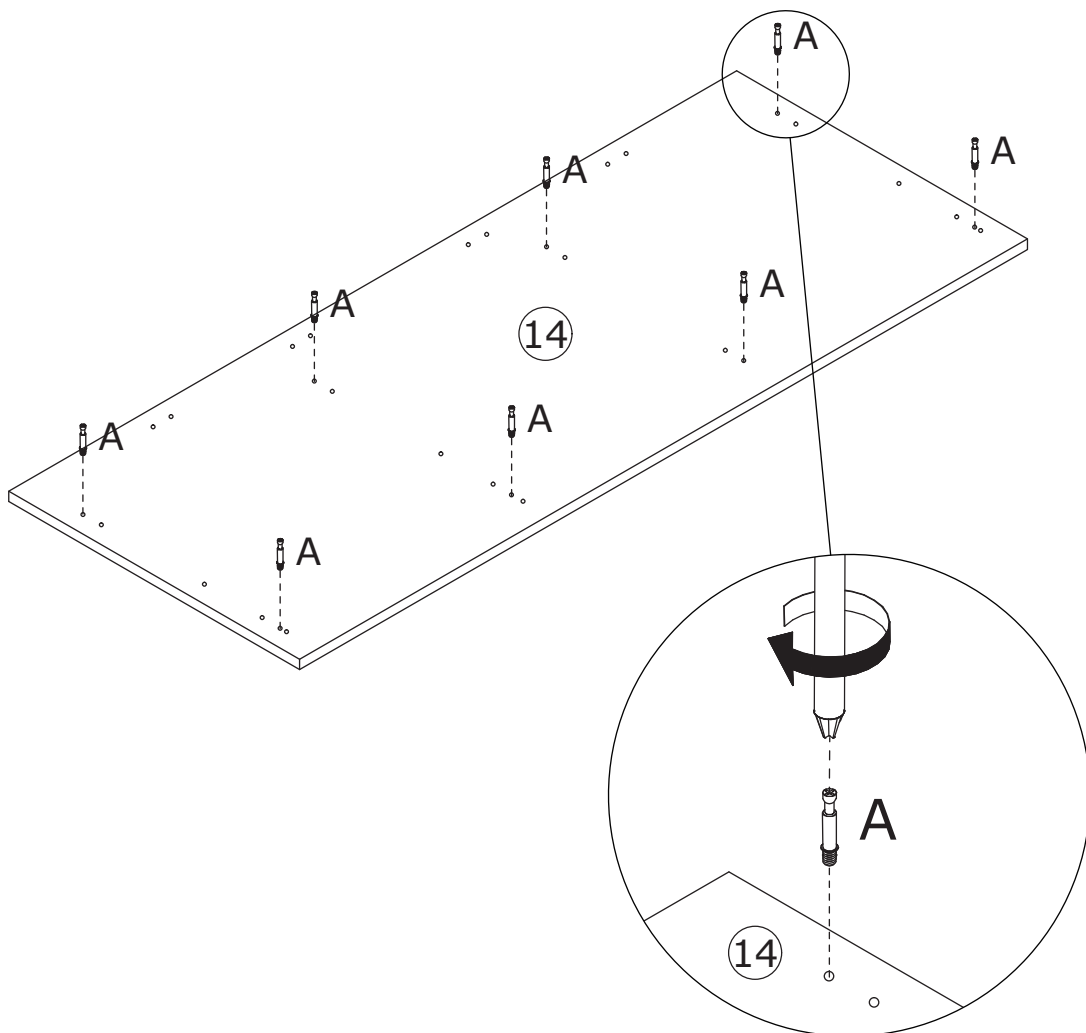



Attach screws (A) to part 14.



 
15
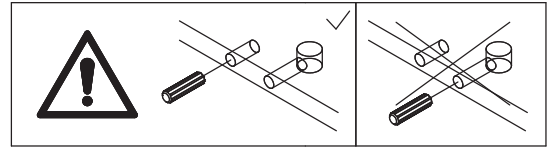
<p>C x 4</p>  <p>Ø6 x 30 mm</p>	<p>D x 4</p>  <p>Ø4 x 40 mm</p>	
--	--	---

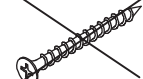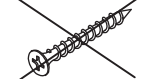


	<p>D</p>  <p>Ø4 x 40 mm</p>	<p>G</p>  <p>Ø4 x 50 mm</p>	<p>H</p>  <p>Ø4 x 30 mm</p>
---	---	--	--

 Secure part 15 to part 14 using dowels (C) and screws (D).



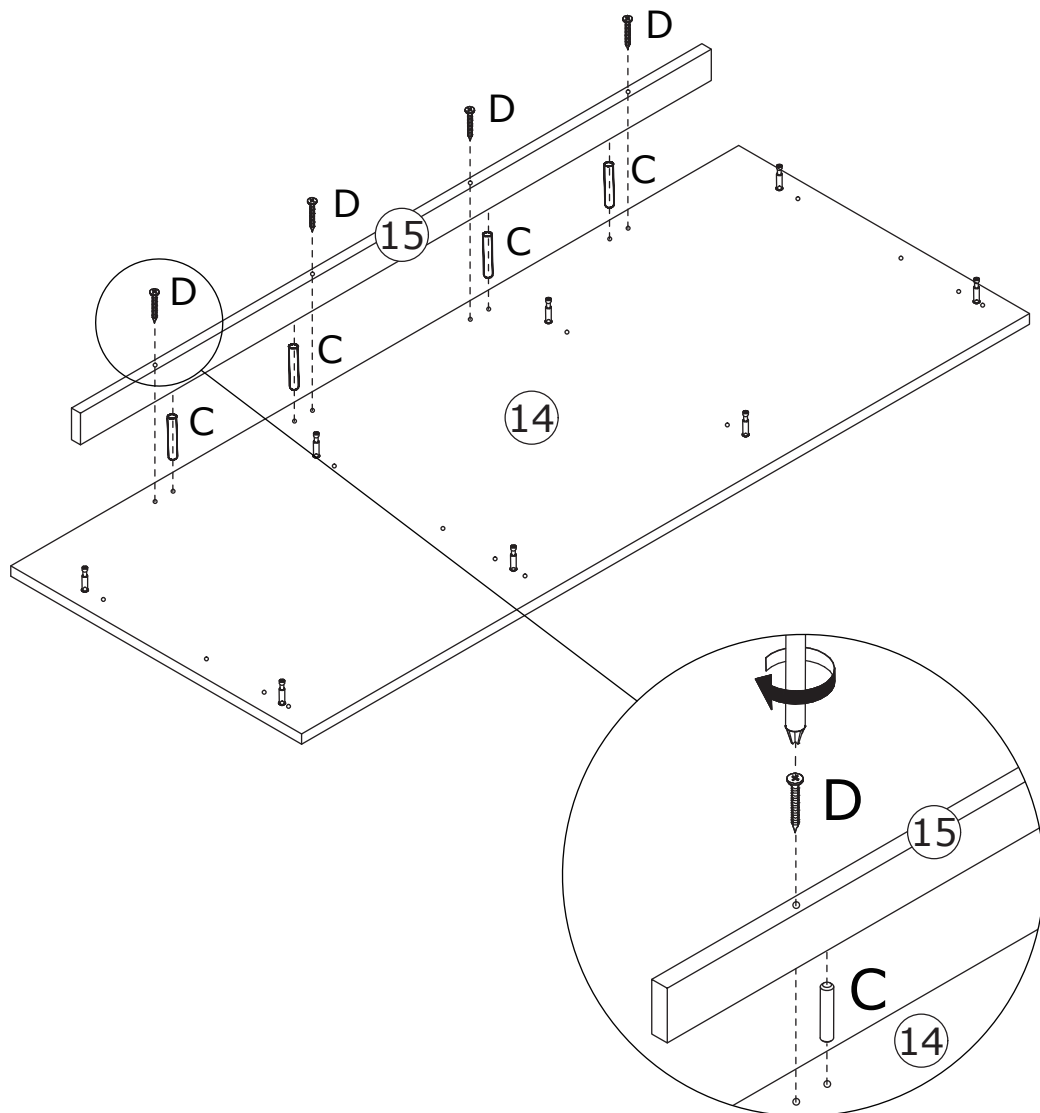


16

 C x 3



D x 6

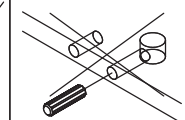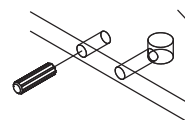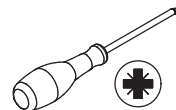   


D




Ø4 x 40 mm

 G





Ø4 x 50 mm

 H






Ø4 x 30 mm

  Secure part 14 to parts 8, 3, 7 using dowels (C) and screws (D).

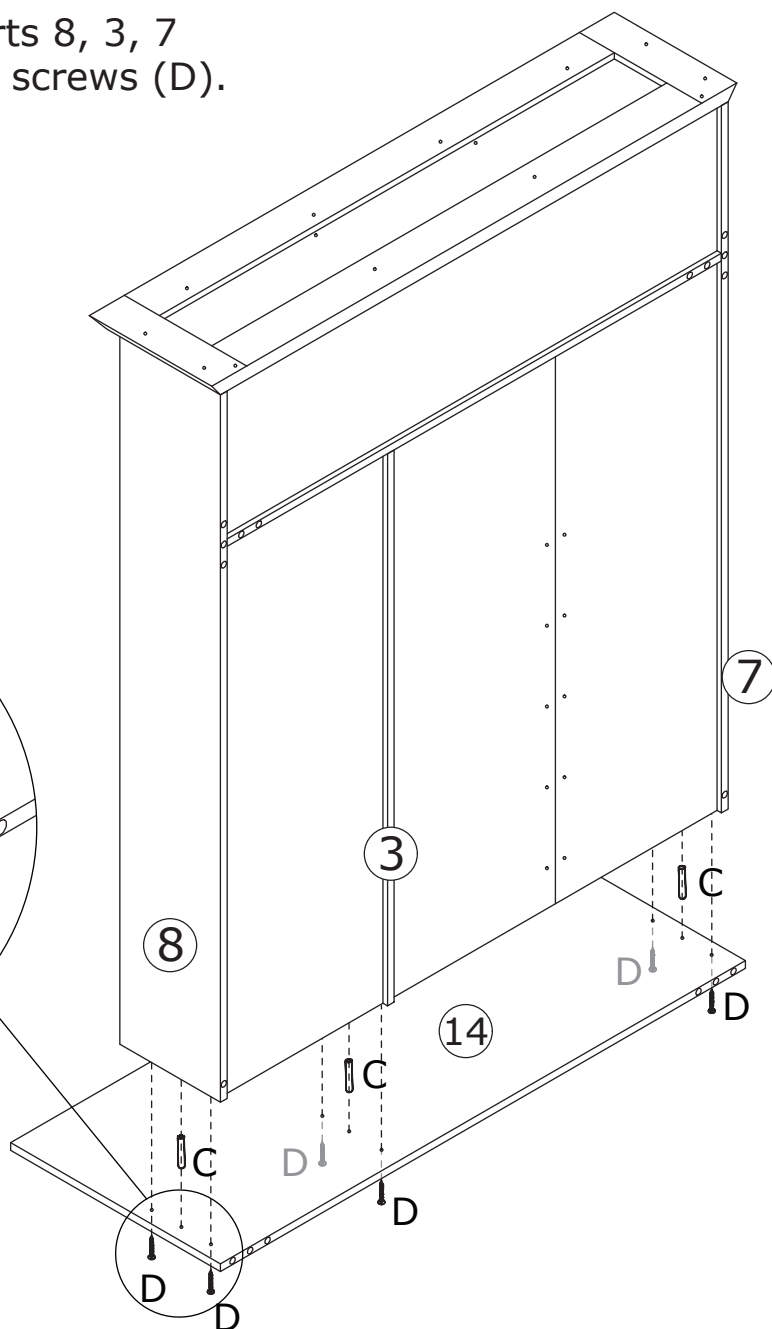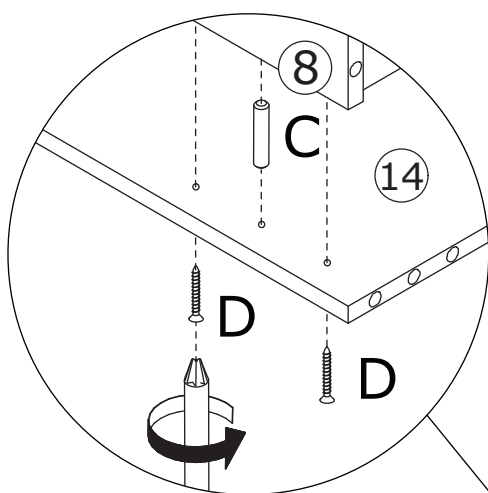


17

   A x 4

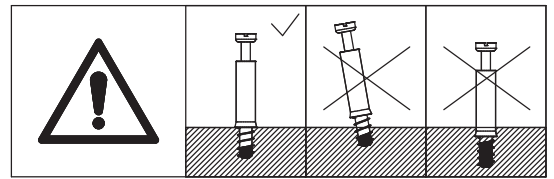

Secure screws (A) to parts 17, 20.

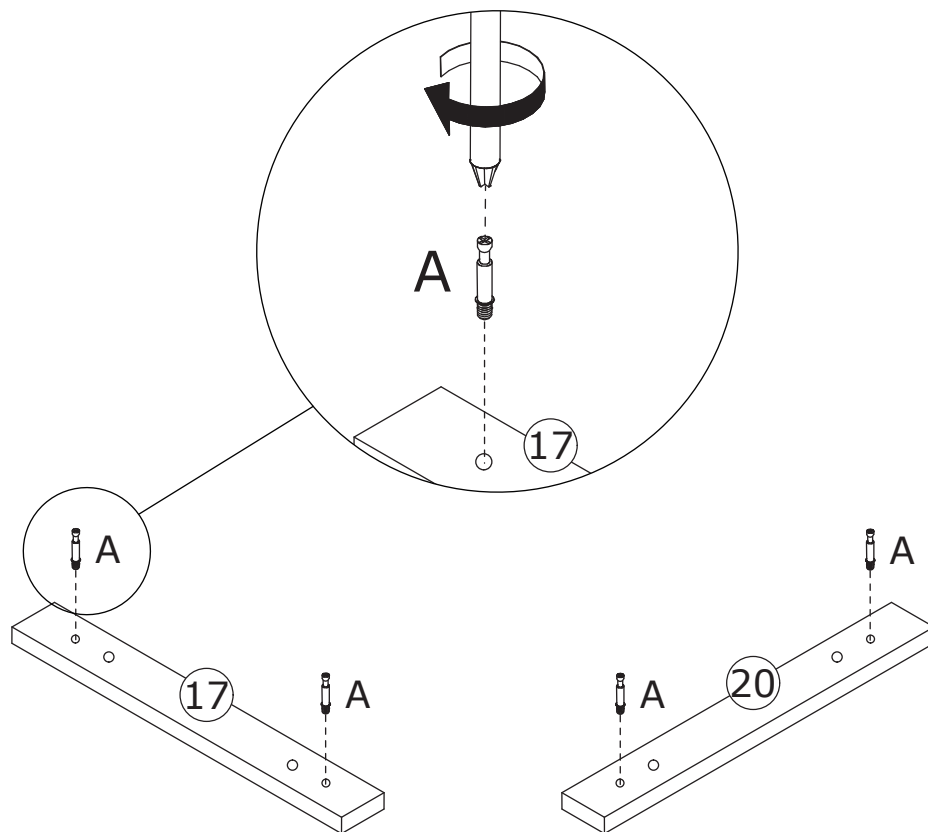 

18

 
B x 4







C x 4



Ø6 x 30 mm

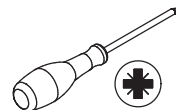


    Attach part 16 to part 17 using dowel (C), turn cam lock clockwise to tighten using cam lock (B), attach part 19 to part 20 using dowel (C), turn cam lock clockwise to tighten using cam lock (B).

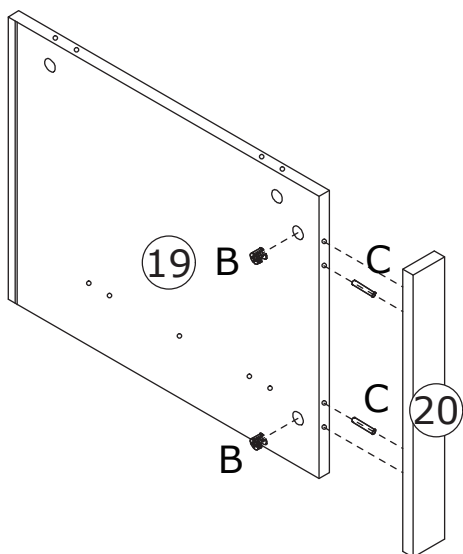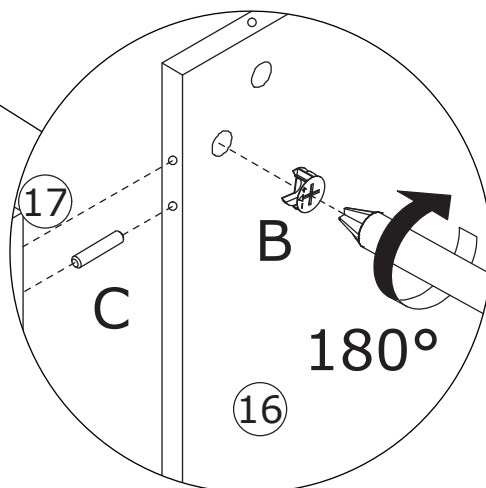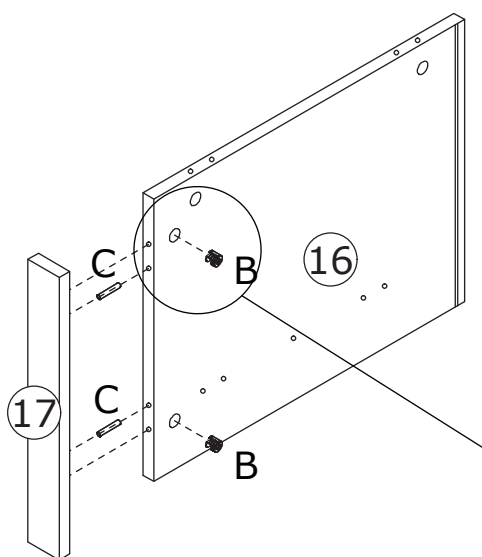
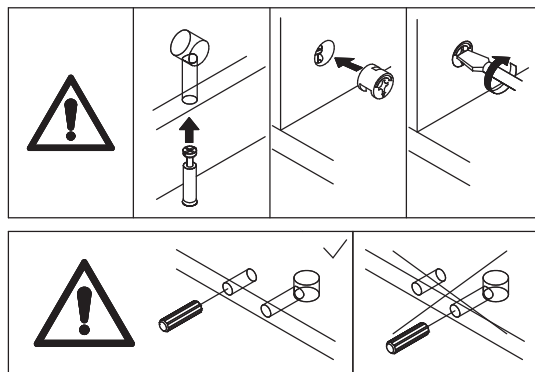


19


 
C x 4




H x 6

  

  
Use dowel (C) and screw (H) to attach part 18 to part 16, use dowel (C) and screw (H) to attach part 21 to part 19.

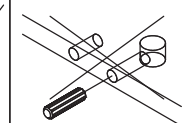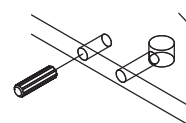




D

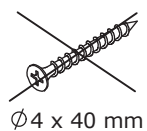 





G

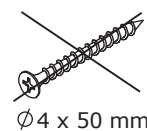 




H

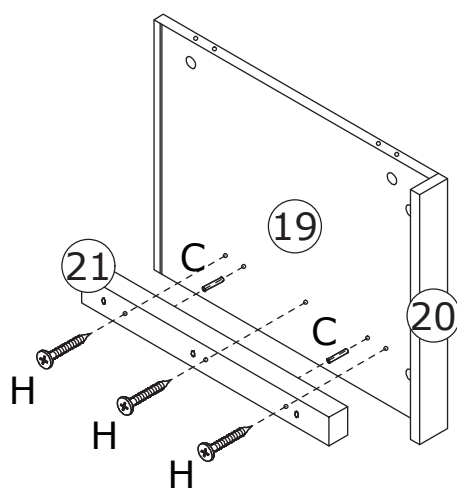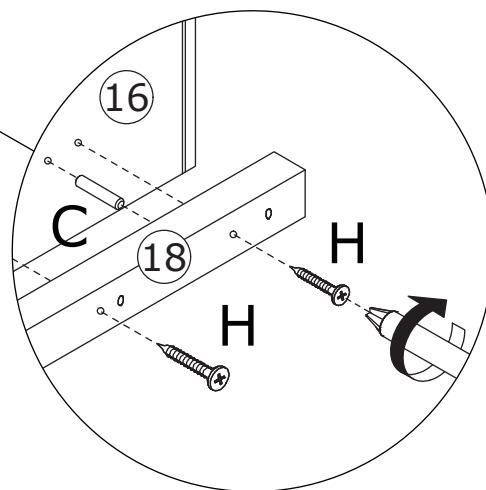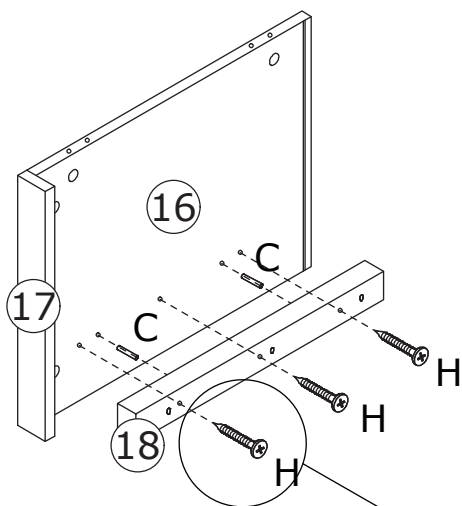   





20

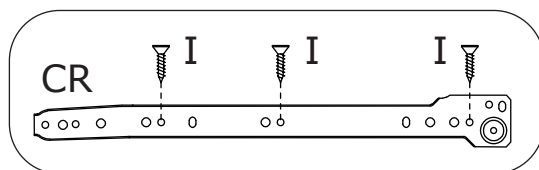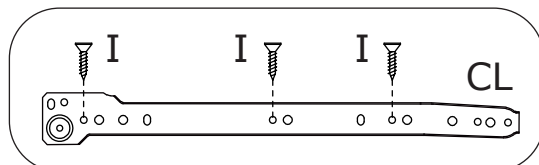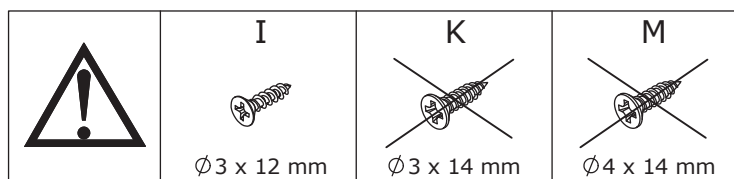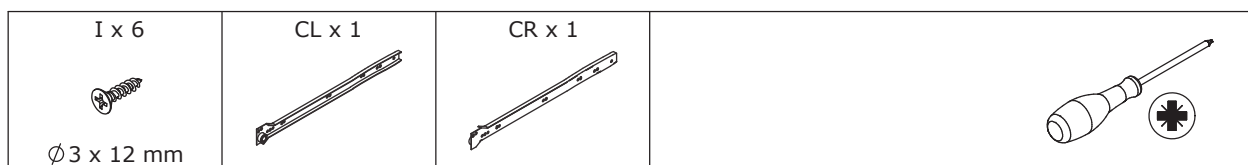    

   
Use screws (I) to fix the guide rail (CL) to part 18 and screws (I) to fix the guide rail (CR) to part 21.

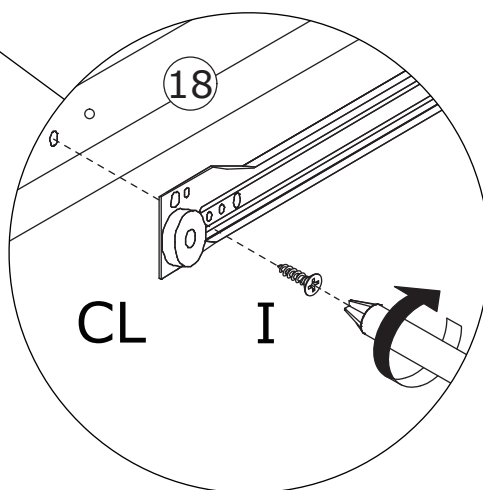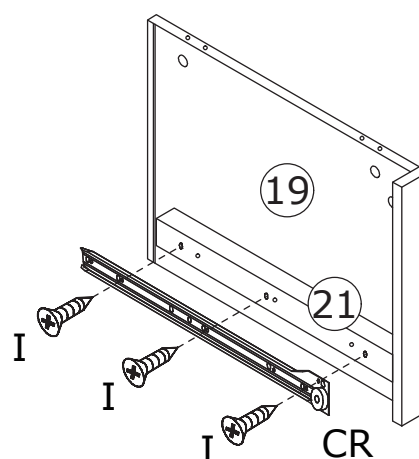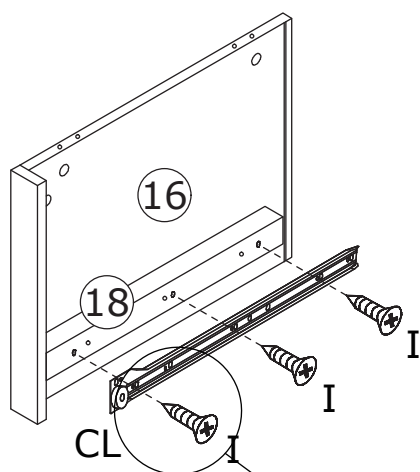





21

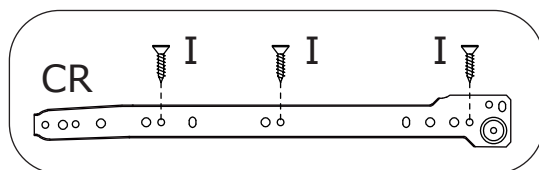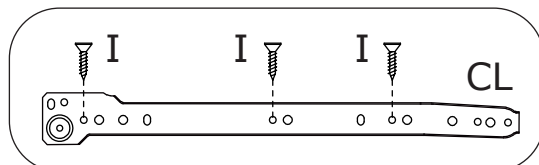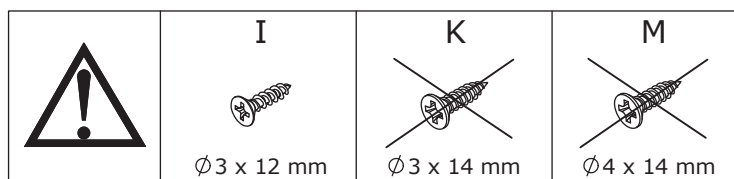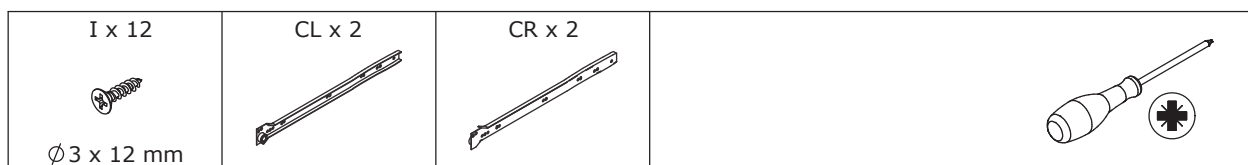    

 
Use screws (I) to secure guide rails (CL) to part 22, use screws (I) to secure guide rails (CR) to part 22.

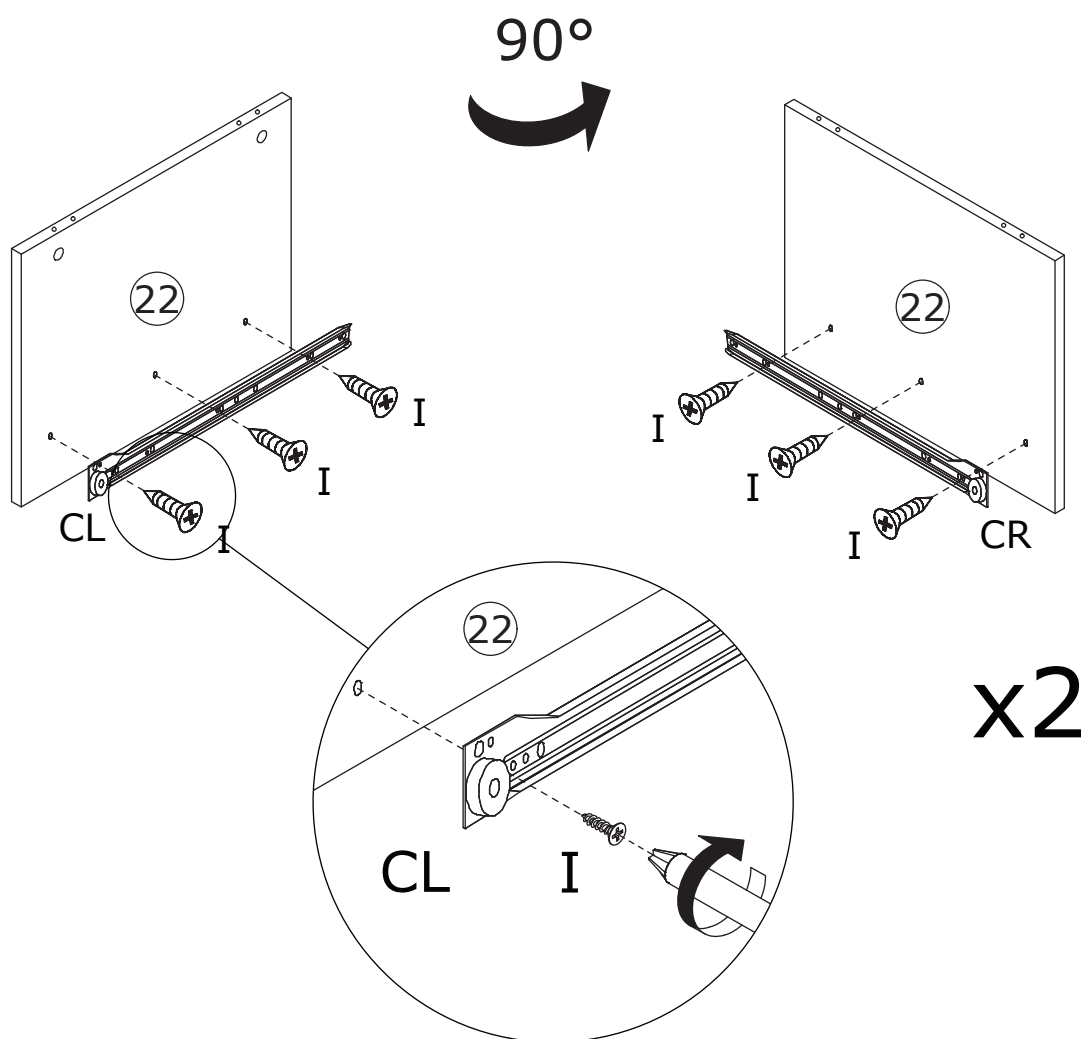



22

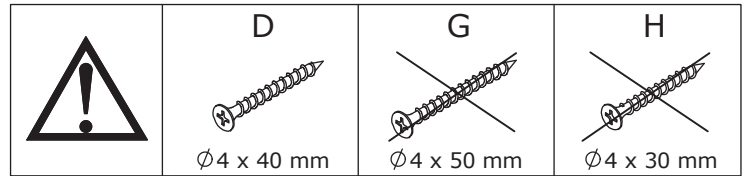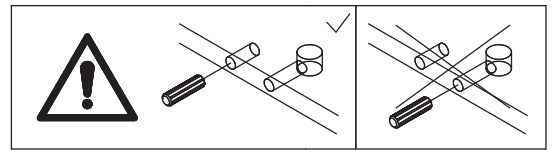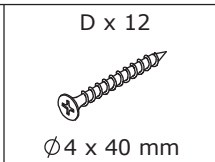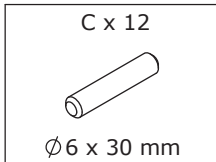    

 
Secure part 24 to parts 16, 22, 22, 19, 23 using dowels (C) and screws (D).

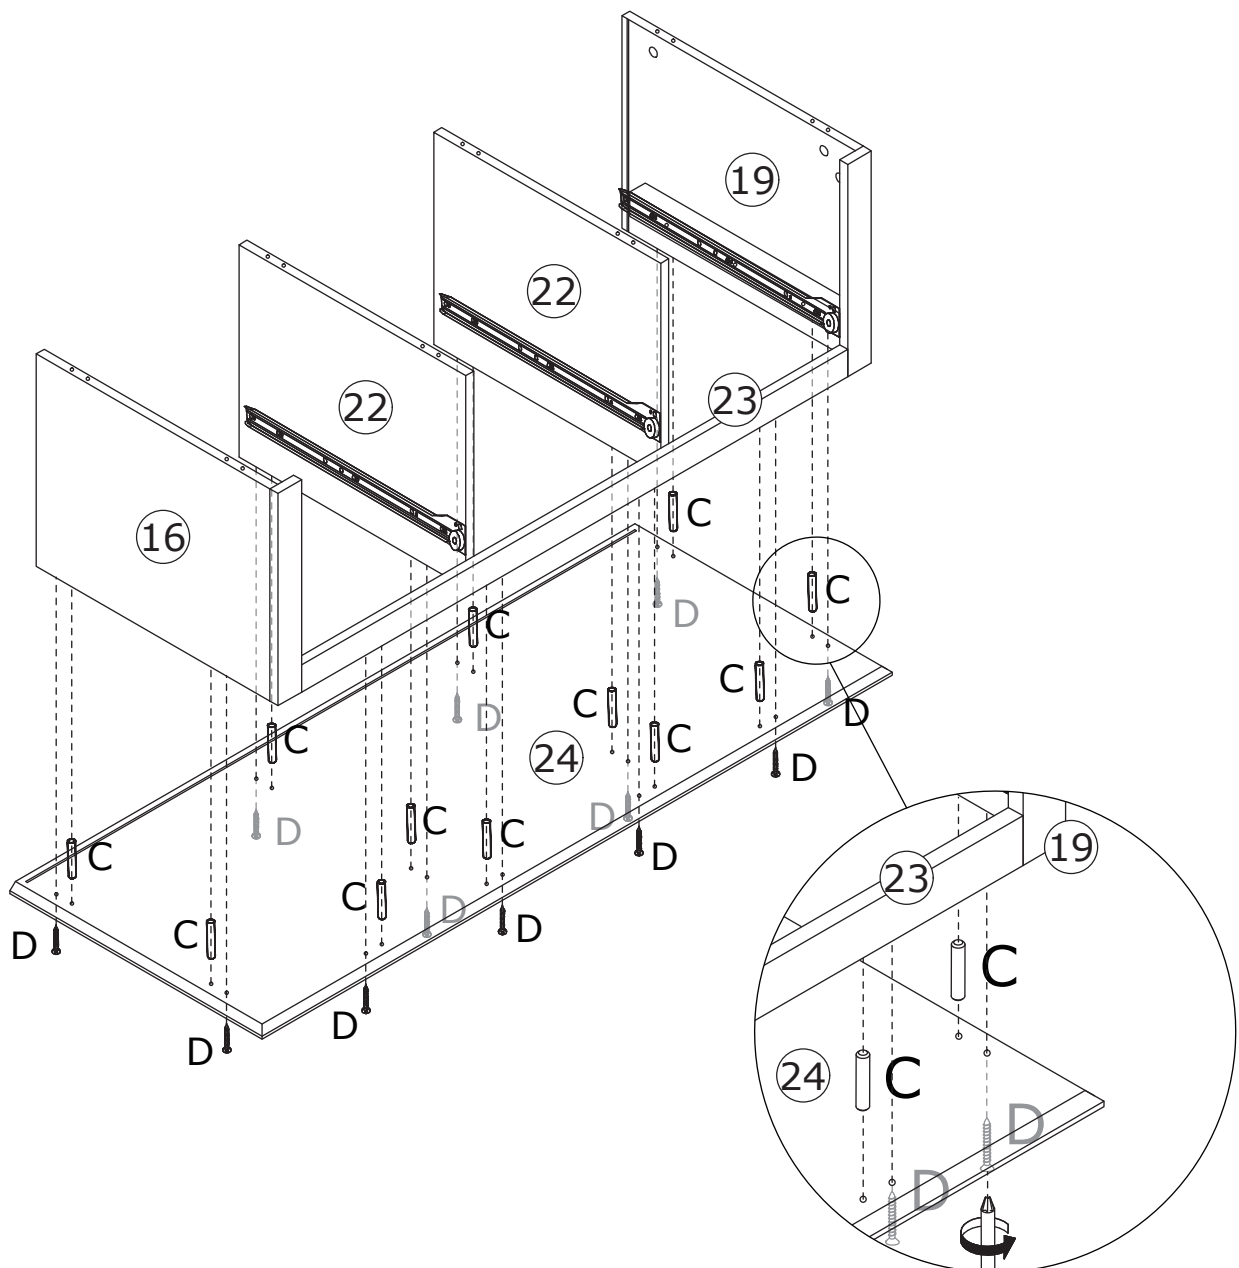

23

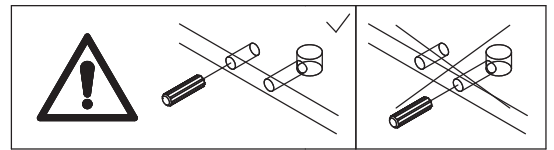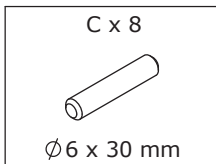  


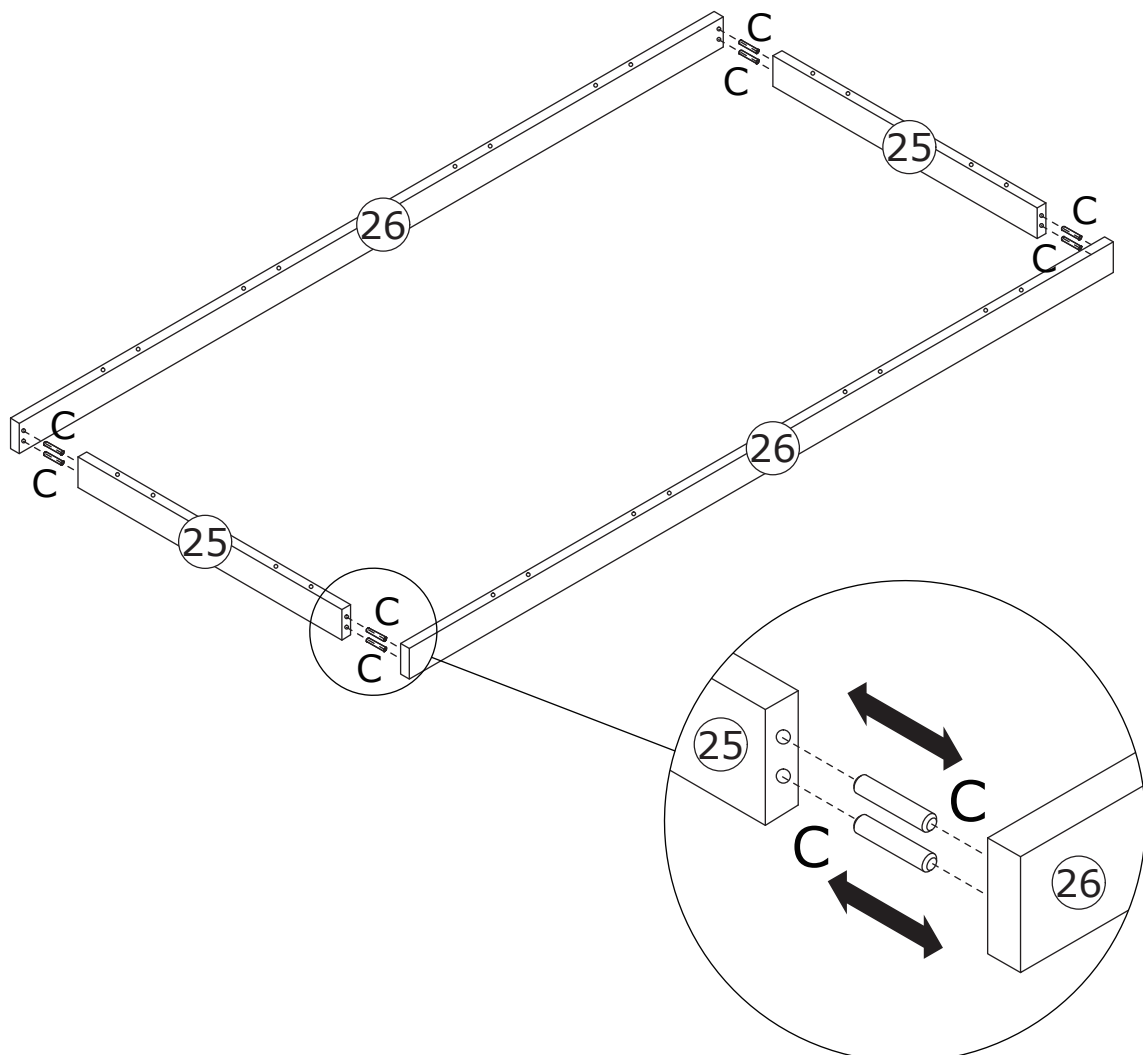 



Attach part 26 to part 25 using dowels (C).



 
24
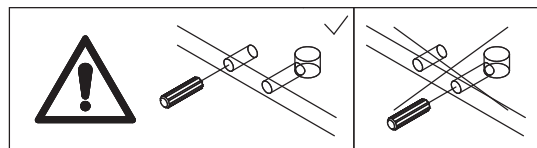
<p>C x 12</p>  <p>Ø 6 x 30 mm</p>	<p>D x 12</p>  <p>Ø 4 x 40 mm</p>	
--	--	---

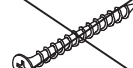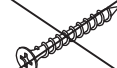


	<p>D</p>  <p>Ø 4 x 40 mm</p>	<p>G</p>  <p>Ø 4 x 50 mm</p>	<p>H</p>  <p>Ø 4 x 30 mm</p>
---	--	---	---

 Use dowels (C) and screws (D) to attach part 24 to parts 25, 26, 25, 26.

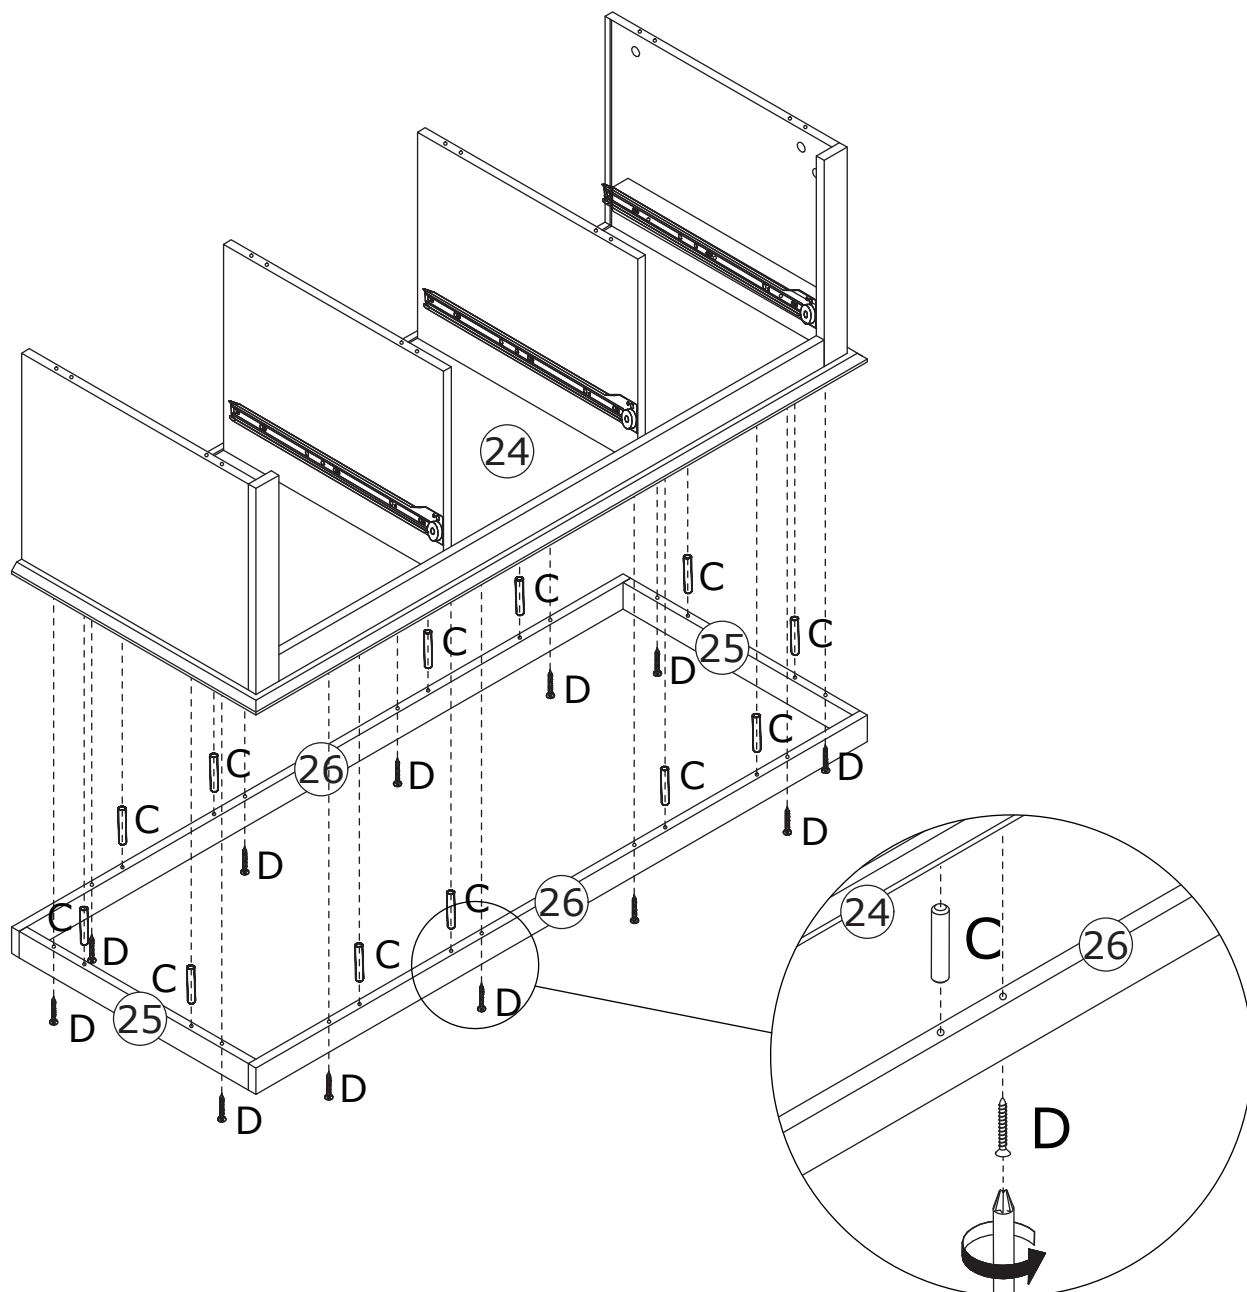

25

 Insert part 27 into parts 16, 24, 19.

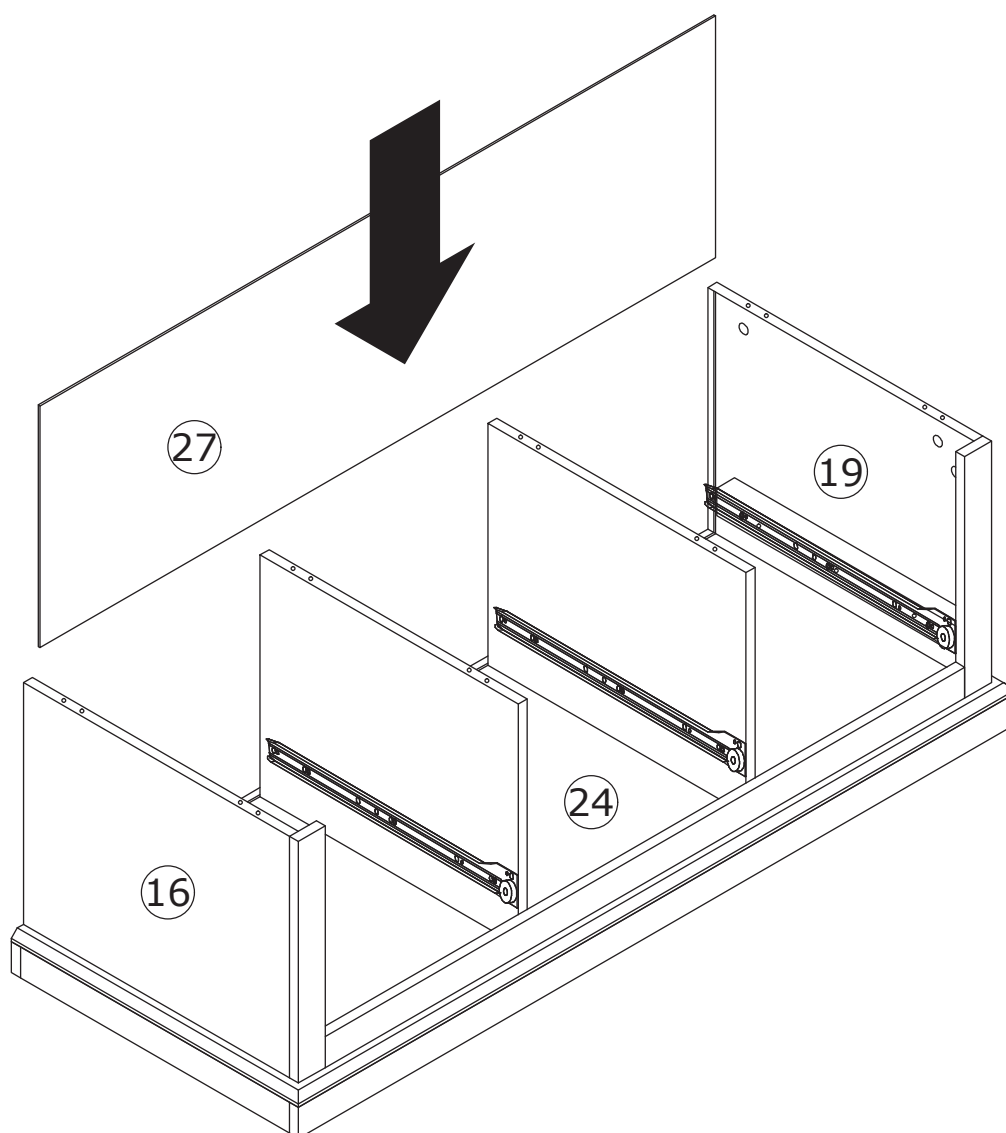

26

 
B x 8






C x 8



Ø6 x 30 mm

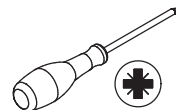

   Attach part 14 to parts 16, 22, 22, 19 using dowel (C), turn cam lock clockwise to tighten using cam lock (B).

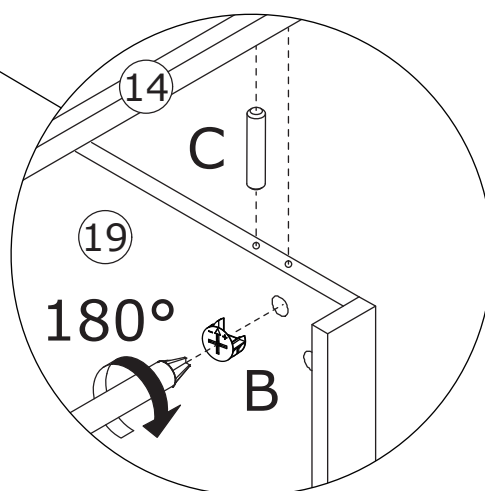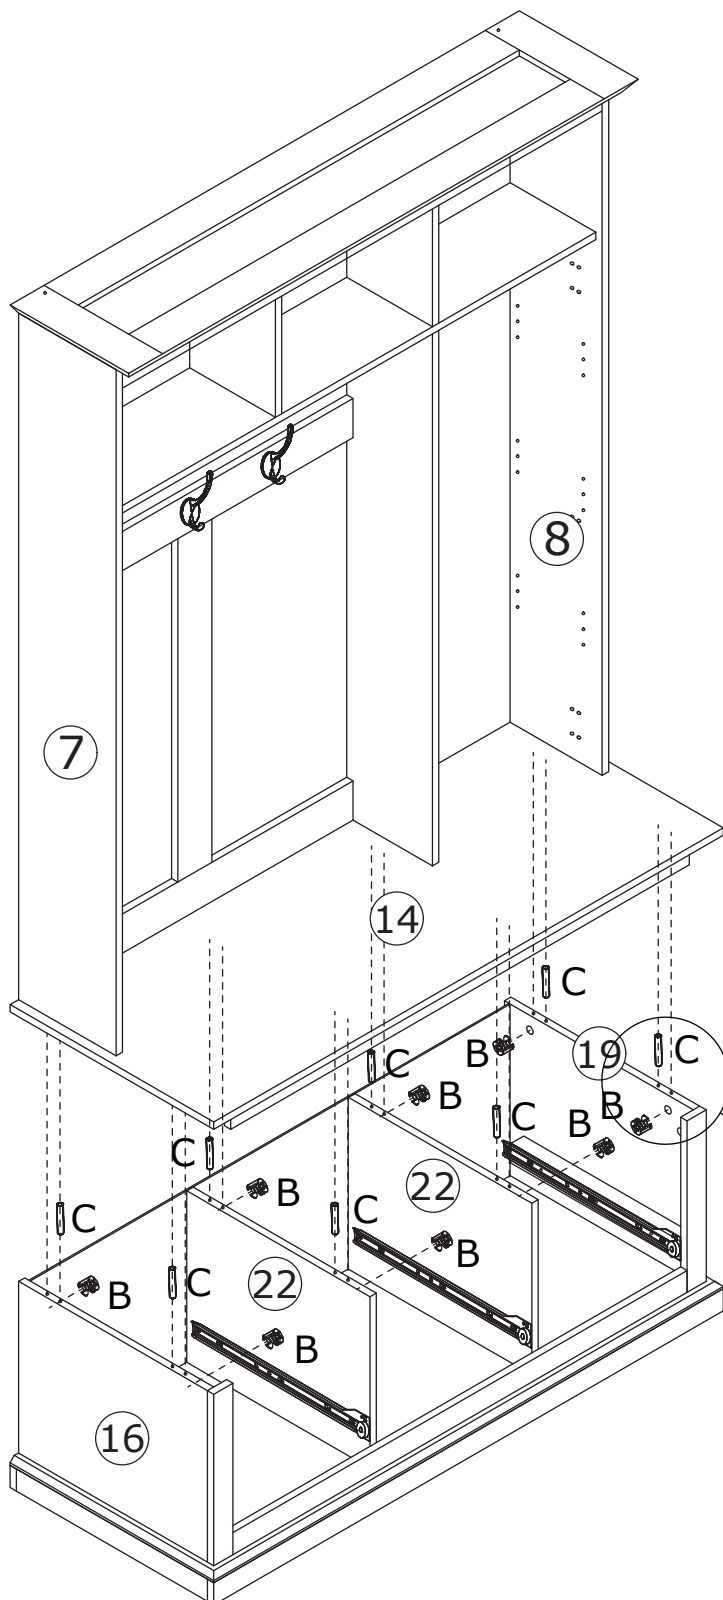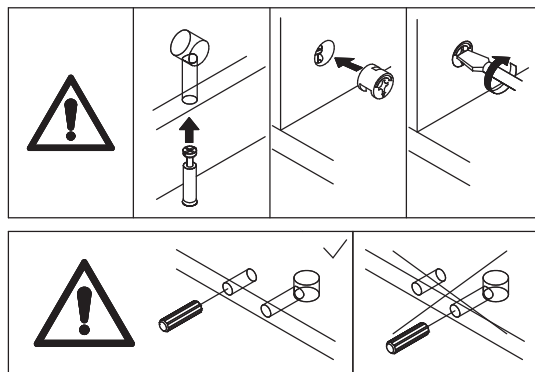

27

 
S x 4



 
T x 20




Ø4 x 14 mm


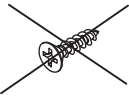

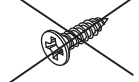


Use screws (T) to attach iron tabs (S) to parts 14, 8, 19, use screws (T) to attach iron tabs (S) to parts 8, 2, use screws (T) to attach iron tabs (S) to parts 14, 7, 16, use screws (T) to attach iron tabs (S) to parts 2, 7.

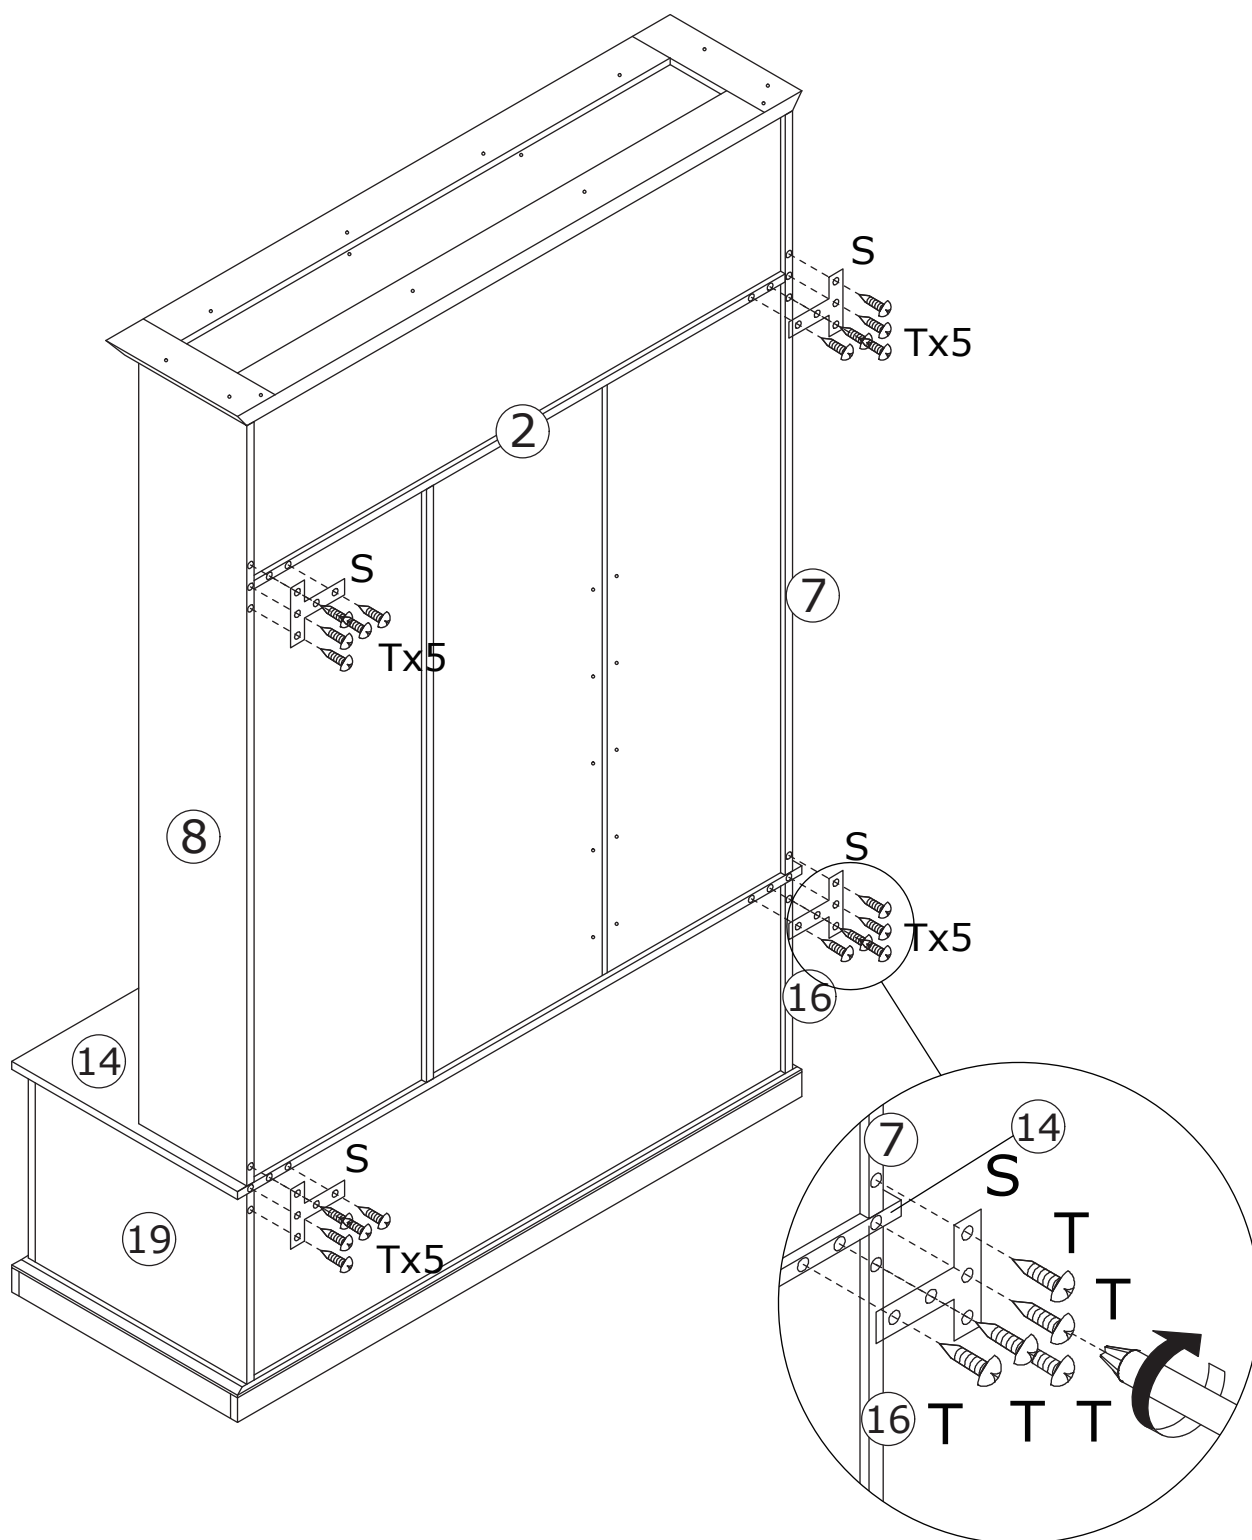 


28



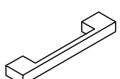

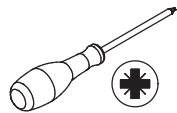




<p>J x 56</p> 	<p>K x 56</p>  <p>Ø 3 x 14 mm</p>	
---	--	---

	<p>I</p>  <p>Ø 3 x 12 mm</p>	<p>K</p>  <p>Ø 3 x 14 mm</p>	<p>M</p>  <p>Ø 4 x 14 mm</p>
---	--	---	---

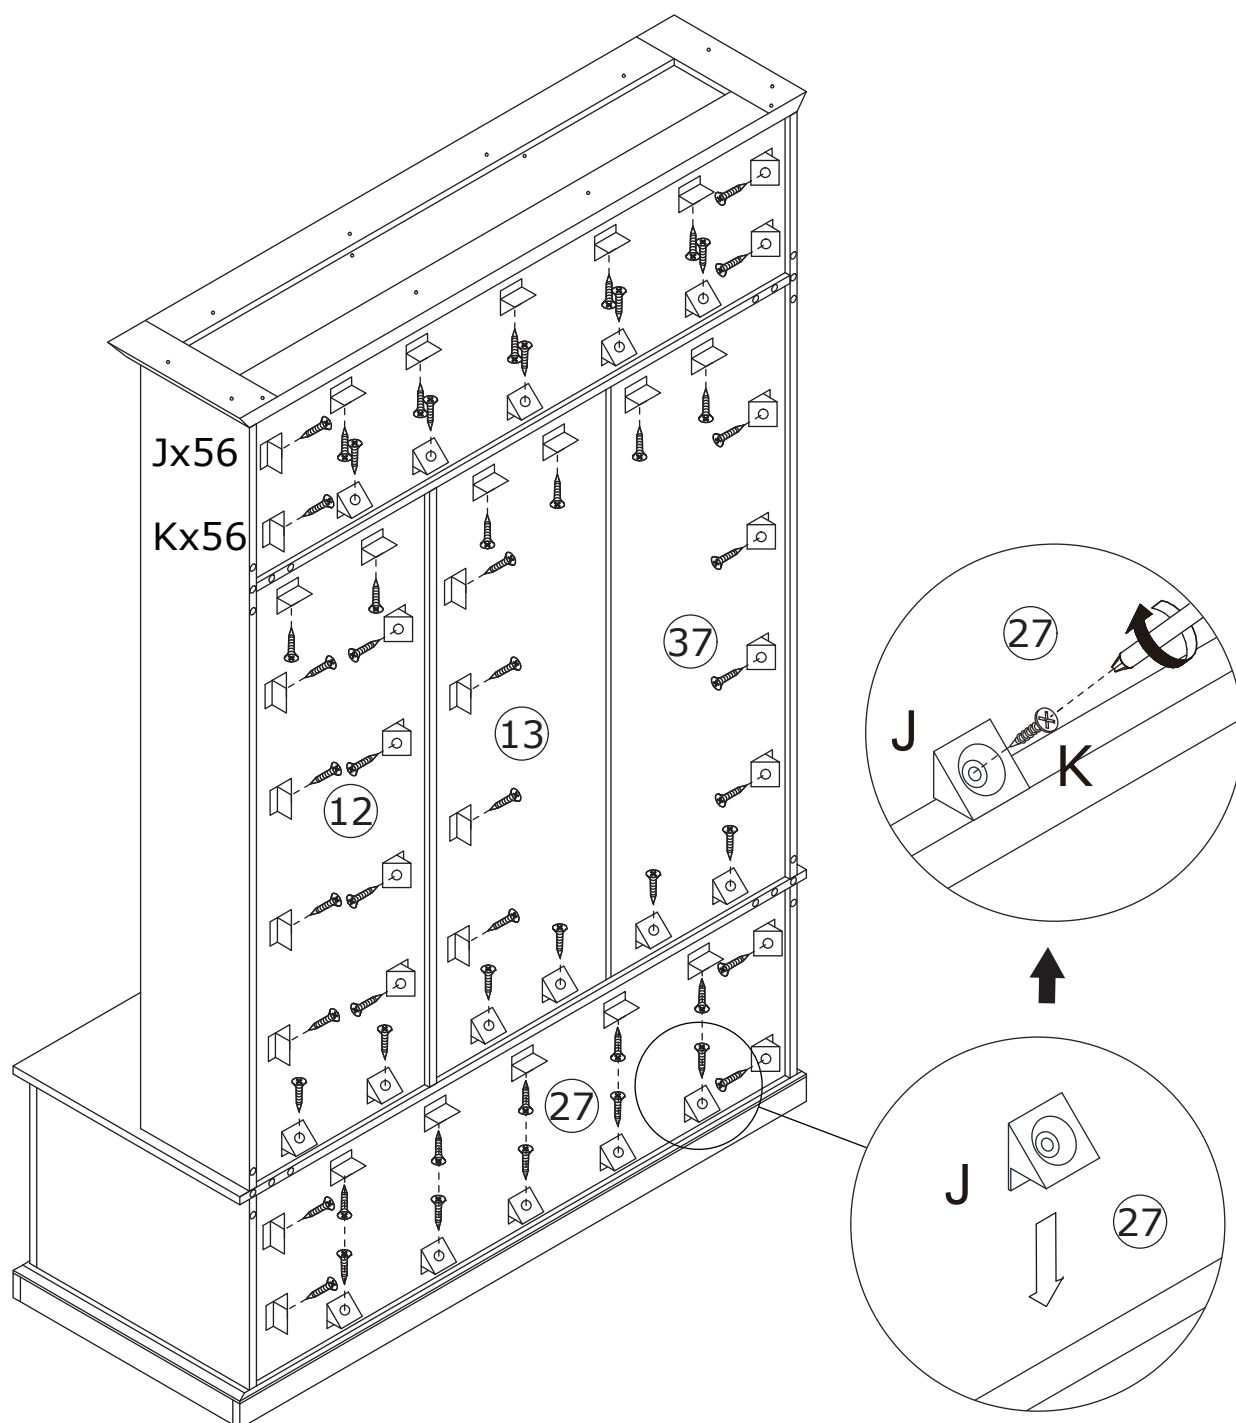
Use screws (K) to fasten part (J) in the position shown.

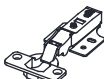

 
29


<p>L x 3</p> 	<p>M x 6</p>  <p>Ø4 x 14 mm</p>	<p>O x 1</p> 	<p>P x 2</p>  <p>Ø4 x 30 mm</p>	
	<p>I</p>  <p>Ø3 x 12 mm</p>	<p>K</p>  <p>Ø3 x 14 mm</p>	<p>M</p>  <p>Ø4 x 14 mm</p>	

  
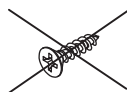
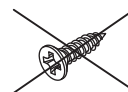

Use screws (M) to attach hinge (L) to part 28 and screws (P) to attach handle (O) to part 28.

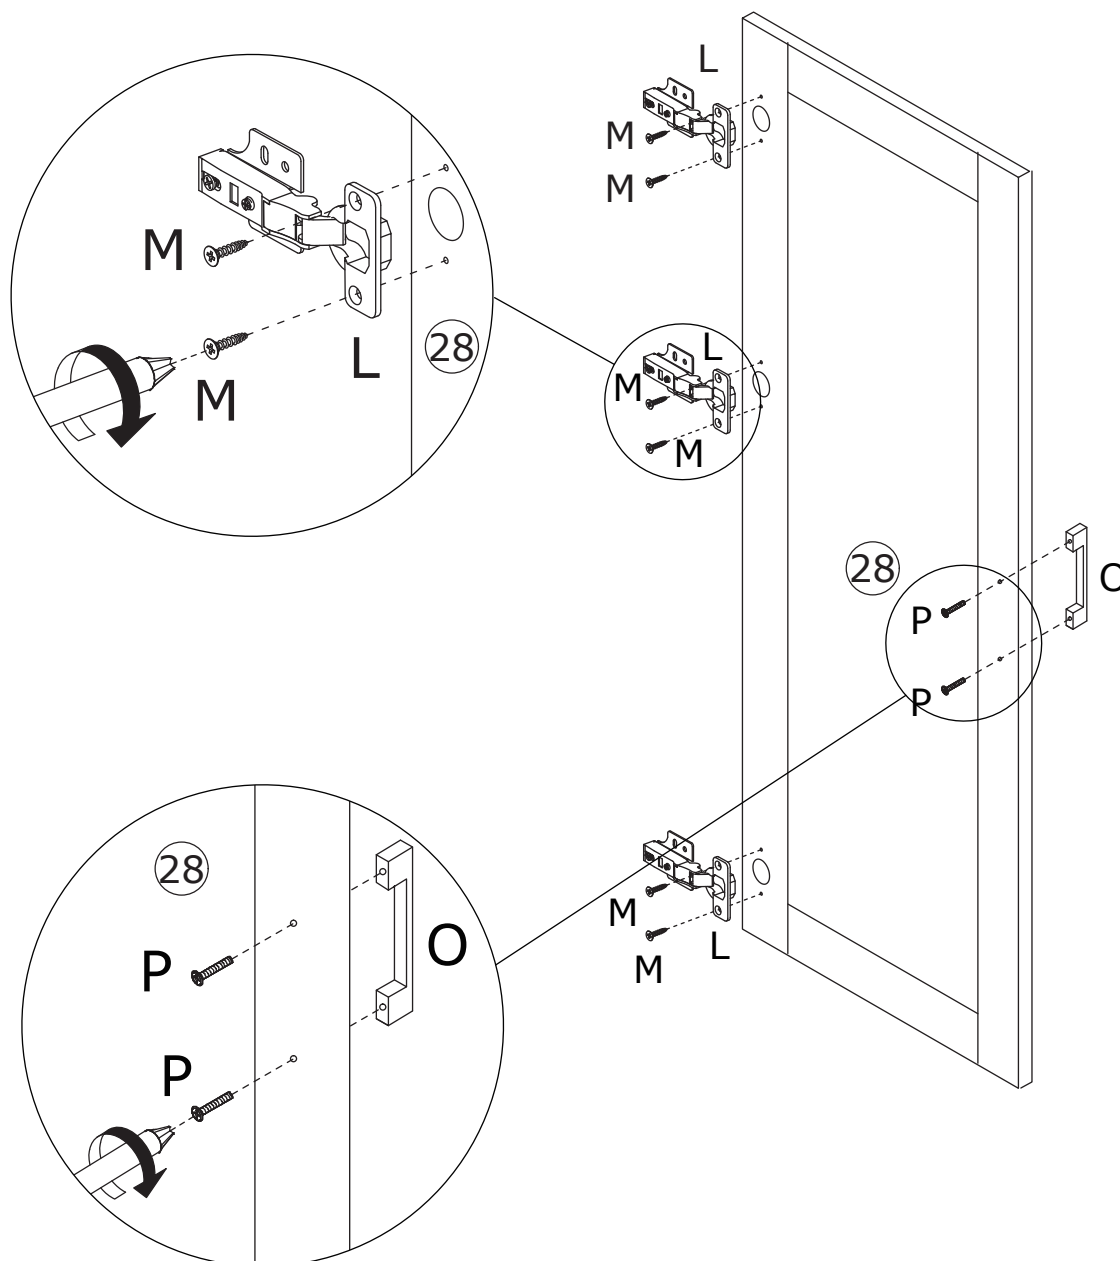



30

M x 12

 Ø 4 x 14 mm






	<p>I</p>  Ø 3 x 12 mm	<p>K</p>  Ø 3 x 14 mm	<p>M</p>  Ø 4 x 14 mm
---	--	---	---

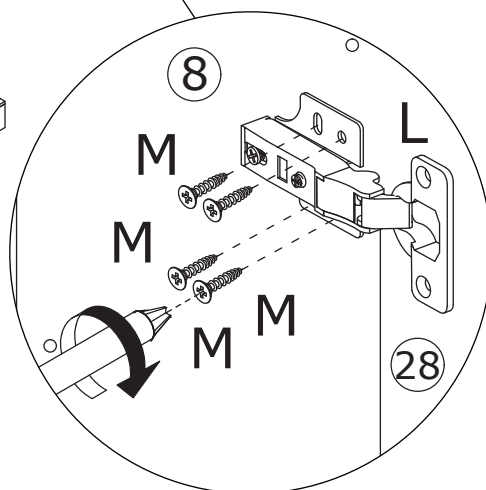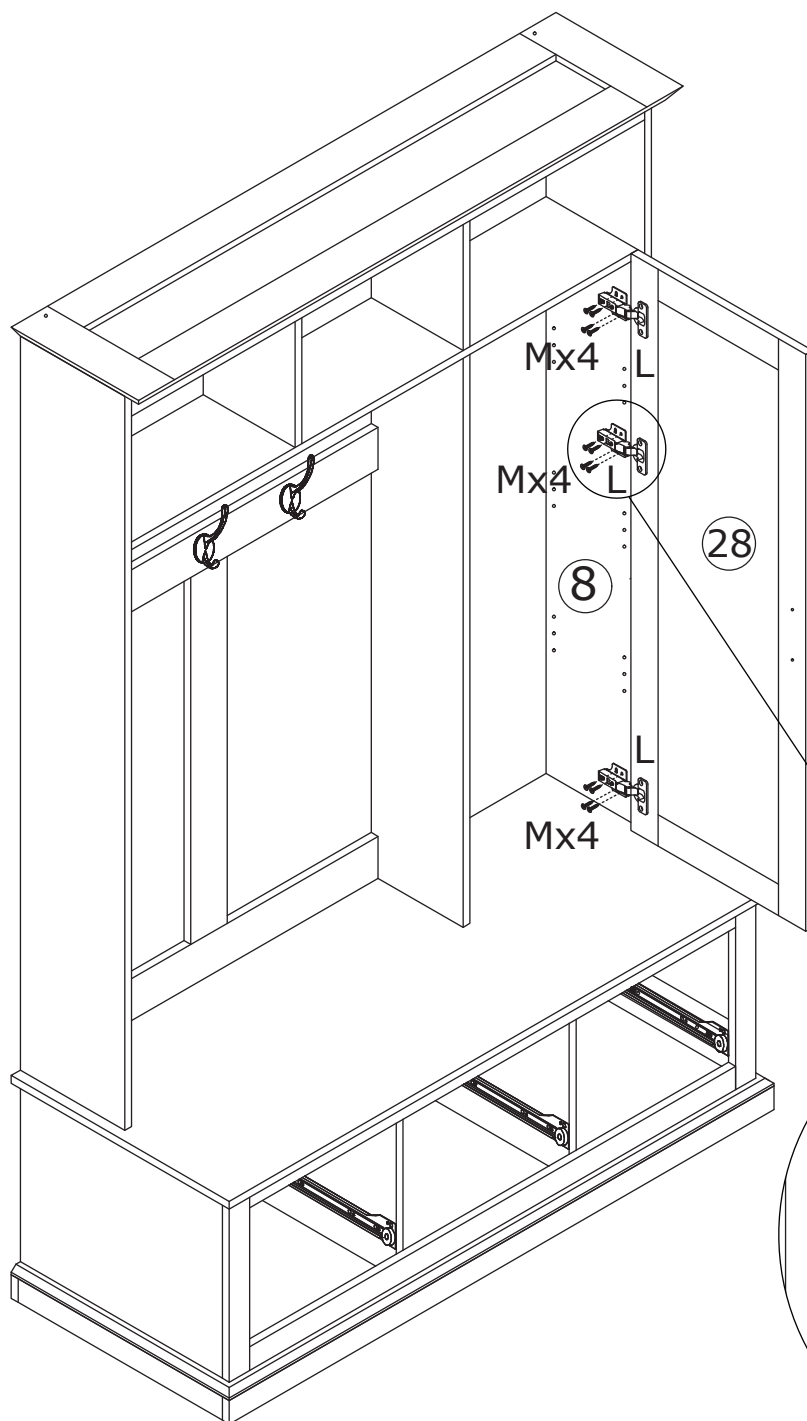  
Secure hinge (L) to part 8 with screws (M).



   31

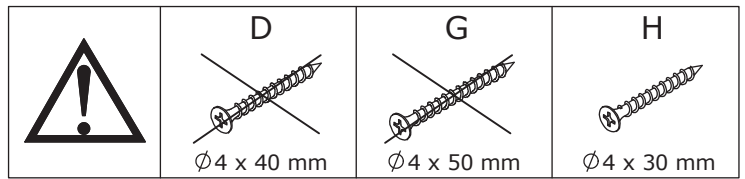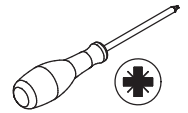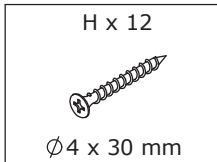


 Secure parts 30, 32 to part 31 with screws (H), repeat three times.


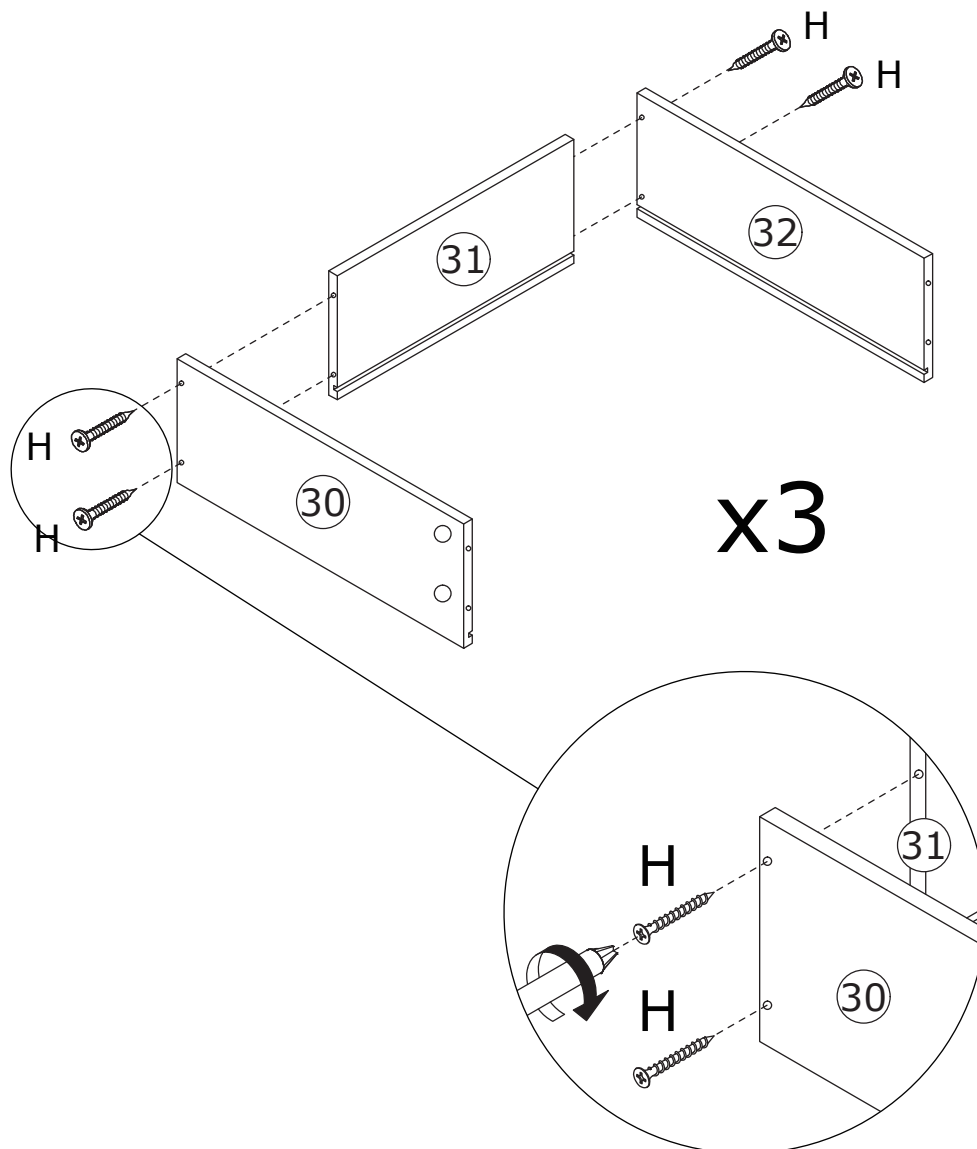


32

 
Insert part 33 into parts 30,
31, 32, repeat three times.

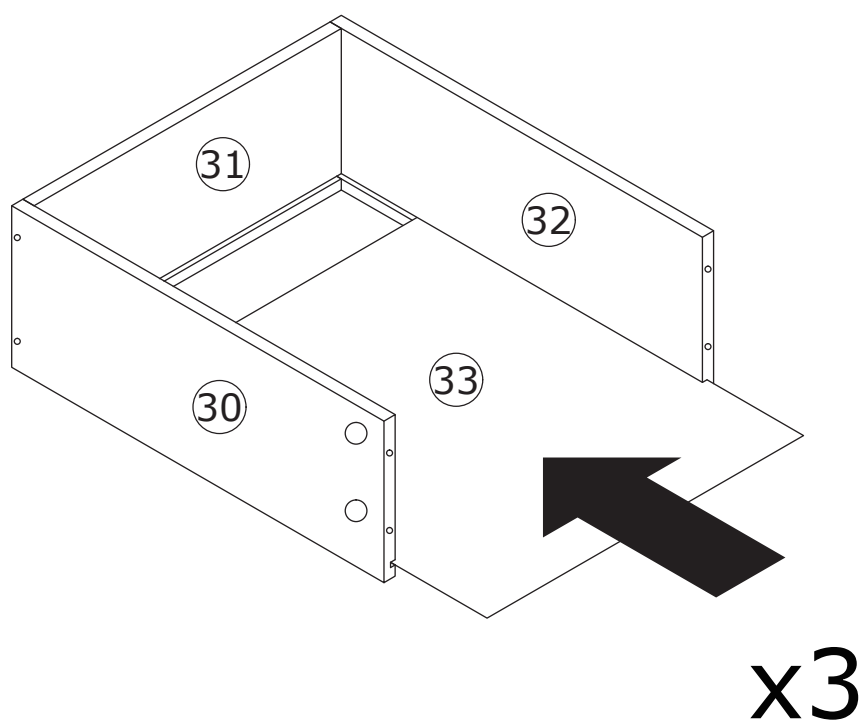

33

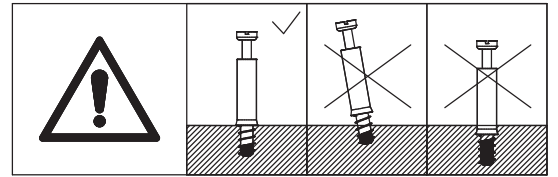 
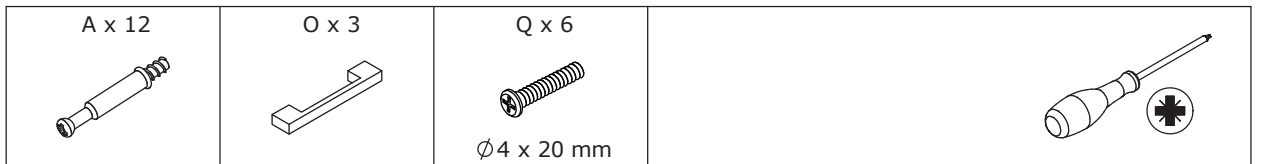 


 Secure screws (A) to parts 34, 35, 36, use screws (Q) to secure handle (O) to parts 34, 35, 36.

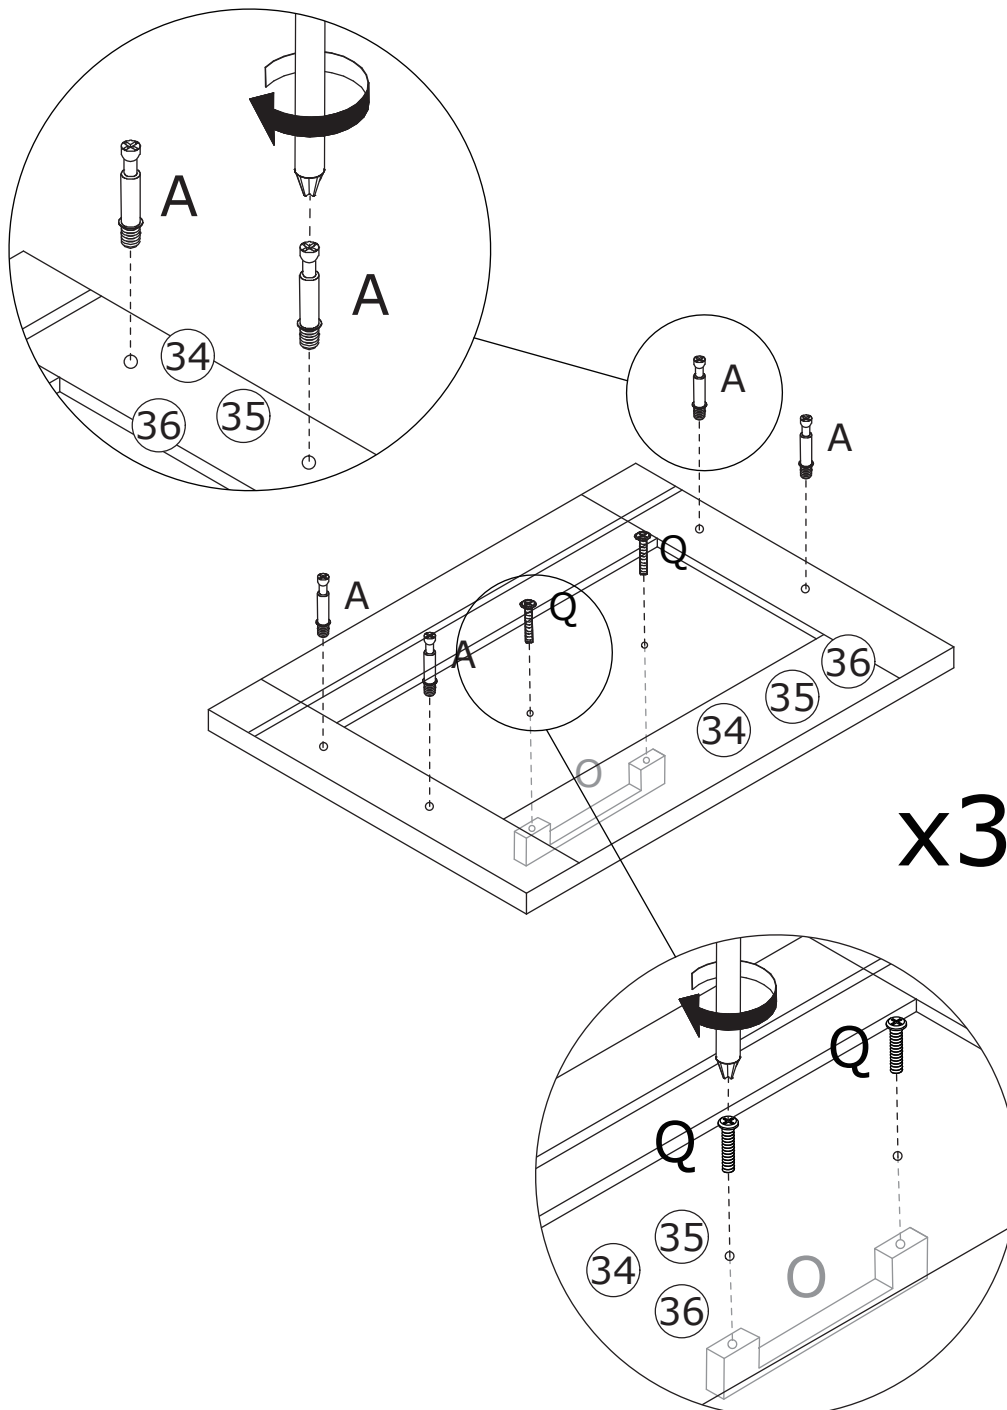


34

 
 
B x 12

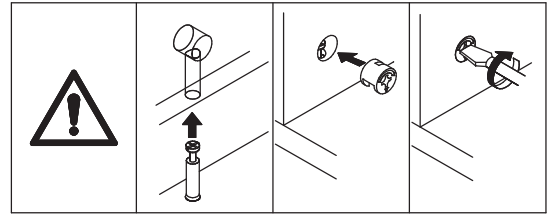

 
Attach parts 34, 35, 36 to parts 30 and 32, respectively, and use cam lock (B) to tighten by turning cam lock clockwise.

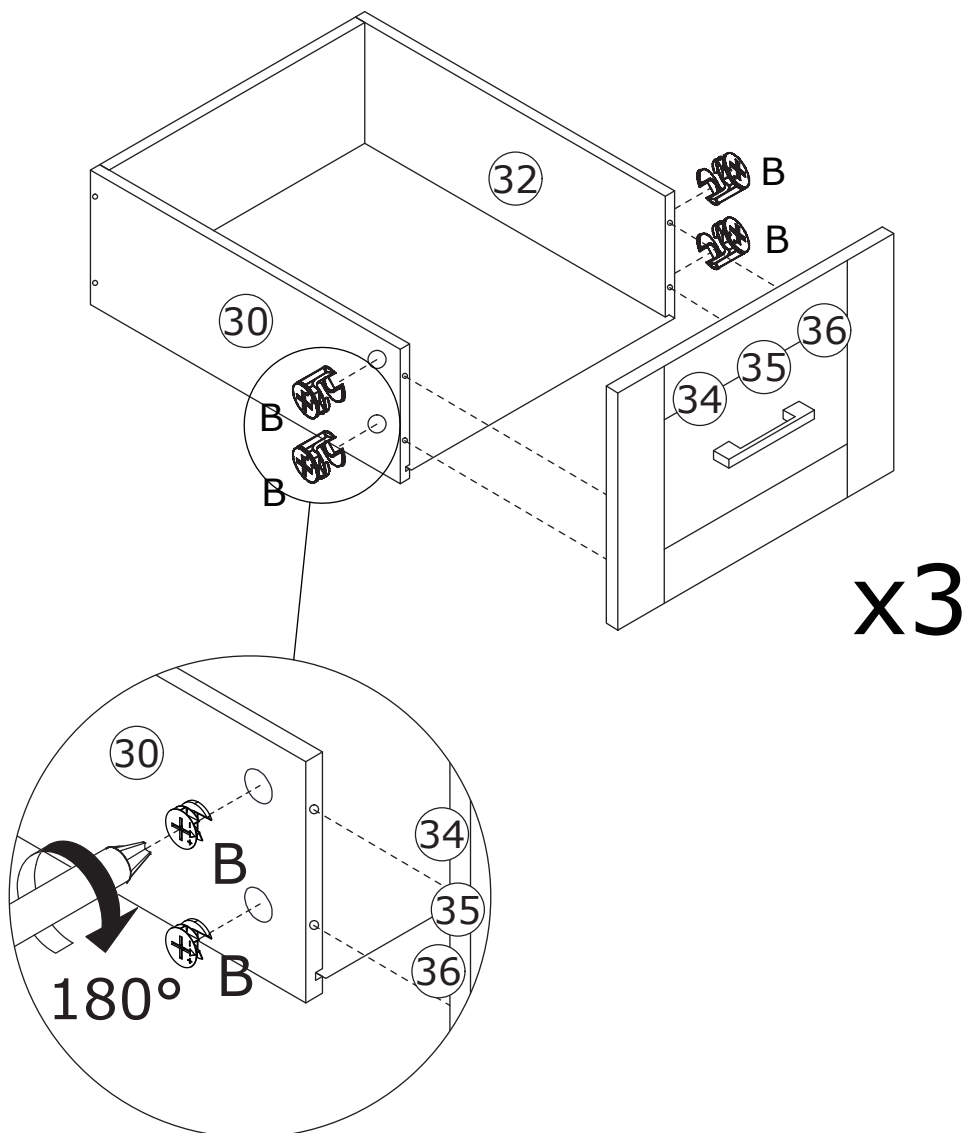

35

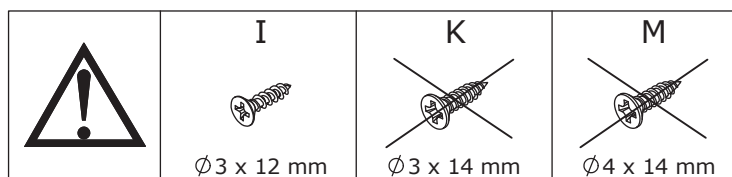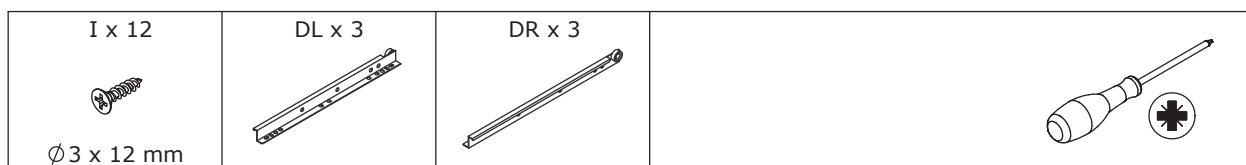  


 Secure the guide rail (CR) to part 32 using screws (I) and the guide rail (CL) to part 30 using screws (I).

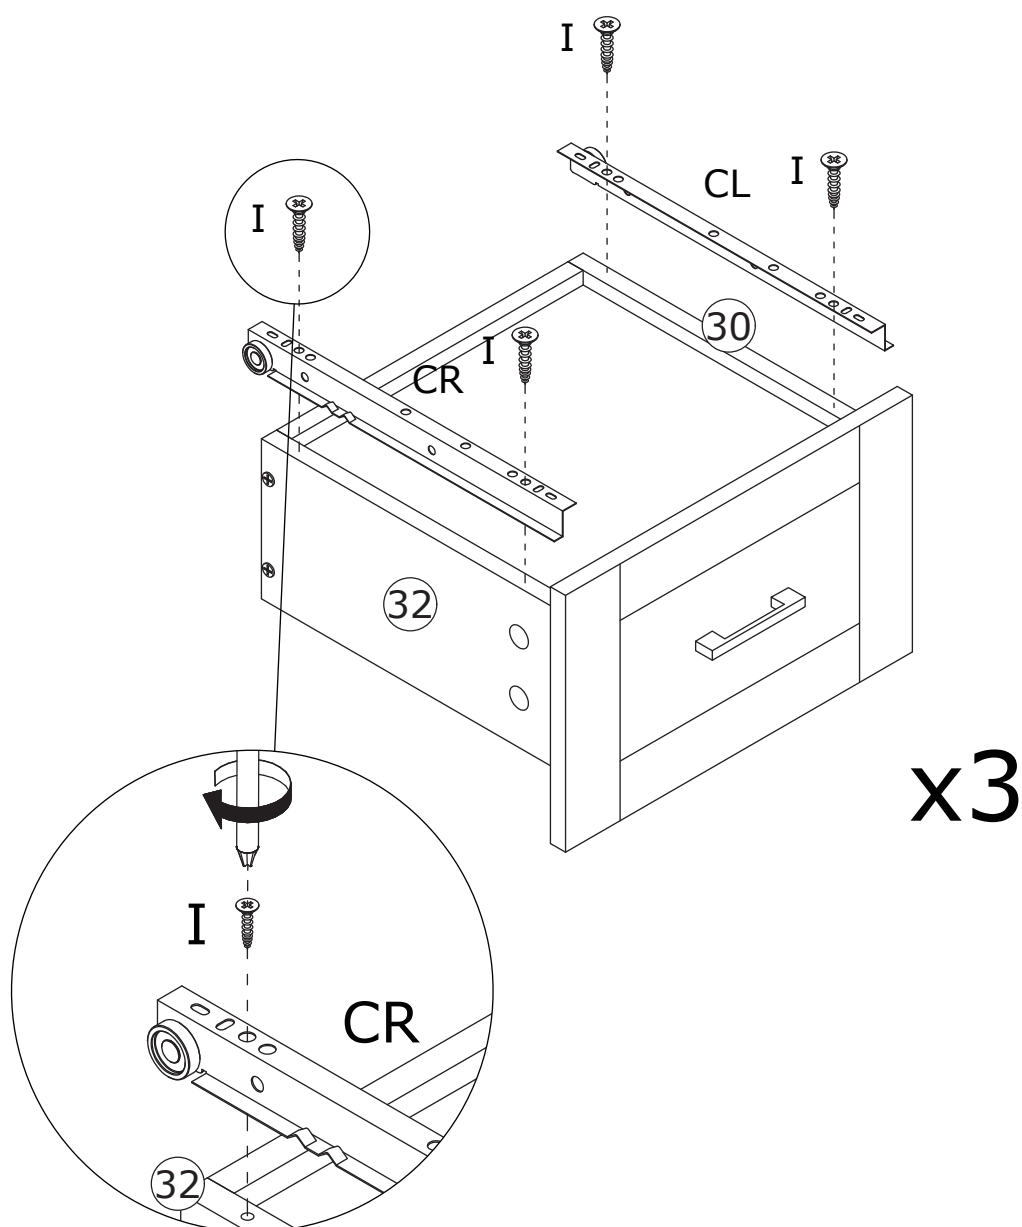

36

 Place the drawer in the rail.

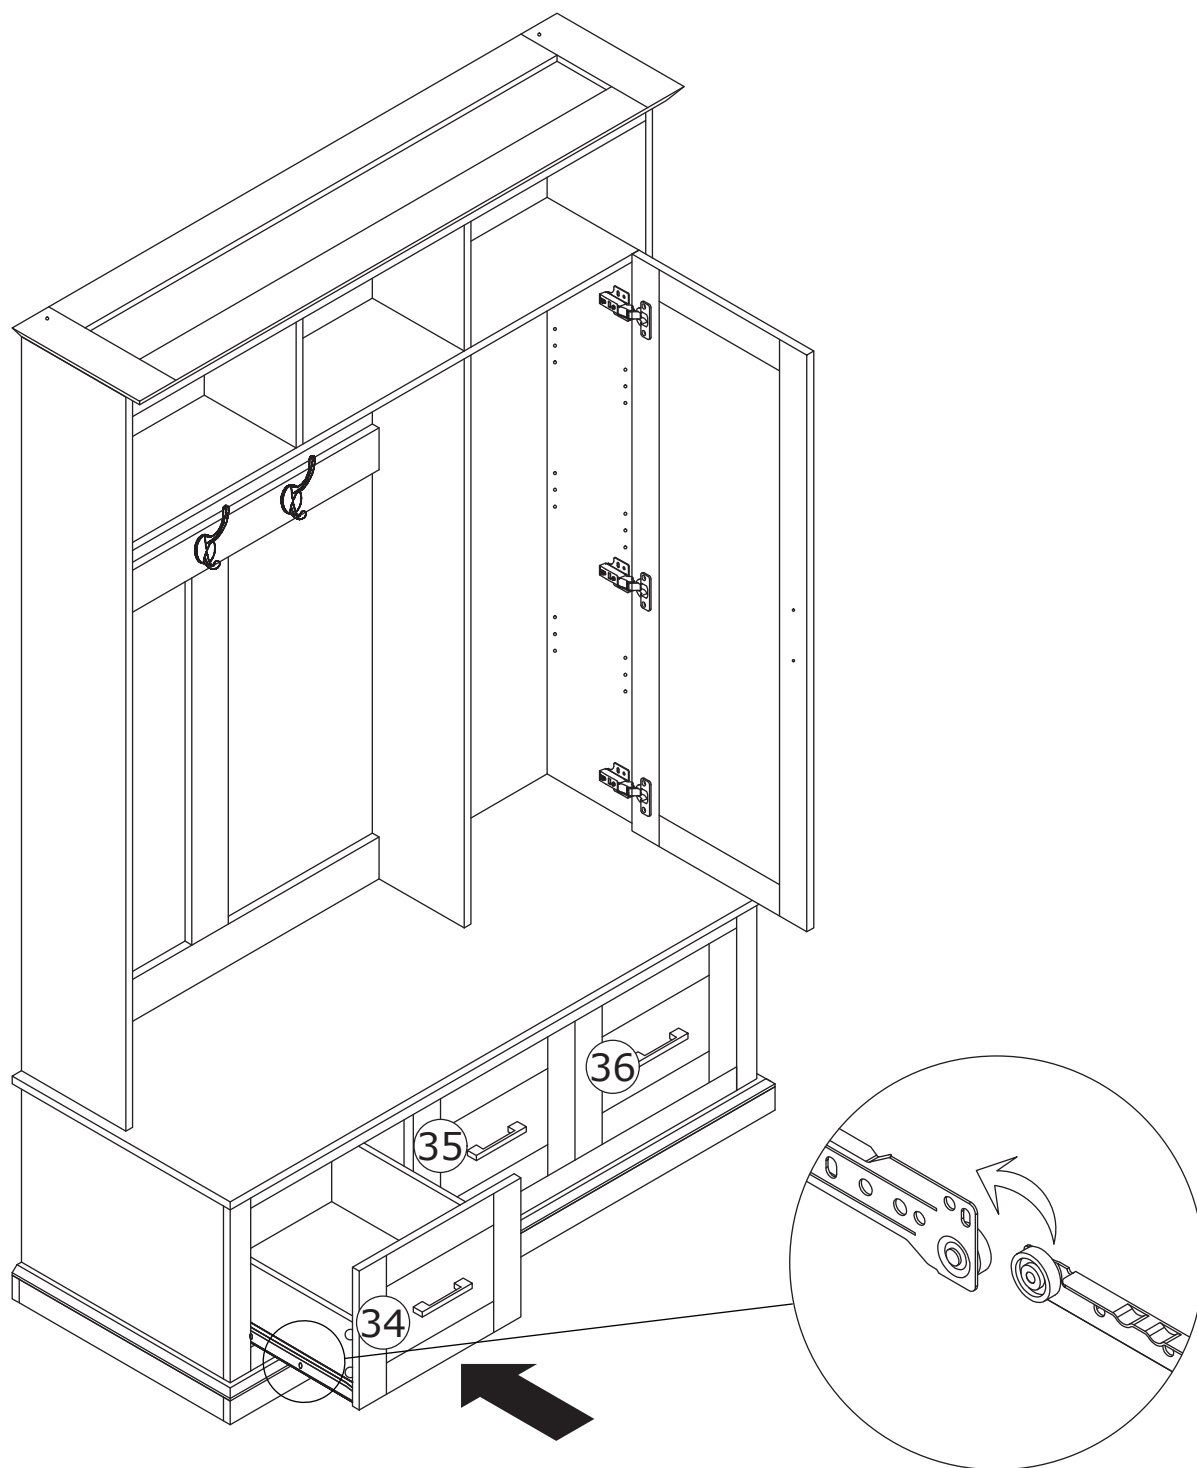


37









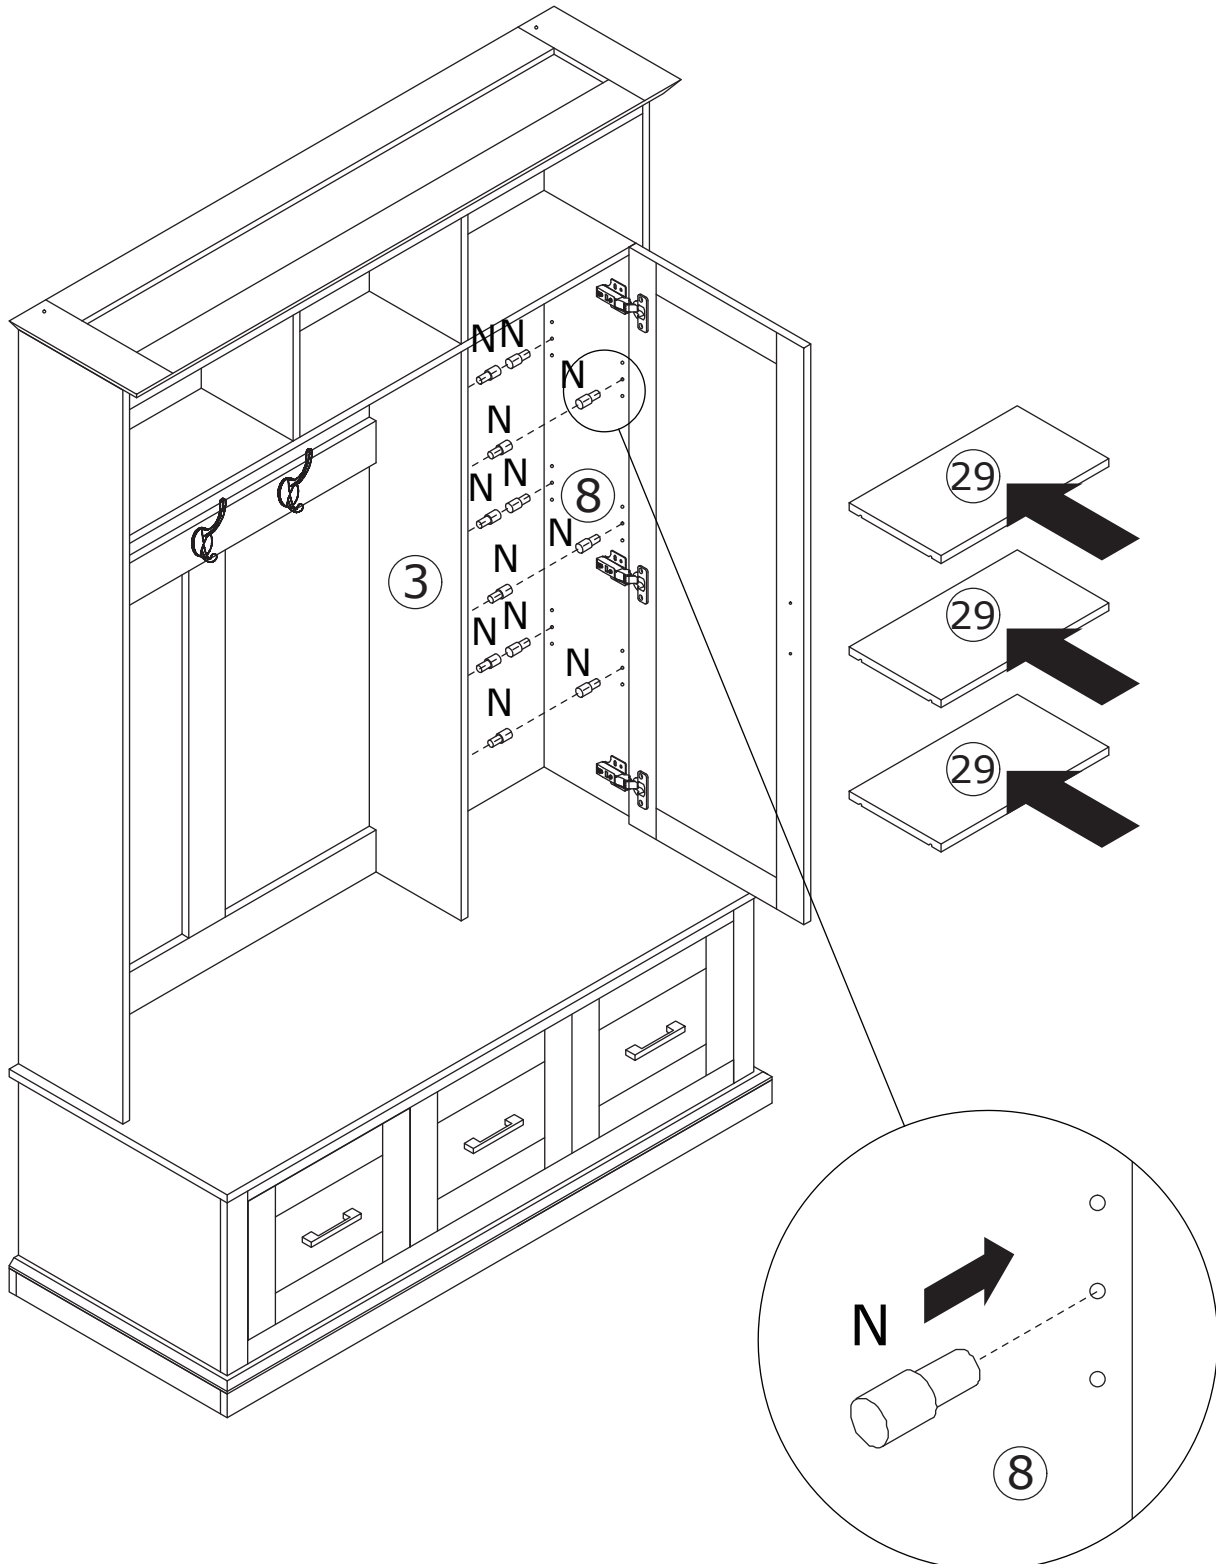 



N x 12

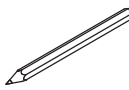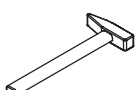


Secure the shelf tray (N) to parts 3 and 8 and place part 29.




38
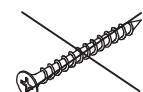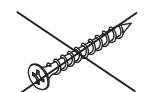
<p>D x 2</p>  <p>Ø 4 x 40 mm</p>	<p>T x 2</p>  <p>Ø 4 x 14 mm</p>	   			
<p>U x 2</p> 	<p>V x 2</p> 		<p>D</p>  <p>Ø 4 x 40 mm</p>	<p>G</p>  <p>Ø 4 x 50 mm</p>	<p>H</p>  <p>Ø 4 x 30 mm</p>

 
Install anti-tipping device as shown.

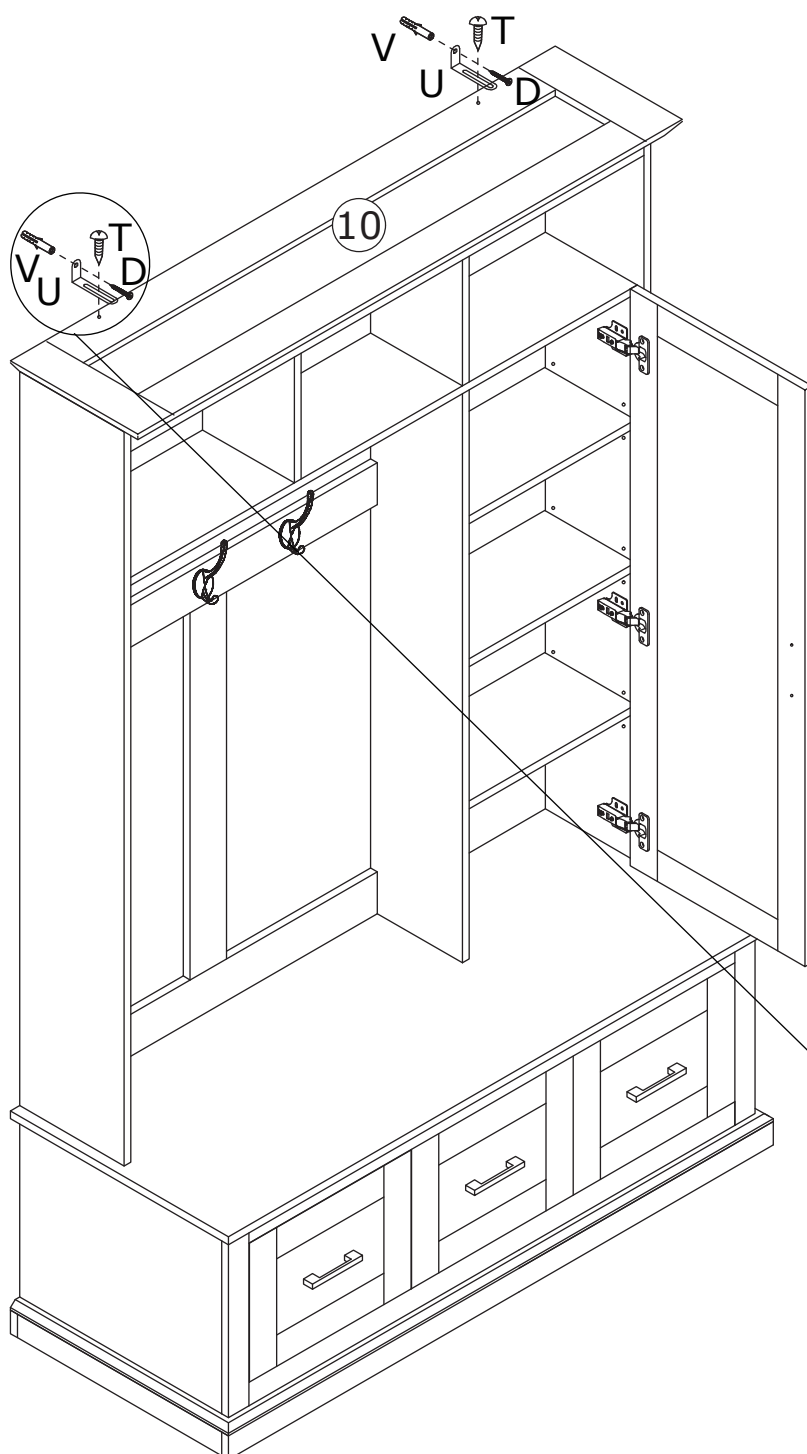

 
1.

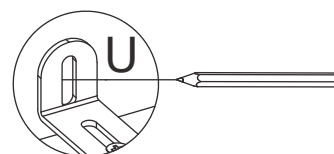


 
2.

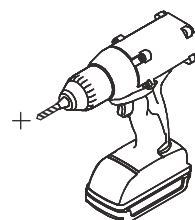


 3.

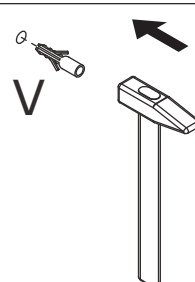

   4.

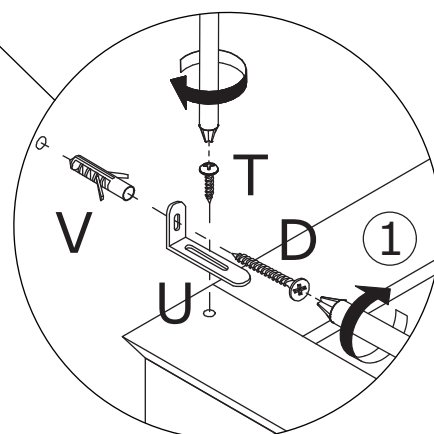
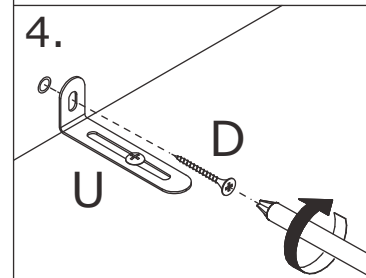





If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>


 
 
If there is misalignment after you install, adjust the screw to the best condition

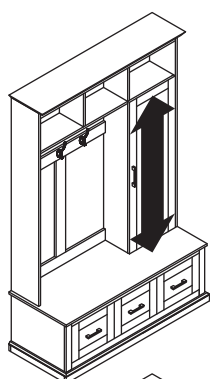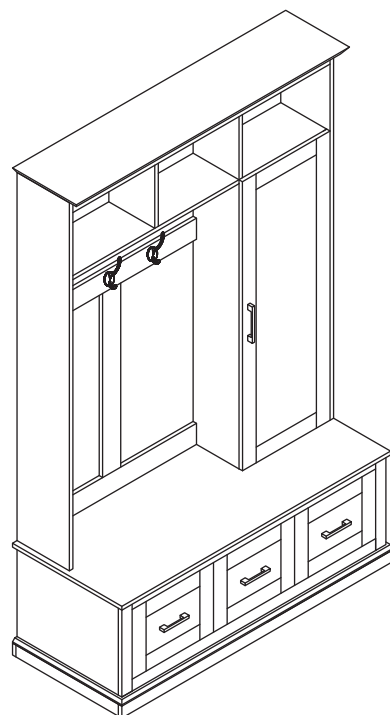


①

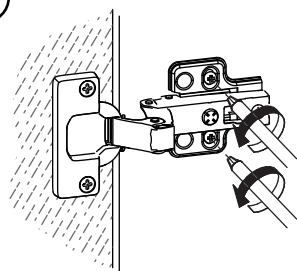 






②

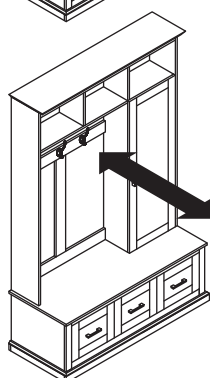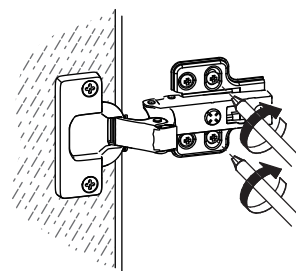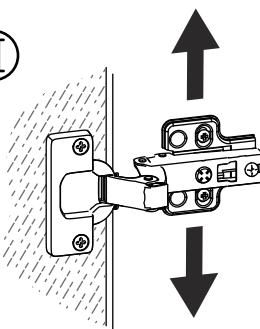   

①

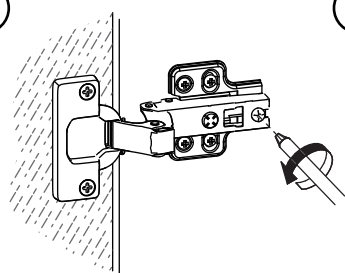 

②

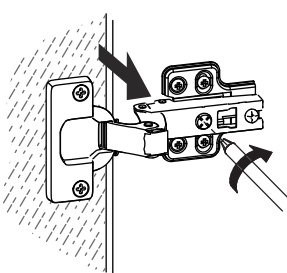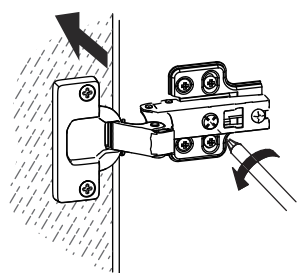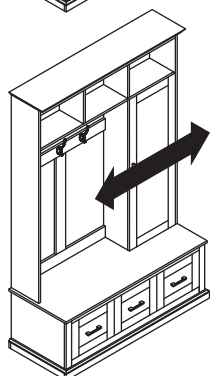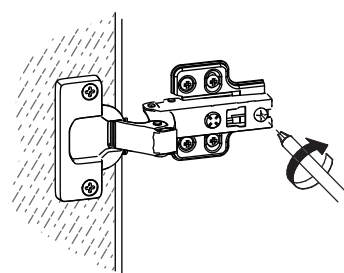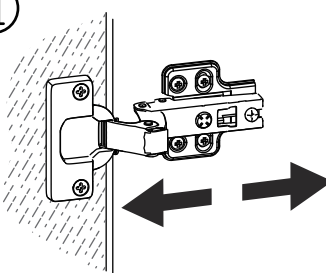     

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068