

INSTRUCTION MANUAL

OPT56 Smart Toilet

Thank you for choosing our product!

To ensure proper installation and safe use of your smart toilet, please read this manual carefully.


If you encounter any missing or damaged parts, please contact our customer service team.

Be sure to include your Order ID for faster service.

Customer Service Contact

✉ Email: support-cs@hkfoam.com

⌚ Response Time: Within 24 hours

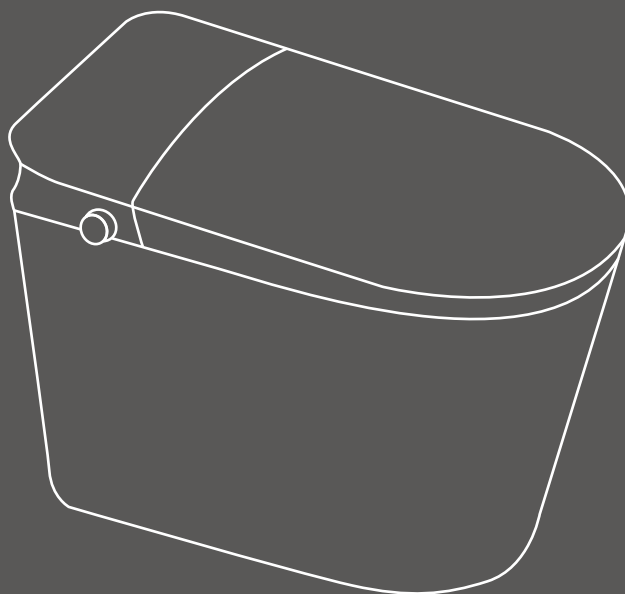


Catalogue

For any questions or support, please email: support-cs@hkfoam.com

Component name	02
Hardware lists	02
Safety directory	03
Initial inspection before use	03
Safety cautions	04
Please be sure to observe the following	04
Safety and prohibited matters	05
Important safety warning – regular testing of the leakage protection switch	07
Daily cleaning and maintenance	08
Foot sensor user guide	08
Instructions for using the knob on the side of the toilet	09
Seat pre-rinse & stand-up auto flush: on/off settings	09
Remote control installation steps	10
Remote control instructions	11
Common fault diagnosis	12
Installation steps for smart toilet	13
Battery replacement and installation for power outage emergency flush	17
Product standard.....	18

Component name

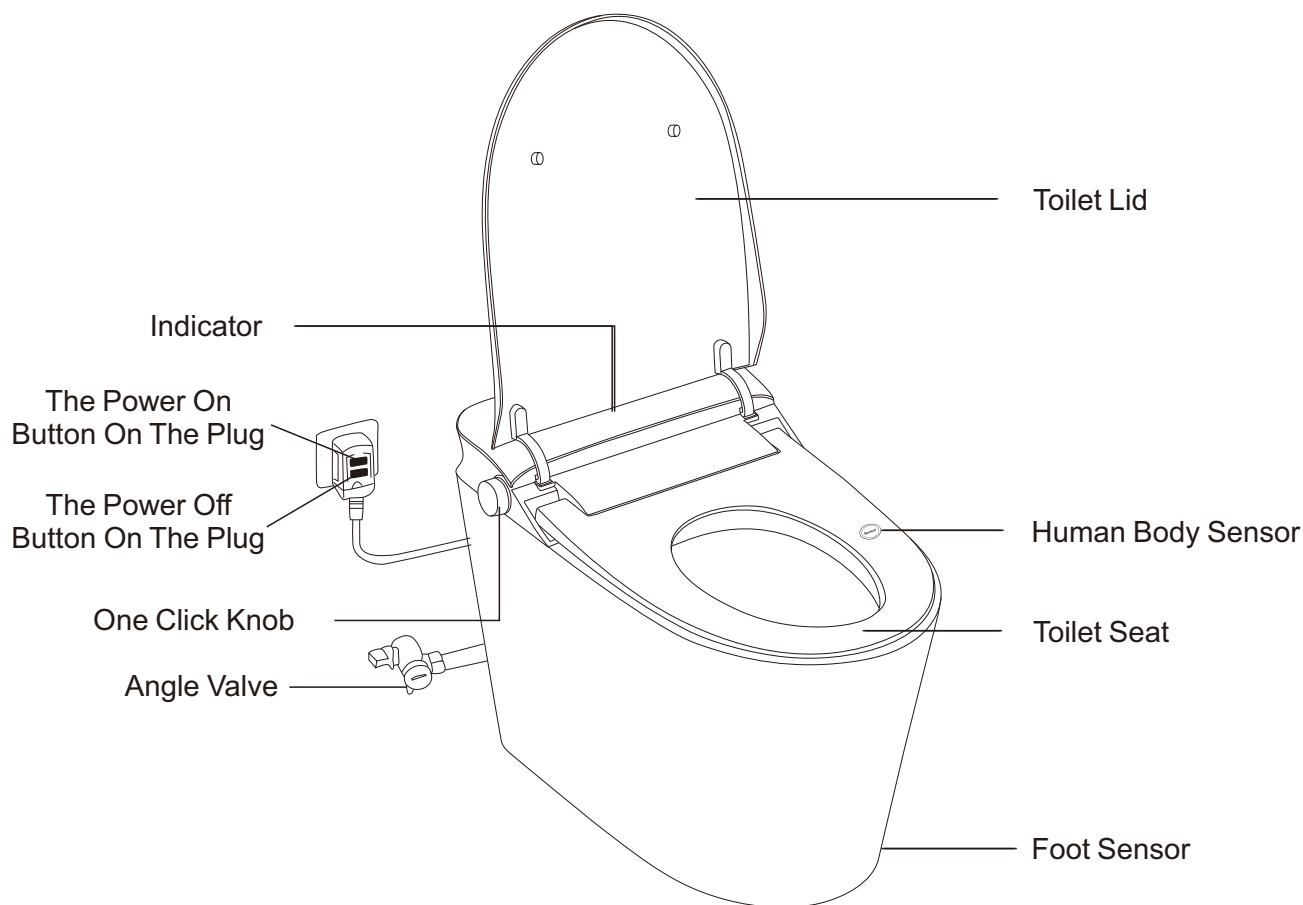

Hardware Lists

Please check if all accessories listed below have been received.

1pc	1pc	1set	1pc	1set	1pc	1set	1pc
							
flange ring	instruction	angle valve	3/8" female x 3/4" male adapter	remote control	fixed disk	fixed disk screws	Power outage emergency flushing battery box
A	B	C	D	E	F	G	H

The C angle valve (1/2") fits 1/2" non-threaded copper pipes (water pipes).
The D adapter fits 3/8" angle valves. Use whichever one matches your installation; both are not required.

Warning: To avoid electric shock ⚠

1. Do not place the product in damp or wet locations.
2. Do not drop the remote control into water.
3. Do not spray water onto the product or into the power outlet.


Warning: To prevent burns, electric shock, fire, or injury ⚠

1. Young children and users insensitive to temperature should be accompanied by others when using this product. Turn off or lower the seat temperature when necessary.
2. Use this product only as described in the manual. Do not connect other equipment.
3. Do not continue to use the product if it is malfunctioning, damaged, or has been exposed to water. Send it to an authorized service center for repair.
4. Ensure that the power cord and wires are not damaged or exposed to heat.
5. Do not use this product under the influence of alcohol, medication, or in an unstable condition.
6. Do not plug or unplug the product or hoses while in use.
7. Do not use outdoors.

Initial inspection before use

Note: To ensure the normal use of the product, please follow the instructions to text.


1. Insert the power plug into a 110V AC outlet.
2. Check that the indicator on the digital display panel is illuminated.
3. Check that the inlet valve is turned on.
4. Ensure that the hose between the wall angle valve and the toilet inlet valve is properly installed.

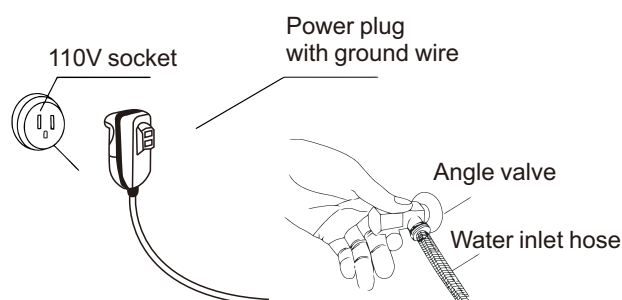

Caution: Items to Check Before Use

1. Check for water pipe leaks by wiping all connections with absorbent paper.
2. Press the seat near the seat sensor and check for a response sound.
3. Check that the damping structure operates normally.

Seating sensing position

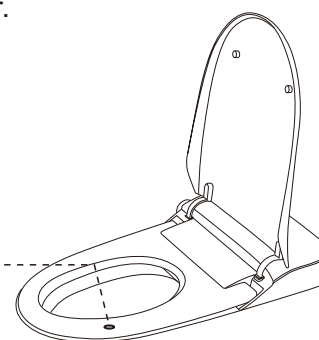

4. Verify that both the seat detection and foot detection functions are enabled.

Safety cautions

Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow. 

This product is an electrical appliance. Do not install it in locations where it may be splashed with water or exposed to high humidity. When used in a bathroom, ensure proper ventilation by installing a vent.

The power outlet should be installed as follows:

- The outlet must be positioned at least 11.8 in above the floor.
- Keep the outlet as far away from the bathtub as possible.
- The outlet circuit must be equipped with a high-sensitivity, fast-acting leakage protection switch (rated operating current ≤ 15 mA), or be protected by an insulated transformer with a capacity of 1.5–3 kVA.

Warning - Be sure to firmly connect ground wires

This product uses a three-prong plug (with ground wire).

Risk of electric shock may occur in case of fault or electrical leakage.

If the wall outlet does not provide a ground connection, contact a licensed electrician.

Use only AC 110V power supply, and ensure wiring complies with relevant regulations.



Proper grounding of this product is required.

Without grounding, there is a risk of electric shock.

Note: Proper grounding means that the grounding resistance must be below 100 Ω , and the grounding wires of the switchboard must be copper wires with a diameter of at least 1.6 mm.

When installing in a bathroom, ensure that the power plug is sealed with silica gel for waterproofing.

Using the wrong power supply may cause a fire.

Please be sure to observe the following

- Do not allow urine to splash onto the nozzle.
- Unplug the unit during thunderstorms.
- Do not flush the unit directly with water.
- Do not wipe the seat or cover with rough cloth or toilet paper. Use a soft damp cloth instead.

 
Please do not open the seat ring or cover violently.
- May cause cracking or malfunction.



Please take antifreeze measures by freezing.



Please do not put heaters near this product.
- Discoloration or malfunction will occur.



Safety and prohibited matters

Note: please cautiously read before using

Please read carefully before using.

The cautions listed here are related to safety and please follow.



Must obey

Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time.
- Please set the temperature to room temperature when the following persons use the seat to dry gently.
 - Children, the elderly, the sick, the disabled, etc.
 - People who take sleeping pills, get drunk and get overtired.

Do not use any power source other than AC 110V

- It may start a fire

Keep cigarettes and other flammable objects away from the product

- It may start a fire

Please don't sprinkle water or rinse on product essence or the power plug

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor seepage.

When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use

Please do not flush other items except for urine and feces

- May cause then block, sewage outside over flows

Do not unplug the power plug with wet hands

- It may cause electric shock

Do not distort or damage the water inlet

- It may cause a leak

Do not use loose and unstable power sockets

- It may cause fire or electric shock



Prohibit

Do not continue to use the product when it breaks down

When the following occurs, please unplug the power plug, close the inlet angle valve stop the inlet.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged
- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems

Do not damage the power cord or toilet seat cable

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line
- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair

Do not disassemble, repair or transform the product without permission

- It may cause a fire or electric shock

Do not use extension wires. Otherwise, it may cause a fire or electric shock

- Do not connect wires or use extension cords, which may cause fire and electric shock.


Do not install the power adapter /control unit in wet areas of the bathroom (such as the shower or sink)

- This may result in fire or electric shock

Do not use unhealthy water

- May cause skin irritation and other problems

Important safety warning – regular testing of the leakage protection switch

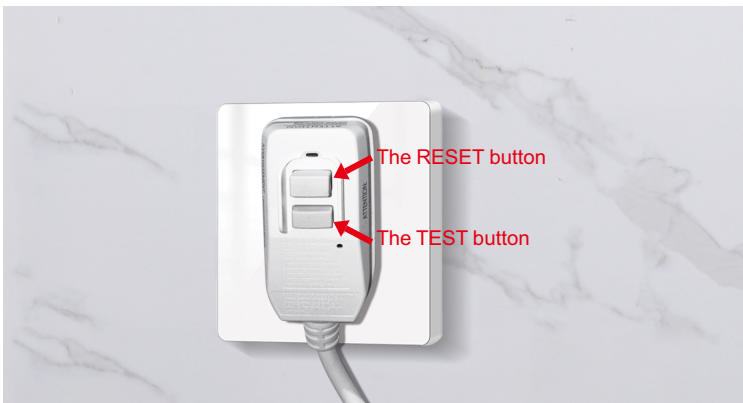

1. Importance of Testing

To ensure your safety, the leakage protection switch (hereinafter referred to as the “protection switch”) equipped with this product must always remain in proper working condition. Regular testing is the only way to verify that it functions effectively. We strongly recommend testing it at least once a month.

2. How to Test — Please follow these simple steps:

- ① Make sure the plug is connected to the power supply (plugged into an outlet and powered), but the unit does not need to be turned on.
- ② Firmly press the RESET button on the plug to connect the power.
- ③ Firmly press the TEST button on the plug. You should hear a clear “click,” and the switch’s trip mechanism will immediately activate, cutting off the power (the RESET button will pop out to the “OFF” position).

3. How to Interpret the Results

- ① If the switch trips normally: The leakage protection function is working correctly. After the test, press the RESET button again to restore normal power supply.
- ② If pressing the TEST button does nothing and power is not cut off: Stop using this product immediately! This indicates that the leakage protection function has failed, and continued use poses a risk of electric shock. Disconnect the appliance from the power supply at once and contact our after-sales service center or a licensed electrician for inspection or replacement.

4. Notes

- ① This test takes only a few seconds—please make it a regular habit.
- ② The test simulates a leakage scenario (such as electric shock) to verify the switch function. It will not damage the appliance.
- ③ This test allows users to confirm that the switch is working, but it does not replace a professional safety inspection by a qualified electrician.


Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.
- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.
- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.

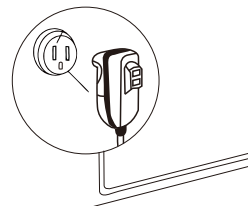

Unplug the power supply before maintenance



Must obey

Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.
- Poor insulation may cause a fire.

Foot sensor user guide


Note: Please read the following carefully before use

Flushing by foot sensor

Put you foot close to the foot sensor to activate the flushing
(Manual Seat Version)



Instructions for using the knob on the side of the toilet

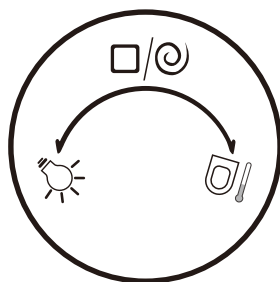

Power on/off:

Press and hold this knob for 3 seconds to power the toilet on or off.



Toilet flushing:

1. Press this knob to trigger toilet flushing.
2. In case of power failure, press and hold the knob for 3 seconds to activate the flushing function.

(Note: This function is only available after installing the backup battery for emergency flushing during power outages.)



Light adjustment:

Seated state: Rotate the knob counterclockwise once to switch the ambient light on or off.
Unseated state: Rotate the knob counterclockwise once to switch the night light on or off.



Toilet seat temperature adjustment:

Rotate the knob clockwise to adjust the toilet seat heating temperature; each clockwise rotation raises the temperature by one gear.

Temperature Gear Prompt Tone Standard

1. Single beep (di) → Gear 1: Room temperature (no heating)
2. Double beeps (di, di) → Gear 2: 93°F
3. Triple beeps (di, di, di) → Gear 3: 99°F
4. Four beeps (di, di, di, di) → Gear 4: 104°F

Seat Pre-Rinse & Stand-Up Auto Flush: On/Off Settings

1. Pre-rinse function (wet wall) - on/off setting instructions:

The pre-rinse (bowl pre-wetting) function works as follows: once you sit down on the toilet seat, the toilet will automatically spray a small amount of water to pre-wash the inner bowl wall, which effectively prevents dirt from adhering to the glaze. This function is factory-disabled by default. Follow the steps below if you need to turn this function on or off:

To enable the pre-rinse function:

Turn the side knob clockwise and hold it for 5 seconds. Two consecutive beeps (di-di) will sound to confirm the pre-rinse function is activated.

To disable the pre-rinse function:

Turn the side knob clockwise and hold it for 5 seconds. A single beep (di) will sound to confirm the pre-rinse function is deactivated.

Note: One beep (di) means the seat pre-rinse feature has been disabled. Two beeps (di-di) means the seat pre-rinse feature has been enabled.

2. Auto-flush when leaving the seat - on/off setting instructions:

Auto-flush upon leaving the seat function: This function will trigger automatic toilet flushing after you sit on the seat and stand up upon finishing use. This feature is enabled by default at the factory. If you wish to disable or re-enable this function, please follow the steps below:

To disable the auto-flush upon leaving function:

Turn the side knob counterclockwise and hold it for 5 seconds. A single beep (di) will sound to indicate that the stand-up auto flush function is disabled.

To enable the stand-up auto flush function:

Turn the side knob counterclockwise and hold it for 5 seconds. Two consecutive beeps (di-di) will sound to indicate that the stand-up auto flush function is enabled.

Note: One beep (di) means the auto-flush upon leaving feature has been disabled. Two beeps (di-di) means the auto-flush upon leaving feature has been enabled.

Remote control installation steps

1. Install the batteries

- Open the remote control cover and insert two AAA batteries into the remote control.
- When installing the batteries, make sure the polarity is correct and do not insert them backwards.
- Do not use old and new batteries together, or mix different types of batteries.
- If the remote control will not be used for a long period of time, please remove the batteries.

2. Confirm the installation position of the remote control

- While sitting on the toilet seat, confirm that the remote control will be installed in a convenient location.

3. Install the remote control back cover on the wall

- Tear off the 3M adhesive backing, stick it onto the back cover of the remote control, and then attach it to the dry, positioned tile.

4. Install the remote control

Align the remote control with the back cover, rotate it counterclockwise, and the installation will be completed.

Remote control instructions

Note: Please read the following carefully before use

Note: The remote control does not come with batteries. Please install two AAA batteries before use.



Remote Control Pairing Instructions:

If none of the buttons on the remote control respond when using it for the first time, you will need to pair the remote control with the toilet. Follow the pairing steps below:

Step 1: Press the (TEST) button on the plug leak protection device to turn off the power.


Step 2: Press the (RESET) button on the plug leak protection device to turn the power back on.



Step 3: Within 5 seconds after power is restored, rotate and hold the toilet side knob counterclockwise toward the night light position for 5 full seconds. Release the knob once you hear one single beep (di).

(Note: Two timing requirements must both be satisfied for this operation to work, neither can be omitted:


- ① Complete the operation within 5 seconds after power-on;
- ② Hold the knob continuously for 5 seconds.)

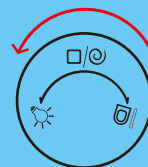

Step 4: Immediately press any button on the remote control once. If you hear another single beep (di) from the toilet, it means the remote control and the toilet have been successfully paired.

(Note 1: After hearing the beep in Step 3, you must press the remote control button immediately – do not wait too long.

Note 2: Press the button only once, do not hold it down, otherwise pairing will not succeed.)

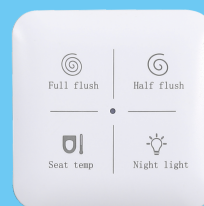

For operation videos, please contact us via email: support-cs@hkfoam.com



Full flush

Press the (Full flush) button to start a full flush of the toilet.



Half flush

Press the (Half flush) button to start a half flush of the toilet



Seat temp

Press the (Seat temp) button to adjust the toilet seat temperature, which can be adjusted in 4 levels. The first level is normal temperature, the second level is 93°F, the third level is 99°F, and the fourth level is 104°F.



Night light


When not seated, press the (Night Light) button to turn on or off the night light inside the toilet. When you sit on the toilet seat, press the (Night Light) button to turn on or off the ambient light on the toilet lid.

Common fault diagnosis


Note: If similar fault is found, please read the following solution or contact after sales

Fault phenomenon	Fault analysis	Fault handling
Product unavailable	Check to see if the power/socket is loose	Please check the circuit
	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the toilet still cannot be operated, please unplug the power plug and entrust the repair
Misoperation of remote control	Check whether the battery level of the remote control is too low	Please replace the battery
Seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction
	Check whether the unit is in energy-saving mode	Please refer to the manual to adjust the seat temperature using the remote control
Seat/cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians
Low water pressure does not flush clean	Filter mist blocking	Clean the filter according to the instruction
	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth
No siphon flushing is not clean when water pressure is normal	Air escapes from the sewage outlet	Please get professional maintenance technicians
	The S-bend is blocked	Please buy water pipe dredger in the market for dredging
Poor flush performance with normal water pressure	Flush valve failure	Ask professionals for maintenance

Installation steps for smart toilet

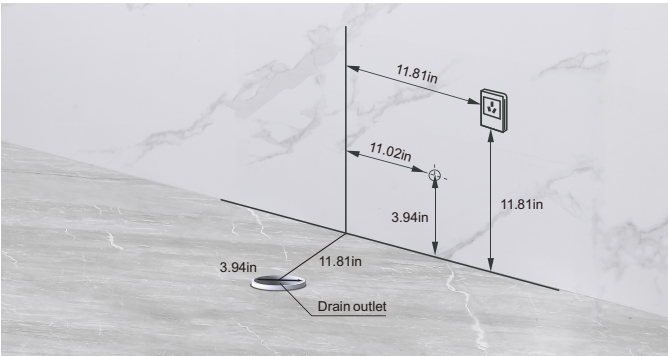

The confirmation of the installation environment.

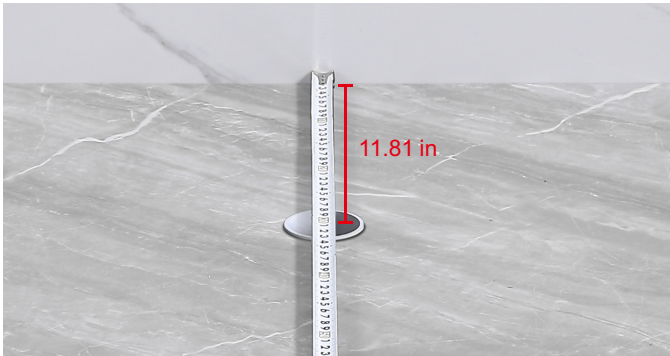

1. The confirmation of the installation environment:
The measurement distance is 11.81 in or greater.



2. Place the fixed disk into the drain outlet and mark the screw hole positions.



3. Take off the fixed disk and drill four holes for screws.



4. Put the screws into the holes.

Corresponding to the following accessories/quantities:



5. Place the fixed disk into the drain outlet and tighten the screws to secure it.



Corresponding to the following accessories/quantities:





6. Install two long screws as shown in the picture below.

Corresponding to the following accessories/quantities:

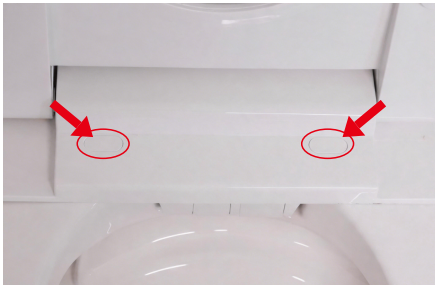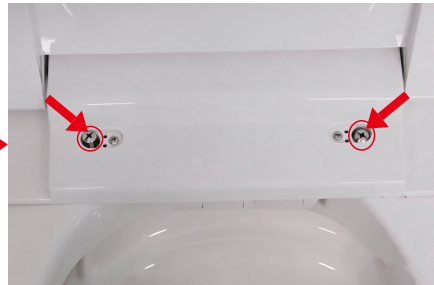

7. Remove these two white gaskets, loosen the two large screws, then lift up the toilet seat cover.



8. Remove the entire toilet cover assembly, unscrew the metal water inlet hose, and disconnect the black sensor wire.



9. Gently turn the toilet over to access the base and install the flange ring.



10. Apply a layer of silicone sealant to the base of the toilet.

(The silicone sealant adhesive in the picture needs to be purchased by oneself.)



11. Move the toilet to the location where it will be installed.



12. Make sure two holes in the bottom of the toilet align with the two long screws in the fixed disk, then install it.

Corresponding to the following accessories/quantities:



13. Put the toilet seat in the toilet and reconnecting the flexible tube and the black wire.

Important: When reconnecting the hose, be sure to tighten it securely. If it is not fully tightened, water leakage may occur.







14. Reattach the lid to the toilet, tighten the two large screws for fixation, then put the white gaskets back on.





15. Apply some silicone sealant to fix the toilet and insulate the outside dirt from entering.
(The silicone sealant adhesive in the picture needs to be purchased by oneself.)

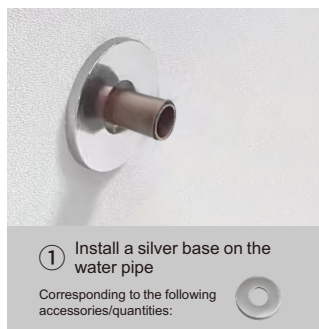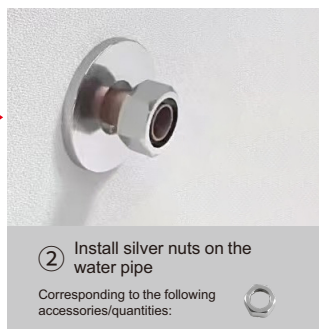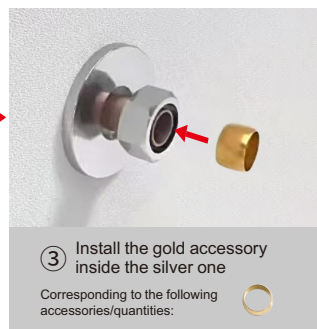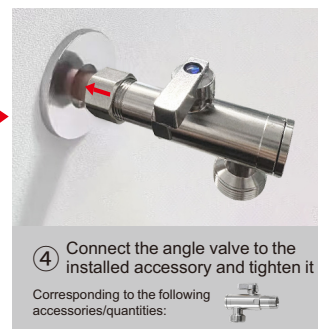


Our supplied four-piece angle valve kit is suitable for 1/2" non-threaded copper pipe (water pipe). If you have already installed your own angle valve and its connection size is 3/8" male thread, please install the included 3/8" female x 3/4" male adapter. For the installation method, please refer to the separate angle valve installation manual.



16. Finally connecting the flexible tube to the inlet angle valve and turn on the angle valve switch.

Important:

1. If the angle valve leaks after installation, tighten it again. If necessary, wrap several turns of PTFE tape around the threads to prevent leakage (PTFE tape is not included and must be purchased separately).
2. If the water pressure is too high and water splashes over the toilet seat when flushing, slightly close the angle valve to reduce the water flow.

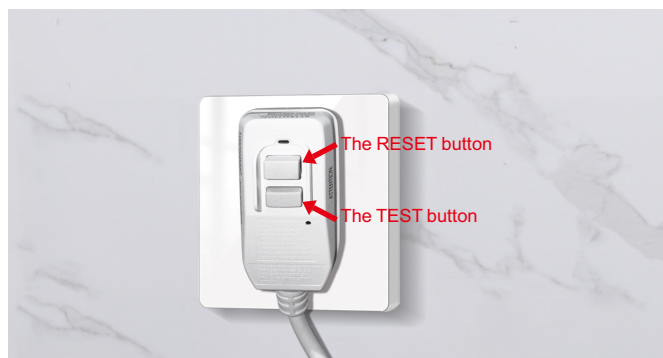

17. Plug in the power supply, press the (RESET) button forcefully. Release the button when you hear a (di) sound. If the toilet display remains constantly on, it indicates that the power has been successfully turned on. Press the (TEST) button to turn off the power.

Battery Replacement and Installation for Power Outage Emergency Flush

If the entire toilet loses power, you may install a backup battery for emergency flushing.


Note: A 9V backup battery needs to be purchased separately for initial installation; when the battery runs out of power, replace it with a new one following the installation steps below.



Step 1. Put the 9-volt battery into the battery box.




Step 2. Cut off the power supply and find the power outage flushing wire interface behind the toilet.

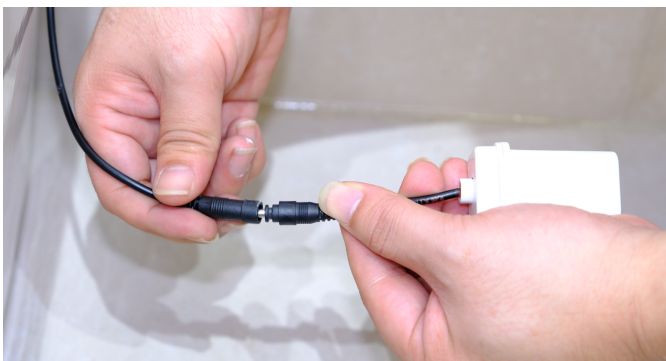

Step 3. Connect the 9V spare battery to the toilet's connection cable and place the battery in a dry area behind the toilet.

Note: When power is cut off, fit the backup battery to flush. Press and hold the side knob of the toilet for 3 seconds to activate flushing.

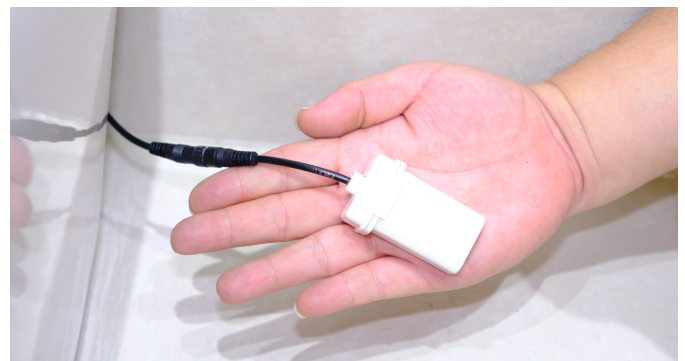

Product standard

Dimensions	68*39*45CM	
Rated voltage	Alternating voltage 110V±10%, 60HZ	
Seat heating	Seat temperature	Normal temperature, and 93°F/99°F/104°F(4 levels)
	Heater power	45W
Water pressure (without water tank)		Water pressure requirements: 0.15-0.75Mpa (static pressure), that is, filling 5L of water in 15 seconds means that the water pressure is sufficient.

For any questions or support, please email: support-cs@hkfoam.com

Due to different printing time of the materials, the product specifications may be slightly changed.
Please refer to the material object.