



# OWNER'S MANUAL

**Model No.:**            **A20-086**



**Read and follow all instructions  
before using this product.  
Save these instructions.**

## TO OUR CUSTOMERS:

Thank you for using Outsunny camping set. Our mission is to design and manufacture the finest products with materials of the highest quality and production process in order to meet your demands.

## WARNING:


1. The camping bed should be assembled and disassembled by adults only.
2. Children should be supervised at all times.
3. Do not install or use the camping bed under adverse weather conditions such as rain, hail, sleet, snow, drizzle, lightning, strong wind, etc.
4. Place the camping bed on a solid and level ground.
5. Keep away from fire and heat sources.
6. To avoid finger entrapment, assemble and disassemble the camping bed carefully.
7. The camping bed is designed for a maximum load of 250 lbs ( 114 kg) . Do not overload.
8. Do not jump on the camping bed. This is not a trampoline.
9. Make sure the camping bed is dry before storing in a safe place indoors.

**TO AVOID PROPERTY DAMAGE OR SERIOUS INJURY,  
FOLLOW ALL THESE INSTRUCTIONS .**

## PARTS REFERENCE:

**NOTE: Illustrations are for your reference only. It may not reflect the actual product.**


REF.NO.	QTY
A-1	1
A-2	2
A-8	1
A-9	1
A-10	4
A-11	1

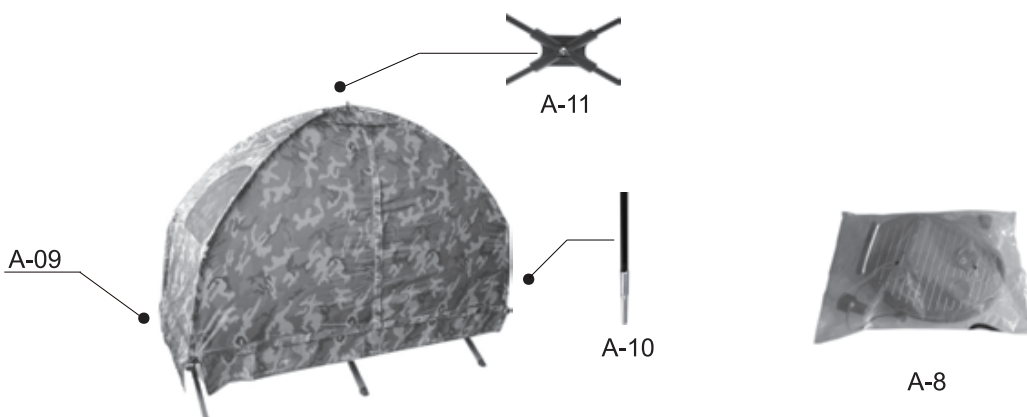


## ASSEMBLY INSTRUCTIONS:

**WARNING: Be careful during the assembly process, or you may get hurt.**

### Camping Bed Assembly

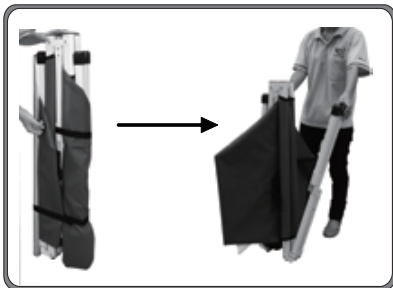


1. Unfasten the velcro straps and put the two bars aside.

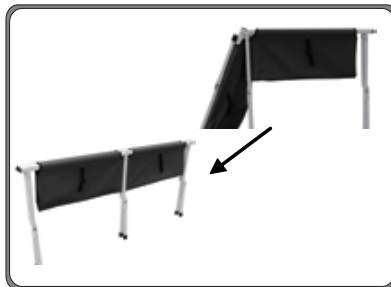


2. Unfold the legs of the camping bed and stand them on a solid & level ground.



3. Expand the legs.

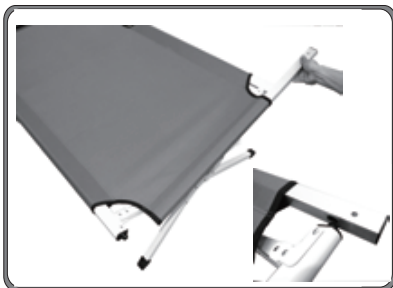

4. Insert the bar into one end of the bed sheet and follow the picture to assemble.

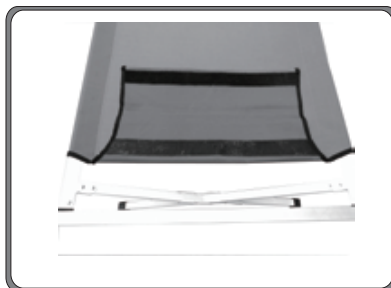

5. Follow the picture to assemble another end of the bar as step 4.



6. Then attach the velcro around the bar.  
v

### Tent Assembly

