# 2-PERSON SWING CHAIR

# - OWNER'S MANUAL -




# Hello, Thank you for choosing Let's get started

#### **O** PURCHASER'S AGREEMENT

By accepting delivery of this product, you promise that you will not change, alter, or modify this product or remove or render inoperable or unsafe any guards, shields or other safety features of this product. You will not refuse or neglect any retrofit kits that may provide to enhance and preserve the safe use of this product.

# **CONTENTS**

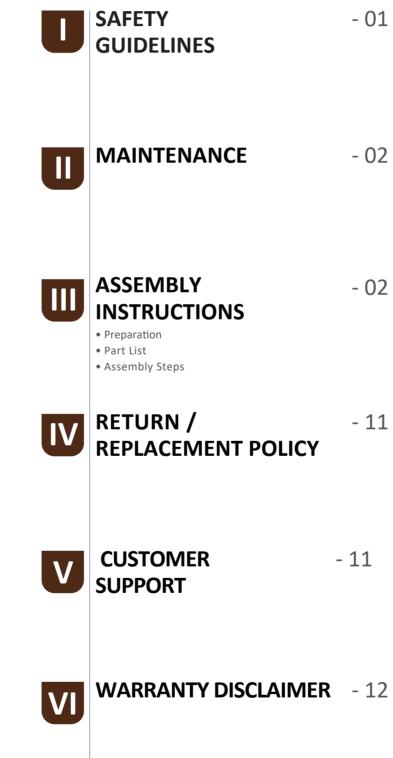

# **I. SAFETY GUIDELINES**

WARNING

For your own safety, please strictly follow the instructions in this manual, otherwise personal injury may result!

#### Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches,

laundry lines, or electrical wires.

• Tighten all nuts and bolts securely.

Never use power tools or excessive force during assembly and tightening of bolts.

- Always place the product on a flat, steady and stable surface.
- It is recommended to protect in case of strong wind or rain and in your absence.
- Do not use candles, matches, or any open flames in or near the swing.

# **II. MAINTENANCE**


- Wash frame parts and fabric with mild soap and water, rinse thoroughly.
- Dry frame completely and allow the fabric to drip dry.
- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.


## **III. ASSEMBLY INSTRUCTIONS**


#### Preparation 1.

Please remove all protective foam.Before assembling, make sure that you lay out and identify all parts listed below in the parts list. install on level ground.

## 2. Part List

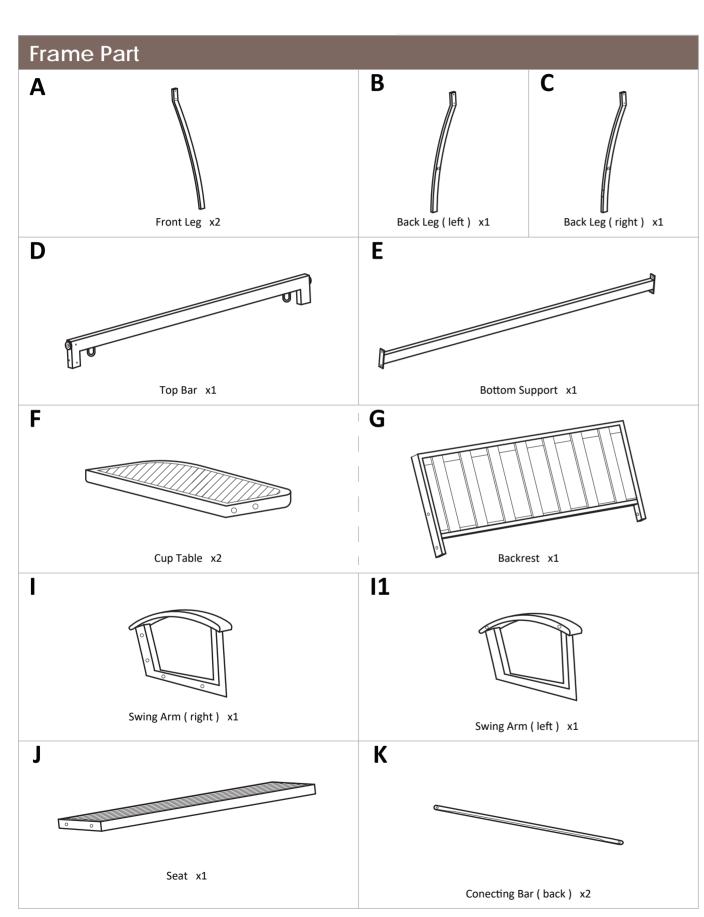

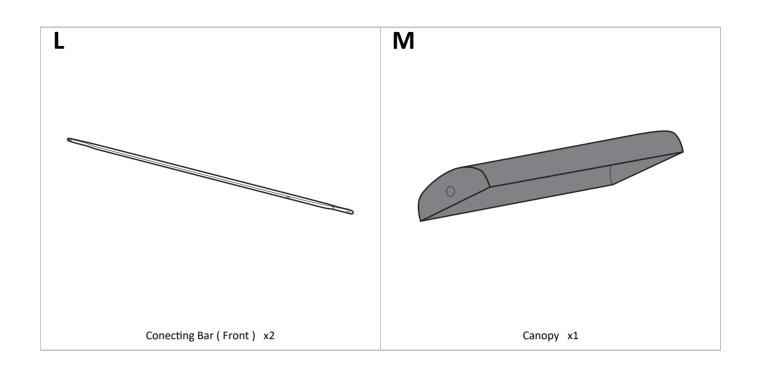

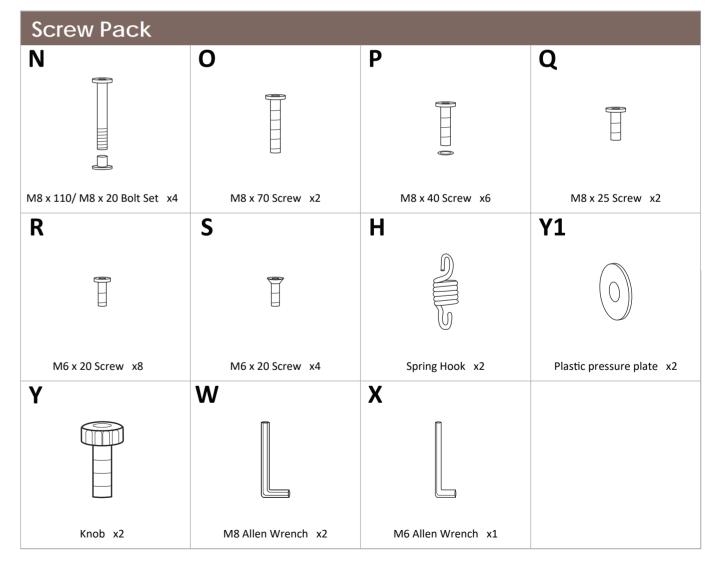



## 3. Assembly Steps

(2). Connect **#B** , **#C** and Bottom Support **#E** by screws **#S**.

### Step1 - Frame Assembly


(1). Connect Front Leg **#A**, Back Left Leg **#B**, Back Right Leg **#C** and Top Bar **#D** by four sets of bolts **#N**.

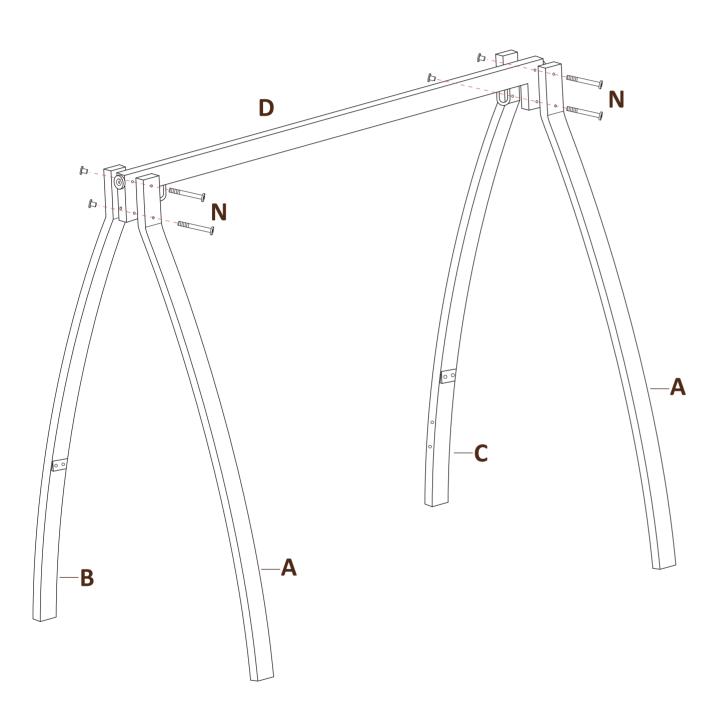

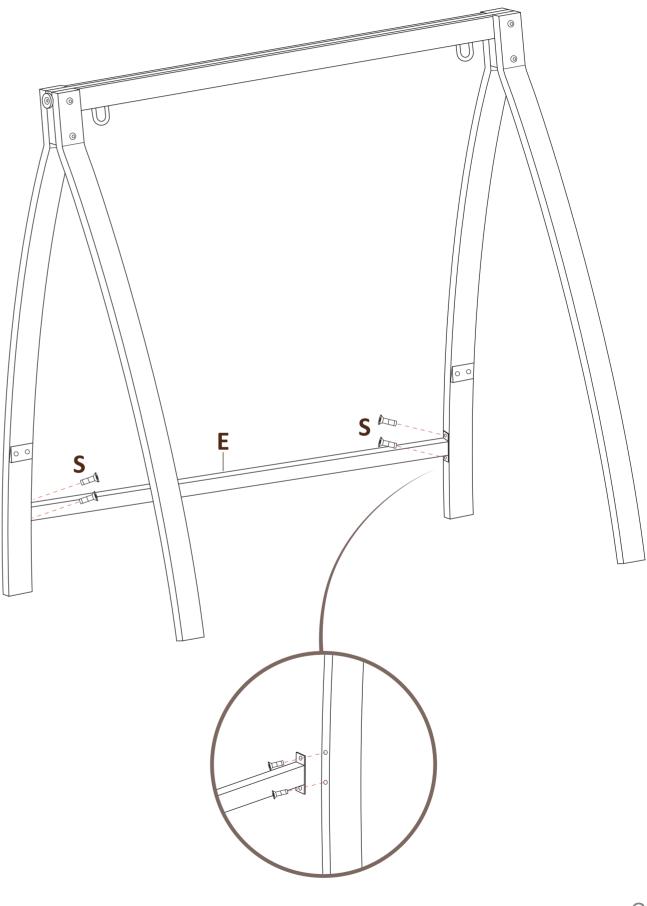




(3). Connect Cup Table **#F**, **#A**, **#B** and **#F**,**#A**, **#C** by screws **#R**.

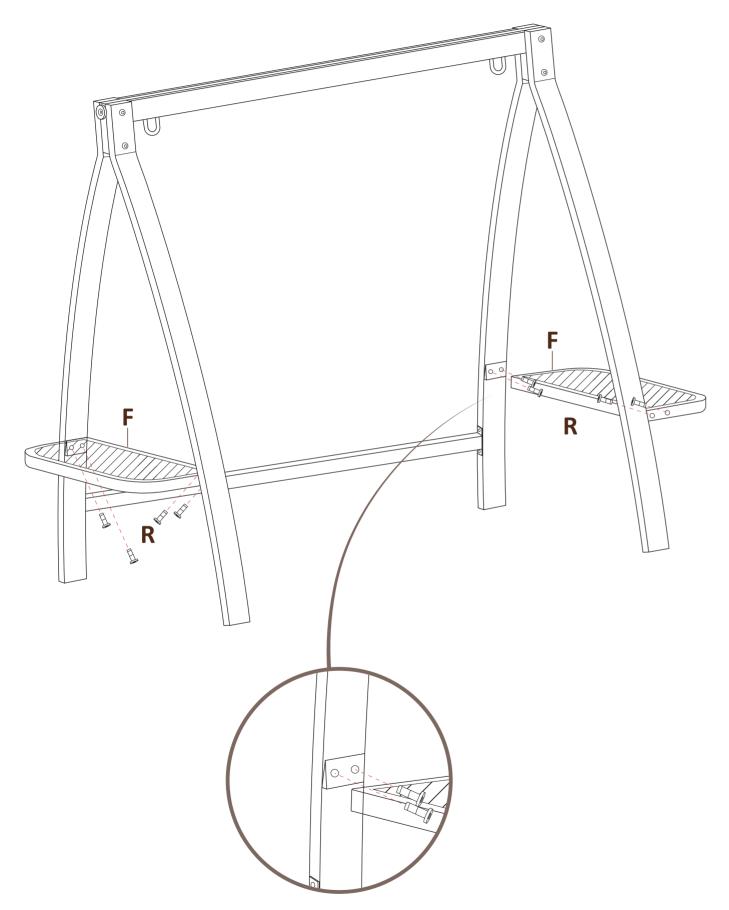



### Step2 - Seat Assembly

(1). Connect Seat #J , Swing Arm #I, #I1 and Backrest with screws #P.

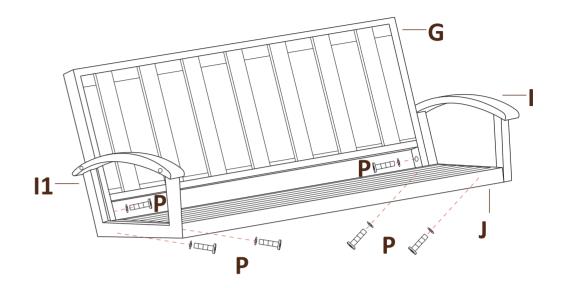

(2). Connect Front Conecting Bar **#L** to Swing arm with screws **#Q**. Connect Back Conecting Bar **#K**, Swing arm and Backrest with screws **#O**.

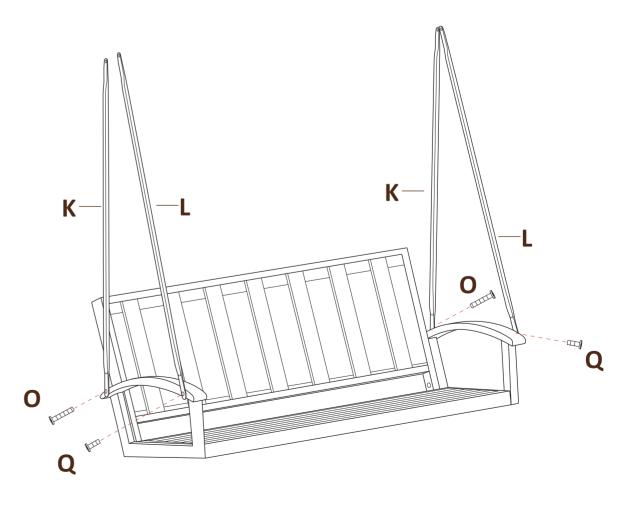

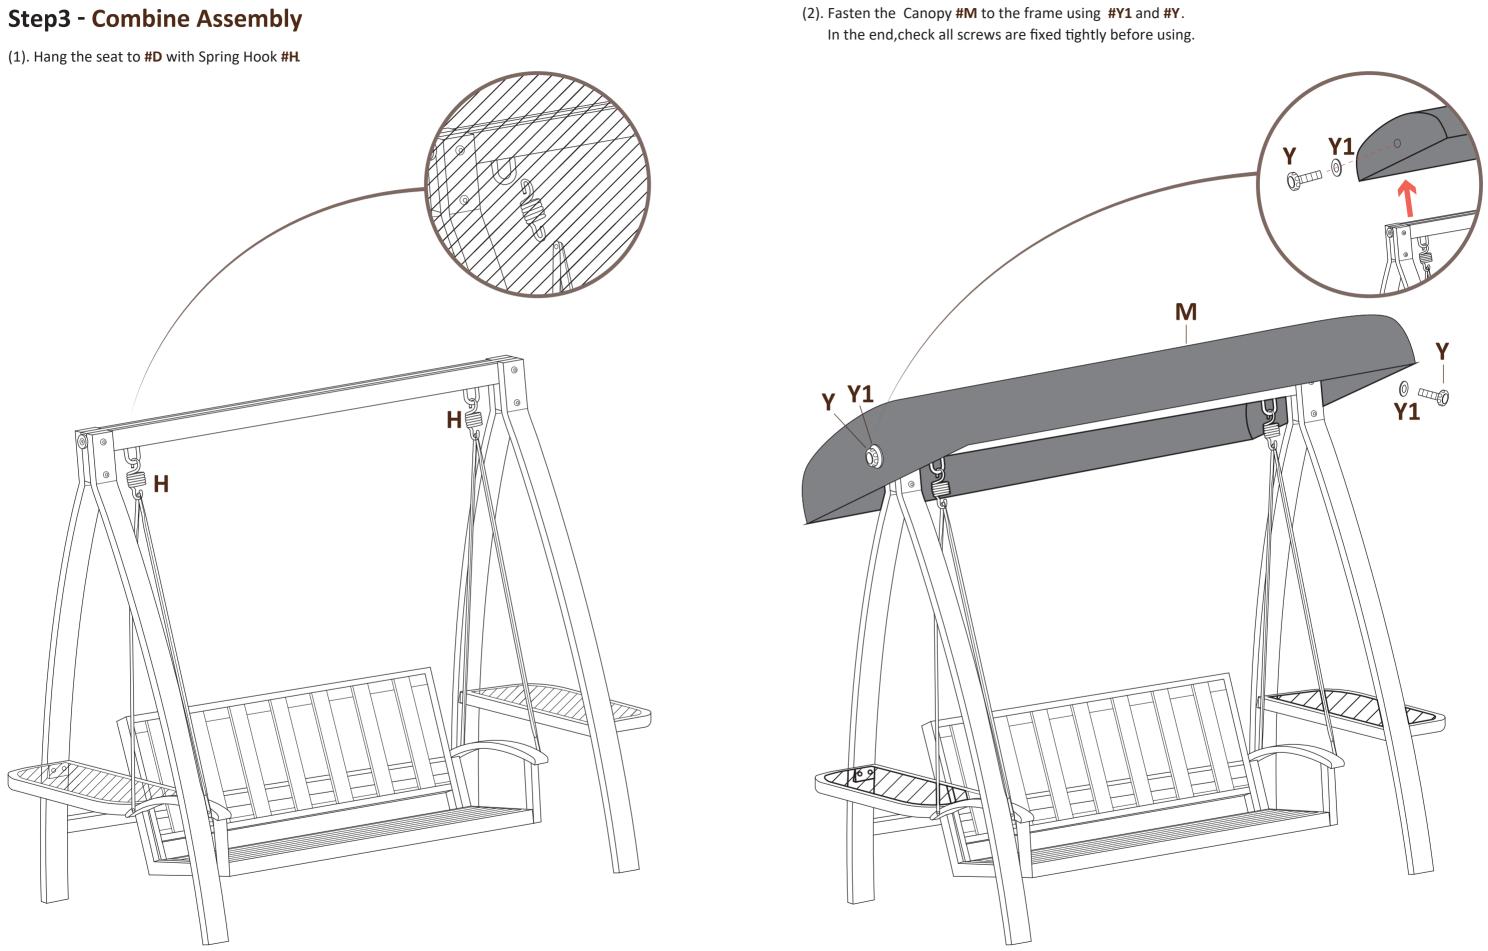

# **IV. RETURN / REPLACEMENT POLICY**

You have 30 days from the date of purchase to return any item purchased from our store. Please securely pack the item in its original packaging, including any accessories or manuals that came with the product. To initiate a return, please contact our customer service team for any help.

#### **Return Conditions**

We accept the return of items that are in new, unused condition, with original tags attached and all original packaging and other components included. Refunds will be issued in the original form of payment for the price of the item, including taxes.

## V. CUSTOMER SUPPORT

If for any reason, we have fallen short of your expectations, or if you have any questions and suggests, please refer to the following contact information, we will do our best to work with you to make sure you are entirely satisfied.

# **VI. WARRANTY DISCLAIMER**

Thank you for your interest in the products and services .

This Limited Warranty applies to physical goods, and only for physical goods, purchased.

#### What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period.

During the Warranty Period, we will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

#### 2. How long does the coverage last?

The Warranty Period of Physical Goods purchased from us refers to the table below.

A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 180 days from the date of replacement or repair, whichever is longer.

Swing Frame

Swing Fabric

#### This Limited Warranty does not cover any problem that is caused by:

Conditions, malfunctions, or damage not resulting from defects in material or workmanship.

To obtain warranty service, you can contact us to determine the issue and the appropriate solution for you. Before this you can take some photos of your product and send them to us, so that we can reply to you more quickly and accurately.

