

ADIRONDACK CHAIR

Instruction Manual



AC02

Customer Service

 <https://gvdv.com>

 support@gvdv.com


 **+1(844)708 3411**

Monday – Friday 10:00 AM – 2:00 PM, 3:00 PM – 7:00 PM (ET) Closed on holidays


YOUR OUTDOOR, PERFECTED

PACKING INCLUDES

BACKREST A x 1PC

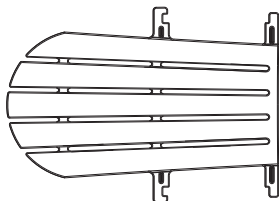

CHAIR SEAT B x 1PC

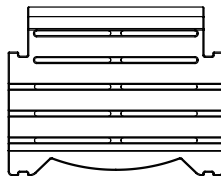

RIGHT ARM C x 1PC



LEFT ARM D x 1PC



RAIL E x 2PC




SUPPORTING RAIL F x 1PC



LEFT LEG G x 1PC




RIGHT LEG H x 1PC

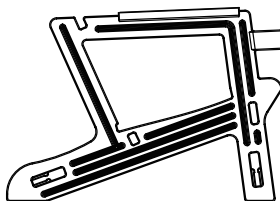


1. Attach Part H Right Leg to Part A Backrest as following steps.

- ①. Place Part H Right Leg on flat surface, make sure the seat holder is facing forward (See Figure ①).
- ②. Press the upper bar of the backrest into the positioning slot of the leg (Figure ②).
- ③. Insert the lower bar into the holding position of the leg (Figure ③)

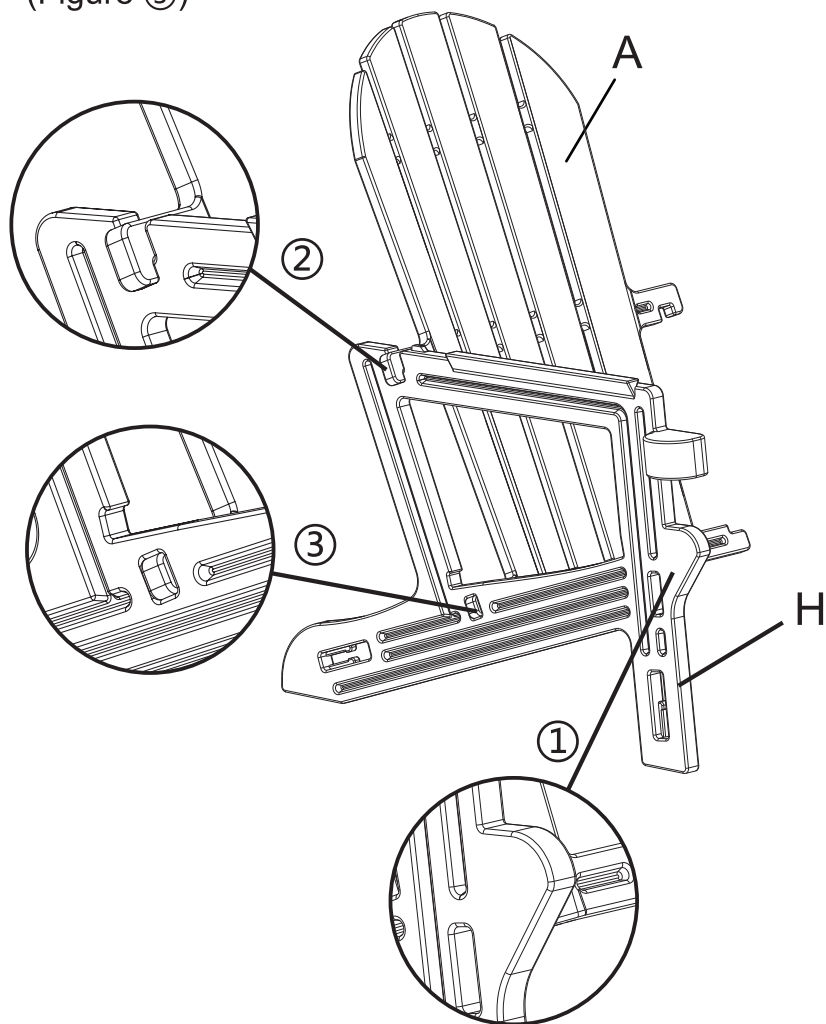


2.Do the same to attach Part G Left Leg to Part A Backrest.

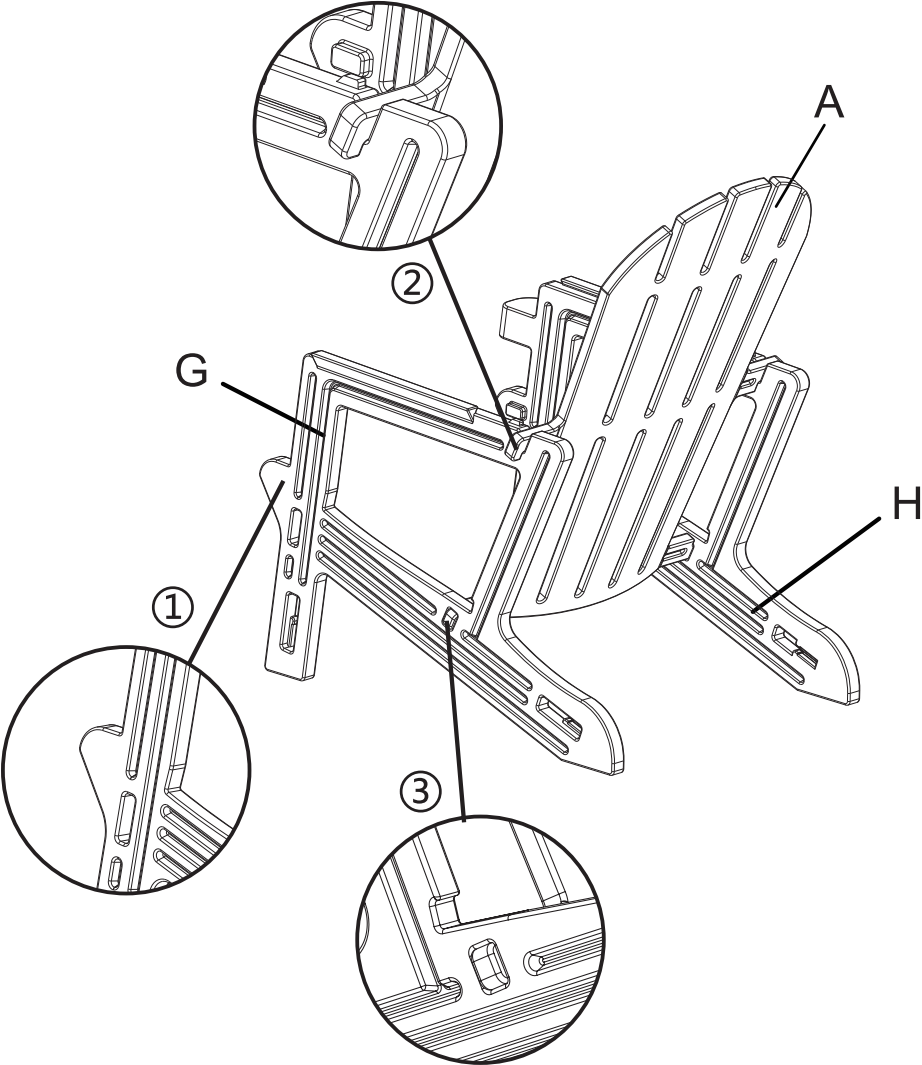


3. Insert Part B Chair Seat to the assembled frame till the groove sits in the slot in the legs (See Figure ①). Keep the seat a certain angle upwards as below.

Pay attention not to press down the seat at this stage(Figure ②).

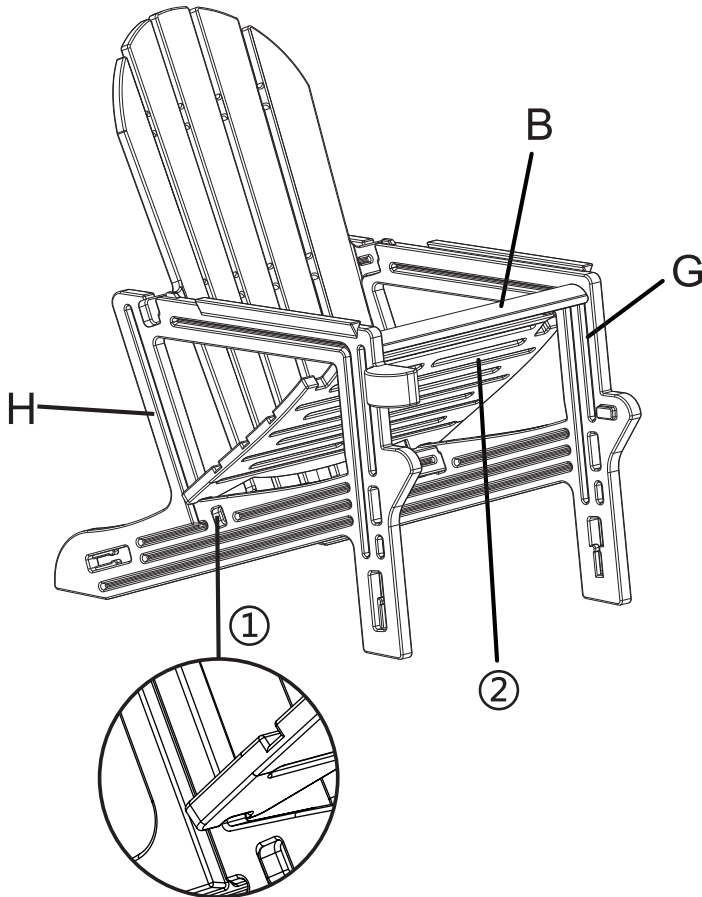

4. Place Part F Supporting Rail between 2 pcs of Legs as below, make sure the tenons with groove facing downward (See Figure ①).


Press hard on Part F Supporting Rail to make the tenons locked firmly into the mortise in the legs (Figure ②).

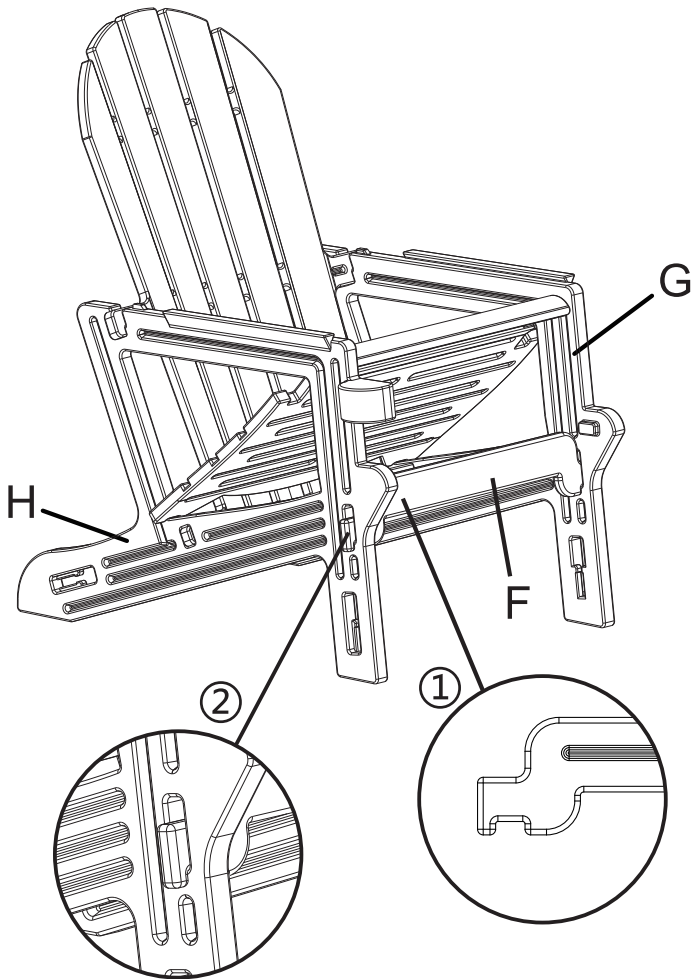

5. Press the seat down till it landed on the supporting rail firmly.

Place Part E Rail between Part G Left Leg and Part H Right Leg as below, make sure the arrows are inside and pointing downward (See Figure ①).


Press hard on Part E Rail to make the tenons locked firmly into the mortise in the legs (Figure ②).

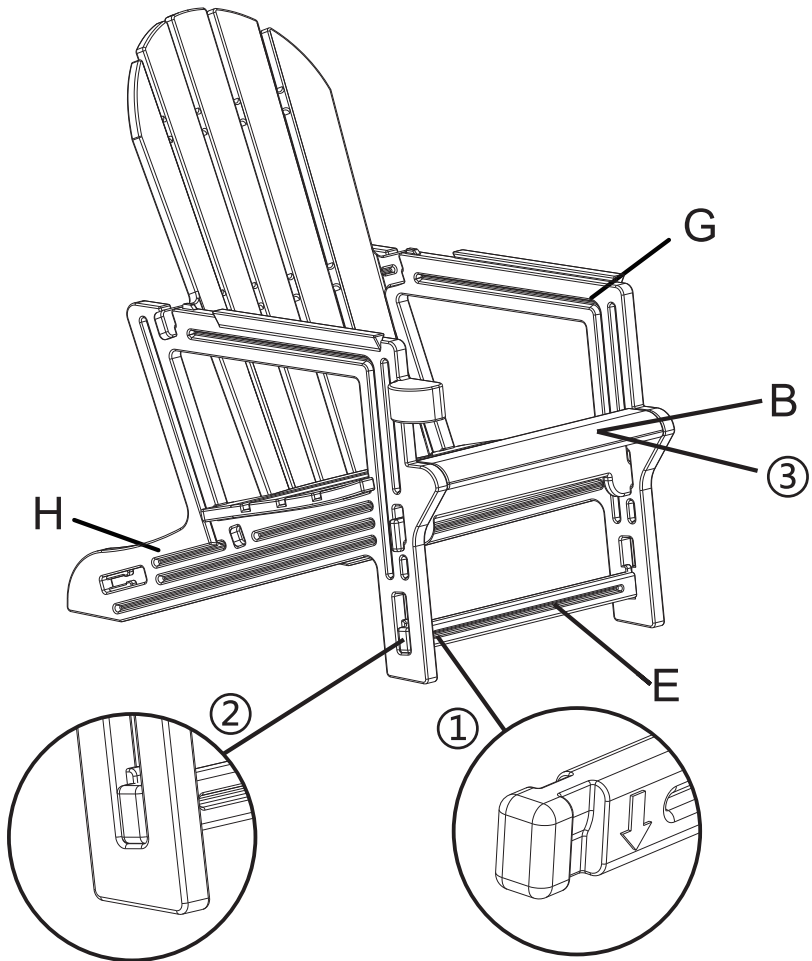

Arrow pointing downward (inside)

6. Place another Part E Rail between Part G Left Leg and Part H Right Leg as below, make sure arrows are inside and pointing downward (See Figure ①).


Press hard on Part E Rail to make the tenons locked firmly into the mortise in the legs (Figure ②).

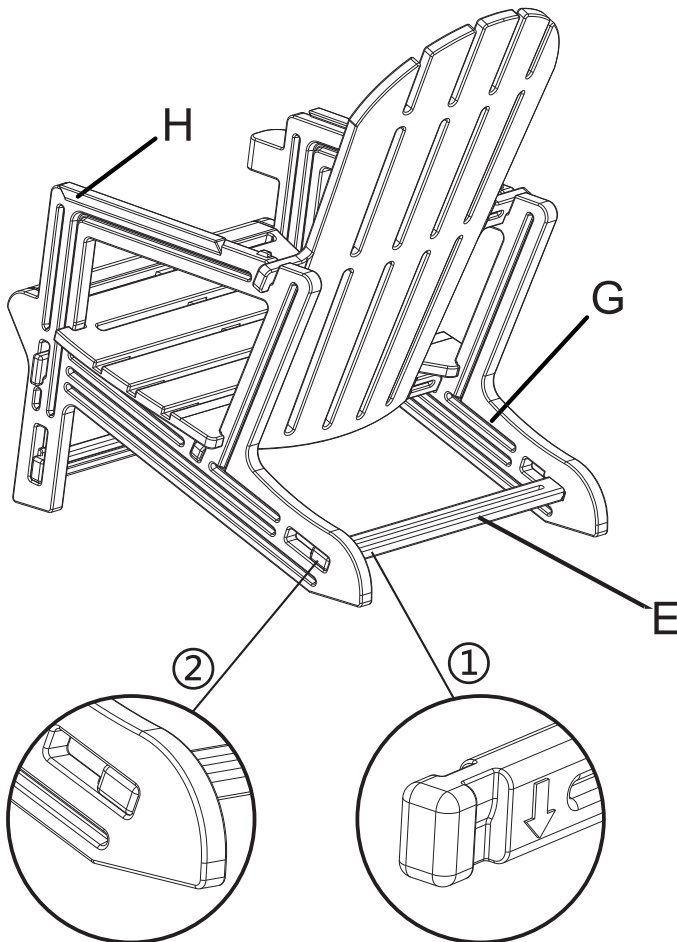


Arrow pointing downward (inside)

7. Attach Part C Right Arm to Part H Right Leg as following steps.

- ①. Match the groove in Part C Right Arm with the tenon on top of leg and slide the arm horizontally backward (See Figure ①).
- ②. Pull the arm upward when it moves to the lock, slide again till the lock trapped in the groove (Figure ②).

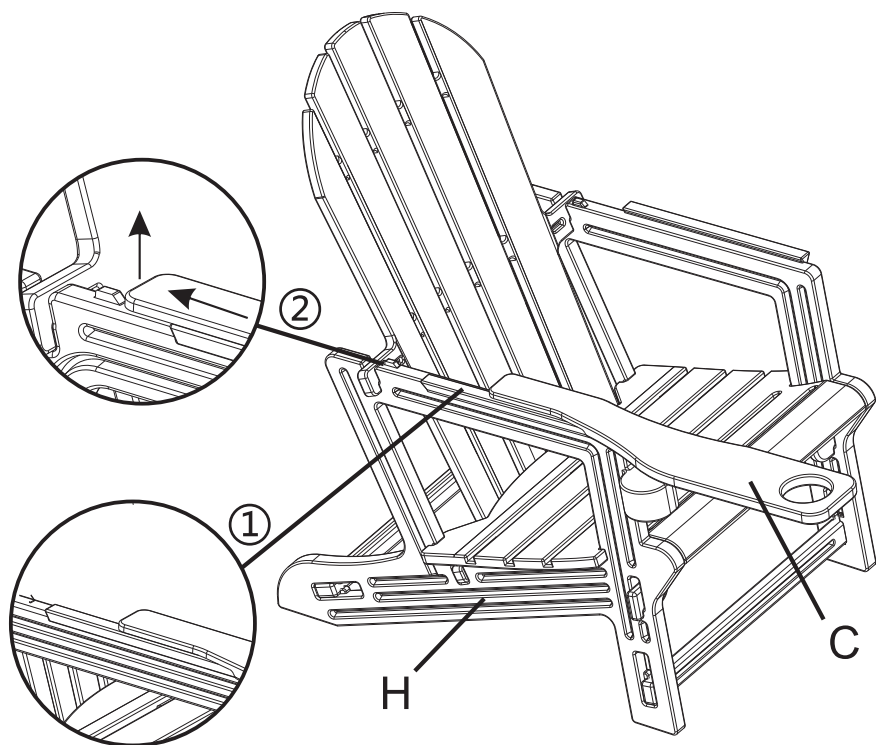

8.Do the same to attach Part D Left Arm to Part G Left Leg.

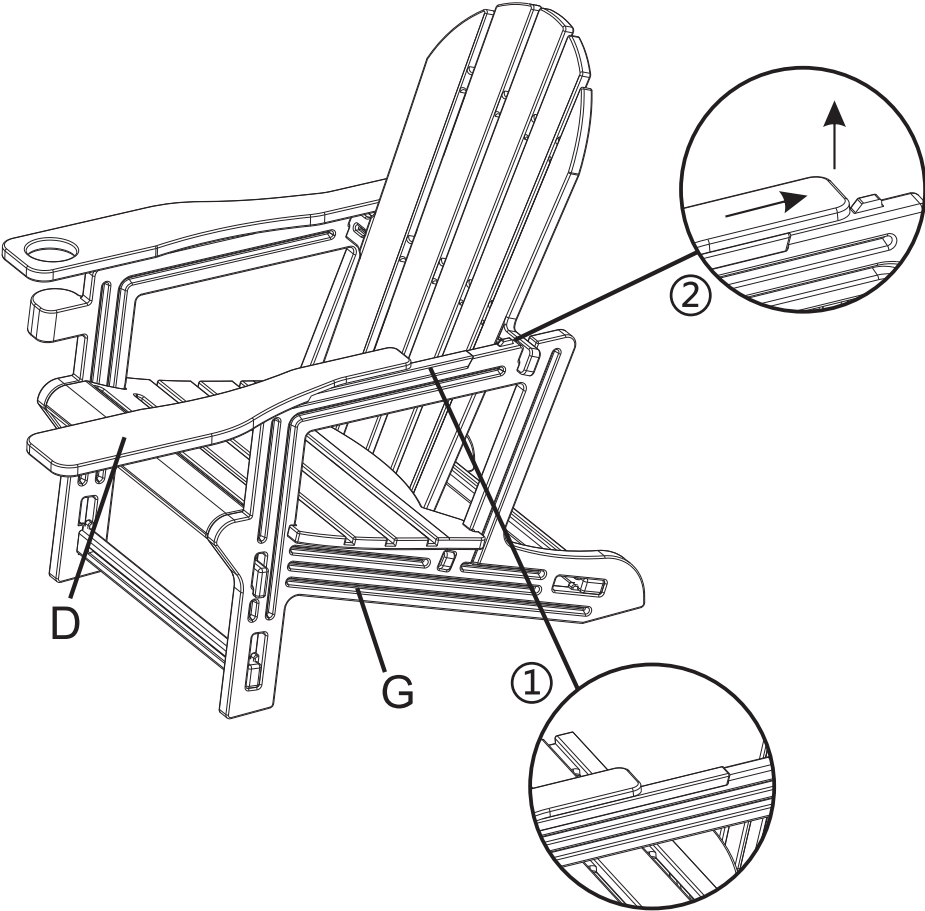

WARRANTY

GVDV provides a standard **1-year** warranty for the product, starting from the date of delivery.

This policy applies to products purchased through the gvdv.com official website and GVDV official flagship stores on third-party platforms.

It is valid exclusively for products purchased new and in their original packaging ("GVDV Products"). This policy is designed to assure our customers of the quality and reliability of GVDV Products instructions.

Customer Service

Thank you for choosing our product! Your **GVDV** product comes with a **1-year** free warranty from the date of purchase. To ensure you receive full warranty support and ongoing service, please contact us using the information below.

Email: support@gvdv.com

Official Website: www.gvdv.com

Phone: +1 844-708-3411

Mon - Fri: 10am-2pm, 3pm-7pm (ET) *Closed during Holidays



gvdv.com

For assistance with assembly, usage, damage parts or missing parts,
please contact our customer support team.
We are here to help.

Customer Service

 support@gvdv.com

 **+1(844)708 3411**

Monday – Friday 10:00 AM – 2:00 PM, 3:00 PM – 7:00 PM (ET)
Closed on holidays

Made in China



gvdv.com

YOUR OUTDOOR, PERFECTED