



MODERN FLAME MOUNTED ELECTRIC FIREPLACE

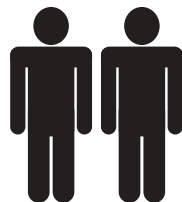

WARNING

Read and understand this entire manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.

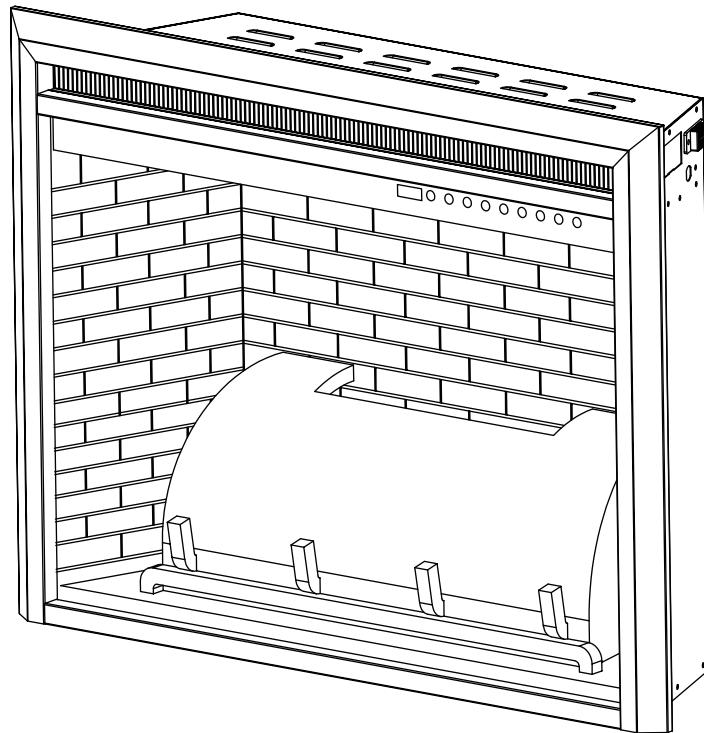


2-PERSON
ASSEMBLY/
INSTALLATION



WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

REMOTE CONTROL

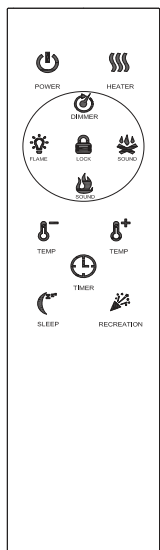

Button	Function
POWER	Turn on/off the device
HEATER	Turn the heater on/off
DIMMER	Set the flame brightness
FLAME	13 changeable flame colors
SOUND 1	Press the button until the desired setting is reached
SOUND 2	Press the button until the desired setting is reached
TEMP-	Press button until desired setting is reached
TEMP+	Press button until desired setting is reached
TIMER	12 hours timer
SLEEP	Colors for flame and carbon bed will both darken
RECREATION	Flame and carbon bed change color automatically at the same time

HOW TO CONNECT

Steps

- 1) Scan the code to download the APP
- 2) In standby mode, press the power button for seconds to turn on the distribution network.
- 3) Open the APP on the mobile phone
- 4) Click the "+" button at the top right corner on the homepage
- 5) Add device

IMPORTANT SAFETY INFORMATION


WARNING

Read all instructions before using this heater!

- This heater is **hot when in use**. To avoid burns, **DO NOT** touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from all sides of the heater.
- If provided, use handles when moving the heater.
- **Extreme caution** is necessary when any heater is used. **NEVER** leave the unit unattended while heater is in use.
- Ensure adequate **safety measures are incorporated to protect infants/toddlers** from touching hot surfaces.
- **DO NOT operate any heater if the cord is damaged**, the heater malfunctions, has been dropped, or damaged in any manner. Discard heater or have it serviced by a certified professional.
- **DO NOT** run the power cord under carpeting, throw rugs, runners, or similar floor coverings. **DO NOT** route the power cord under furniture or appliances. Arrange power cord away from traffic area, and where it will not be tripped over.
- **Connect to properly grounded outlet ONLY.**
- **DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening**, as this may damage the heater, cause electric shock or fire.
- **DO NOT** block air intakes or exhaust in any manner as doing so could cause a fire.
- **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
- **A heater has arcing or sparking parts inside and becomes HOT. DO NOT** use it in areas where gasoline, paint, or any flammable liquids are used or stored or where flammable vapors are present.
- **Only use this heater as described in this manual. Any other use may cause fire, electric shock, personal injury or death.**
- **ALWAYS plug heaters directly into a wall outlet/receptacle. NEVER** use this unit with an extension cord or relocatable power tap (power strip).
- **DO NOT install the heater near a bed**, objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- **NEVER use this heater in bathrooms, laundry rooms**, or any other location where the heater could come in contact with water or be exposed to high moisture.
- **AVOID FIRE!** It is imperative that the control compartments, circulating blower, and its passageway in the fireplace is kept clean. Regularly inspect all air vents to make sure they are free from dust, lint, or other blockages. **Unplug the unit and clean with a vacuum ONLY. DO NOT** rinse or get wet.
- **NEVER** hang this unit on a wall directly below an electrical outlet.
- **Ensure clearances to combustibles are maintained** when building a mantel or shelves near the fireplace. Elevated temperatures on the wall or in the air around the fireplace can cause melting, discoloration or damage to decorations, a TV or other electronic components.
- **ALWAYS** mount onto the wall bracket before use. **DO NOT** set this unit on the floor or any other surfaces to use.
- **NEVER** use a wall mount bracket from another manufacturer.

⚠ WARNING ⚠

- Do not install the fireplace against a vapor barrier or exposed insulation.
- **For residential use only! NOT for commercial use!** Any commercial or public use of this heater voids all warranties and could cause injury.
- **This product is not intended to be a primary heat source.** It is for supplemental heat only.
- **INDOOR use only! NEVER** use this heater outdoors! Doing so may result in electric shock!
- **DO NOT OPEN! Risk of electric shock!** No user-serviceable parts inside!
- **NEVER modify this heater.** Doing so could result in personal injury or property damage. Modification of this fireplace completely voids all warranties.
- **ALWAYS** turn this heater off before unplugging it from the outlet.
- **ALWAYS** disconnect this unit from the power supply before performing any assembly or cleaning, or before relocating the electric fireplace.
- **NEVER** leave this heater unattended. **ALWAYS** unplug this heater when it is not in use.
- **ALWAYS** store this heater in a dry location. **NEVER** use the fireplace in a location where it may become wet.
- **NEVER** plug this heater into an outlet that is old, cracked, or has any loose wires or connections. Plugging this heater into a faulty outlet could result in **electric arcing** within the outlet that could cause the outlet to overheat or catch fire.
- **ALWAYS** check your heater cord and plug connections with each use!
 - i) **MAKE SURE** the plug fits tightly in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 - ii) **Heaters draw more current** than small appliances. **Overheating** may occur even if it has not occurred with the use of other appliances.
 - iii) During use, frequently check to see if the plug outlet or faceplate is **HOT!**
 - iv) If the outlet or faceplate is **HOT, discontinue use immediately** and have a qualified electrician inspect and/or replace the faulty outlets.
- The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter **MUST** be **properly grounded** to the outlet box (see figure at right).
- **NOTE: Adapter NOT INCLUDED.**
- Under no circumstances should this fireplace be modified.


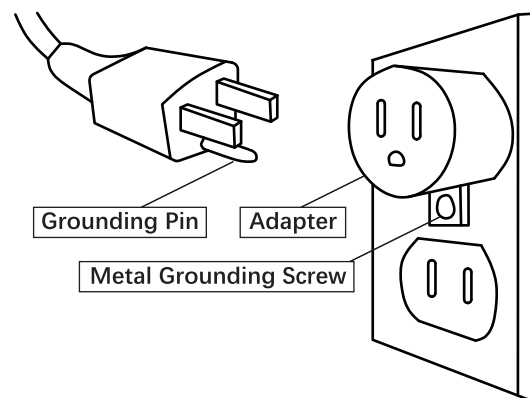


Any modification to the product or failure to follow recommended care will void the product warranty.

⚠ WARNING!


Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

 Parts and Hardware

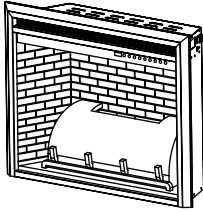No.	PARTS	QTY.
A	 Fireplace	1
B	 M4 x 8mm Screw	16
C	 Metal Bracket	4
D	 Remote Control	1



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

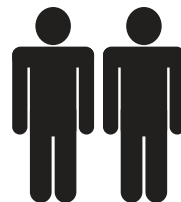

2-PERSON
ASSEMBLY/
INSTALLATION



WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

Preparation



This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grouped for free-standing or wall-hanging use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.



Before installation, plug the unit into a properly grounded outlet to ensure the unit works properly.

Tools needed for installation (not included):

Phillips screwdriver, stud finder, level, tape measure, pencil, electric drill, 1/4" wood drill bit, hammer



WARNING



When using paint or lacquer to finish the mantel, the paint or lacquer must be heat resistant to prevent discoloration.

Operation

WARNING

Do not remove the glass panel while the fireplace is plugged in and operating as it will cause the remote control and touch panel to no longer function.

Ensure the circuit breaker(s) for the power supply are turned on.

Once the appliance has been plugged into a properly grounded electrical outlet, it is ready to operate.

NOTE: In the event of a power failure, the appliance will lose its memory function and will reset to factory mode when the power returns.

Methods of Operation


This electric fireplace can be operated by the CONTROL PANEL, located on the bottom right side of the fireplace, or by the battery-powered REMOTE CONTROL (batteries not included).

The operation and functions of the two methods are the same.

Before operating, please review the IMPORTANT SAFETY INFORMATION on Pages 3 and 4 , and heed all warnings.

REMOTE

**REQUIRES (2) 'AAA' BATTERIES
(BATTERIES NOT INCLUDED)**

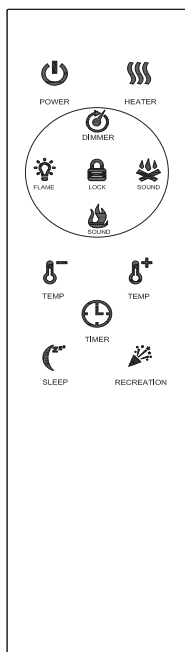

- Remove the battery housing cover from the back of the remote.
- Paying attention to the positive and negative terminals, gently insert two new 'AAA' batteries (not included).
- Replace the battery housing cover.
- **NOTE:** Promptly remove expelled batteries. Do not mix old and new batteries; mixing batteries could cause the acid inside the batteries to leak, damaging the remote.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. **DO NOT** press the buttons too quickly. Give the unit time to respond to each command.



NEVER dispose of batteries in fire. Failure to observe this precaution may result in an explosion. Dispose of batteries at your local hazardous material processing center.

CONTROL PANEL



BUTTON	FUNCTION	ACTION AND INDICATION
 power	ON: Enables control panel and remote control function. Turns on the flame effect. OFF: Disables control panel and remote control function. Turns off the flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions are enabled. 2. Press again, power and all functions turn off. Unit goes to standby.
 heating	HEATER button: Turns heater on and off. NOTE: To prevent overheating, the heater fan will blow out cool air for 180 seconds after the heater turn off. 00, LL, HH will show on the display.	1. Press button, LL (low heat) about 750W. 2. Press button, HH (high heat) about 1500W. 3. Press button, 00, heat function is off.
 temperature	TEMPERATURE button: Changes the temperature setting. Setting ranges from 59°F to 95°F 59,60,61....94,95 will show on the display.	Press button until desired setting is reached. LED display shows selected setting.
 Sound 1	SOUND 1 button: Turns the crackling sound 2 on or off. Three volume levels are available: s1, s2, and s3 appear on the display. "s1" is the minimum volume and "s3" is the maximum.	Press the button until the desired setting is reached. The LED display shows the setting. The setting "s0" turns off Sound 1.
 Sound 2	SOUND 2 button: Turns the crackling sound 1 on or off. Three volume levels are available: n1, n2, and n3 are shown on the display. "n1" is the minimum volume and "n3" is the maximum.	Press the button until the desired setting is reached. The LED display shows the setting. The setting "n0" turns off Sound 2.
 Color	13 color settings: F1,F2,F3....12,13,14 "14" appears on the display during the automatic color change.	1. Press once to change the color flame effect. 2. Press again until desired setting is reached.
 Dimmer	Makes flame effect brighter and dimmer. 5 brightness settings: L0,L1,L2....L5 L5 is brightest, L1 is dimmest.	1. Press once to change flame color brightness. 2. Press again until desired setting is reached;
 child lock	Avoid accidental changes to the setting functions of the unit.	Press and hold the button for approximately 3 seconds to activate the child lock. "CL" appears on the display.
 Timer	TIMER button: Controls the timer settings to automatically turn the fireplace off. Settings range from 1 hour to 12 hours. 0H,1H,2H....11,12 will show on the display.	Press button until desired setting is reached. LED display will show the setting. When time reaches the selected setting, the unit will automatically turn off. 0H disables the timer function.

WARNING: Do not move or remove the glass panel when the appliance is plugged in and operating as it will cause the remote control and touch panel to no longer function.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF.

To reset:

1. Unplug the power cord from the outlet.
2. Wait for at least 15 seconds to 1 minute before plugging the unit back in.
3. If the unit does not power on, allow the unit to thoroughly cool down and inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. If the problem continues, have your outlet and wiring inspected by a professional.

Cleaning



ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto a cloth or towel. Dry thoroughly with a paper towel or a soft, lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner or cloth that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- Clean the exterior of the fireplace with a slightly damp cloth or duster.

Maintenance



Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!

ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- Store heater in a clean dry place when not in use.



WARNING: No other servicing should be performed by the consumer. Do not service the unit yourself.

NOTICE

Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product.



WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

After-sales QA

Q1: What should I do if I find a missing part?

A1: If you find a missing part, please do not hesitate to contact us and tell us the specific part number. We are willing to replace the parts for you in time.

Q2: What if the parts are damaged during transportation?

A2: If you find any wear or damage during shipping, please contact us immediately. You can attach a photo of the affected part and provide the part number. We will send you replacement parts as soon as possible.

Q3: I have followed the installation instructions, but I am still experiencing problems. What should I do?

A3: If you have followed the instructions carefully but are still experiencing difficulties during the installation process, please feel free to contact us. Share relevant photos, which will help our professional team to better understand the situation. We will provide you with a solution within 24 hours.

Q4: If there is a quality problem with the product, who is responsible for the return and exchange postage?

A4: If there are any quality problems, we will take full responsibility and will gladly pay the return postage for exchange or refund.

Q5: What should I do if there is a noise from fireplace unit when the flame works well?

A5: Remove the screws from back panel, then check the fire sliver whether touch the bracket? If yes, Slide the fire sliver, keep a little distance from the bracket and push the bracket which in the middle forward.

Q6: What should I do If the flame looks asymmetrical?

A6: Remove the back panel and check whether the spark bar has fallen out.

We take every product seriously, so if you have any questions or are not satisfied with our products, please feel free to contact us. We will give a satisfactory solution within 24 hours.