


INSTRUCTION MANUAL

MICROWAVE OVEN

ML2-EC29SA(SS)

Please review this instruction manual before operating.

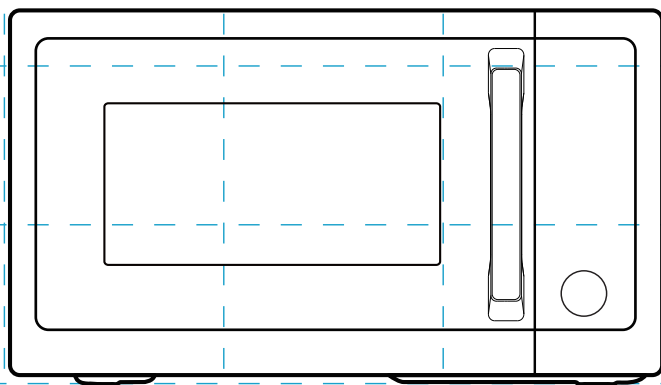

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Setting up your oven	EN-14
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19
Control panel and features	EN-19
1. Setting the clock	EN-20
2. Setting the kitchen timer	EN-20
3. Microwave cooking	EN-21
4. Broiling cooking	EN-22
5. Combination cooking	EN-22
6. Air fry and bake cooking with preheat function	EN-23
7. Air fry and bake cooking without preheat function	EN-24
8. Speedy cooking	EN-24
9. Defrost by weight	EN-25
10. Defrost by time	EN-26

11. POPCORN	EN-26
12. Auto menu	EN-27
13. Air fry presets menu	EN-29
14. Low temp. cooking	EN-30
15. Odor removal function	EN-31
16. Lock function for children	EN-31
17. Eco function	EN-31
18. Mute mode	EN-32
19. Inquiring function	EN-32

CLEANING AND MAINTENANCE

Cleaning.....	EN-33
Trouble shooting	EN-35
One year limited warranty	EN-36



NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.


PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

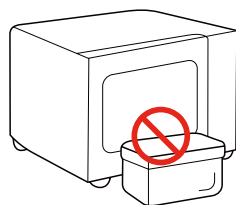

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	ML2-EC29SA(SS)
RATED VOLTAGE/FREQUENCY	120VAC 60Hz
RATED INPUT POWER (MICROWAVE)	1600 W
RATED OUTPUT POWER (MICROWAVE)	1000 W
GRILL	1000 W
CONVECTION	1800 W



All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.



Read all instructions before using the appliance.



Read and follow the specific:
"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 01.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 07.



Install or locate this appliance only in accordance with the provided installation instructions.




HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO

USE THE MICROWAVE.

Use caution when removing hot items.



When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

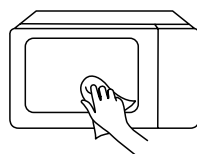

IMPORTANT SAFETY INSTRUCTIONS

 Keep cord away from heated surface.


 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow

the container to stand in the microwave oven for a short time before removing the container.

5. Use extreme care when inserting a spoon or other utensil into the container.

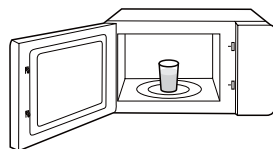

 Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.

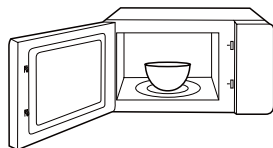


 This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

IMPORTANT SAFETY INSTRUCTIONS


 To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

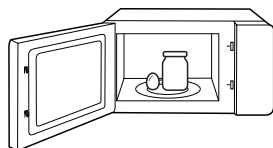

 Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

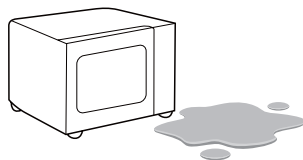

 Do not immerse cord or plug in water or any other liquid.



IMPORTANT SAFETY INSTRUCTIONS

 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

 
 Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

 Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.

 Do not cover or block any openings on the appliance.


 Do not let cord hang over edge of table or counter.

 Do not use paper products when appliance is operated in the toaster mode.



 Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

 Do not cover racks or any other part of the oven with metal foil. This will cause over-heating of the oven.

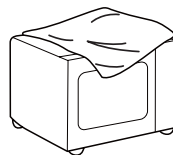

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY(NOT FOR COMMERCIAL USE)

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - (1) Reorient or relocate the receiving antenna.
 - (2) Increase the separation between the equipment and receiver.
 - (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - (4) Consult the dealer or an experienced radio/TV technician for help.

**This device complies
with part 18 of the FCC
Rules.**

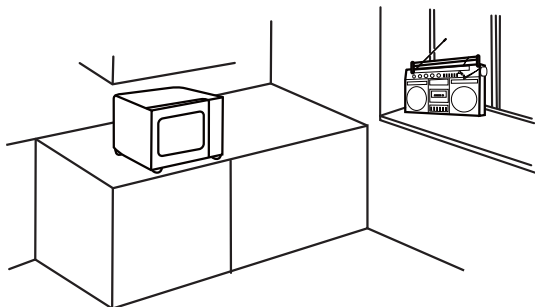

UTENSILS



CAUTION

Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven .**" or "**Materials can not be used in microwave oven .**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

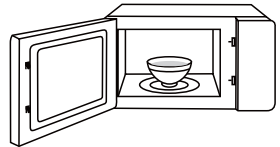

NOTE

KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN

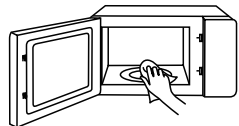



MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

  
MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	


SETTING UP YOUR OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.

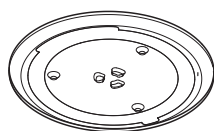


Glass Tray

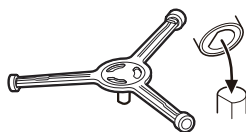


Turntable Ring Assembly

 


Instruction Manual

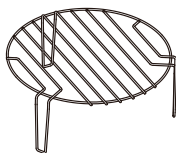


Higher Grill Rack (Can not be used in microwave function and must be placed on the glass tray.)

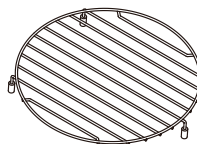

Lower Grill Rack (Can not be used in microwave function and must be placed on the glass tray.)

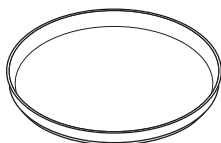

Bake Tray (Cannot be used in conjunction with microwave function and can be placed on the grill rack.)

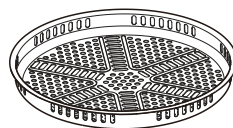

Bake Basket (Cannot be used in conjunction with microwave function and can be placed on the grill rack.)




NOTE

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.


SETTING UP YOUR OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

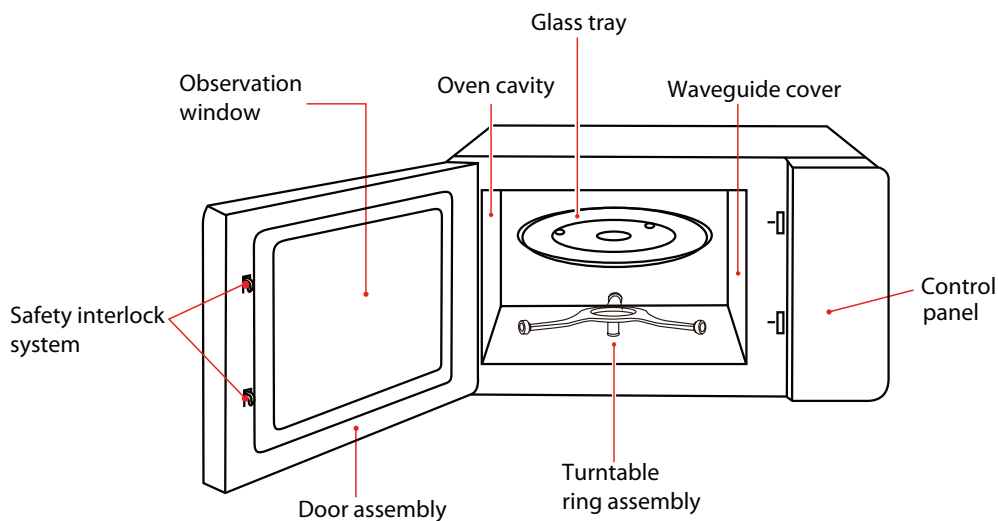

DOOR OPENING GUIDANCE

Pull the release trigger upwards and then pull the handle to open the door.

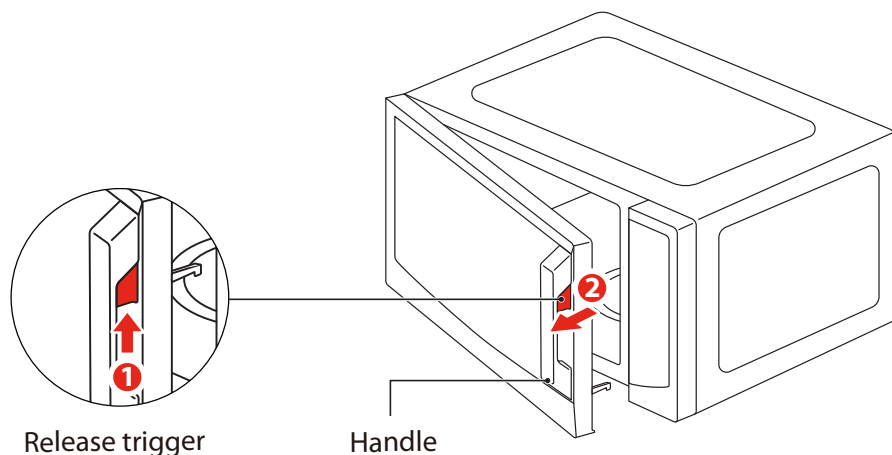

NOTE

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION


Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

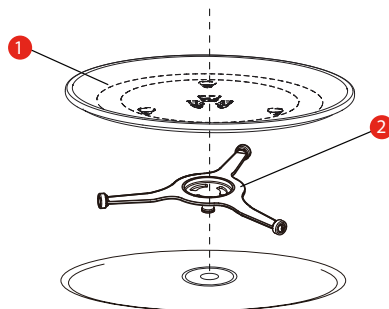

1) Glass Tray
2) Turntable Ring Assembly

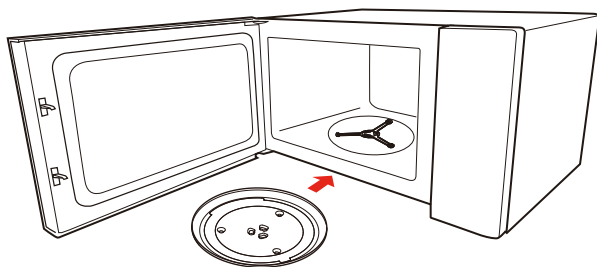

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 36 inches.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Operation of microwave oven may cause interference to your radio or TV reception.
Please place the oven as far away from radios and TV as possible.

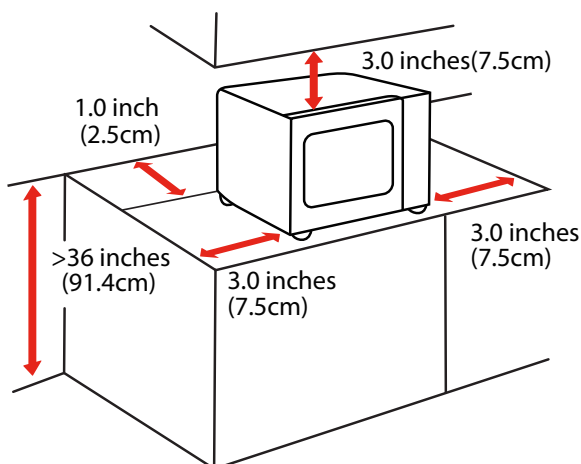


2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be **void**.

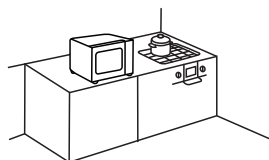

The accessible surface may be hot during operation

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

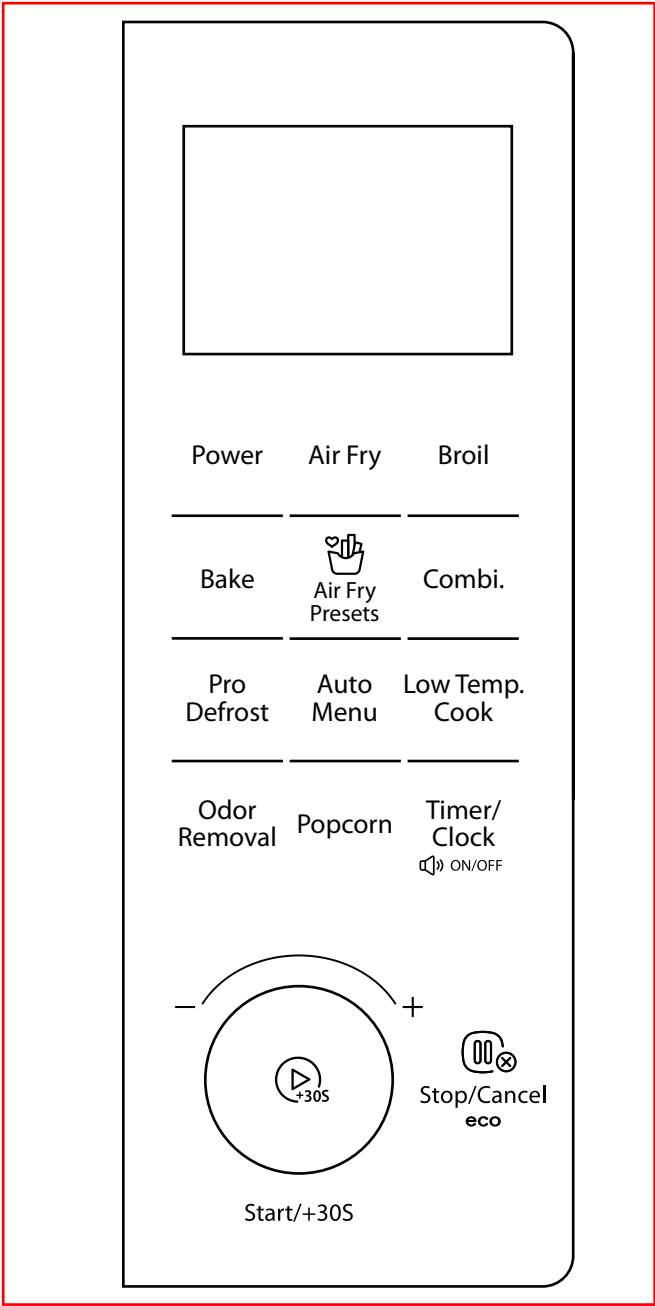


1. SETTING THE CLOCK

a Press **Timer/ Clock** twice, "00:00" will display.
 ON/OFF



 b Turn the knob to set the hour figures.




c Press **Timer/ Clock**  ON/OFF or  to confirm the hour figures.



or



 d Turn the knob to set the minute figures.



e Press **Timer/ Clock**  ON/OFF or  to confirm. The clock is set.



or



NOTE

- The clock is a 12-hour display. If the clock is not set, it will not work when powered.
- To reset the clock, please repeat step a to step e.

2. SETTING THE KITCHEN TIMER

a Press **Timer/ Clock** once, "00:00" will display.
 ON/OFF



b Turn the knob to set the desired time.
The maximum time value is "95:00".



c Press  to confirm. The timer starts counting down.



NOTE

- The kitchen timer is a timer.
- Any other program can't be set during the kitchen timer.

3. MICROWAVE COOKING

10 power levels are available.

POWER	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
DISPLAY	P100	P90	P80	P70	P60	P50	P40	P30	P20	P10

a

or

Press Power repeatedly to choose the power level.

Power

Press Power once, and then turn the knob to set the power level.

Power

-

+

The 10 power levels are available.

b

Press  to confirm the power level.



c

Turn the knob to set the cooking time, the maximum time value is "95:00".

-

+

d

Press  to start cooking.



4. BROILING COOKING

 
a Press **Broil** once, "G-1" will display.

Broil

b Press  to confirm the mode.



c Turn the knob to set the cooking time, the maximum time value is "95:00".



d Press  to start cooking.



NOTE

- The buzzer will sound to remind you to turn the food over during cooking. If no operation, the oven will continue working.

5. COMBINATION COOKING

a Press **Combi.** repeatedly to choose the cooking mode you want. "C-1, C-2" are available.
or

Combi.

Press **Combi.** once, and then turn the knob to choose the cooking mode.

 
Combi.



b Press  to confirm the mode.



c Turn the knob to set the cooking time, the maximum time value is "95:00".



d Press  to start cooking.



COMBINATION COOKING CHART

FUNCTION	DISPLAY	MICROWAVE POWER	GRILL POWER	CONVECTION POWER
Combi. 1	C-1	●		●
Combi. 2	C-2	●	●	

6. AIR FRY AND BAKE COOKING WITH PREHEAT FUNCTION

Press **Air Fry** or **Bake** repeatedly to set the temperature. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available.

a or

Press **Air Fry** or **Bake** once, and then turn the knob to set the temperature. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available.

Air Fry

or

Bake

Air Fry

or

Bake

b Press to confirm.

c Press again to start preheating.

When preheating is completed, the oven will beep twice. Open the door and place the food in the oven. And then close the oven door.

d Turn the knob to set the cooking time, the maximum time value is "95:00".

e Press to start cooking.

7. AIR FRY AND BAKE COOKING WITHOUT PREHEAT FUNCTION

Press **Air Fry** or **Bake** repeatedly to set the temperature. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F,

Air Fry

or

Bake

a 425°F" are available.
or

Press **Air Fry** or **Bake** once, and then turn the knob to set the temperature. "100°F, 150°F, 250°F, 275°F, 300°F, 325°F, 350°F, 375°F, 400°F, 425°F" are available.

Air Fry

or

 
Bake



b Press  to confirm.



c Turn the knob to set the cooking time, the maximum time value is "95:00".




d Press  to start cooking.




8. SPEEDY COOKING

 a Turn the knob left to set a cooking time at 100% power.



 b Continue to turn the knob to adjust the cooking time, the maximum time value is "95:00".



c Press  to start cooking.



a Press  to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "95:00".



NOTE

• In the microwave, broil, combination, bake, air fry cooking state, and defrost by time state, each more press on  can increase the cooking time by 30 seconds (except for defrosting by weight, the preheating and the auto menu).

9. DEFROST BY WEIGHT

Press **Pro Defrost** repeatedly to choose the defrosting menu. "dEF1, dEF2, dEF3, dEF4, dEF5, dEF6" are available.



 
a or Press **Pro Defrost** once, and then turn the knob to set the defrosting menu. "dEF1, dEF2, dEF3, dEF4, dEF5, dEF6" are available.



c Press  to confirm.



b Turn the knob to set the weight of the food. The range of weight is 4 to 70 Oz.



d Press  to start defrosting.



Menu Chart

DISPLAY	dEF1	dEF2	dEF3	dEF4	dEF5	dEF6
Menu	Poultry	Fish	Melt	Vegetables	Fruit	Broth



•For the menus "dEF1, dEF2, dEF3", the buzzer will sound to remind you of turning over the food during defrosting. If no operation, the oven will continue working.

10. DEFROST BY TIME

Press **Pro Defrost** repeatedly until "dEF7" displays.

Pro Defrost

 
a or

Press **Pro Defrost** once, and then turn the knob until "dEF7" displays.

Pro Defrost



b Turn the knob to set the desired defrosting time, the maximum time value is "95:00".



c Press  to start defrosting.



NOTE

- The defrost power is P30 and it cannot be changed.

11. POPCORN

 
a Press **Popcorn** once, and then "2.75 Oz " will display.

Popcorn

b Press **Popcorn** repeatedly or turn the knob to set the weight of the food. "2.75 Oz, 3.20 Oz, 3.50 Oz " are available.

Popcorn

or



c Press  to start cooking.

 


12. AUTO MENU

- a** In standby mode, press “ **Auto Menu** ” once or turn the knob right, and then “A-01” will display.




- b** Press **Auto Menu** repeatedly or turn the knob to choose the menu you need. The 10 auto menus are available.



- c** Press  to confirm.



 - d** Turn the knob to set the weight of the food.



- e** Press  to start cooking.



NOTE

- For the menu “A-06, A-08, A-09”, please skip the step d.
- For the menu “A-10”, the buzzer will sound to remind you of turning over the food during cooking. If no operation, the oven will continue working.

AUTO MENU CHART

MENU	WEIGHT/ AMOUNT	POWER LEVEL
A-01 Beverage	4.00 Oz 8.00 Oz 12.00 Oz	P100
A-02 Dinner Plate	5.00 Oz 8.00 Oz 12.00 Oz 15.00 Oz 21.00 Oz	P100
A-03 Soup	8.00 Oz 16.00 Oz 24.00 Oz	P100
A-04 Potato	8.00 Oz 16.00 Oz 24.00 Oz	P100
A-05 Vegetables	4.00 Oz 8.00 Oz 16.00 Oz	P100
A-06 Oatmeal	28.00 Oz	P100/P50
A-07 Pizza	10.00 Oz 14.00 Oz	P100
A-08 Cake	16.00 Oz	Conv.350°F with preheating
A-09 Cookie	6.00 Oz	Conv.375°F with preheating
A-10 Chicken	16.00 Oz 24.00 Oz 32.00 Oz 40.00 Oz 48.00 Oz	Conv.375°F

13. AIR FRY PRESETS MENU

a

Press  repeatedly to choose the air fry presets menu. "H-01~H-10" are available.

or

Press  once, and then turn the knob to choose the air fry presets menu. "H-01~H-10" are available.



b

Press  to start cooking.



Menu Chart :

FOOD	DISPLAY	WEIGHT/PORTION	Power
Frozen French Fries	H-01	About 11 Oz	Conv. 425°F
Frozen Onion Rings	H-02	About 10 Oz	
Frozen Chicken Nuggets	H-03	About 12 Oz	
Frozen Chicken Wings	H-04	About 18 Oz	
Frozen Chicken Legs	H-05	About 27 Oz	
Escalope	H-06	About 15 Oz	
Frozen Shrimps	H-07	About 9 Oz	
Frozen Fish Sticks	H-08	About 12 Oz	
Frozen Spring Rolls	H-09	About 11 Oz	
Frozen Mozzarella Sticks	H-10	About 11 Oz	



NOTE

 
• For the menus "H-02~H-10", the buzzer will sound to remind you to turn the food over during cooking. If no operation, the oven will continue working.

14. LOW TEMP. COOKING

a In standby mode, press “**Low Temp. Cook**” once, and then “L1” will display.




b Press **Low Temp. Cook** repeatedly or turn the knob to choose the function you need. The 4 functions are available.



c Press  to confirm.



 
d Turn the knob to set the temperature.



e Press  to confirm.



 f Turn the knob to set the cooking time.



g Press  to start cooking.



Function Chart :

FUNCTION	DISPLAY	THE MAXIMUM TIME	TEMPERATURE RANGE
Yogurt	L1	12:0H (12hours)	105°F
Proofing	L2	12:0H (12hours)	105°F
Keep Warm	L3	95:00 (95minutes)	140°F/160°F/175°F
Slow Cook	L4	12:0H (12hours)	195°F/230°F



• For the functions “L1, L2”, please skip the step d.

15. ODOR REMOVAL FUNCTION

- a** In standby mode, press “ **Odor Removal** ” once to start the odor removal function for 5 minutes.

**Odor
Removal**



NOTE

- The odor removal time is 5 minutes and it cannot be changed.

16. LOCK FUNCTION FOR CHILDREN

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

- a** To activate the lock:
In standby mode, press and hold  **Stop/Cancel eco** for three seconds.
A beep sounds and the locked icon will display.


**Stop/Cancel
eco**

- b** To deactivate the lock:
In the locked state, press and hold  **Stop/Cancel eco** for three seconds.
A beep sounds.


**Stop/Cancel
eco**

17. ECO FUNCTION

- a** To enter ECO mode:
In standby mode, press  **Stop/Cancel eco** once. The screen will turn off.


**Stop/Cancel
eco**

- b** To cancel ECO mode:
In ECO mode, pressing any key, turning the knob, or opening the door will cancel it.

18. MUTE MODE

- a** To activate the mute mode:  for 3 seconds.
In standby mode, press and hold  ON/OFF for 3 seconds.
A beep will sound and "oFF" will display.
When you press the key, it does not make a sound.



- b** To deactivate the mute mode:  for 3 seconds.
In mute mode, press and hold  ON/OFF for 3 seconds.
A beep will sound and "on" will display.

 


19. INQUIRING FUNCTION

- a** If the clock has been set, the current time will display for three seconds by pressing  in the cooking state.
 ON/OFF



- b** In the microwave cooking state, press  to inquire about the power level. It will display for three seconds.



- c** In the air fry and bake cooking state (except for preheating), press **Air Fry** or **Bake** to inquire about the temperature. It will display for three seconds.



or



CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

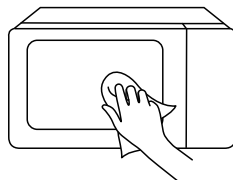

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

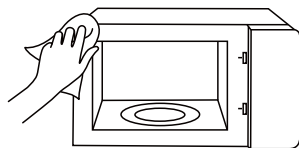

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

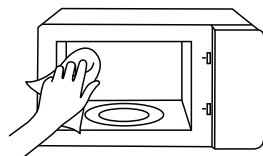

RECESS IN THE COOKING COMPARTMENT

Damp cloth:


Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

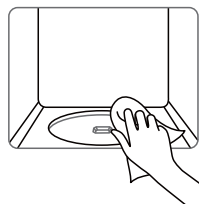

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

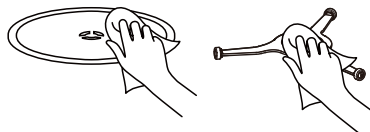

DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.
If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with soft damp cloth.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer's warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

#DetailsMatter