 
 
 

 


2.4G photoelectric driver manual

Basic operation instructions:

1. Copy coding and grouping: the remote control needs to be operated with the driver to operate the code to use, the method is as follows:
 2. The drive and load lamp light source, a power supply connecting normal completion, select packet control lamp, the power supply is switched on, in turning on the power supply of the moment (see light source light during three seconds) according to the selected a group key (), see the lights (light source) is "slow flash three times", the code and data packet. (If the lamps are too many, repeat the above steps until the lights of the code are grouped and matched.
 - A) Note: each drive can only be matched with a group on the remote control at the same time; a remote control can match a myriad of drives, but a drive up to four remote controls at the same time.
3. Clear coding and regrouping: if changing the layout of the room, or the user's interests change, want to change the previous packet (encoded), re grouping of and need to the remote control LED lamp address code, clear, the method is as follows:
 4. (a) selected clearance code of lamps and lanterns, cut off the power, power is switched on again, within 3 seconds after the power supply is turned on and the lamp light, continuous according to the total open key  or the corresponding key  to open five times, that is, to see the lamp / light will flash 6 times, confirming the Qing code successfully
 5. (b) after the success of the code, the operation process of re grouping and coding and the operation of the first "copy coding and grouping" are completely consistent.
6. Nightlight function: find night light button on the remote control, press after the lights whether in what state, light work in Nightlight mode
7. Remote control subsection switch function: press the remote control in the middle of the color key, can choose the color. Choose fast: is white, warm white, neutral light
8. Timing function: find the timing button on the remote control, the first lights flash once, said time five minutes, the two lights flash 2 times, said the timing for 30 minutes, the three lights flash 3 times, said time 60 minutes press other total key  to open or the corresponding key  , disable the timer
9. Scene mode function: to find the remote control on the scene key, after pressing, the side of the light is open, or auxiliary light open
10. The walls of the sectionalizing switches: the power supply using advanced automatic synchronization technology, lights on after 3 seconds, the power will be automatically entered into the memory function, wall switch electric broken, and then power on, now light is memory on a turn off the lights before state, followed by wall switch to electric and broken, then the power into piecewise state, repeat switch can switch to distinguish: is white, warm white, neutral light.
11. Energy saving key: press the energy-saving key, light automatically enter the power saving mode, can save electricity 50%.

