 


TV stand

ASSEMBLY INSTRUCTIONS

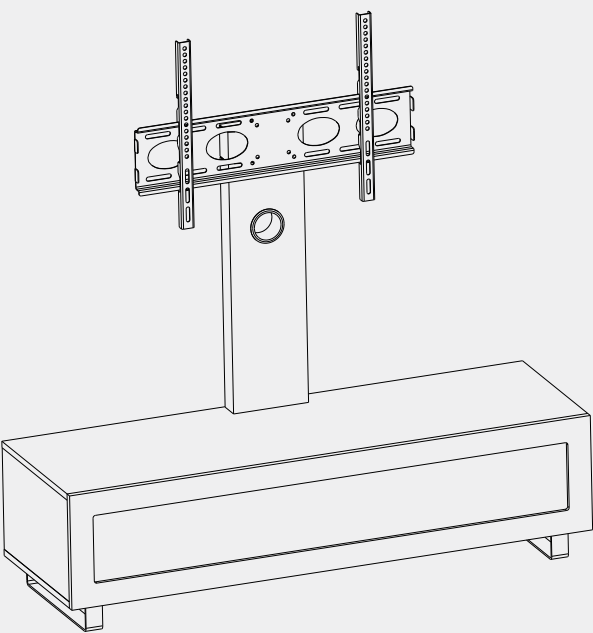

IMPORTANT SAFETY INFORMATION !

Thank you for purchasing this product. Please read the instructions carefully to ensure safe and satisfactory assembly and use of this product. Every care has been taken to ensure that your product has reached you in perfect condition, **if you experience any of the following:**

Missing parts, damaged parts, difficulty with assembly, then please contact us.

WARNING !

 

 
 
 

 
 


 




 




 



 
 





 

 





Glass supplied is toughened Please handle with care. Do not strike the glass with hard or pointed items. Do not place hot or cold items directly onto the glass.

Do not sit , stand or climb on the TV stand as this could result in personal injury and damage to your equipment. Do not use solvents or abrasive cleaners for cleaning this product, use a damp cloth.







Maximum safe load for TV Bracket is 40kg .

Please retain this document for future use.






 
PARTS INFORMATION

No.	Description	Qty.			
01		1	20		2
02		1	21	 Ø7.5x40mm	12
03		1	22	 Ø8x30mm	16
04		1	23		12
05		1	24	 x2	2
06		1	25		8
07		1	26	 Ø3x13mm	8
08		1	27	 x6	2
09		1	28	 M8	4
10		1	29	 M12x946mm	2
11		1	30	 M12x15mm	2
12		2	31	 28x1.5mm	2
13		2	32	 M8x16mm	4
14		1	33	 20x1mm	4
15		2	34	 19x1mm	4
16		1	35		12
17	 M6x15mm	8	36	 #14	1
18	 Ø4x14mm	4	37	 4mm	1
19	 16x1mm	8	38	 6mm	1
			39		1

     
 
ASSEMBLY PROCEDURE

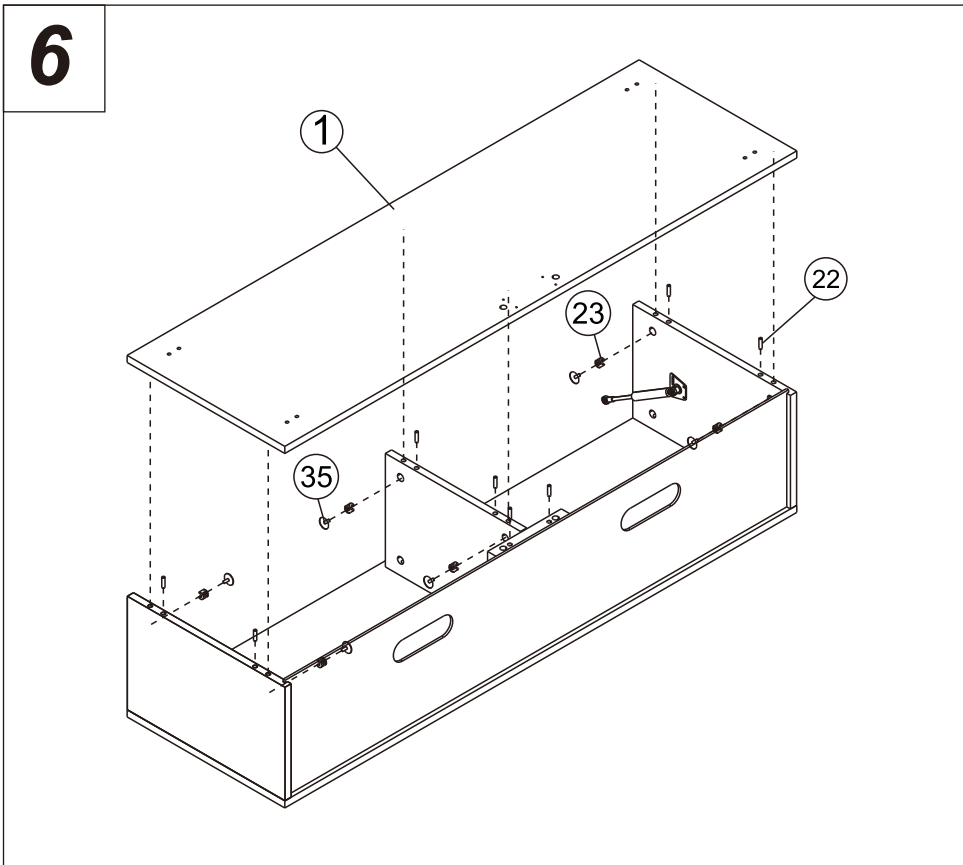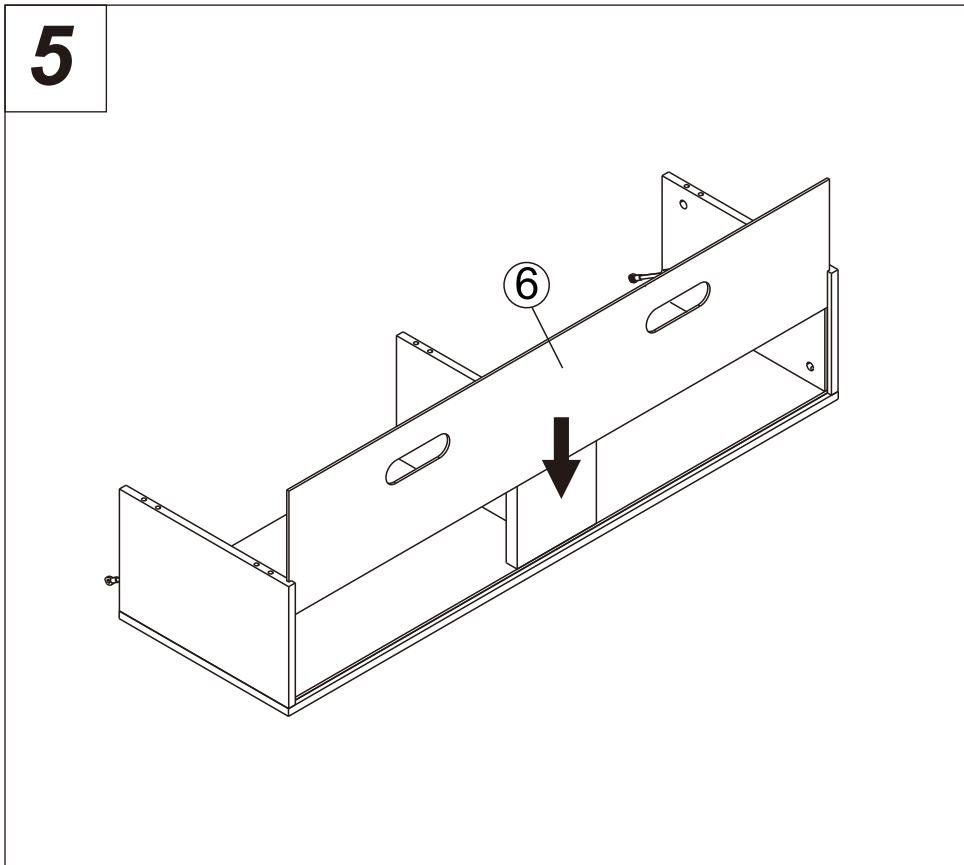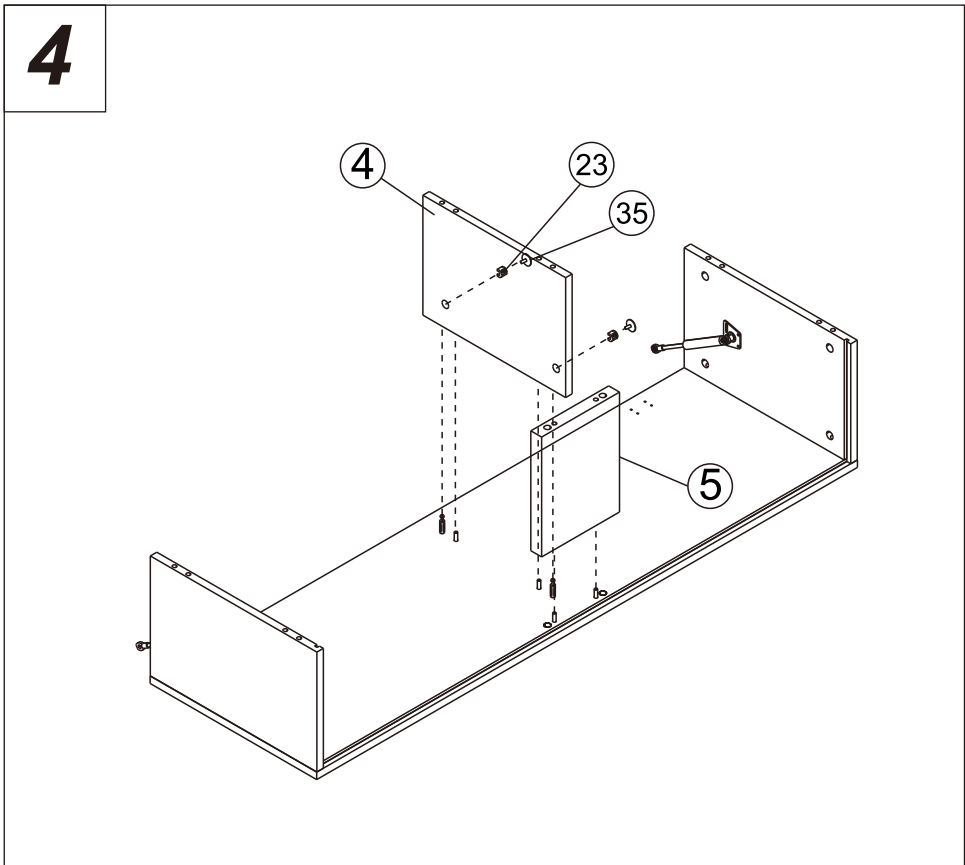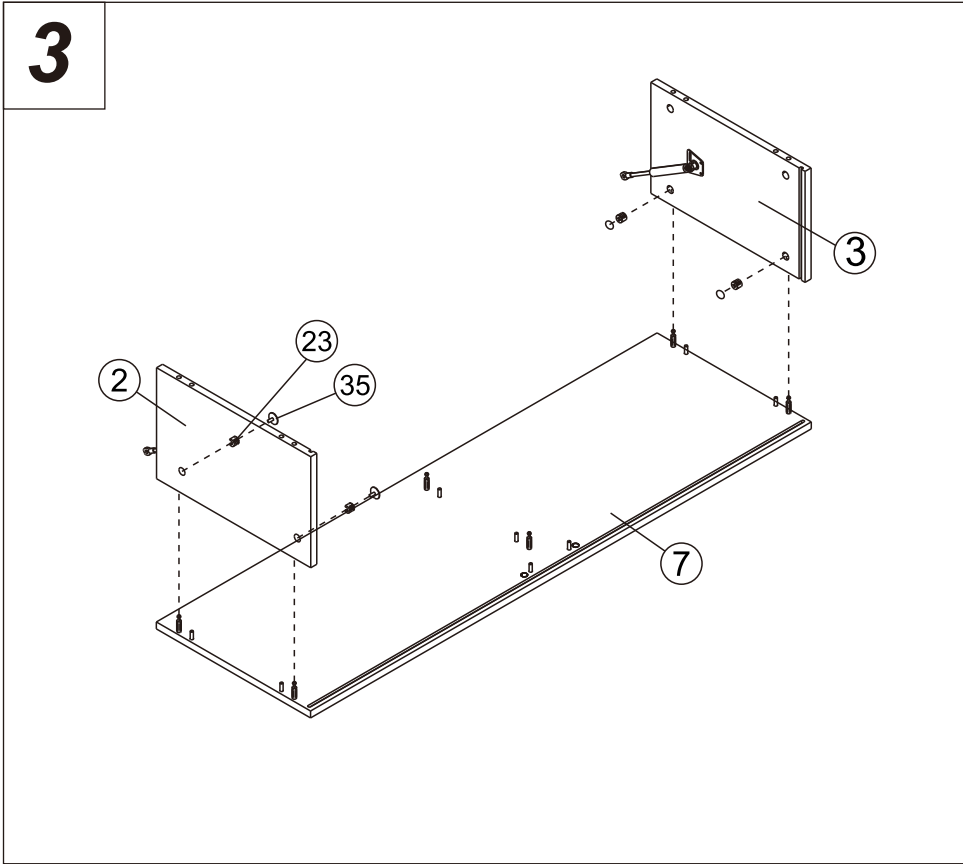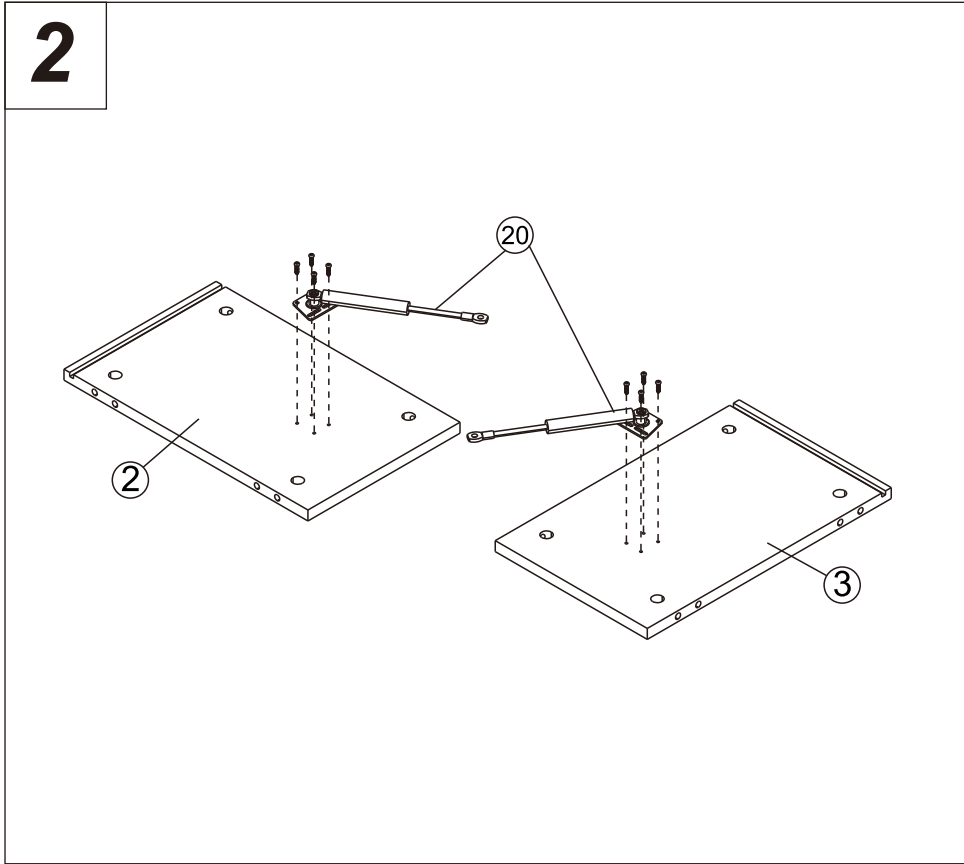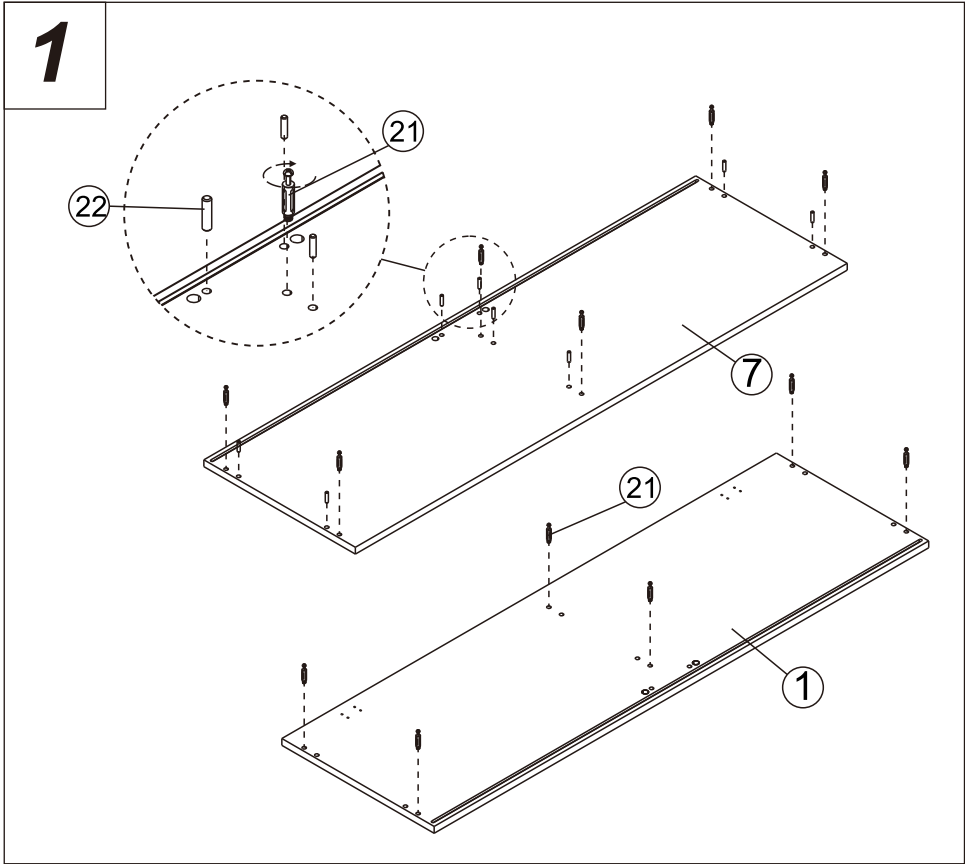



ASSEMBLY PROCEDURE

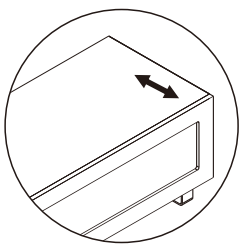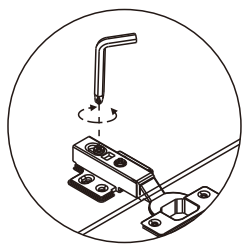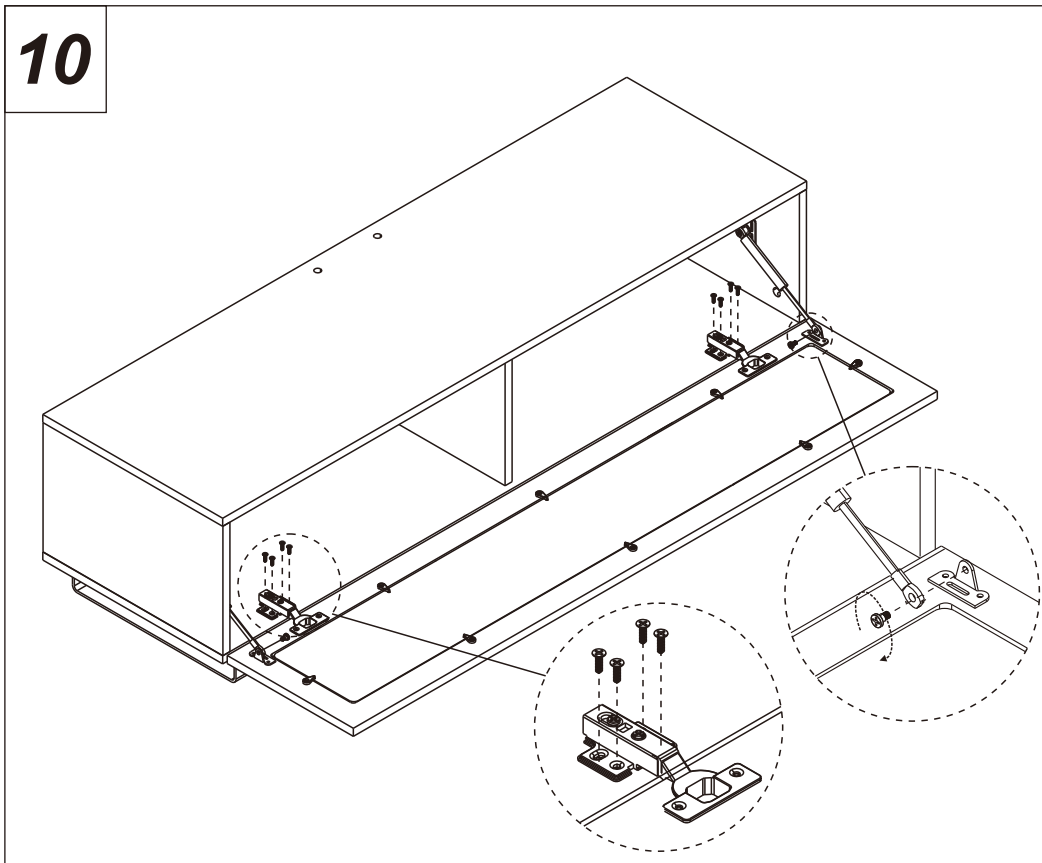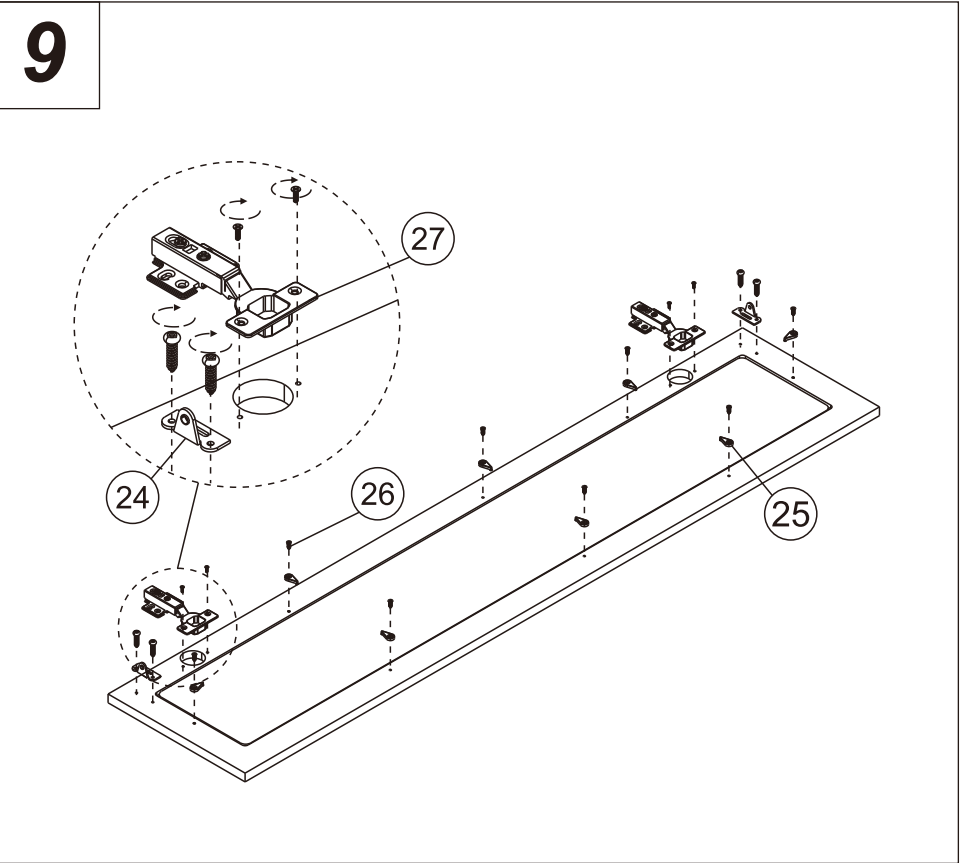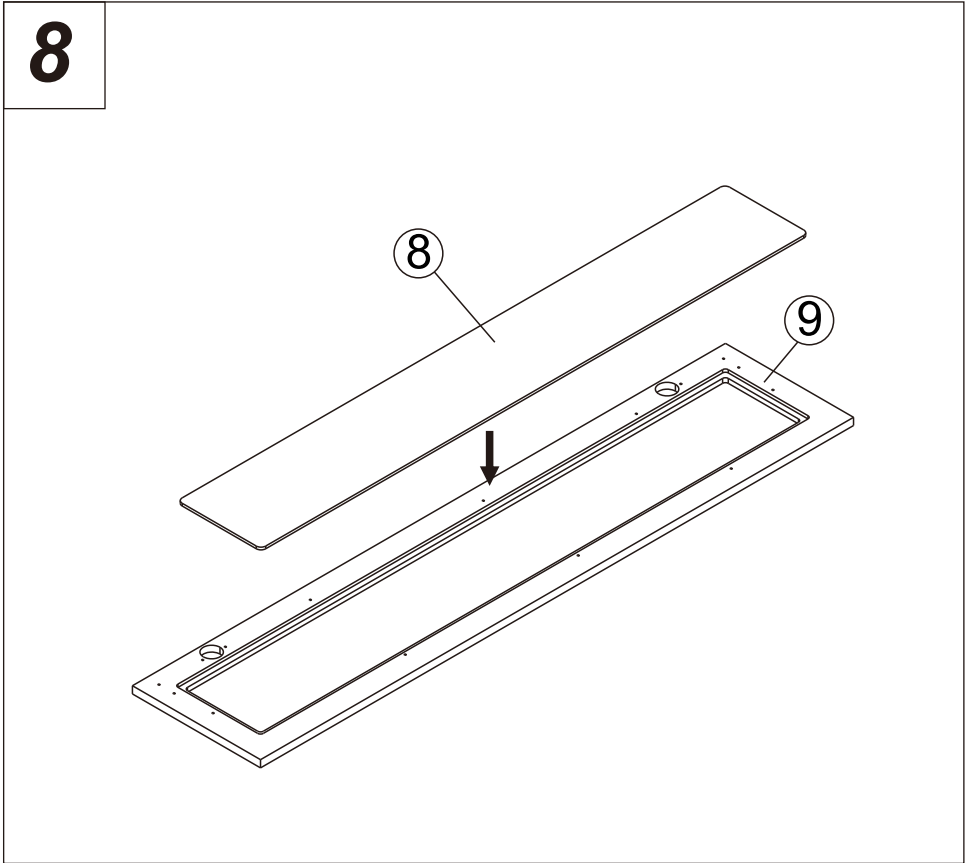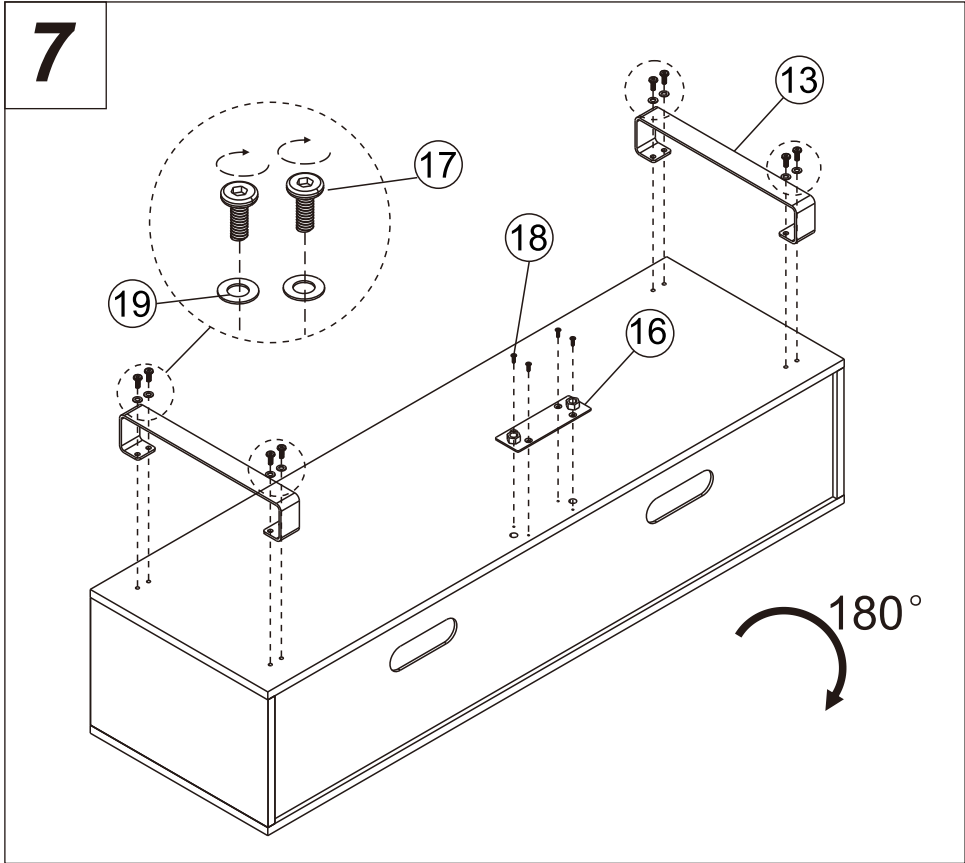      

  
Screw here can slightly adjust the door front and back

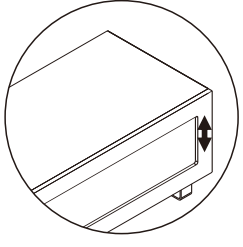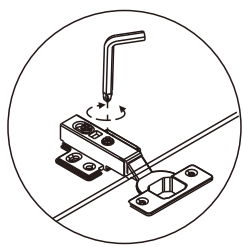

  Screw here can slightly adjust the door up and down

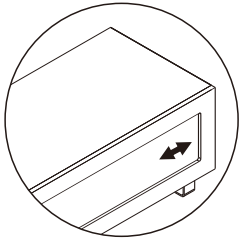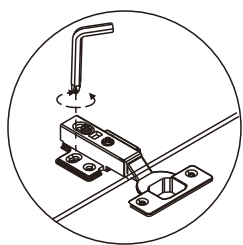


 Screw here can slightly adjust the door left and right

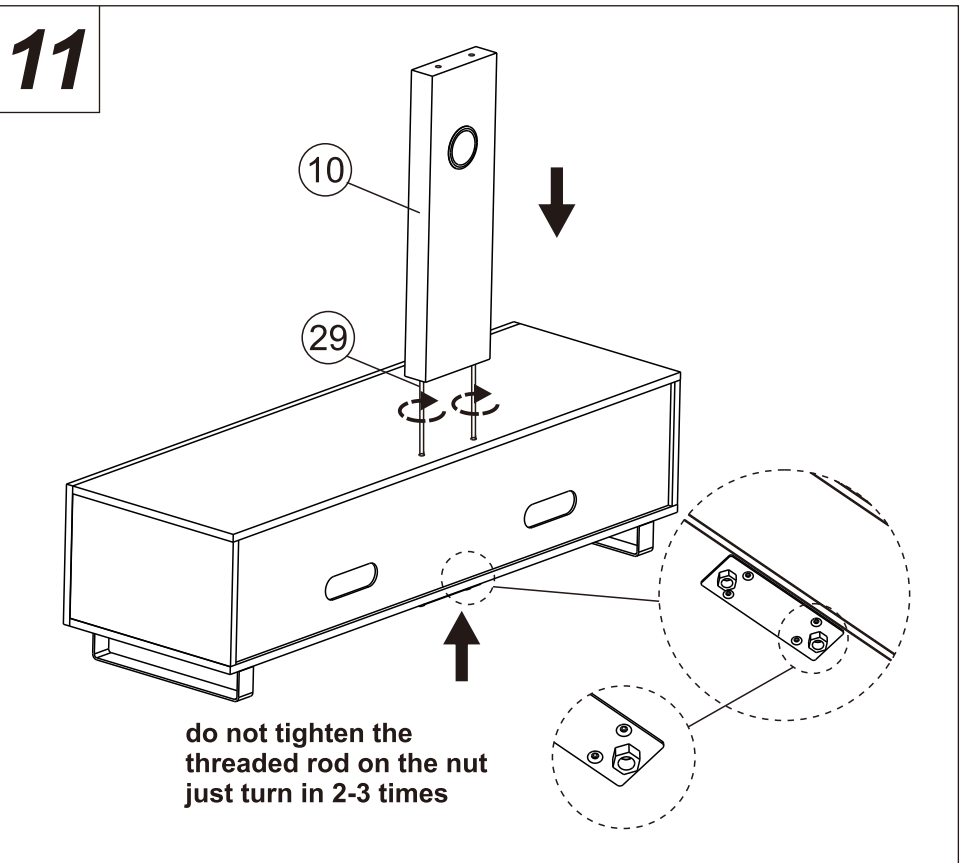


ASSEMBLY PROCEDURE

 
12

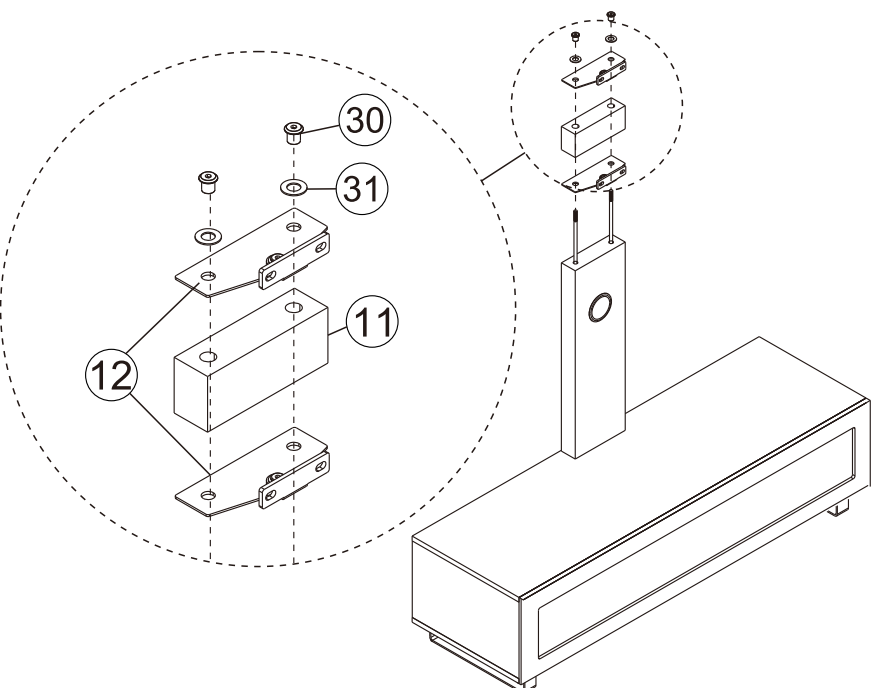

13

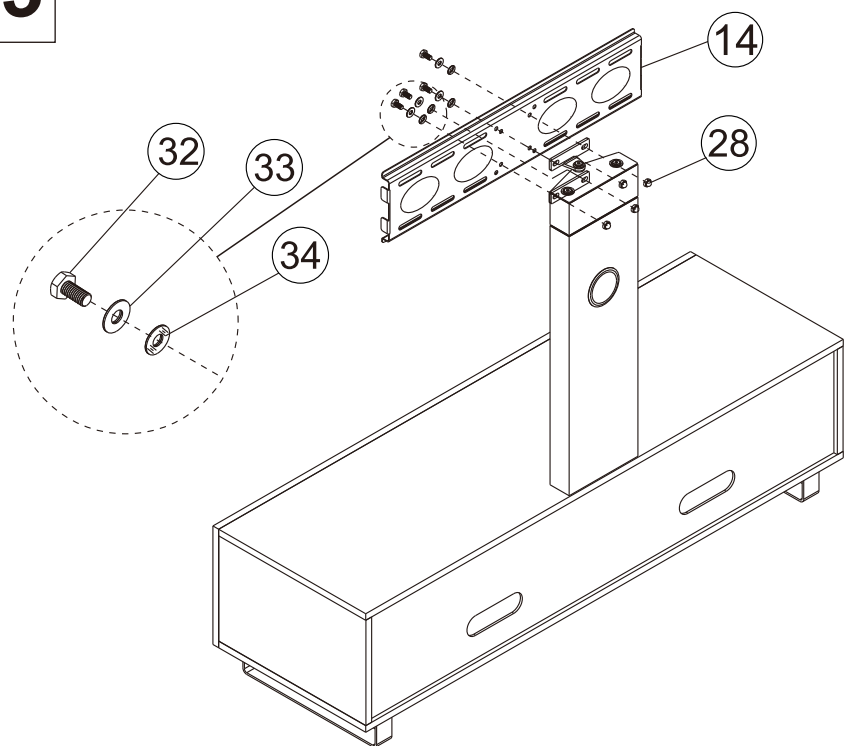 

14

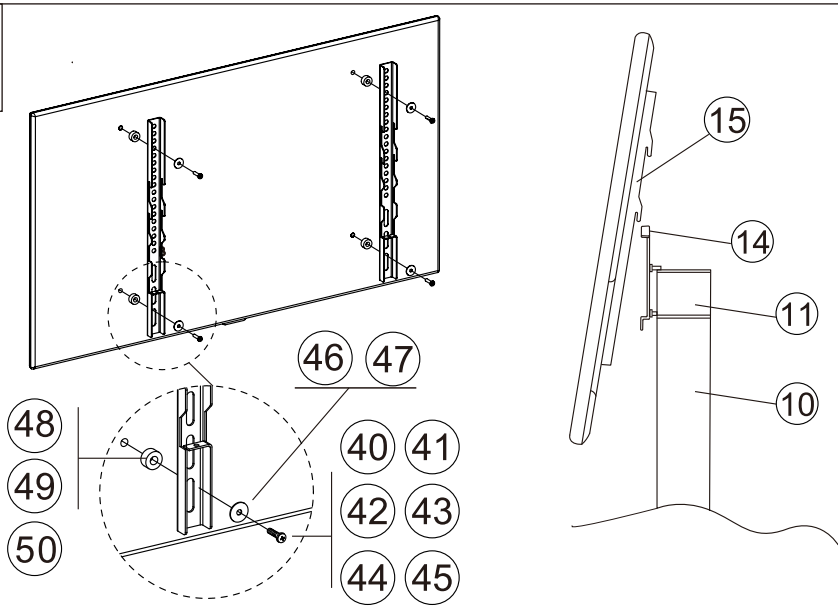 


Choose the correct TV fixing screw from those provided, using the plastic spacers supplied if necessary

40		M4x20mm	4	44		M6x30mm	4	48		18.5x5mm	4
41		M5x20mm	4	45		M8x45mm	4	49		18x10mm	4
42		M6x20mm	4	46		16x1mm	4	50		12x3mm	4
43		M8x20mm	4	47		20x1mm	4				


15



 The vertical supports have 2 height options
Please select the option that is best for you .

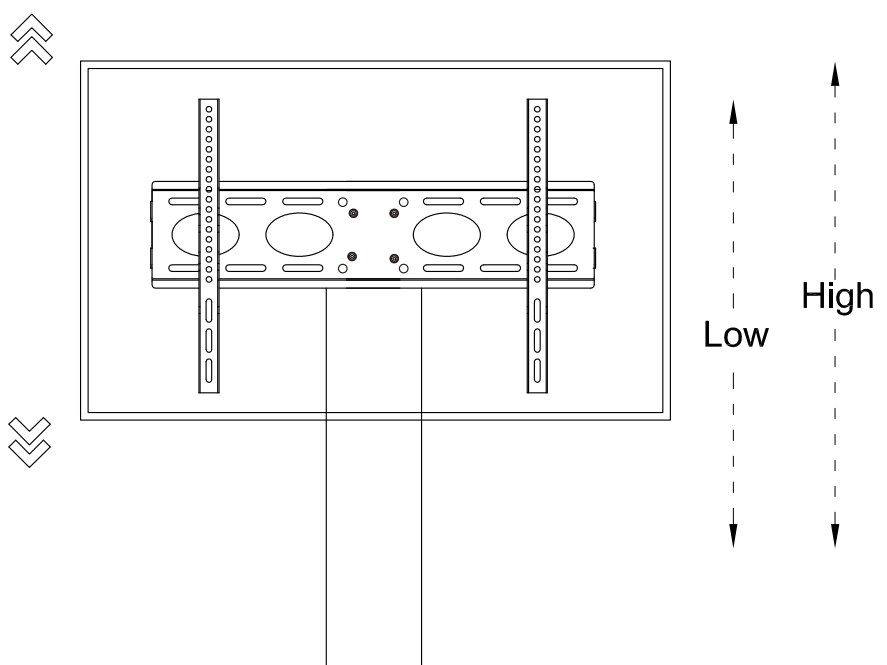

16

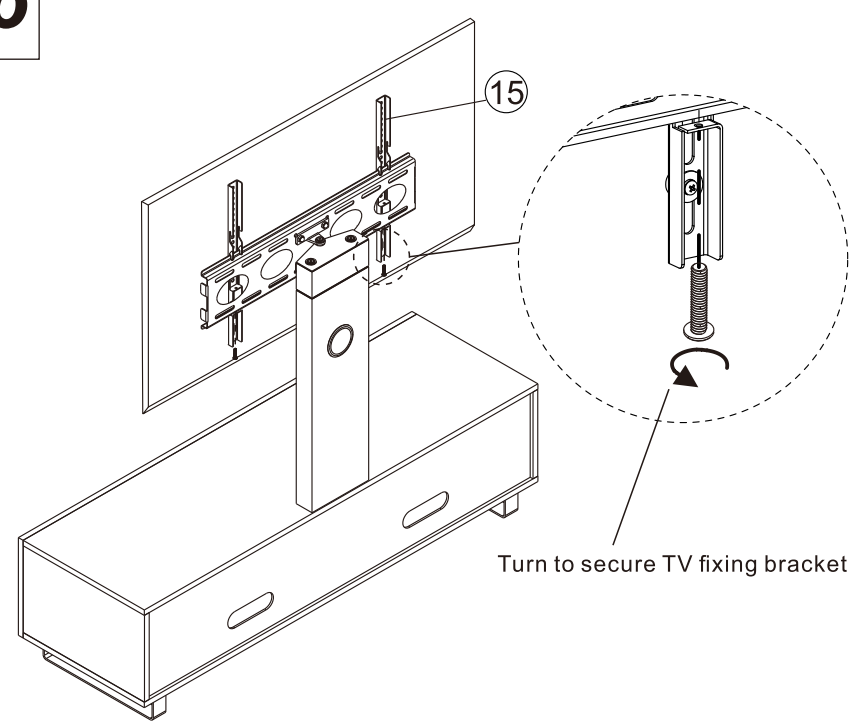 

17

