 


ASSEMBLY INSTRUCTIONS

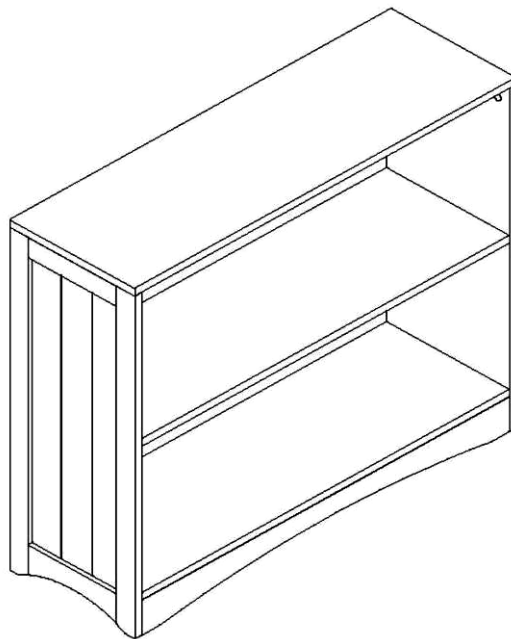

HORIZONTAL BOOKCASE

White

Espresso

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of the small parts. Care should be taken in unpacking and assembling this item to keep the small parts away from children.

WARNING

**Young children can be seriously injured or killed, if furniture tips over.
Don't use this item for a TV stand.
Use angle-braces or anchors to secure furniture to the wall.**

THIS SHELF UNIT WILL HOLD UP TO 25 POUNDS PER SHELF OR A TOTAL OF 75 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 25 POUNDS. IF LOADED WITH MORE THAN 25 POUNDS PER SHELF AS THIS MAY CAUSE DAMAGE TO THE SHELF AND MAY CAUSE SERIOUS INJURY OR DEATH.






WARNING

SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves.**
- **Do not set TV's or other heavy objects on the top of this product.**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

PARTS LIST

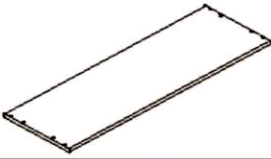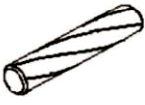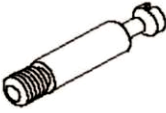
NO.	PARTS	QTY	DESCRIPTION
1		1PC	Top board
2		1PC	Left side panel
3		1PC	Right side panel
4		1PC	Bottom board
5		1PC	Middle shelf (with cam lock holes)
6		2PCS	Back panel
7		1PC	Décor board
A		9PCS	Wood dowel
B		12PCS	Cam bolt
C		12PCS	Cam lock
D		26PCS	Back screw M2.5X14mm

PARTS LIST

NO.	PARTS	QTY	DESCRIPTION
F		2PCS	Bracket
G		1PC	Plastic anchor
H		1PC	Wall screw M3.5x30mm
I		1PC	plastic lock strap

TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF POWER SCREWDRIVER IS NOT RECOMMENDED


STEP 1

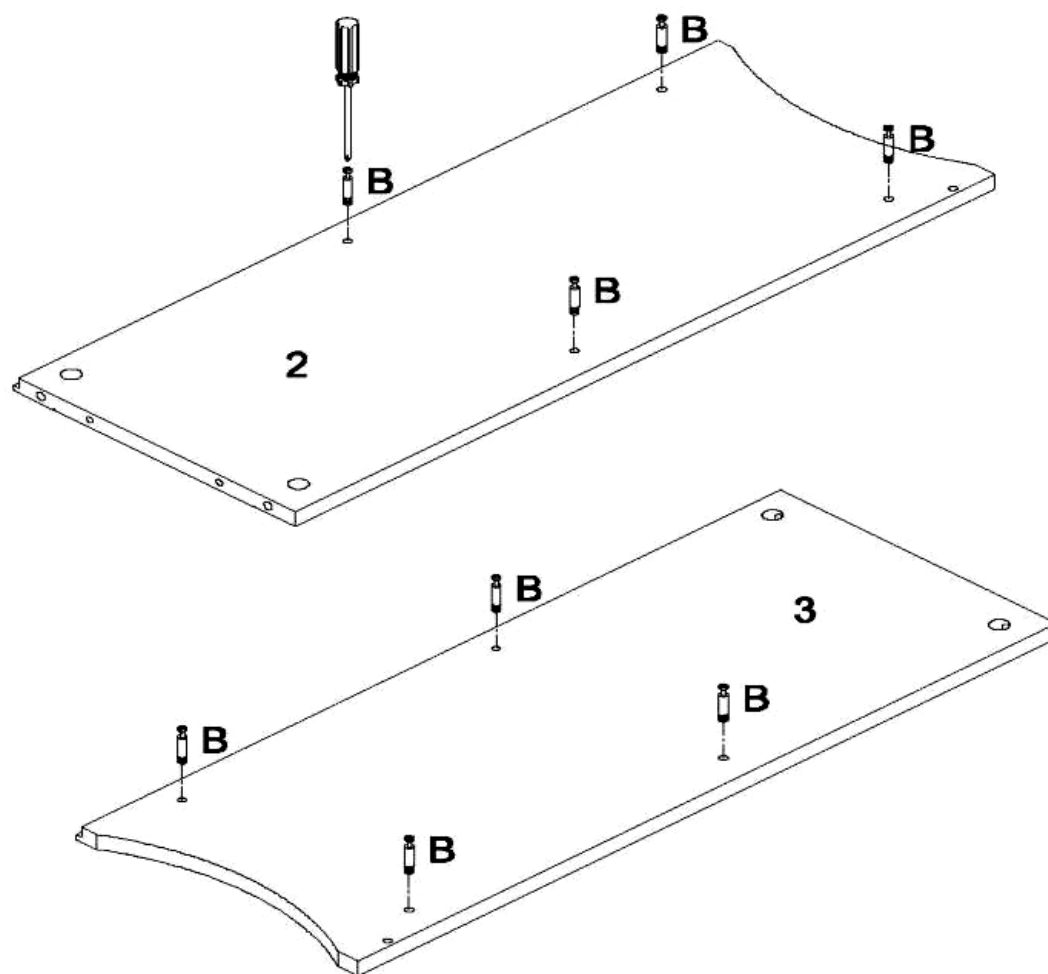

STEP 1:

1. Screw 4 cam bolts (B) into pre-threaded holes on left side panel (2) and tighten up by using a Philips screwdriver.
2. Screw 4 cam bolts (B) into pre-threaded holes on right side panel (3) and tighten up by using a Philips screwdriver.


STEP 2

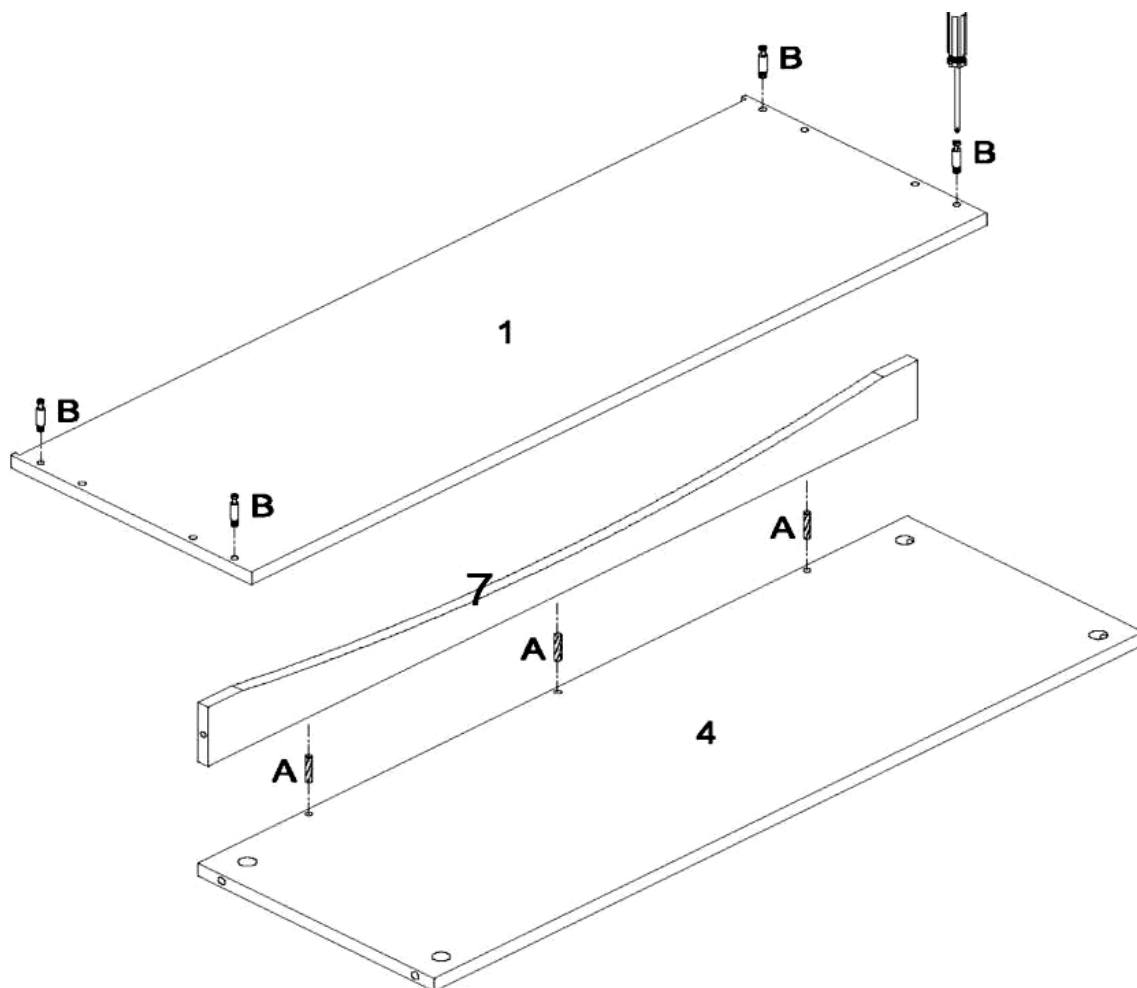

STEP 2

1. Screw 2 cam bolts (B) into pre-threaded holes on left side and right side of top board (1) tighten up by using a Philips screwdriver.
2. Insert 3 wood dowels (3) into décor board (7).
3. Attach décor board (7) to bottom board (4) by inserting 3 dowels into dowel holes of bottom board (4).


STEP 3

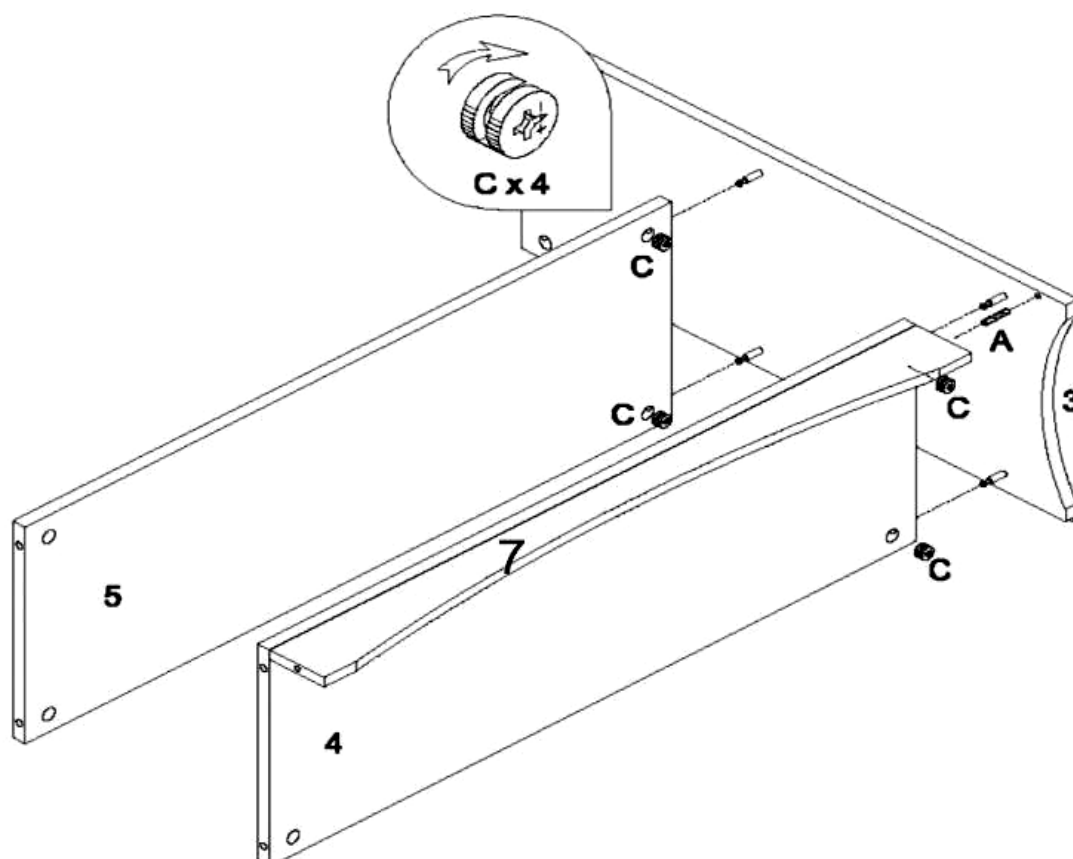

STEP 3

1. Insert 1 wood dowel (A) into dowel hole on bottom of right side panel (3).
2. Attach middle shelf (5) to right side panel (3) by inserting 2 cam bolts into cam lock holes on middle shelf (5).
3. Insert 2 cam locks (C) into cam lock holes on shelf (5) then rotate clockwise to secure cam bolts in place.
4. Attach bottom board (4) to right side panel (3) by inserting 2 cam bolts into cam lock holes on bottom board (4) and inserting wood dowel into dowel hole on end of décor board.
5. Insert 2 cam locks (C) into cam lock holes on bottom board (4) then rotate clockwise to secure cam bolts in place.


STEP 4

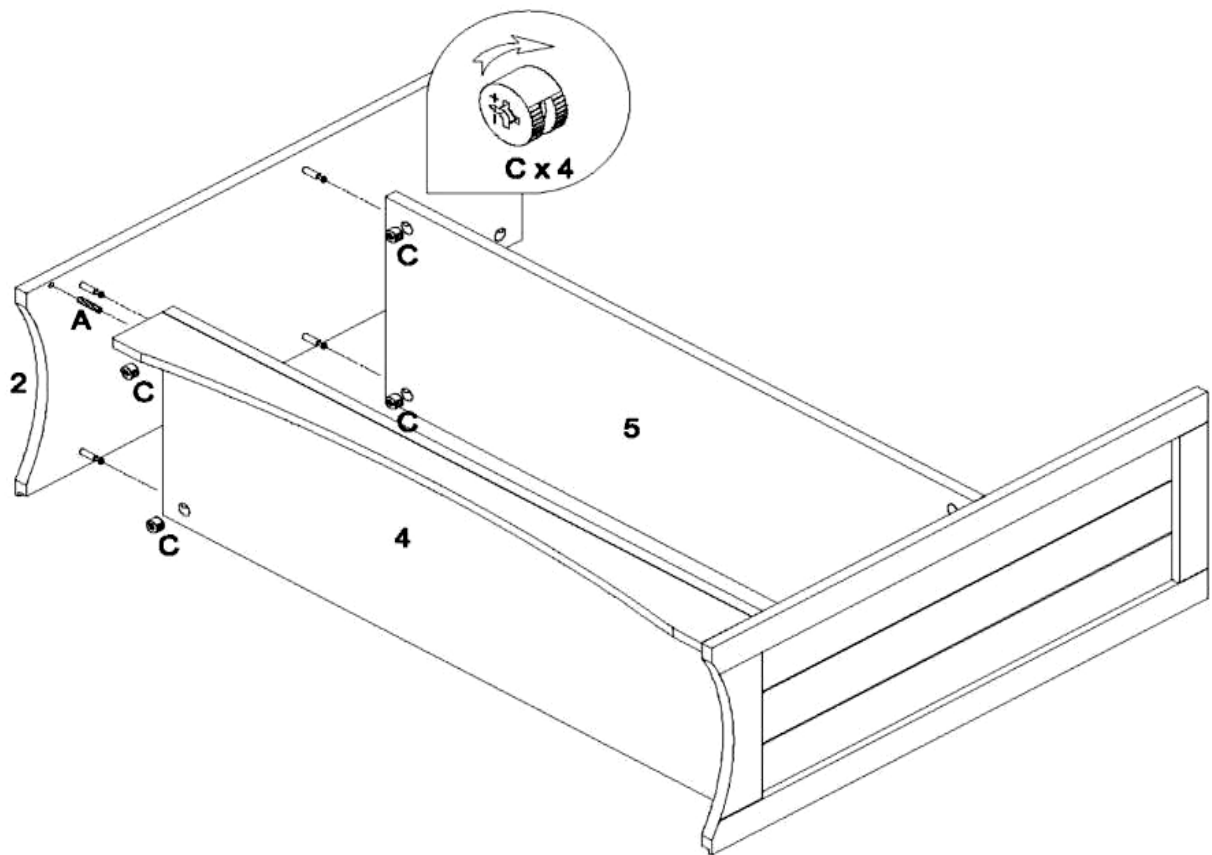

STEP 4

1. Insert 1 wood dowel (A) into hole on bottom of left side panel (2).
2. Attach the left side panel (2) to pre-assembled bookcase by inserting cam bolts into cam lock holes on middle shelf and bottom board, also inserting wood dowel into décor board.
3. Insert 2 cam bolts (C) into cam lock holes on middle shelf (5) then rotate clockwise to secure cam bolts in place.
4. Insert 2 cam bolts (C) into cam lock holes on bottom board (4) then rotate clockwise to secure cam bolts in place.


STEP 5

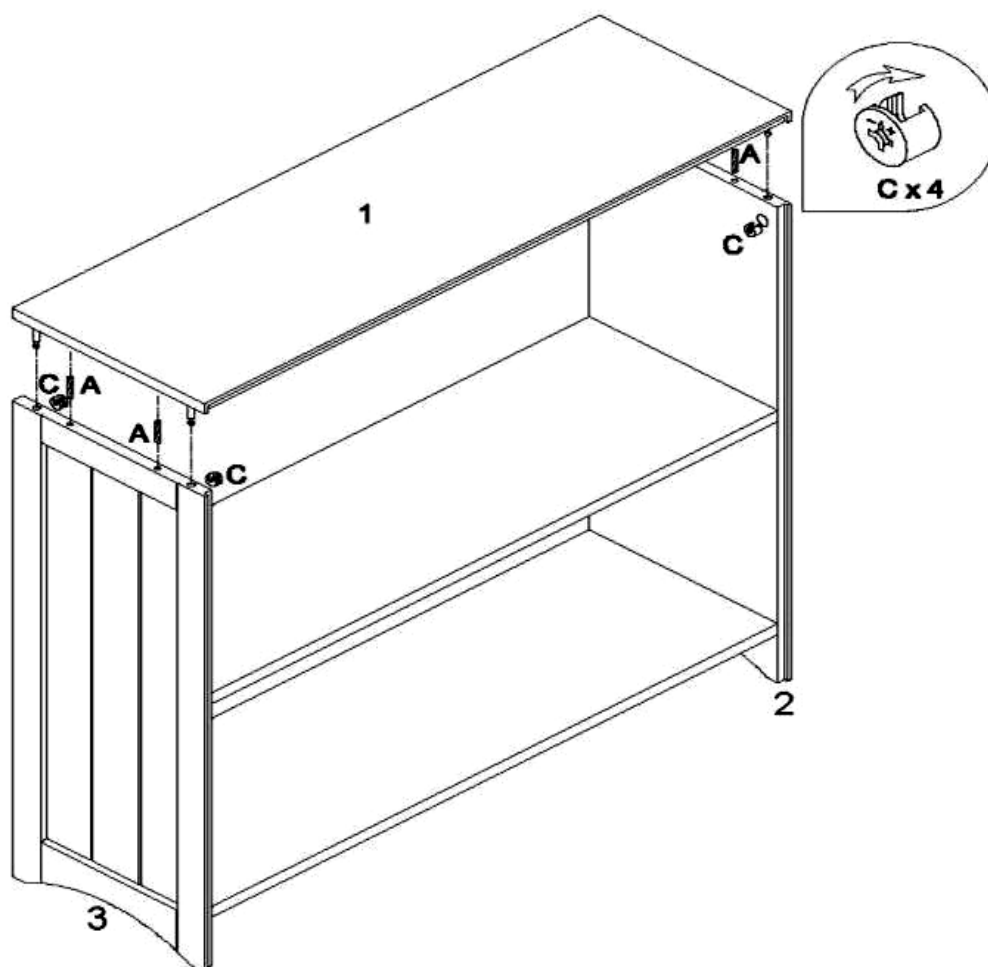

STEP 5

1. Place the pre-assembled bookcase upright, insert 2 wood dowels (A) into dowel holes on top end of both side panels (2 , 3).
2. Attach top board (1) to bookcase by inserting cam bolts (B) into cam lock holes on both side panels and inserting wood dowels (A) into top board (1).
3. Insert 2 cam locks (C) into cam lock holes on right side panel (3) then rotate clockwise to secure cam bolts in place
4. Insert 2 cam locks (C) into cam lock holes on left side panel (2) then rotate clockwise to secure cam bolts in place.


STEP 6

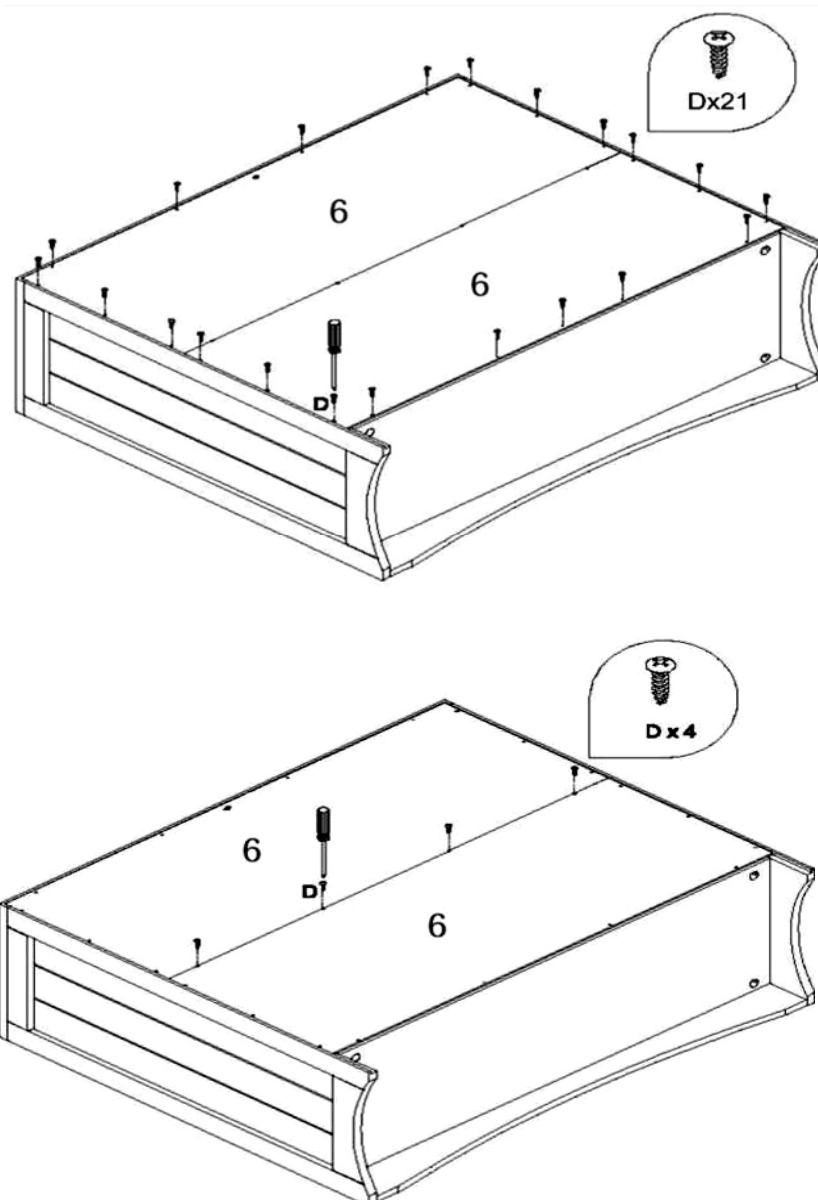

STEP 6

1. Attach 1 back panel (6) to upper back of bookcase.
2. Insert 10 screws (D) through holes surrounding back panel (6) then tighten to back of bookcase by using a Philips screwdriver.
3. Attach another back panel (6) to lower back of bookcase.
4. Insert 10 screws (D) through holes surround back panel (6) then tighten to back of bookcase by using a Philips screwdriver.
5. Insert 4 screws (D) through holes in between both back panel (6) then tighten to back of bookcase by using a Philips screwdriver.


STEP 7

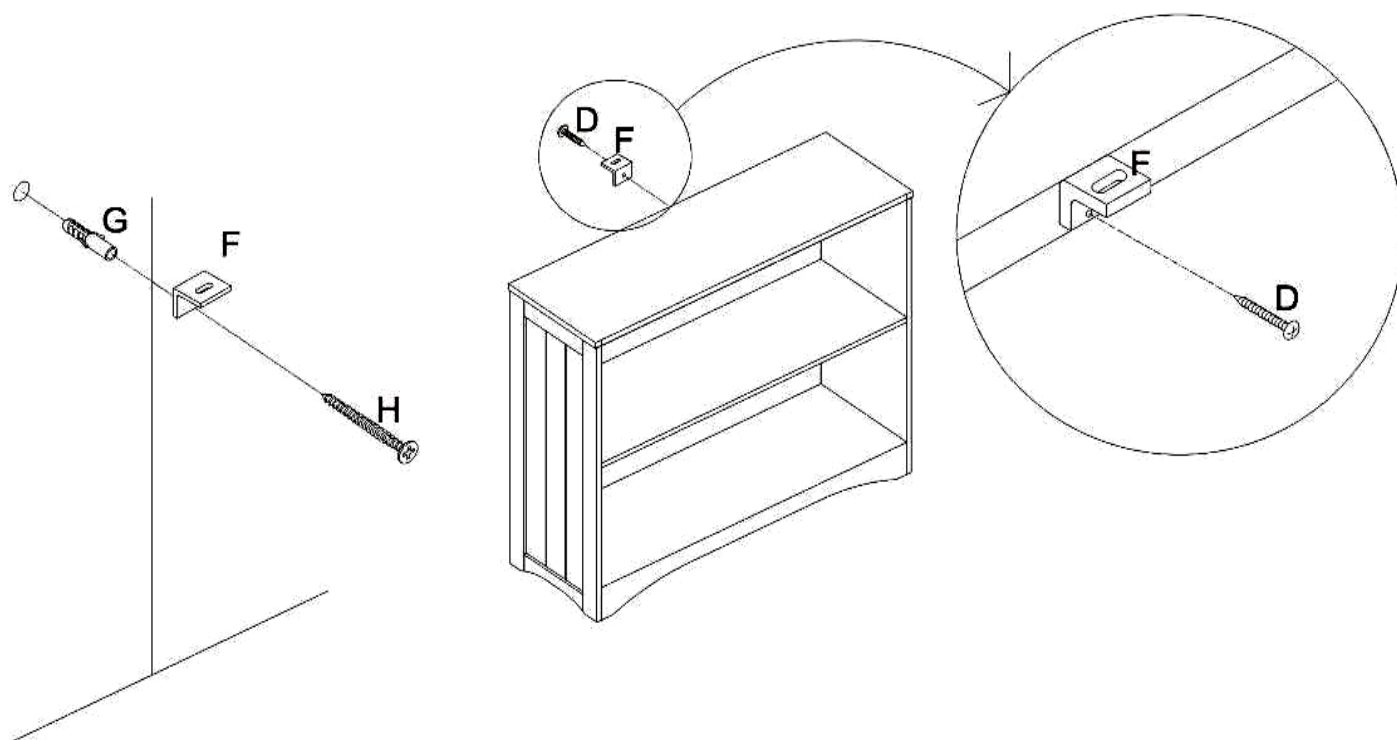

STEP 7


1. Attached one bracket (F) to the back of assembled cabinet by inserting 1pc wood screw (D) through the hole on the bracket (F), then tighten into the top board (1).
2. According to the height of bracket(F) that was assembled to the storage cabinet, drill one hole on the wall.
3. Insert the plastic anchor (G) into the hole on the wall.
4. Attach one bracket (F) to the plastic anchor (G) on the wall by inserting the wall screw (H) through the hole on the bracket (F) and tighten into the plastic anchor (G).

STEP 8

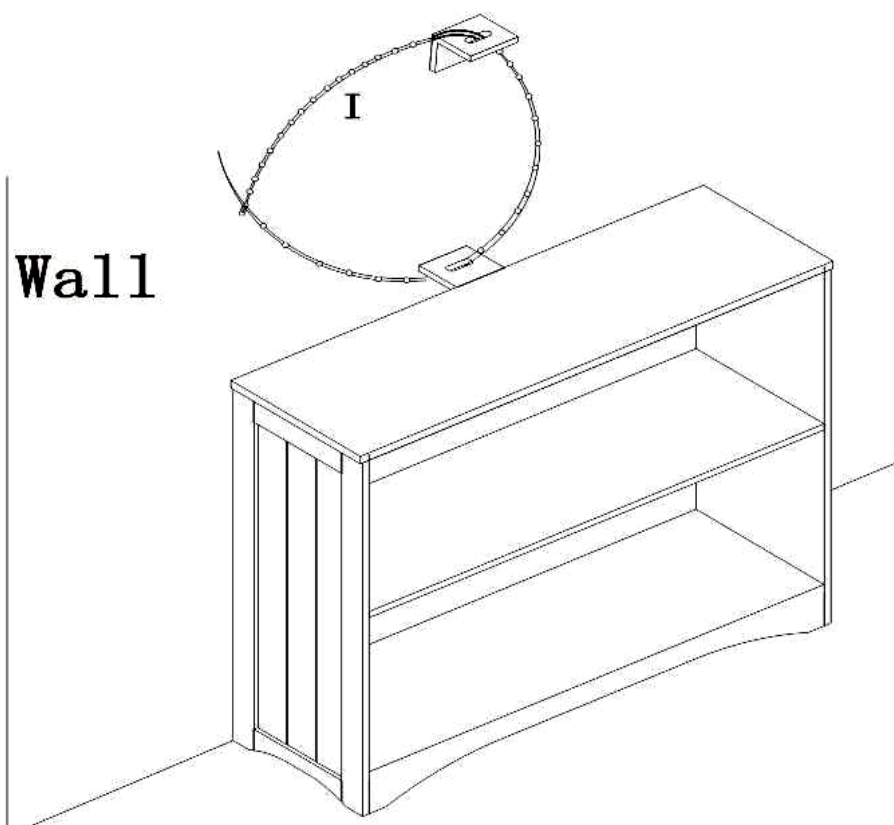

STEP 8

1. Place the storage cabinet against the wall and close to the bracket (F).
2. Insert plastic lock strap (I) through the hole on the bracket (F) which assembled on the storage cabinet, then through the hole on the bracket (F) on the wall, then fasten the plastic lock strap (I) to fix the 2 bracket (F) firmly.

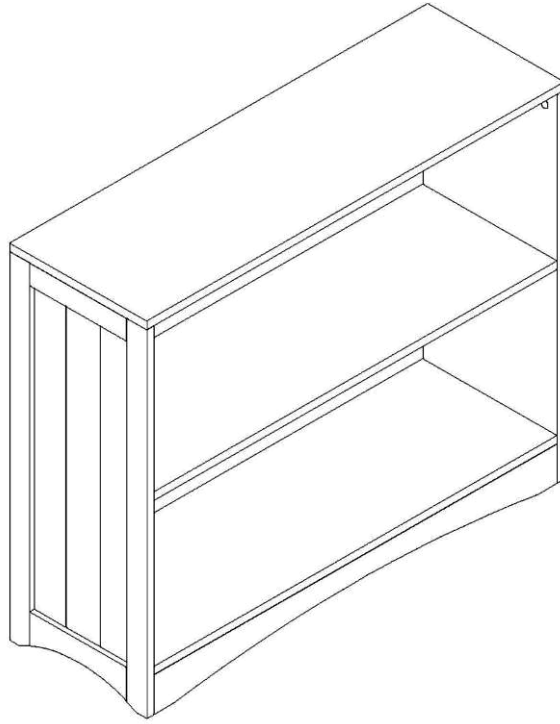

ENJOY YOUR NEW CABINET NOW !

Attention Adults: The cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct the hazard such as tightening of screws and taking any damaged parts away from the children.

Thank you for purchasing this Products item. We hope you enjoy it, and consider purchasing other items.