



**Q1:** How to adjust the gap size of the door panels?

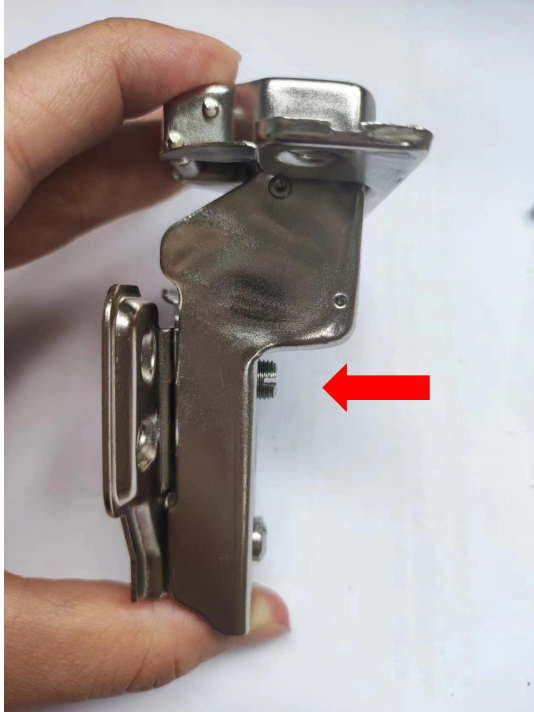

Please use a screwdriver to turn the screw in order to adjust the size of the door gap


**Q1:** How to adjust the gap size of the door panels?

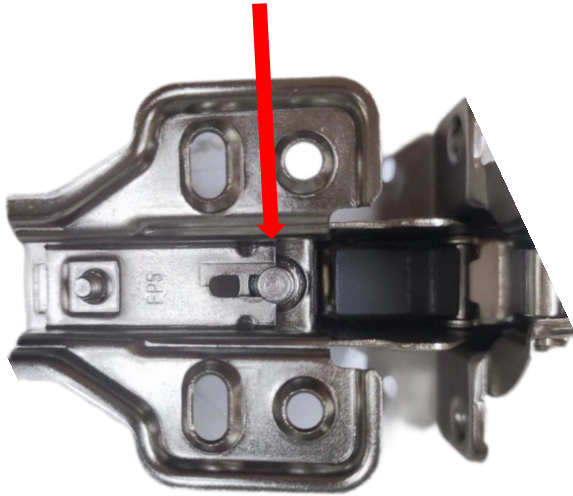

If rotating this screw doesn't allow you to adjust the door gap size, you will need to remove the door hinges, and then adjust the area behind it to ensure that the screw aligns with the slot.

Then repeat the previous steps.

**Q2:** How to adjust the misalignment of the door panels front and back?

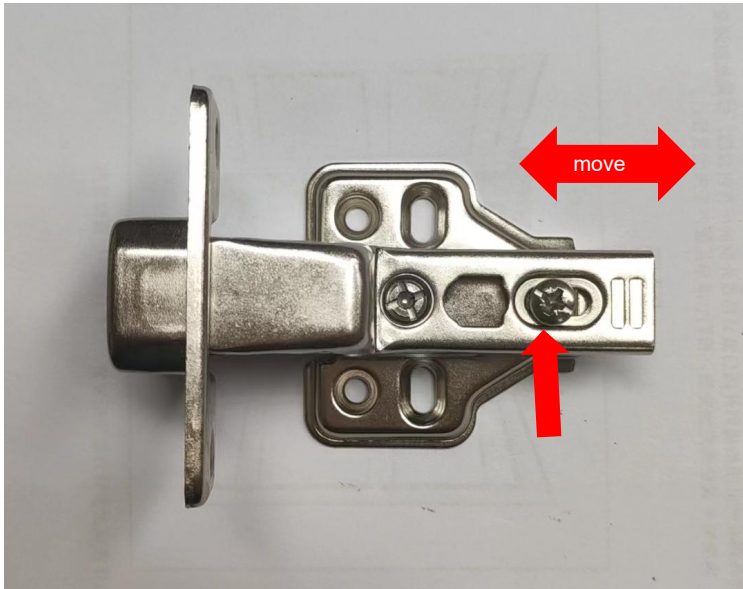

Loosen this screw, then adjust the front and back position of the door by moving the door hinge itself to achieve the desired position. Finally, tighten the screw to secure it in place.