

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS AND
SAVE THIS INFORMATION.

Should you discover any of the following:

- A. Cut, damaged, or frayed wire insulation.
- B. Cracks in the lamp holders or enclosures.
- C. Loose connections or exposed wire.


DO NOT PLUG IN THE TREE.

CONTACT THE DEALER WHERE IT WAS PURCHASED.

1. Before using and prior to each season inspect product carefully.
2. When not in use store tree in cool, dry, location protected from sunlight. Temperature not to exceed 100°F.
3. Do not use this tree for other than its intended use as an indoor decoration.
4. Unplug the tree when leaving home, retiring for the night, or if it is to be left unattended.
5. Do not let the lamps rest upon any electrical cord or the branch wire.
6. This is not a toy. To avoid risk of fire, burns, personal injury, electrical shock, etc. The tree should not be disturbed except for set-up and take down.
7. Do not place near gas or electric heaters or near fireplaces.
8. Do not decorate or cover the tree with any flammable products.
9. Hang ornaments only on the tree branches, not on electrical wires.
10. This tree employs an overload protection fuse. If a fuse blows unplug the tree from the wall. Also unplug any items you may have plugged into the tree system. A blown fuse indicates an overload or short circuit situation. Replace the fuse per the user servicing instructions and check the tree. If the new fuse blows contact your dealer for repair.

ASSEMBLY INSTRUCTIONS


1. Before assembling your tree, choose a location near a wall outlet. Be sure the surface is level.

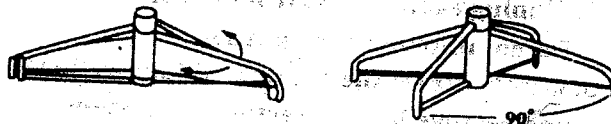

2. Pull apart the legs of the stand until it forms an "X" and line up the thumbscrew holes.
3. Carefully screw each thumbscrew into the holes only until you can see or feel the screw flush with the inside of the tube.
4. Place the stand where you plan to use the tree.
5. Carefully insert the bottom section of the tree (marked with the highest letter) into the stand. Tighten thumbscrews so tree is level and secure.
6. Remove bottom tie. Allow branches to fall into place. When adjusting branches be sure all wires are free of branch hinges.
7. Shape each branch. Start with tips closest to the pole: bend one to the right, one to the left, and one up over the center of the branch. Remove the next tip and repeat.
8. After shaping the whole bottom section, step back and take an overall look at the section. Shift tips to fill any gaps.
9. Locate the long extension cord on the bottom section and plug into the wall outlet. Ensure the lights are working.
10. Place the section with the next highest letter into place atop the bottom section. Plug the power cord from this section into the receptacle in the bottom section.
11. Follow steps 6 thru 10 for each section until your tree is complete.

Warning: When Lowering Branches Don't Let Wires Get Caught In Hinges.

Attention: Trees 9" And Above May Come With More Sections Than This Illustration. Some May Have 4 Or 5 Sections Depending On Height. If They Have More Than 3 Sections They Will Be Labeled "C" & "D". Please Assemble Starting With Section "A" And Work Up To Section "Top" (Top Section) Last.

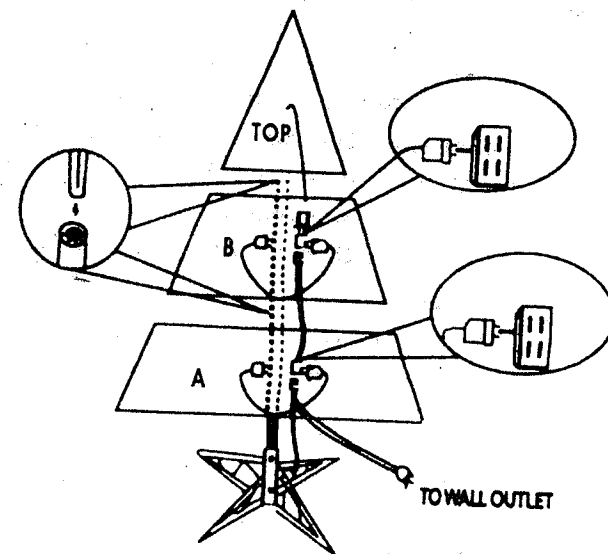

REPLACEMENT OF LIGHTS

1. Grasp plug and remove for the receptacle or other outlet device (surge protector, etc.).
2. Pull lamp and plastic base straight out of lamp holder. Grasp plastic not glass.
3. Replace lamp only with replacement provided with tree.

REPLACEMENT OF FUSES

1. Grasp plug and remove from receptacle or other outlet device (surge protector, etc.).
2. To expose fuse, slide open fuse access cover on top of plug, toward blades.
3. Remove fuse from holder.
4. Replace fuse with spare from other side of fuse compartment.
5. Slide fuse cover closed.
6. If fuse blows again contact dealer for assistance.


STORAGE INSTRUCTIONS

1. Unplug extension cord from wall outlet.
2. Unplug each section from the section below.
Do not unplug each light set.
3. Gently lift off the top and middle sections, and remove bottom section from stand.
4. Carefully place each section in original box or tree storage bag, seal shut and store in a cool, dry place where the temperature does not exceed 100 F.

LIMITED 5 YEAR WARRANTY

The manufacturer warrants this product to be free of manufacturing defects for a period of 5 years excluding lights, which are warranted for a period of 1 year from the date of purchase. The manufacturer will replace such defective parts at no charge. The consumer's sole remedy shall be such replacement as expressly provided above and the manufacturer shall in no event be liable for any incidental or consequential damages arising out the use of, or inability to use this product for any purpose whatsoever. This limited warranty does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear. Contact the dealer where purchased for claims.

TREE ASSEMBLY AND SAFETY INSTRUCTIONS

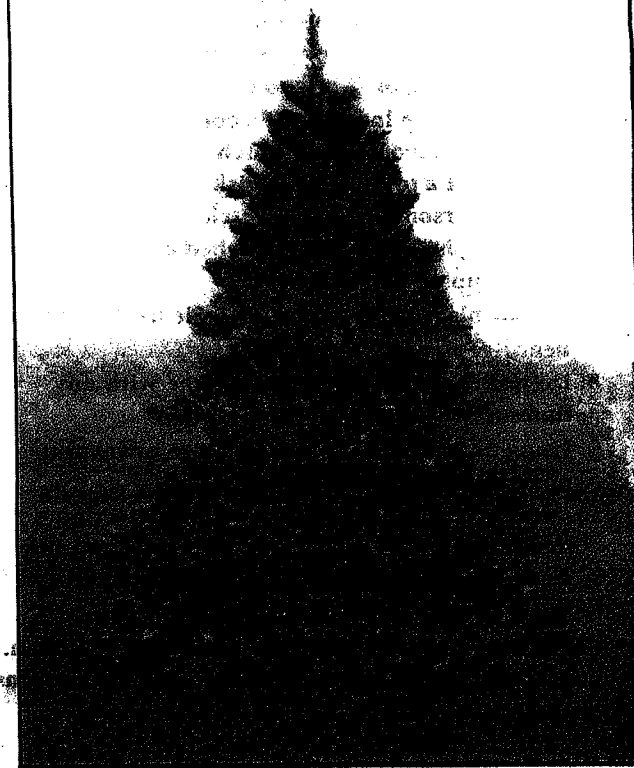

HINGED TREE ASSEMBLY INSTRUCTION

HELPFUL HINTS:

Please read the instruction completely before you assemble your tree. The model number of your tree was printed on the side of the carton. Always use this number to identify your tree if any question arises.

Save the carton for storing your tree.

Use miniature tree lights.

The stand shown here may differ from the stand which your supplier provided.

ASSEMBLY


1. Assemble – Insert tree pole into the stand. If the tree was divided into two sections, please assemble the two sections, place pole and secure tight into stand.

2. Shape the branches. – Start from branches nearest to pole. Fan out one tip to the left, one to the right and one at the center of the main stem.


Alternate branches to avoid they line up after others. At the end of the stem, the tips of center branch should be extended straight out. Curve each branch slightly to make the tree have a natural look.

3. Shape the top section – Pull down branches of

BRANCHES IN UPRIGHT
WILL UNFOLD DOWN
AUTOMATICALLY.

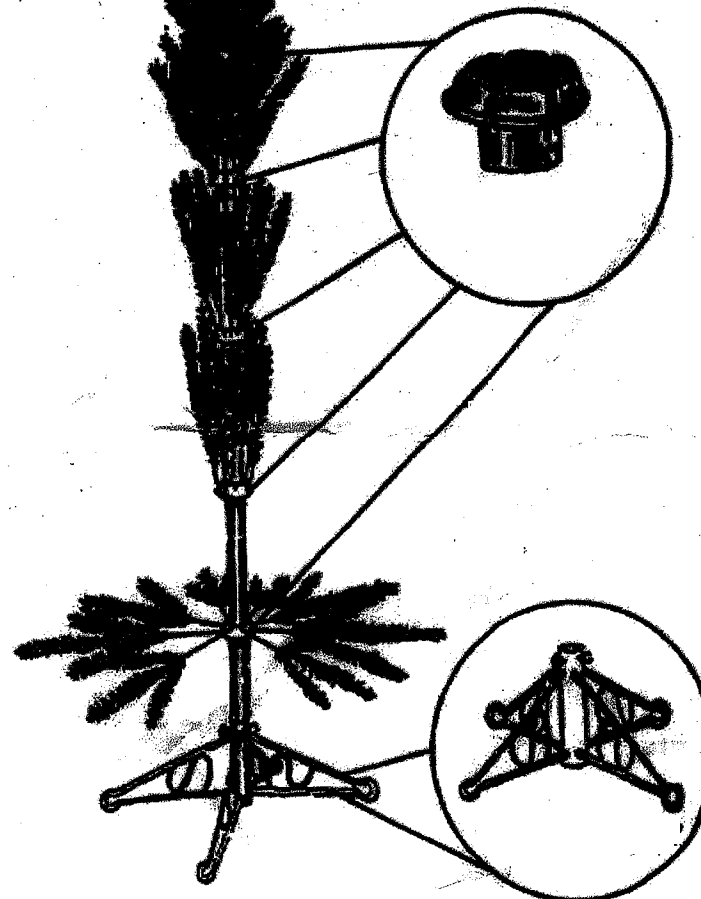

Alternate branches to avoid they line up with others. At the end of the stem, the tips of center branch should be extended straight out. Curve each branch slightly to make the tree have a natural look.

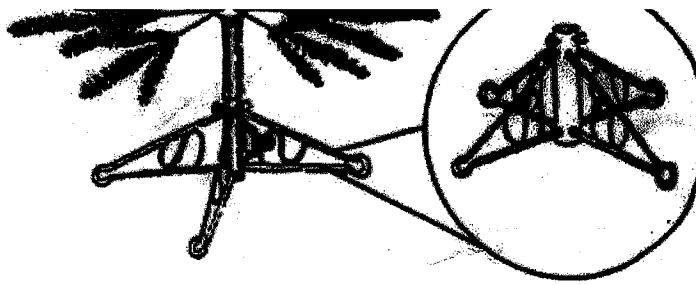

3. Shape the top section – Pull down branches of the lowest layer in an even circular pattern and repeat for each layer till the top branch. Curve each branch and top branch straight up to a fixed position.

**POSITION BRANCHES CORRECTLY TO
THE HINGE JOINT.**

4. Insert tree top section into the hole and make sure the pole is firmly inserted into the next section. The tree top should conform to the rest of tree.

Storage tips:

Pull out the plug and remove ornaments.

DO NOT store the tree in a damp area where the temperature is over 40°C.


Use and Care Instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions


Replace the fuse.

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 125 Volt fuse of same rating as fuse in attachment plug, either 3 Amp or 5 Amp, as appropriate (provided with product).
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

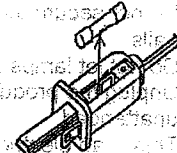

Replace the lamp.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Pull lamp and plastic base straight out of lampholder.
3. Replace lamp with only 2.5V, 0.425W, super bright type lamp (provided with product).

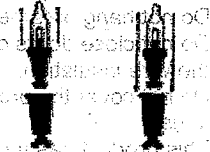

If the new lamp base does not fit in lampholder, follow the steps below before step 3.

- a) Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
- b) Thread leads of new lamp through holes in old base with one lead in each hole.
- c) After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.



CAUTION

1. To reduce the risk of overheating, replace burned-out lamps promptly. Use 2.5V, 0.425W lamps only.

MADE IN CHINA

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- n) This product is equipped with push-in type lamps. Do not twist lamps.
- o) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- p) Read and follow all instructions that are on the product or provided with the product.
- q) **SAVE THESE INSTRUCTIONS**