
 
## Assembly Instructions

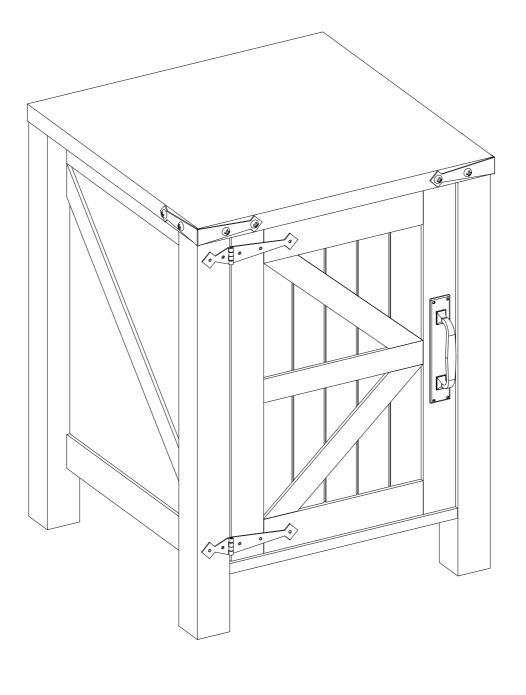

## **General Assembly Guidelines**

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.



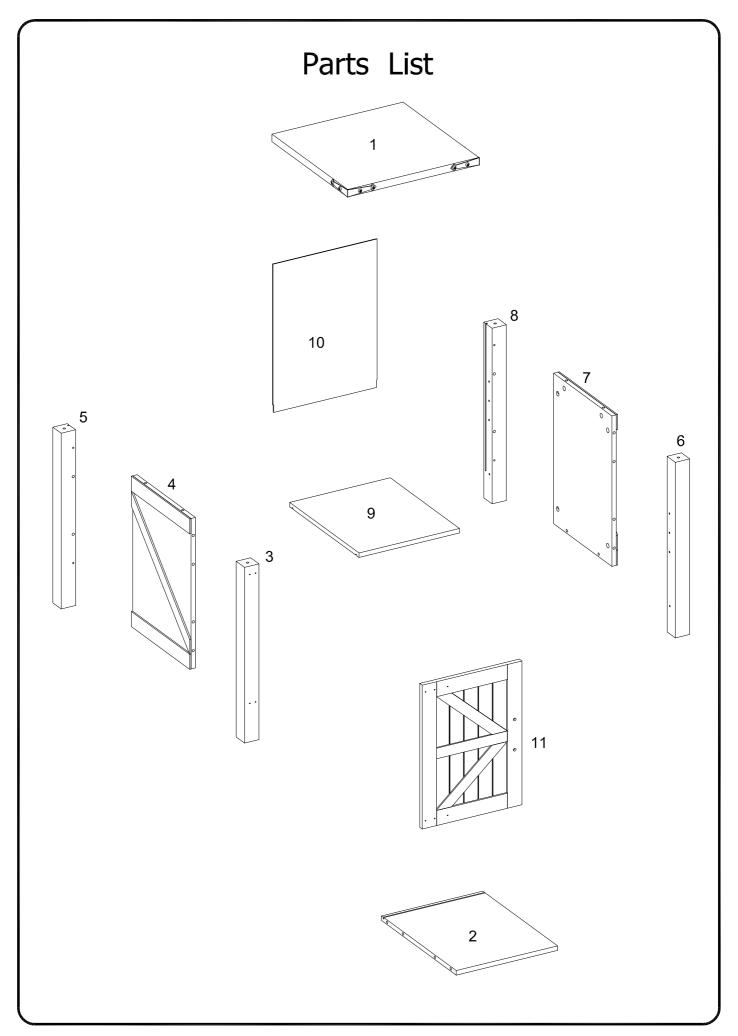

## Hardware List

 A B C		Ø8x30mm Ø6x35mm Ø15x11mm	Wood dowel Cam bolt Cam lock	16 16 16	pcs pcs pcs
D		Ø30mm	Sticker	16	pcs
E F		Ø8x5x16mm	Shelf support pin Glue	4 1	pcs pcs
G			Plastic wedge	4	pcs
Н		Ø3x17mm	Flat-head screw	4	pcs
J		Ø4x12mm	Handle bolt	2	pcs
K			Handle	1	pcs
L			Magnetic catch	1	pcs
M	<a>(3)</a>	Ø3x15mm	Screw	2	pcs
N	٠		Metal plate	1	pcs
0			Hinge	2	pcs
Р	{} <b>!!!!!!!!</b>	Ø3x12mm	Screw	11	pcs



Philips head screwdriver required for assembly (not included)

