

PLUM CHEF ELECTRICAL APPLIANCE CO., LIMITED
TOASTER | MODEL No.: THT-6015LE | HOUSEHOLD USE ONLY

PlumChef

User's Manual

*Read this booklet thoroughly before using
and save it for future reference*



PLUM CHEF ELECTRICAL APPLIANCE CO., LIMITED
TOASTER | MODEL No.: THT-6015LE | HOUSEHOLD USE ONLY

PlumChef

User's Manual

*Read this booklet thoroughly before using
and save it for future reference*



PLUM CHEF ELECTRICAL APPLIANCE CO., LIMITED
TOASTER | MODEL No.: THT-6015LE | HOUSEHOLD USE ONLY

PlumChef

User's Manual

*Read this booklet thoroughly before using
and save it for future reference*





Description

1. Bread slots
2. Cancel button/Stop
3. Defrost button/Defrost
4. Countdown timer
5. Reheat button/Reheat
6. Power button/On or Off
7. Push button
8. Stainless steel housing
9. Toaster darkness control / level 1-6
10. Bread mode control/ Bagel, White, Waffle, Muffin, Grain
11. Crumb tray

Technical Specifications

Power rating: 1300W, 120V~, 60 Hz

Power cord: Approx. 75 cm

Housing: Stainless steel

Features: 2 slot automatic toaster

6 functions: toast, reheat, defrost, stop, darkness control, bread mode control

LED display

Touch sensor

Self adjusting bread carriage for uniform toasting

Automatic cut-off

Removable crumb tray

Cable storage

Important Safeguards

PLEASE READ CAREFULLY-ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

1. Check that the mains voltage corresponds with the rating of the appliance before operating.
2. Do not touch hot surfaces-Use handles or knobs.
3. To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
4. Do not leave any appliance unattended while it is operating.
5. Close supervision is necessary when any appliance is used by or near children or infirm persons.
6. Unplug from outlet when not in use or before cleaning.
7. Allow to cool before putting on or taking off any parts.
8. Do not aerate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
9. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
11. Do not use outdoors.
12. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
13. To disconnect-remove the plug from the outlet.
14. Do not pull plug out by the cord.
15. Do not use this product for anything other than intended use.
16. This product is intended for household use only.
17. No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.
18. Use the toaster without bread for the first time. There will be some smoke at first; this is normal.
19. The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
20. Bread may burn, therefore this toaster must not be used near or below curtains and other combustible materials.
21. Do not place the cable or any other object over the bread openings whilst the toaster is in operation.
22. Do not attempt to dislodge food while the toaster is in operation.

23. Toasting lever must be in the ' UP ' position before attaching or disconnecting the plug from wall outlet.
24. Do not insert metal objects or other utensils into the toaster, as this will cause an electric shock or cause a fire.
25. Do not leave the toaster unattended whilst in operation.
26. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised
27. Keep the appliance and its cord out of reach of children less than 8 years old.
28. The surfaces are liable to get hot during use.
29. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The door or the outer surface may get hot when the appliance is operating

CAUTION: The appliance becomes hot during operation! 

Tips for ideal toasting results

1. Different types of bread have varying moisture content. Therefore, the same toast darkness setting can produce different results.
2. For bread that is slightly dry, use a lower toast darkness setting.
3. For fresh bread or whole grain bread, use a higher toast darkness setting.
4. Bread with an irregular surface requires a higher toast darkness setting.
5. Thick bread slices need more time for toasting; it may even be necessary to toast the bread a second time.
6. When toasting raisin bread, remove all raisins from the surface, since otherwise they could burn.
7. If you toast only one slice, please select a low toast darkness setting.
8. If you toast several slices one after the other, the bread will be somewhat darker at the same toast darkness setting.
9. To toast frozen bread, waffles, etc. Please use the thaw button.
10. You can choose the corresponding bread mode to get better toasting results.

Before using the appliance the first time

1. Remove all packaging materials and any transport safety devices.

2. Confirm that all accessories mentioned have been supplied.
3. Clean the toaster with a damp cloth.
4. Confirm that all components are properly assembled and the appliance is placed firmly.
5. Make sure that there is enough space between the toaster and the wall or other appliances, as the toaster will become hot during operation.
6. Connect the appliance to the mains supply by means of the lead cable (120 V~,60 Hz).
7. Before using the toaster for the first time, you will have to perform a toasting process without bread. Press the toast levers on both toaster parts down until they latch into place.
8. When the toasting is finished, the toast levers automatically jump up. You may now start toasting bread.
9. After completion of the heating cycle the bread is automatically ejected and all the indicator lights on, you can press the POWER button to light off.
10. If no operation occurs in 90 seconds, all the lights will be off and you need to press the POWER button for further operation. The selected function will be flashing.
11. If there is no bread mode selected, it will be started normal toasting.
12. Bagel function if for heating one side.

Operation - Toasting

1. Prepare the toaster as described in chapter “Before first use” .
2. Put the slices of bread into the slots of toast chamber.
3. Plug in, all the function light up and you can choose bread darkness and bread mode accordingly.
4. Push the toast levers down until they latch into place. The selected function will be light on and the countdown time is started.
5. You may interrupt the toasting process at any time pushing the function key ‘Stop’ .
6. When the selected toasting grade is achieved, the bread is ejected automatically. The appliance will be shut off.

Operation - Warming

The warming function can be used to warm up bread without toasting.

1. Place the bread slices in the slots in the toasting chamber.
2. Then press the function key ‘Reheat’ right away. The selected function will be flashing.
3. Press the toast lever down until it locks into place, the selected function will be light on and the countdown time is started.

4. The bread is warmed without being toasted.
 5. You can interrupt the warming cycle any time by pressing the “Stop” function.
 6. Please note that you cannot set the toast darkness/bread mode when using the Reheat function.
- The heating time is independent from other functions.

Operation - Thawing

The thawing function first thaws out the bread and then toasts it, which means that the thawing cycle lasts somewhat longer than the normal toasting cycle.

1. Place the bread slices in the slots in the toasting chamber.
2. Press the DEFROST function and select the desired toast darkness setting.
3. We recommend the following toast darkness settings:
 - *Light for bread from the refrigerator or thin frozen bread slices.
 - *Medium for frozen waffles
 - *Dark for thicker frozen bread slices and thick toast slices.
5. Press the toast lever down until it locks into place.
6. Then press the function “Defrost” right away, the selected function will be light on and the countdown time is started.
7. The bread is thawed and toasted.
8. You can interrupt the cycle any time by pressing the “Stop” function.

Cleaning and Care

1. Allow the appliance to cool before cleaning it.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquids or wash them in the dishwasher.
4. Wipe off the toaster with a damp cloth and a little dish washing detergent. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.
5. To remove stuck bread slices, unplug the toaster and turn it over and shake lightly. Never attempt to remove stuck bread slices with sharp or pointed tools or silverware.
6. Remove crumbs and any small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray on the side all the way out and empty it. Wipe the crumb tray with a damp cloth, then dry it thoroughly and push it back into the appliance.
7. The appliance must be completely dry before you use it again.

LIMITED WARRANTY

Plum Chef warrants to the original consumer or purchaser this Product is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Plum Chef at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States. For warranty or repair service: E-mail **plumchef@outlook.com**. Please have your Product's model number, date code (on rating label), your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION. LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO :

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance.
Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.



At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their label. You make an important contribution to protecting our environment by reusing, recycling or utilising old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located.

You can download these instructions and many other manuals, product videos and software from <https://plumchefkitchen.com/>

Manufacturer:	PLUM CHEF ELECTRICAL APPLIANCE CO., LIMITED
Address:	Room 3, 13/F, New Trend Plaza, 1-17 Sai Lau Kok Road, Tsuen Wan, Hong Kong

PlumChef

Plum-tastic
Start With PlumChef.

Your Culinary Partner.