

ASSEMBLY INSTRUCTIONS

Hanging Pumpkin Chairs



INTRODUCTION

Thank you for purchasing Hanging Pumpkin Chair! We have designed this chair for maximum comfort and safety. Please read this document carefully to get the most out of your chair.

FEATURES

 
Decorative, Retractable Canopy
Single point Hanger
Large Pillow
Two drink holders

WARNING

Follow these warnings to ensure your safety while using this chair:
Do not allow more than two people to sit in the chair.
Be sure to install the chair on a level, floor or solid outdoor surface.
Never stand on top of the chair.
Do not use the chair in high winds.
Always inspect joints periodically and tighten any loose bolts.
Never store any hazardous materials inside the chair.
Do not position the chair close to a camp fire.



PARTS LIST

Be sure to check that all parts of the chair have been shipped below:

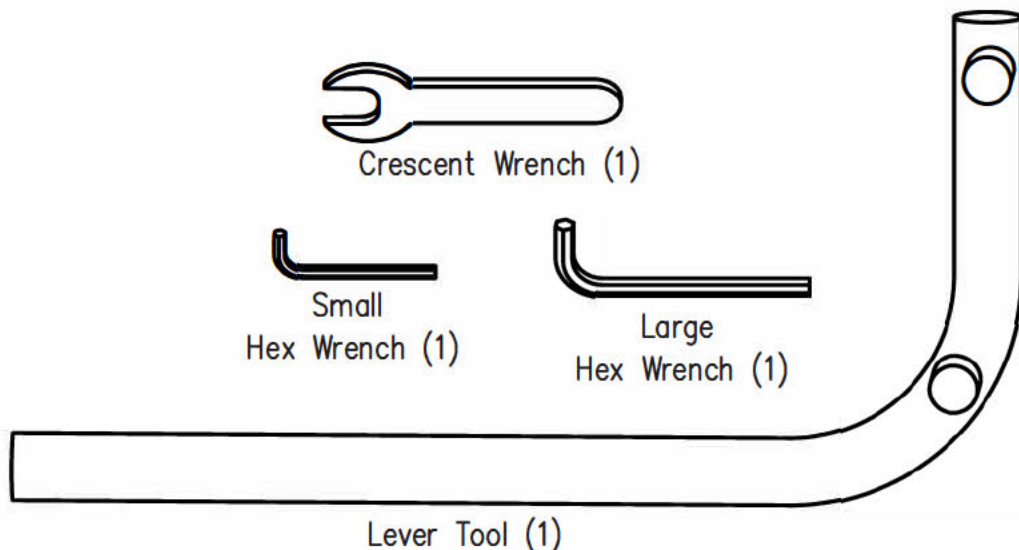


PARTS LIST (cont.)

  Be sure to check that all parts of the chair have been shipped below:

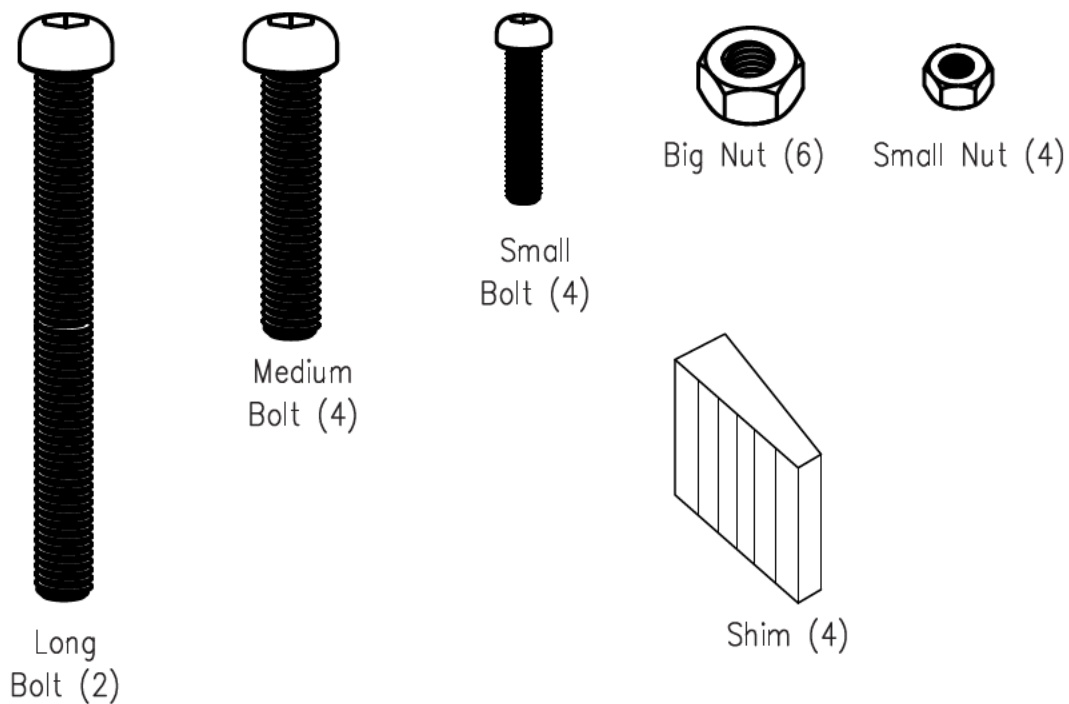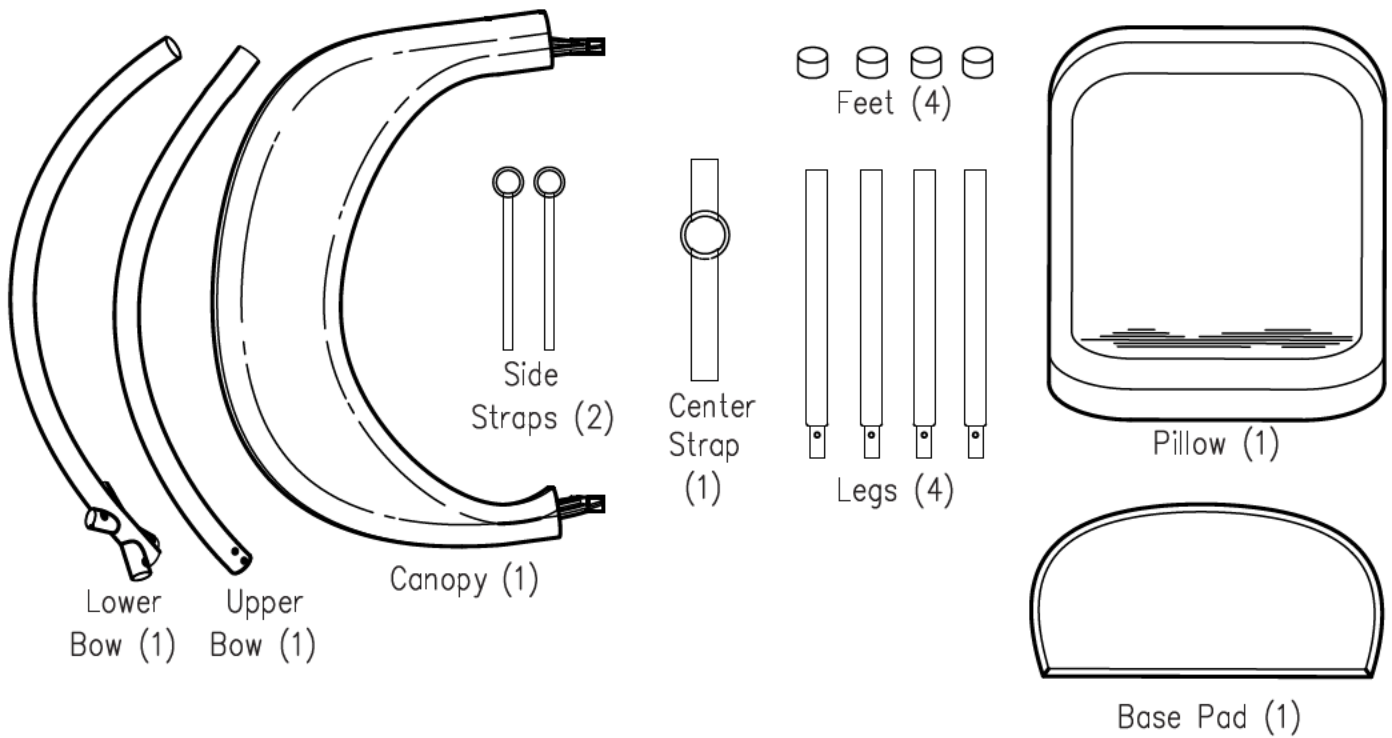


ASSEMBLY

 Use the crescent wrench to hold the nuts and the hex wrench to turn the bolts.

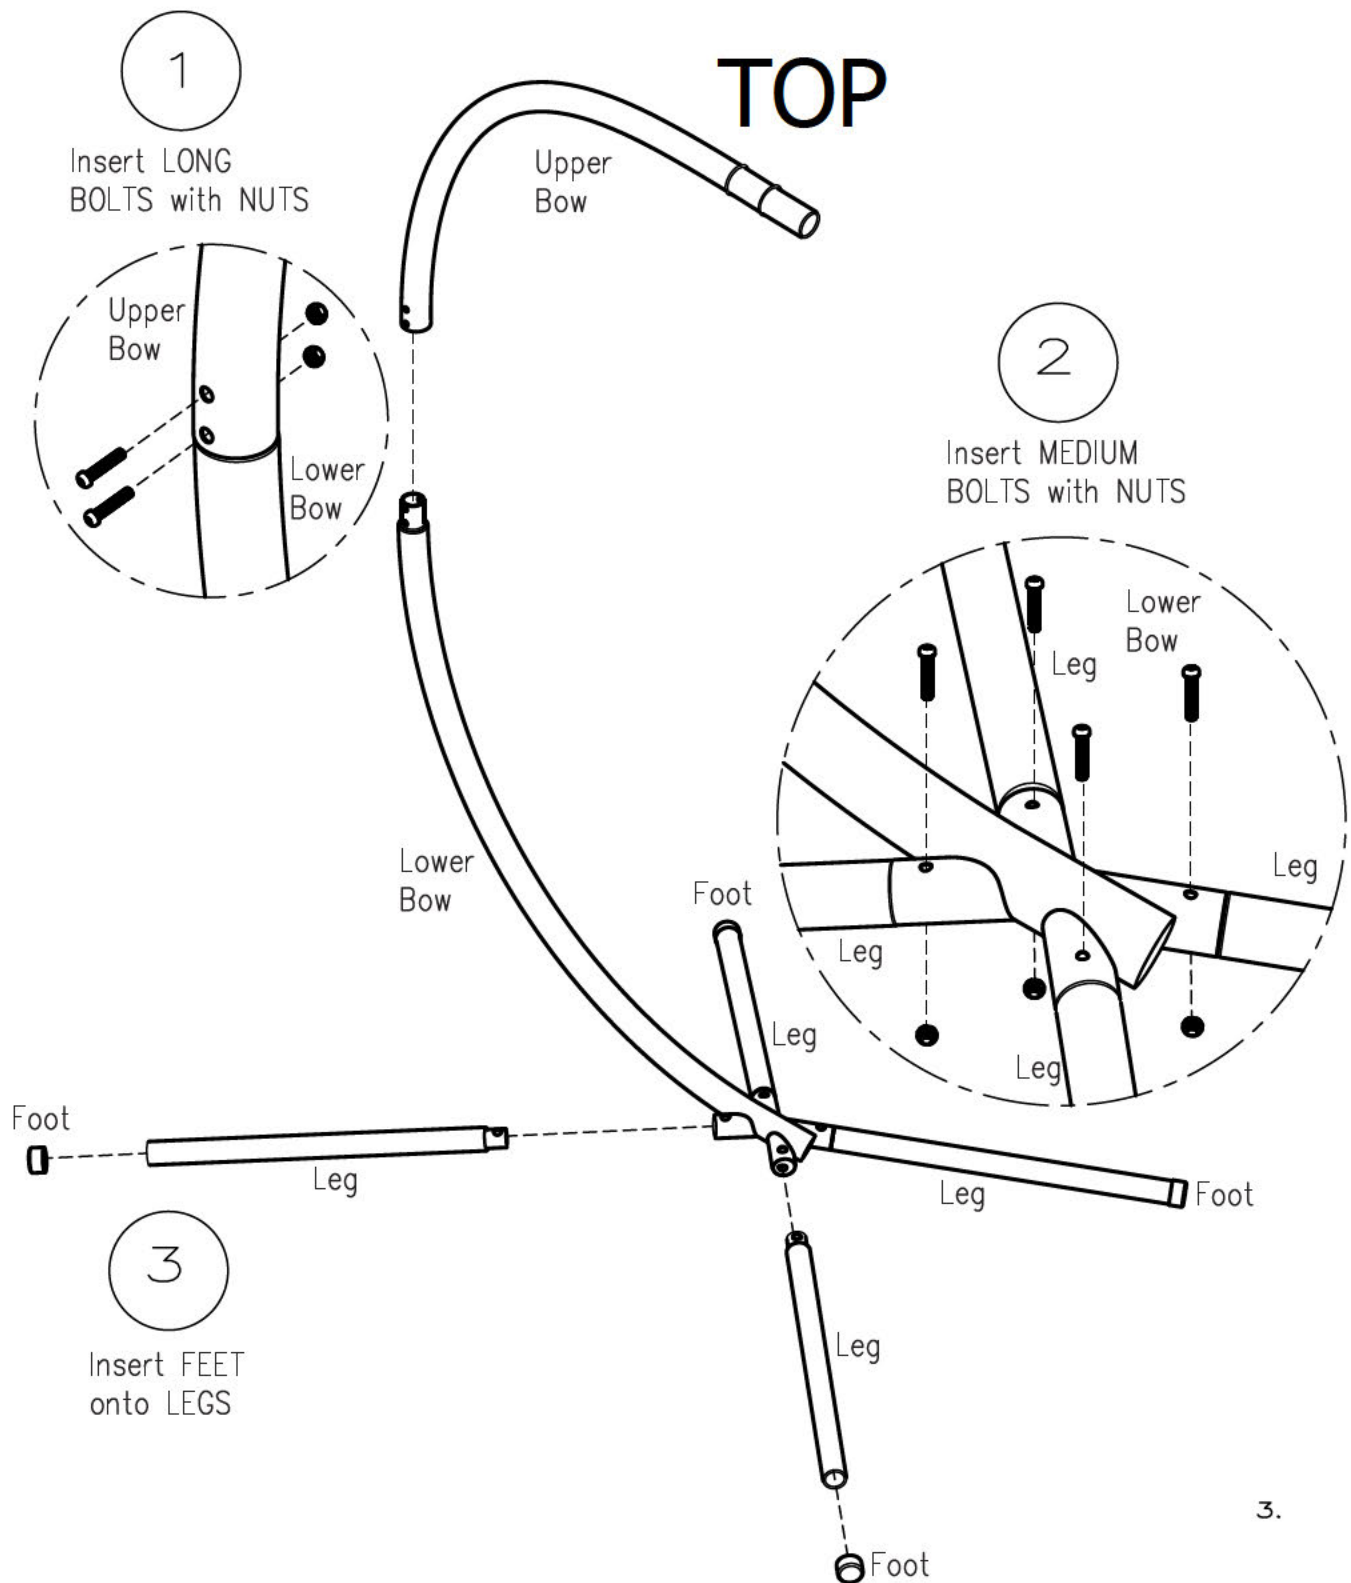


ASSEMBLY

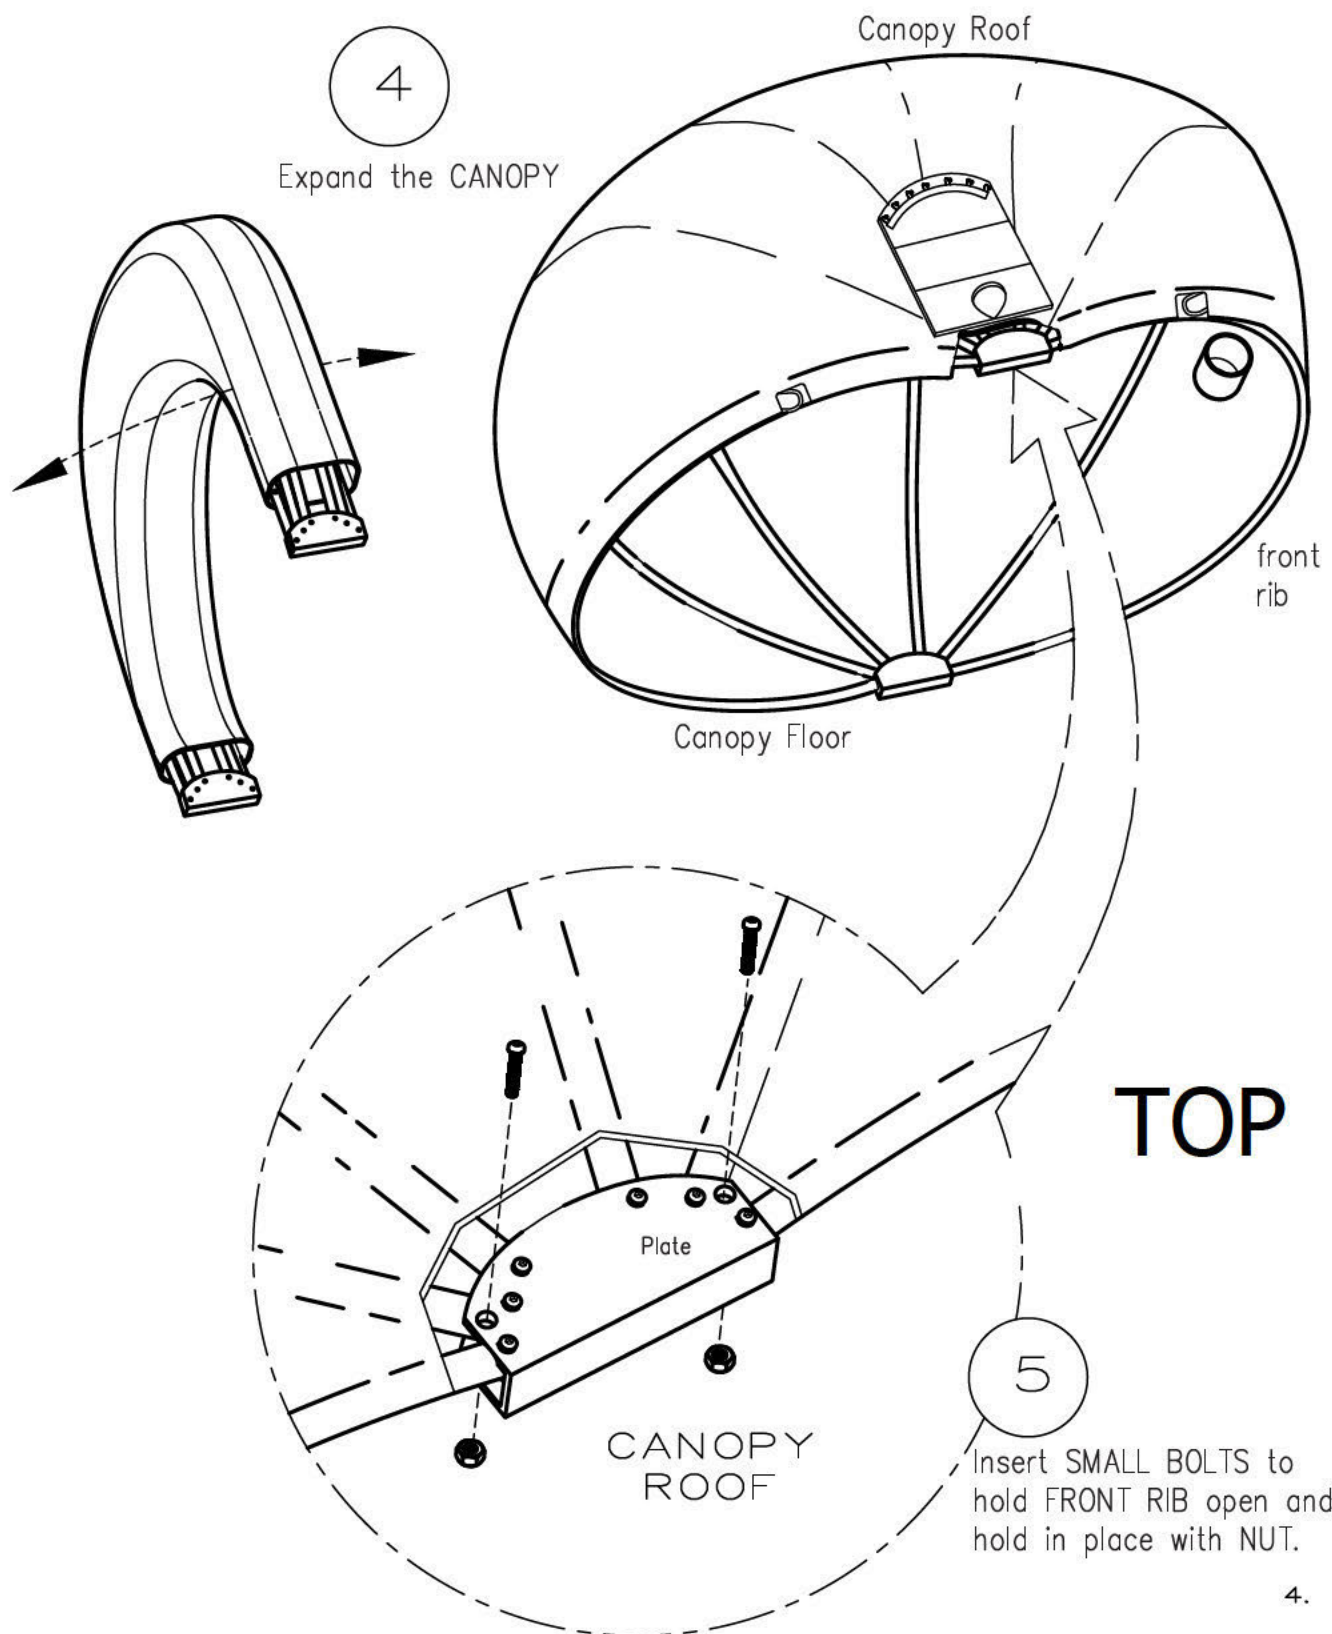 


ASSEMBLY

6

 Expand the CANOPY

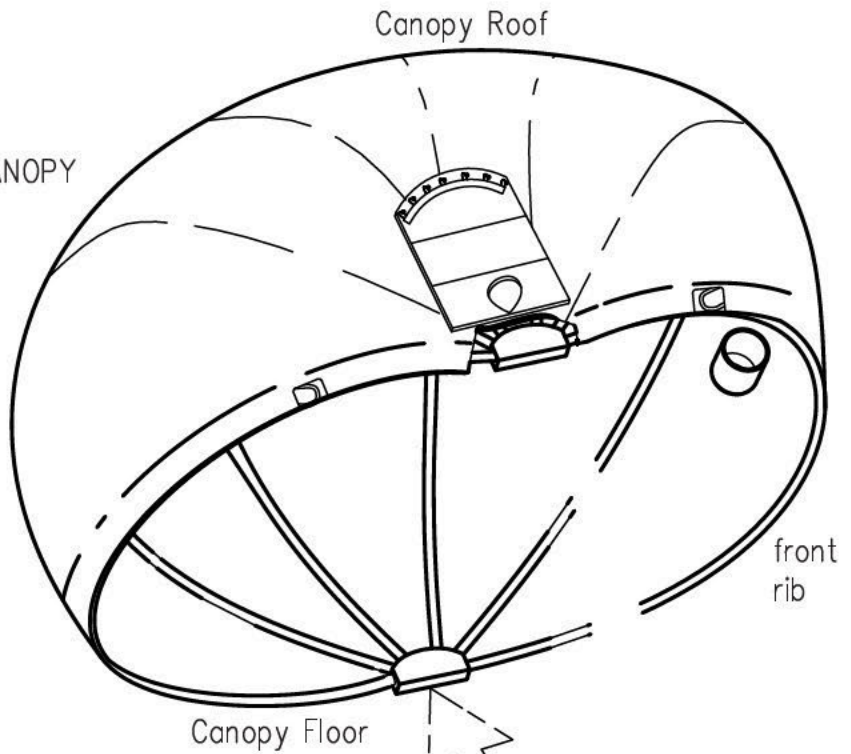



BOTTOM

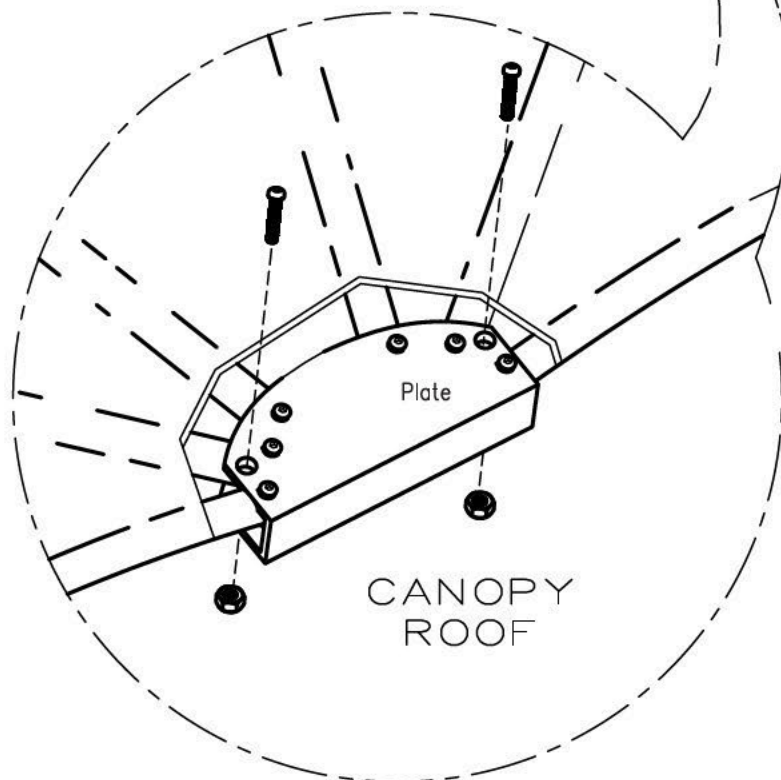 

7

Insert SMALL BOLTS to hold FRONT RIB open and hold in place with NUT.

  
ASSEMBLY

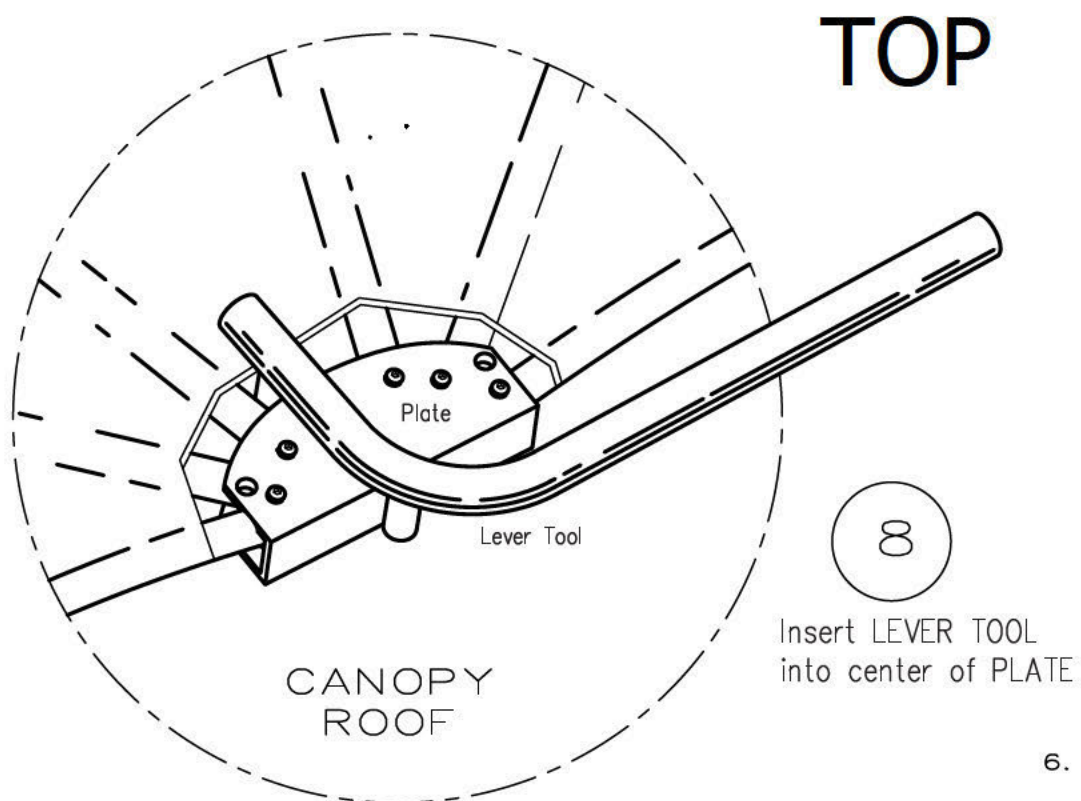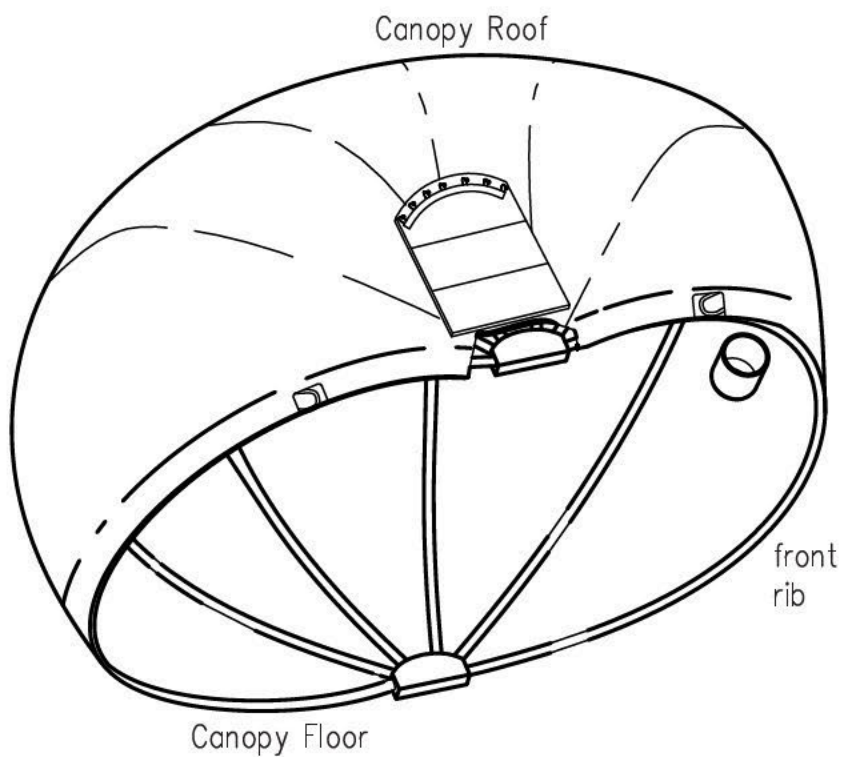

ASSEMBLY


9

 Grasp LEVER TOOL
and FIRST RIB

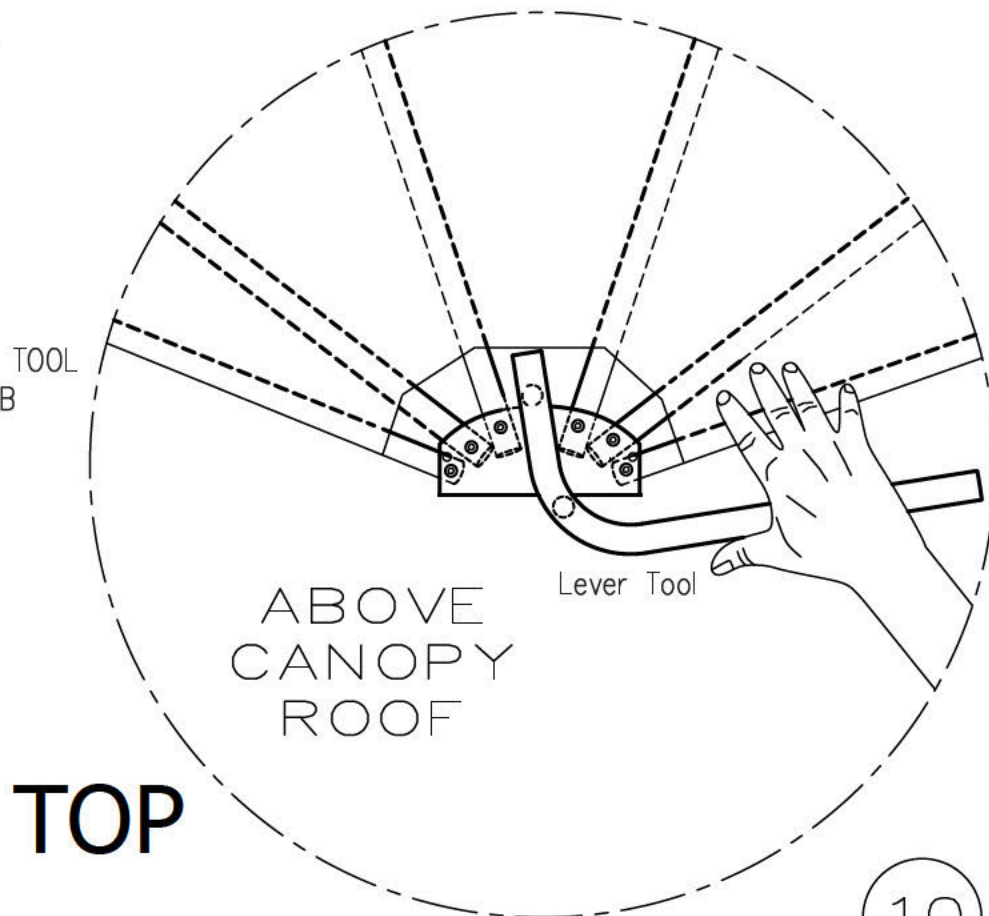

10

 
Insert SHORT BOLT
and SMALL NUT.

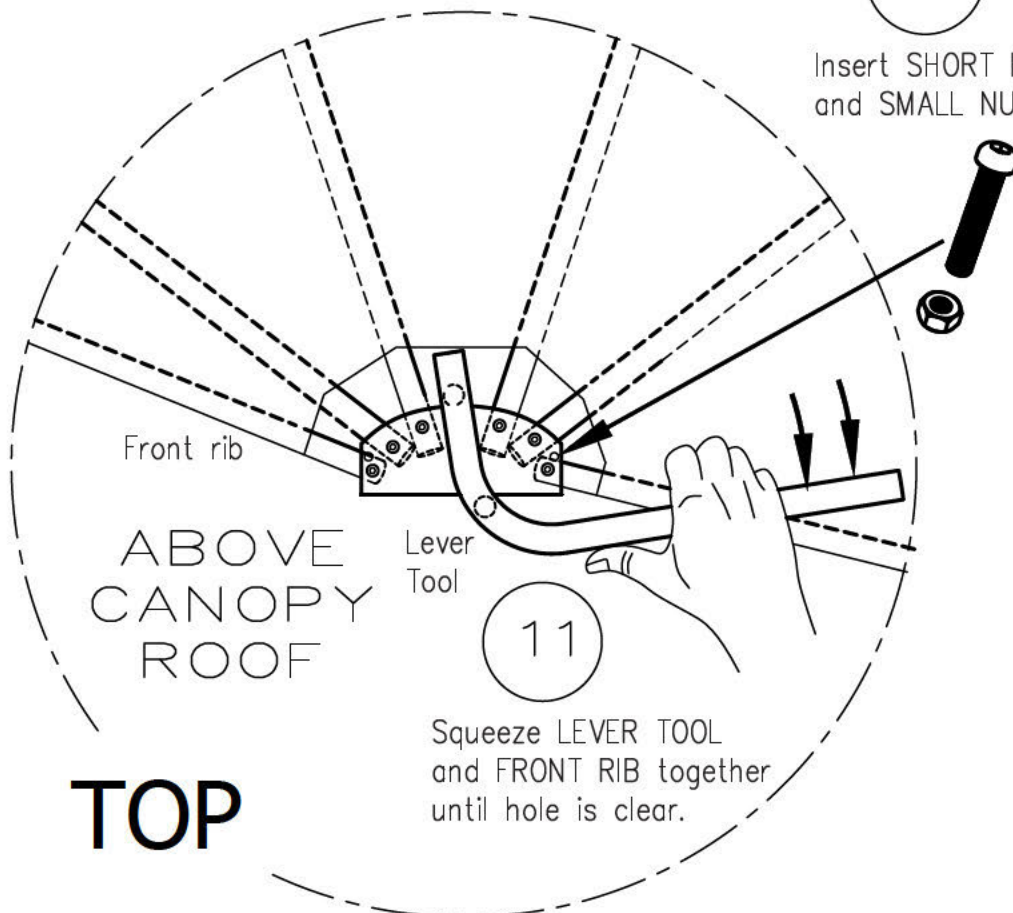

ASSEMBLY

12

 
Grasp LEVER TOOL
and FIRST RIB

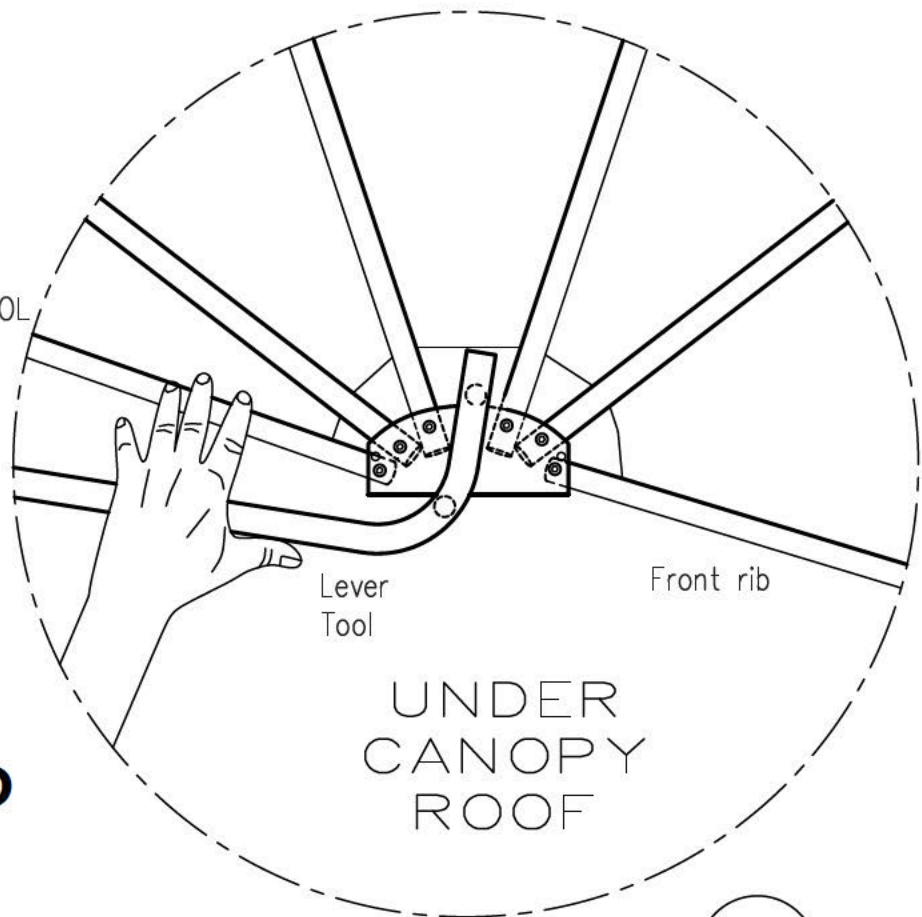

TOP

Insert SHORT BOLT
and SMALL NUT.

 14

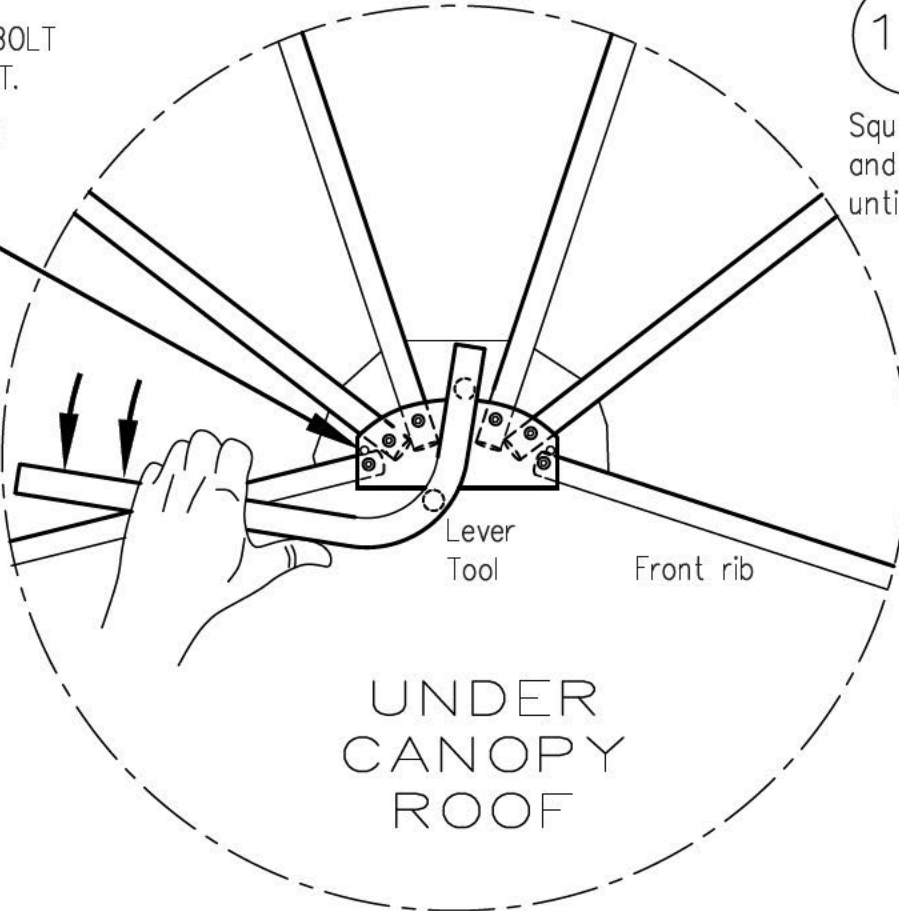


13

Squeeze LEVER TOOL
and FRONT RIB together
until hole is clear.

ASSEMBLY



15

 Insert SHIM
between FIRST RIB
and LONG BOLT
(optional)

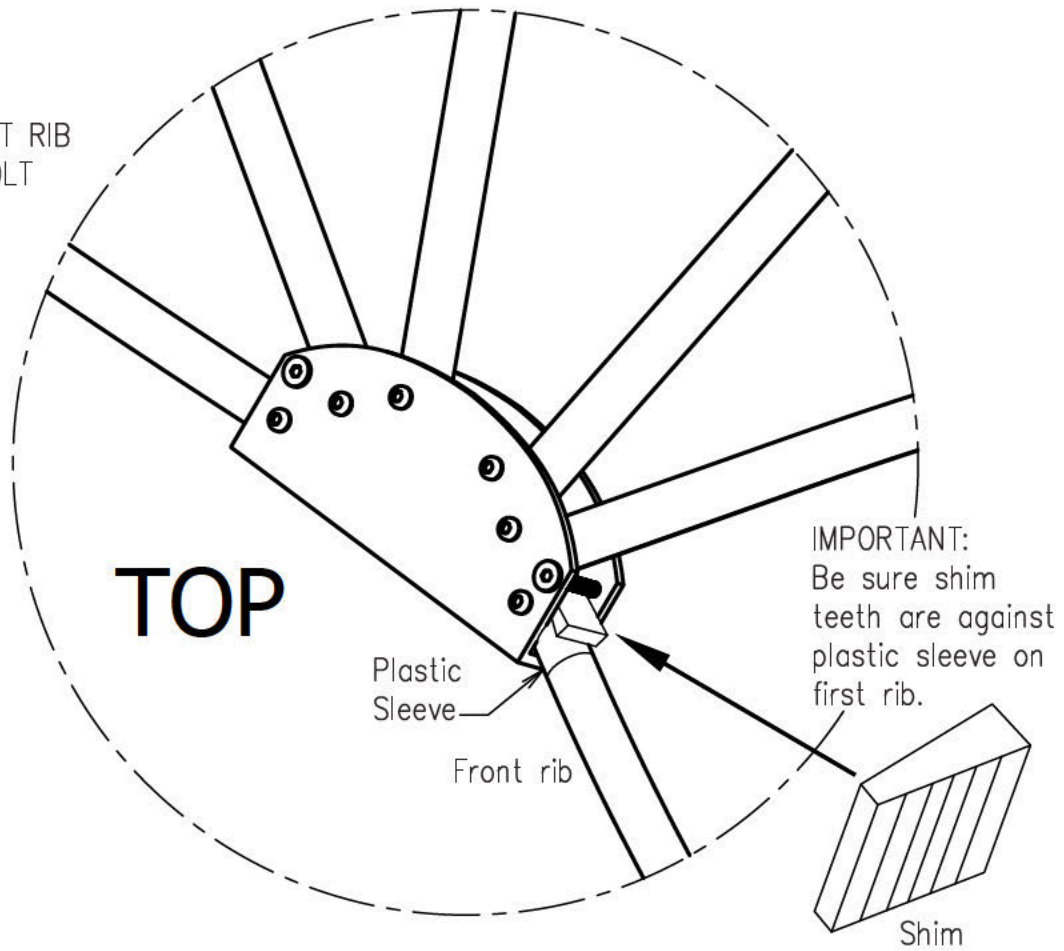

16

  Thread long end of
CENTER STRAP
through plate

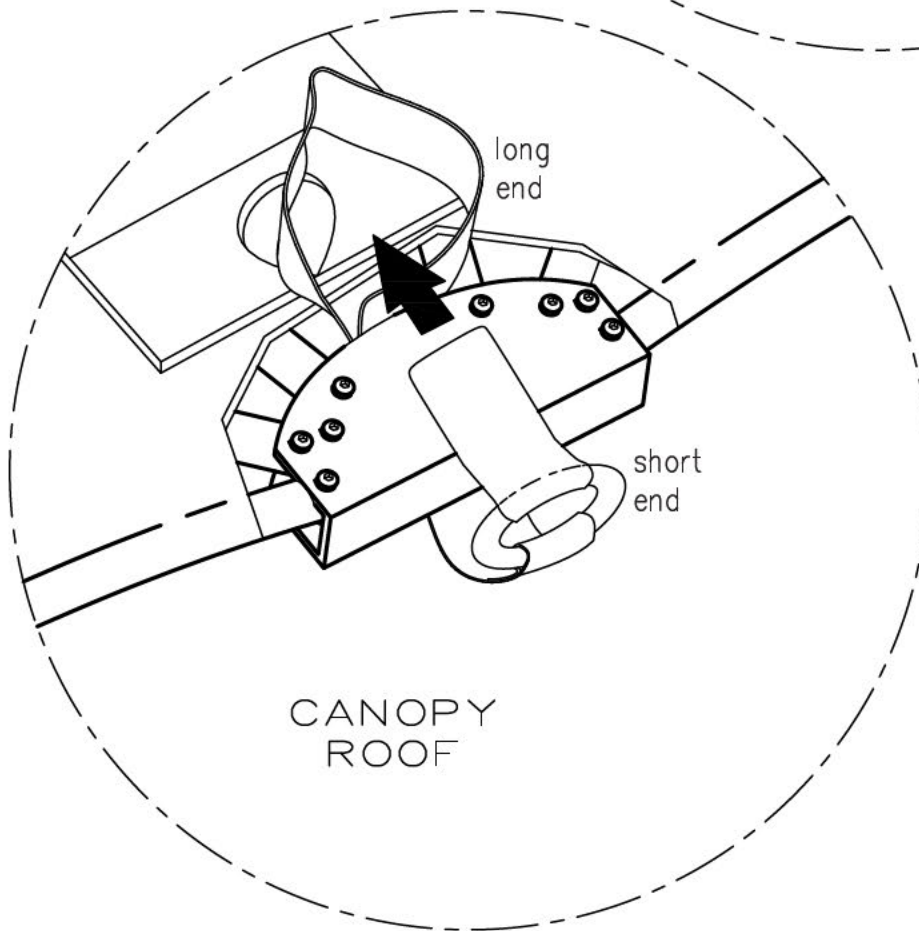
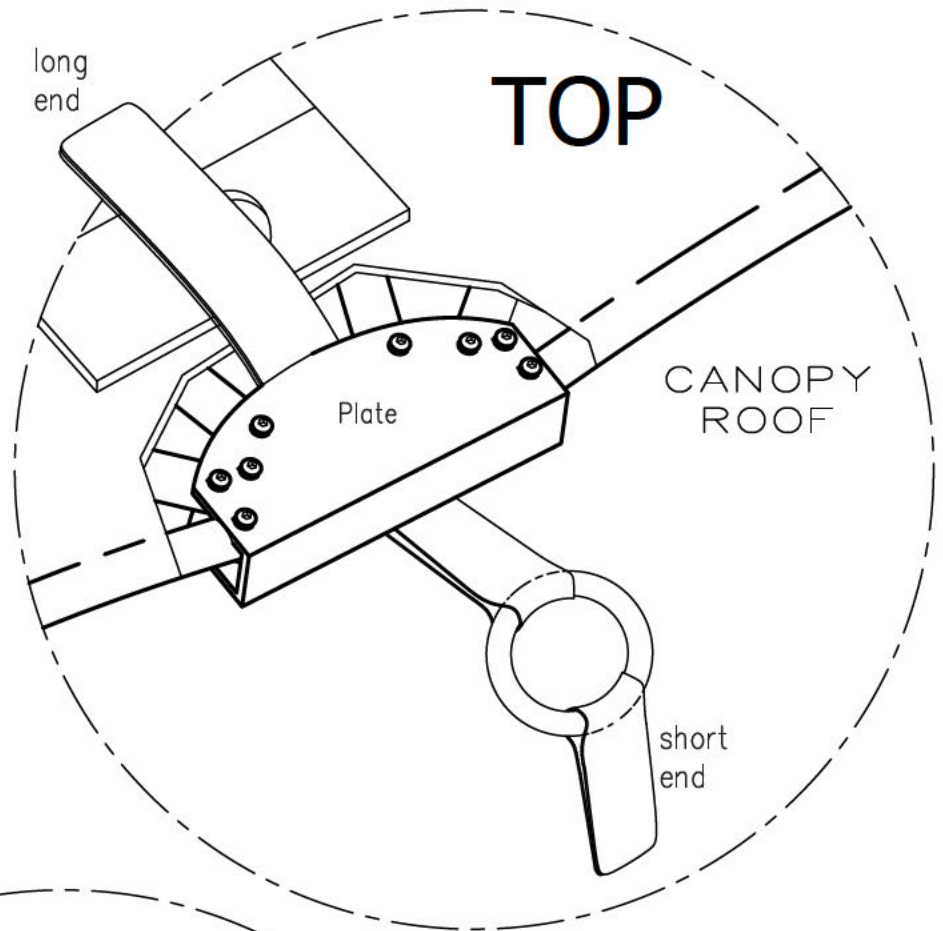


17


Open long end of
CENTER STRAP, feed
short end through

16

  Pull short end
through long end
until RING is
through

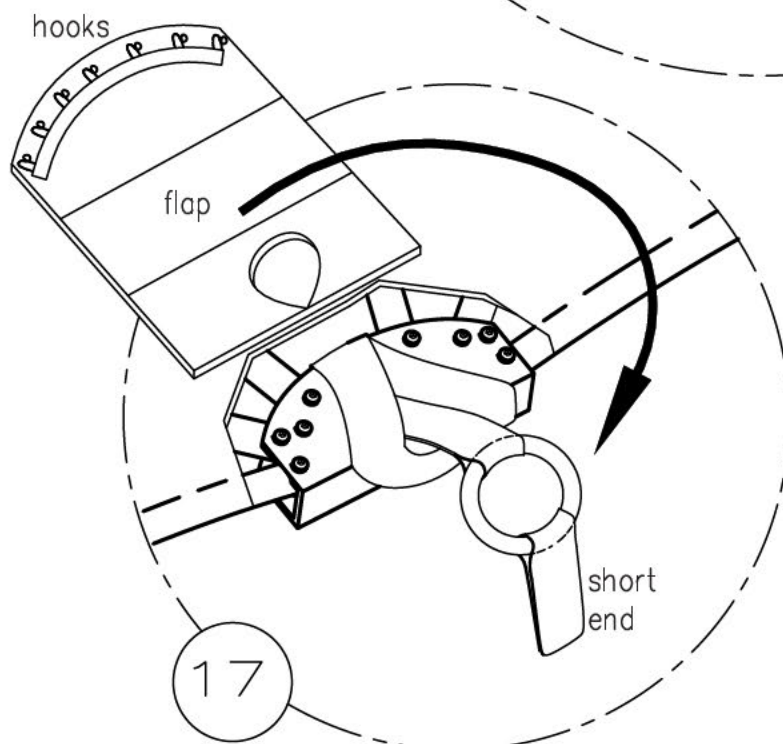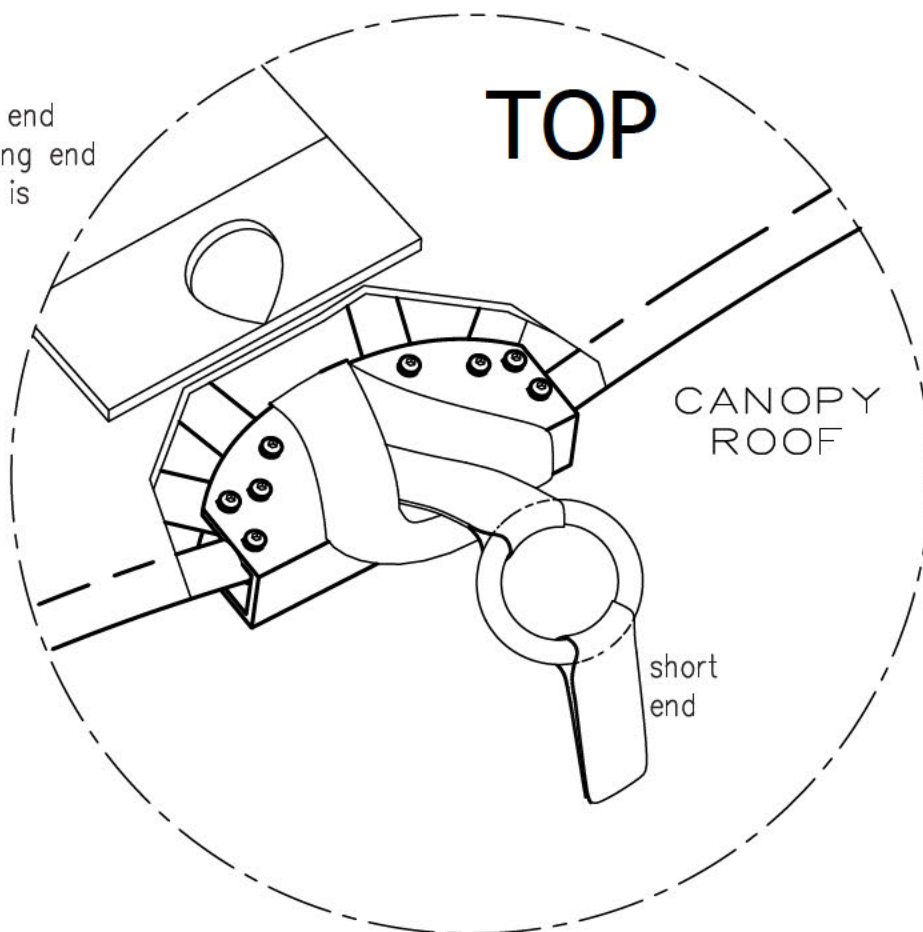


Pull FLAP over
short end

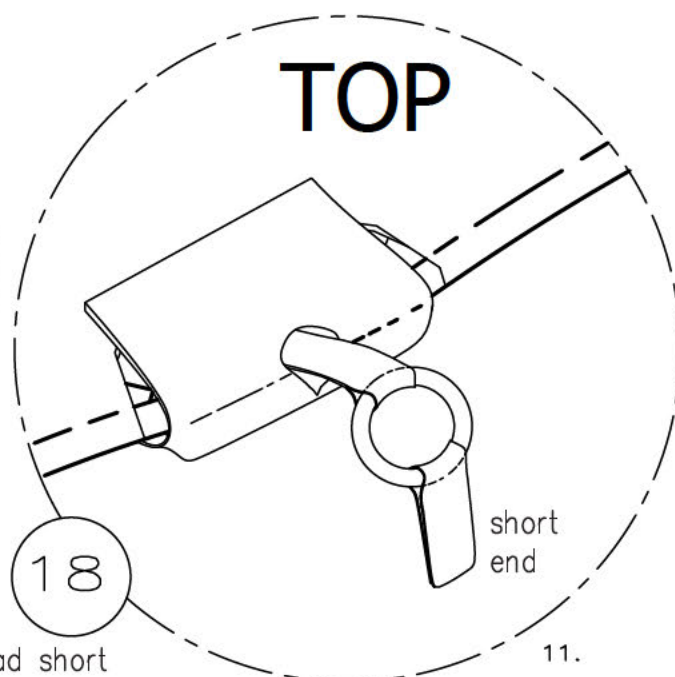 

Thread short
end through FLAP
and affix HOOKS to
SMALL RINGS under canopy


11.

 ASSEMBLY

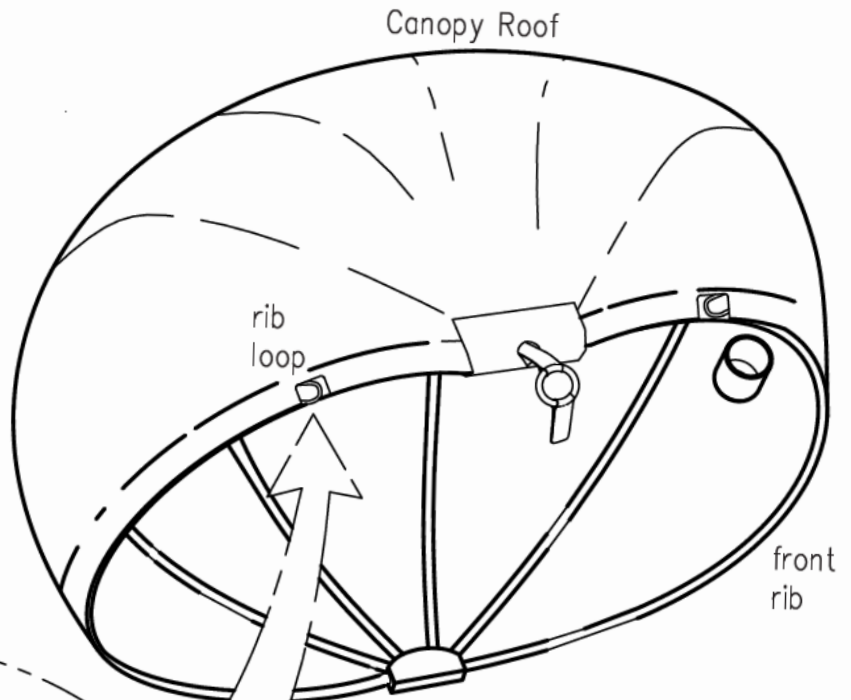


19

 Install SIDE STRAPS into rib loops (if not already installed)

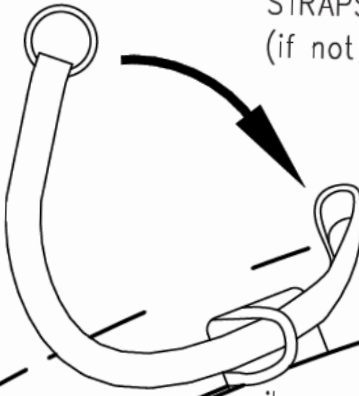


20

 Pull SIDE STRAPS through rib loops

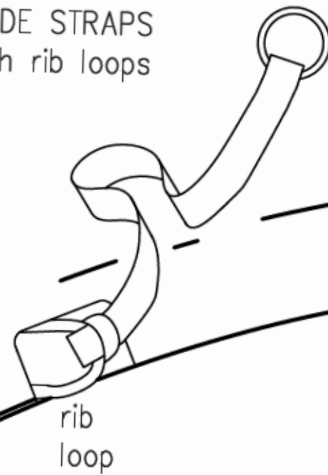


ASSEMBLY
Canopy Roof

 21 Slide SIDE STRAP rings
onto CENTER STRAP

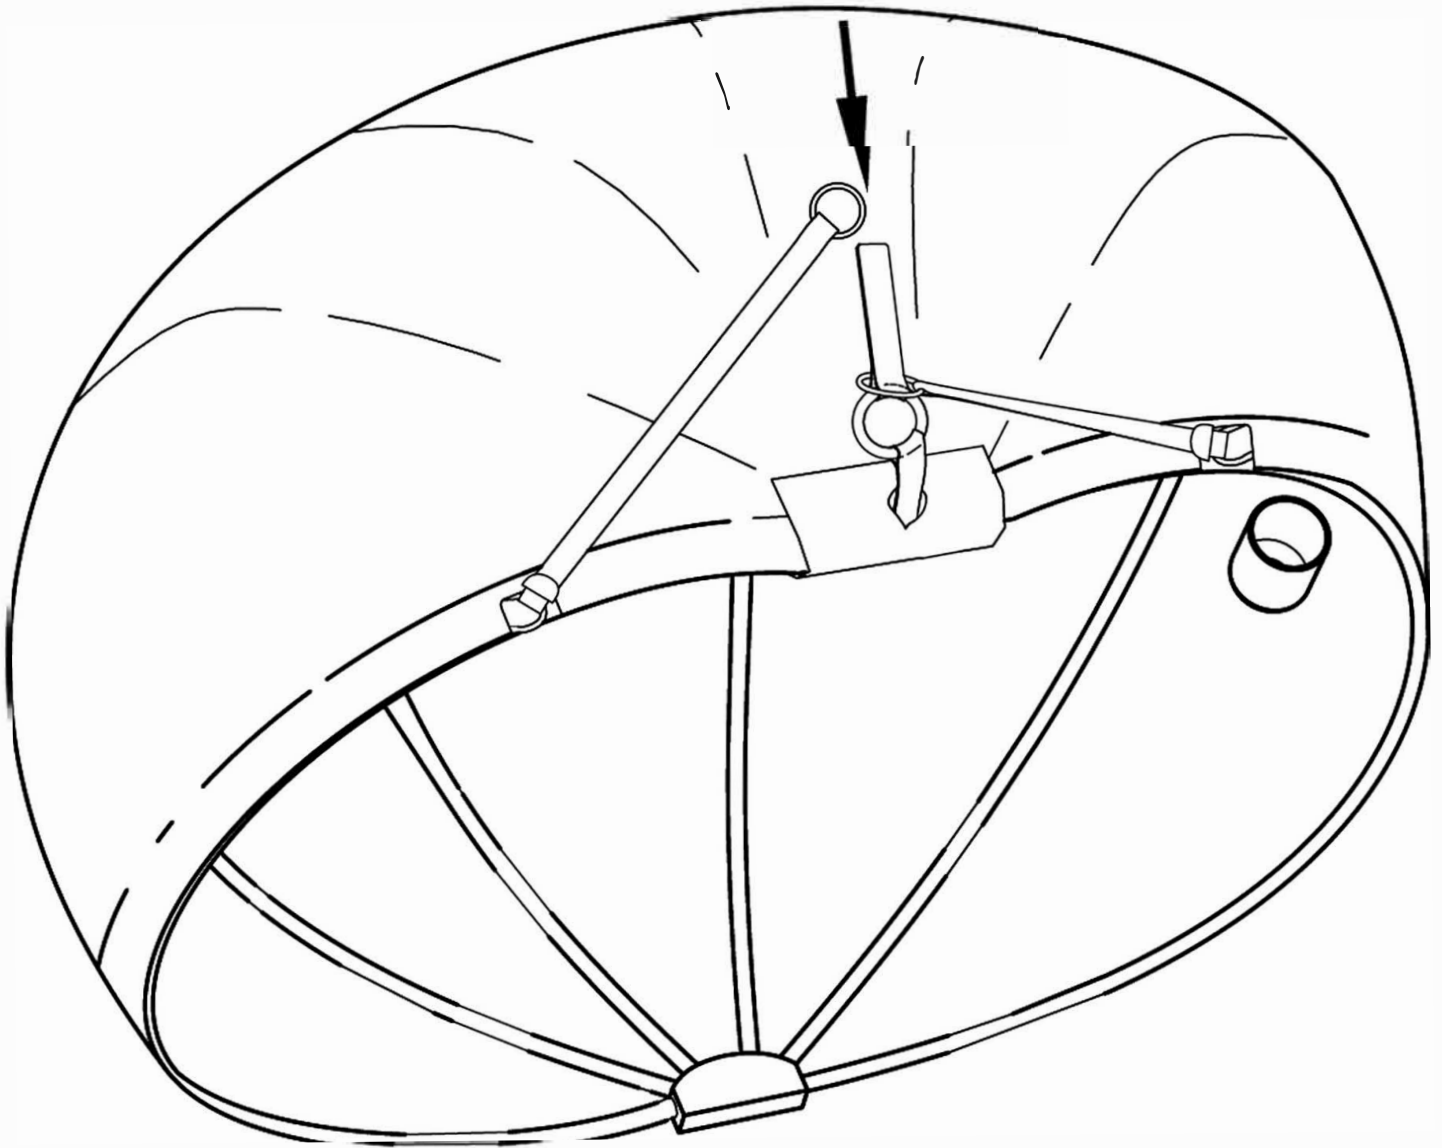


ASSEMBLY
Canopy Roof

 22 Position TOP BOW near
CENTER STRAP

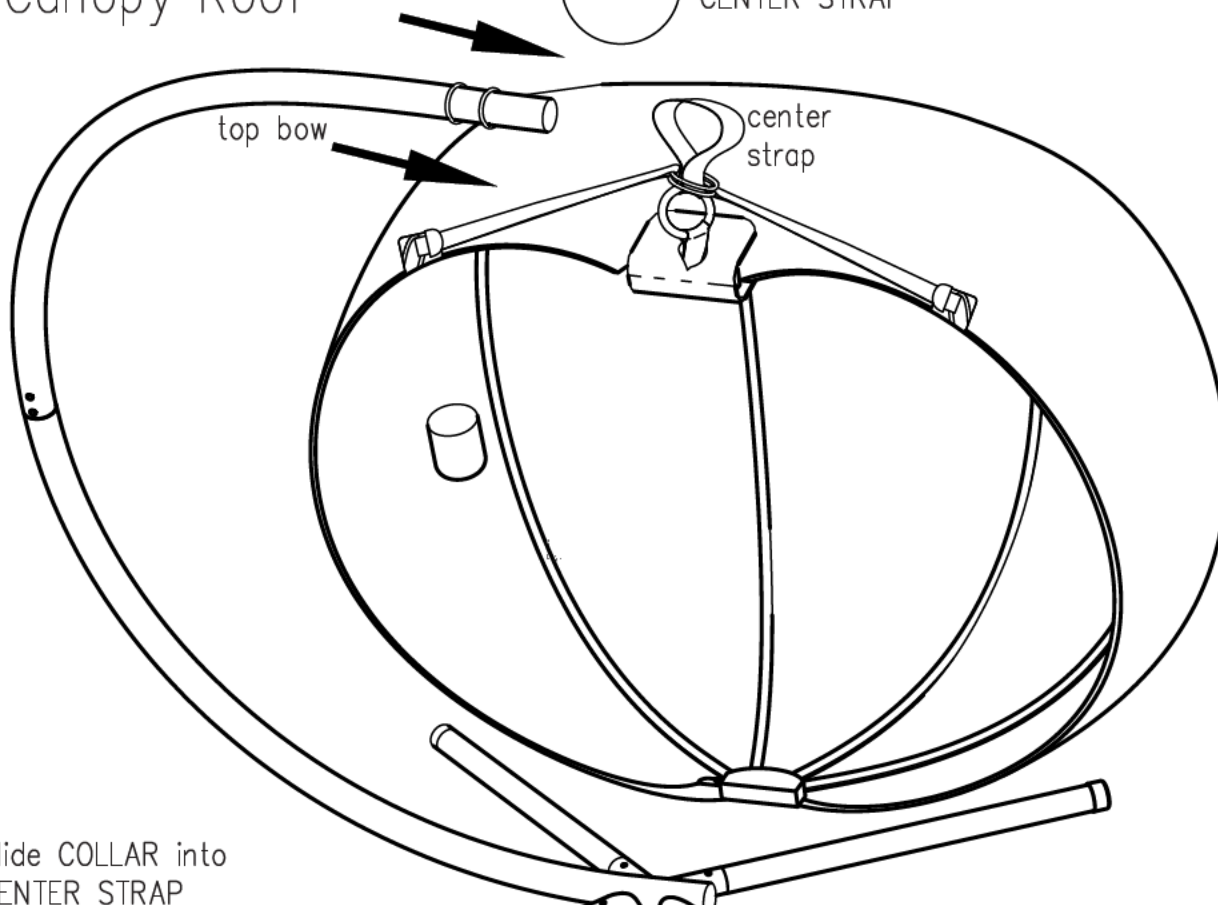


Slide COLLAR into
CENTER STRAP

 
23

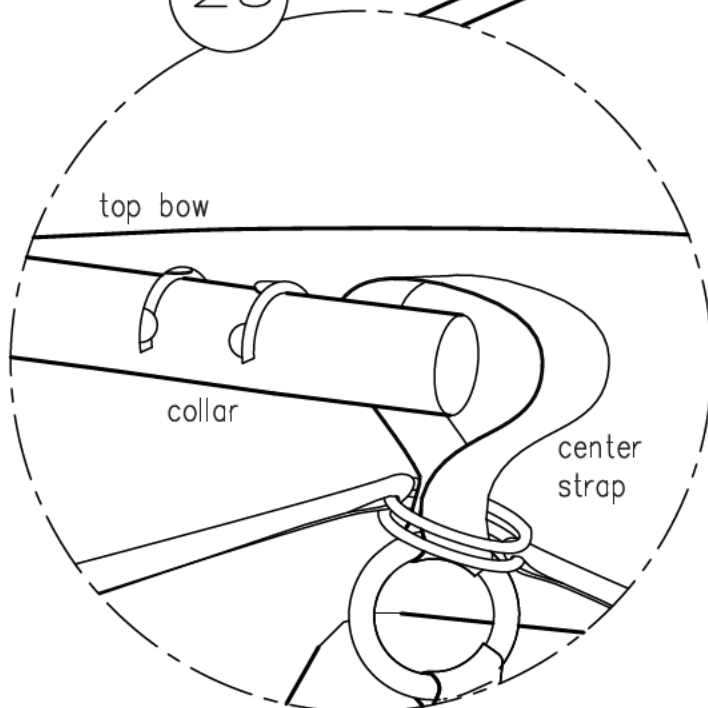


Be sure CENTER STRAP
is under COLLAR nibs

   24

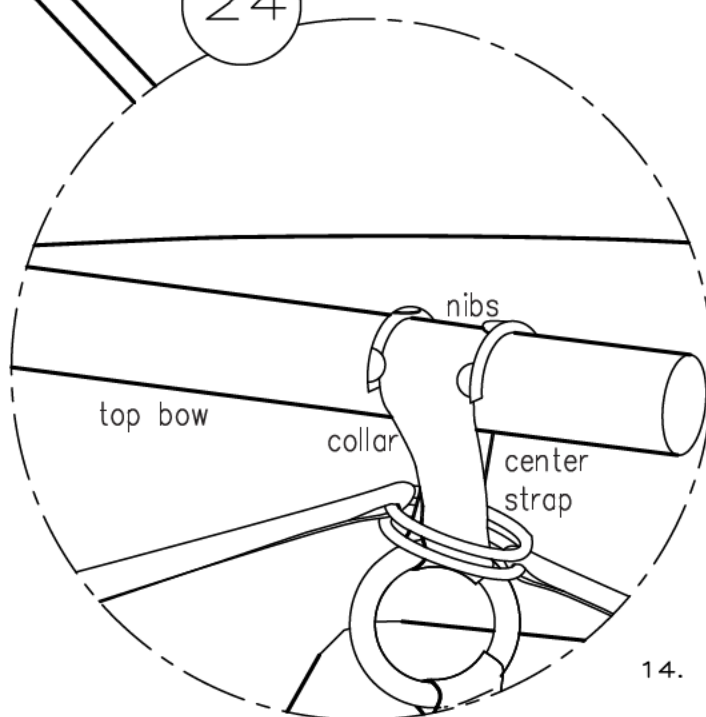

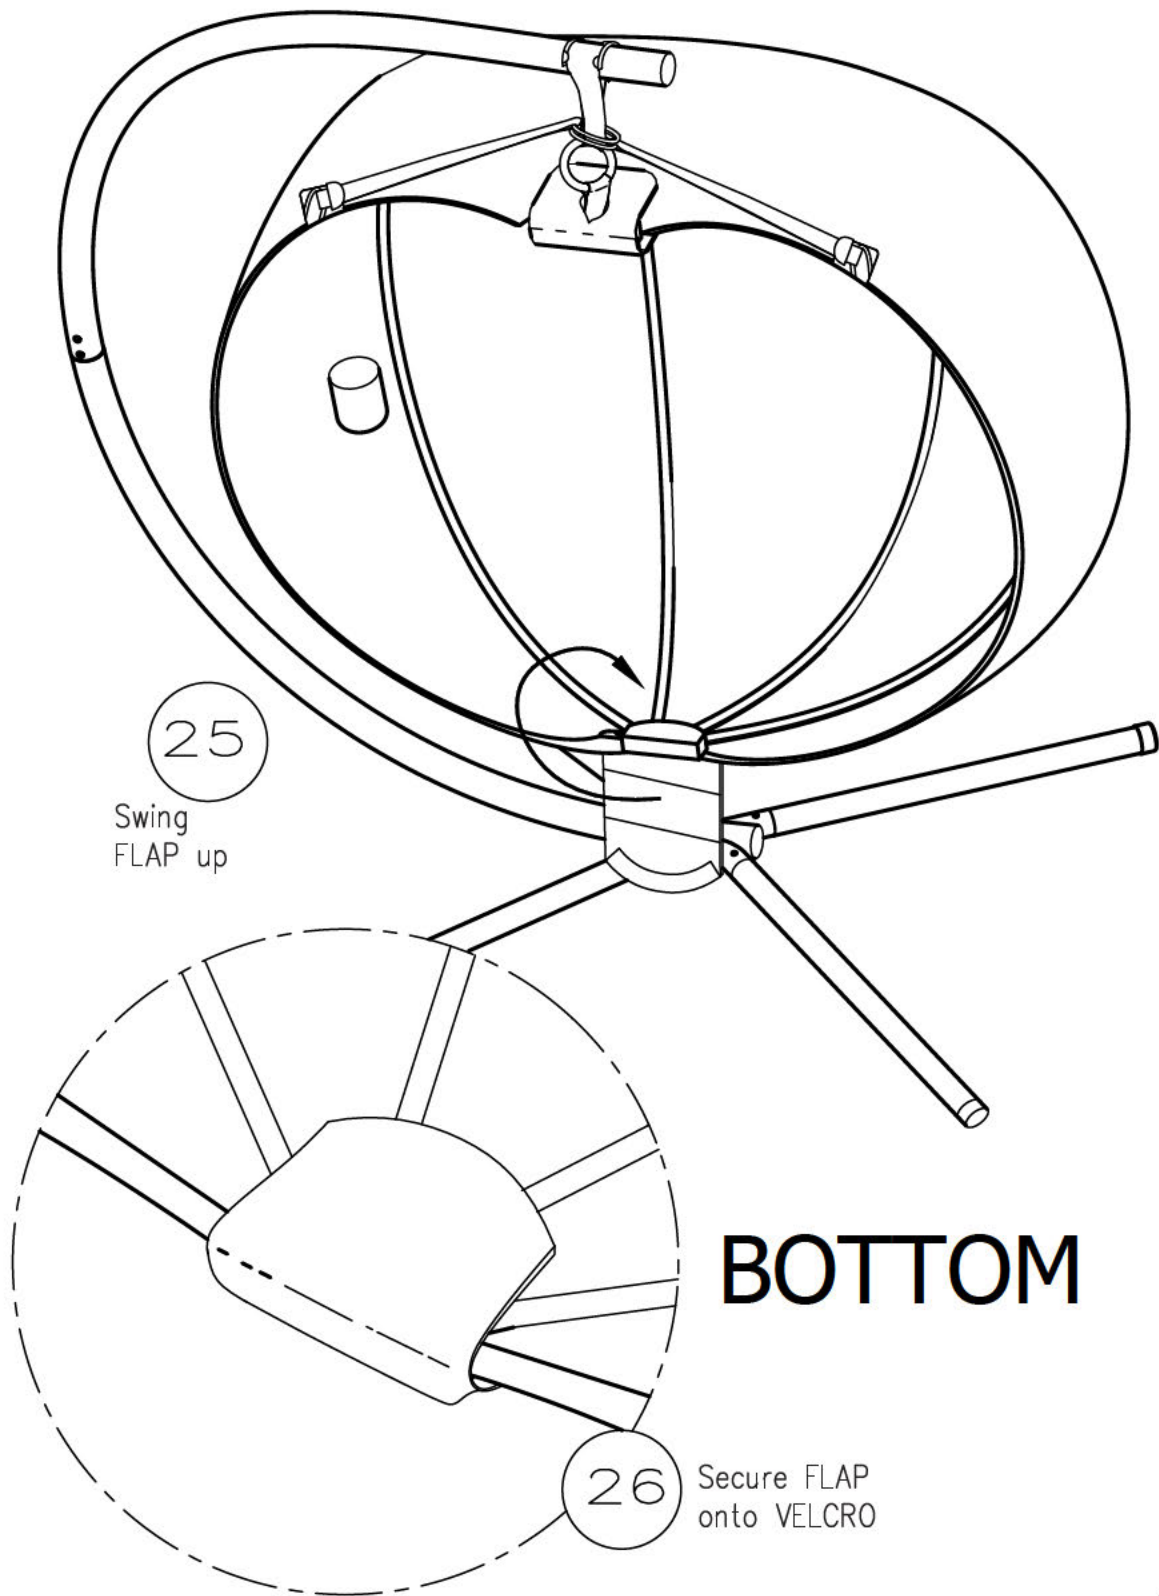

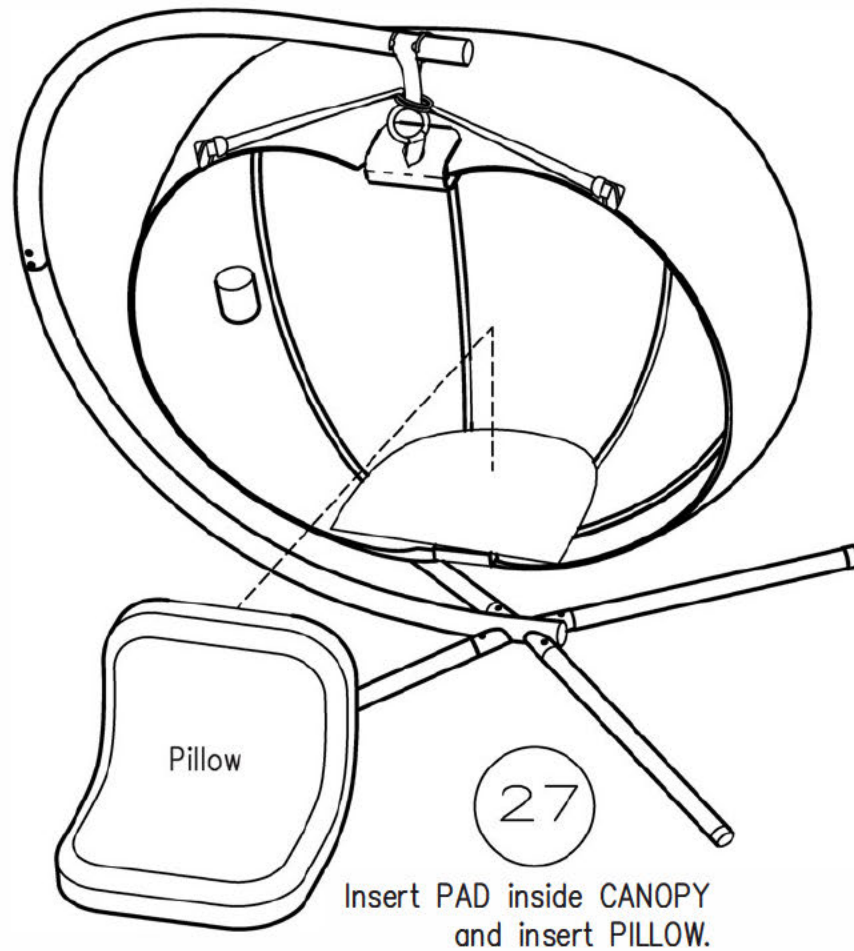

ROUTINE MAINTENANCE

Check to see that all nuts and bolts are tight tighten if loose.

DISCLAIMER

This Manual relates solely and exclusively to the Hanging Pumpkin Chairs including but not limited to the operation thereof. Failure to adhere to this manual or to properly focus on the operation of the Hanging Pumpkin Chairs can result in death, serious injury and property damage. Always operate the Cozy Chair in a safe manner and in full compliance with this manual. is not liable for any injuries or damages to any operators, property or bystanders incurred as a result of using the Hanging Pumpkin Chairs by its customers. also cannot be held liable for any and all errors in this manual or for any incidental or consequential damages that result for the use of the material presented in this manual. This manual contains proprietary information belonging solely and exclusively to . All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without the written consent .