ASSEMBLY INSTRUCTION

PART LIST					
NO.	РНОТО	QTA	NO.	РНОТО	QTA
A		1	Е		8
В		1	F	<u>Dimin</u>	4
С	H	2	G	0	12
D		2	Н		1

