

Remote Control Function Instructions



Instructions:

1. Remove the Transparent Insulating Sheet prior to using the remote
2. Remote control is inactive in daytime; only functions at night.
3. The light's timer setting has memory. Upon relighting, it repeats the last timer setting.
4. Use the remote within 4 meters (13 feet) of the light. If unresponsive, adjust your position or angle.
5. If the solar light can't be turned on via remote, its solar powered battery may be depleted. Charge the battery in sunlight before reuse.