

# Installation Guide



Insert the needle plug from the fountain completely into the socket connector from power plug.



Screw the waterproof cap completely until it is tightly closed.

Step1. Connect the light lines.

(Note: The quantity of light lines is equal to the quantity of LED lights)



Rotate the button on the pump to adjust water flow speed.

Step2. Connect the outlet on the pump to the hose from the fountain tightly and adjust the water speed by rotate the button on the pump.



Add 90% water into the cave.

Step3. After putting all the connected lines and pump into the cave, add 90% water.  
(Note: the pump should be fully covered by water.)

## TROUBLESHOOTING

1.If the FOUNTAIN PUMP fails to operate, no worry, please check the following:

- Make sure the pump is plugged into the socket properly.
- Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- Check the setting of the flow control on the pump. Check the pump outlet nozzle and the water tube for dirt and debris. Clean if necessary.
- Make sure the pump is connected to the water tube tightly. Check the fountain tubing for kinks and obstructions.
- The pump may be "air locked" Plug and unplug the pump several times to clear any air that may have been trapped.

2.If the water does not flow out from the fountain, it may caused by kinked loose water tube, make sure water tubes are connected properly.

**If there is any problem with the pump or lights, please just feel free to contact us.**

**We provide guarantee for all fountains' pumps and lights**