

HD

HAUTE DECOR

3' Lightly Flocked Alpine Tree
Pre-Lit w/ 50 ct. Warm White LED Lights
Item # DCCT0301



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

PARTS LIST

- 1 EA. TREE STAND
- 1 EA. TREE POLE
- 1 EA. TREE SECTION

ASSEMBLY

Carefully remove the contents from the carton and keep the carton for future storage. Be sure to untangle any wires that may be tangled with other items. (Please DO NOT forcibly remove any contents.)

Step 1: Locate the Tree Stand (see Fig. A) and place it where you are going to set up the tree – ensure that it is on a level surface. **THIS PRODUCT IS SUITABLE FOR INDOOR USE ONLY.**

Step 2: Locate the Tree Pole and slide it onto the Tree Stand (see Fig. B). Push the Tree Pole down until it is flush with the top of the Tree Stand. (remove any tree pole caps first)

Step 3: Locate the Tree Section and slide it down into the Tree Pole (see Fig. C). Make sure it is seated securely.



Fig. A



Fig. B



Fig. C

Step 4: Open the battery box by unsnapping the clips on the sides and insert 6 AA alkaline batteries (not included) with the correct polarity (+/-) into the battery box. Close the battery box by fastening the clips securely and ensure gasket is in position to keep out water. To activate lights, press the I/O (On/Off) button on the battery box. The lights are set to an auto timer for 6 hours on and 18 hours off. We recommend activating your lights at the time you want them to come on each day. To turn the lights off and stop the timer, simply press the button again. Product does not have a steady on feature. It only operates on a timer. Your tree should now be lit. If some bulbs do not light, please go to the section on TROUBLESHOOTING FOR LIGHTS.

BATTERY INSTRUCTIONS

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
3. Clean the battery contacts and those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment which is not to be used for an extended period.
6. Remove used batteries promptly.

For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for recycling centers and / or follow local government regulations.

SHAPING

1. Turn on the lights as you are shaping the tree.
2. Remove any packing strap or other packing material that is around the tree section(s) and allow the branches to fall into place. Some of the branches may catch on one another. If that occurs, slowly press down on each branch until it falls into its place or gently pull up and out.
3. Shape by layer, starting at the bottom of the tree and working your way up to ensure all branches are shaped.

4. Consult the product photo of the tree during shaping. This tree has a downswept appearance. Offset the tips to hide the tree's pole and fill spaces. Continue spreading the tips until they resemble that of a real tree.
5. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Your tree is now ready to decorate and enjoy!

CLEANING & CARE

As you will be using the artificial Christmas tree every year, it is essential to keep it in good condition and clean.

- Dust gently using a soft cloth or fabric duster.
- Do NOT use any chemicals or solvents to clean.
- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the bulb.
- Follow all Storage and Safety Instructions.

STORAGE

1. Remove any ornaments and decorations that were added by you and did not come with the tree.
2. Remove the batteries from the battery box.
3. Starting with the top, separate the tree section, pole, and stand gently, being sure not to roughly handle as it could cause damage to the parts.
4. Compress the tree section by squeezing the branches together so that it will fit more easily into the storage box or container. You can also tie a ribbon or cord around the section to secure the branches closer together for storage.
5. Place all the parts gently back into the storage box. The box will help prevent the tree from being damaged should it get bumped in your garage, basement, or other storage location. Tape the box shut to keep out any dust or insects. When packing up the tree, please ensure that there is no undue strain or stress on the light sets to ensure they do not get cut, frayed, or damaged.
6. Be sure to store the tree in a cool, dry area free of water and moisture to prevent mold and mildew from accumulating and a musty odor developing. Exposing your tree to excessive heat or humidity may damage your tree. DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F. STORE THE CARTON FLAT AND **NOT** UPRIGHT ON ITS SHORT END.

TROUBLESHOOTING GUIDE FOR LIGHTS

1. Push the I/O (On/Off) button on the Battery Box. Check to ensure rubber protection over button intended to keep out water is not damaged.
2. Check to ensure all batteries are fresh and in correct polarity (+ and -) positions.

NOTE: LED bulbs are permanent and cannot be removed from the light sets.

IMPORTANT SAFETY

**PLEASE READ AND FOLLOW ALL SAFETY INSTRUCTIONS AND WARNING TAGS INCLUDED WITH THIS TREE.
SAVE FOR FUTURE USE. THIS TREE IS SAFE FOR INDOOR USE ONLY.**

- **WARNING!** This is not a toy. For decorative use only. Keep out of reach of children.
- Do not operate this product if the battery box or light set is damaged. Always inspect for signs of damage or wear. If there are any observable defects, immediately dispose of them and replace it with one that is in working order.
- Do not immerse the tree or any of its components in water or other liquids.
- This seasonal use product is not intended for permanent installation or use.
- This product is not intended for commercial purposes.
- Do not secure the wiring of this product with staples or nails or place on sharp hooks or nails.
- Do not alter the construction of the wiring in anyway.

- Do not use this product for anything other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Do not mount or support strings in a manner that can cut or damage the wire insulation.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not place your tree where it is likely to wobble due to uneven floors or thick carpeting. Place tree on a level, hard, flat surface.

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADA ICES-003 STATEMENT

This Class B digital apparatus complies with Industry Canada Standard ICES-003. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CUSTOMER SERVICE

THANK YOU FOR YOUR PURCHASE!

Comments or questions?

Contact us at 1-877-359-0115

customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013



©2021 Haute Decor

Made in China