Size:110×110mm

110mm 110mm 110mm 110mm 110mm 110mm 4) Illuminated light button Packing list Function key description Audio LED indicator status Voice Prompt Short press: open Short press to switch between three modes/levels Short press the fourth time to turn off Ding Dong Long press for 8 seconds to reset and shut down Red light flashing No beep End the call (5) Color light button Short press: turn on the breathing light Turn off the phone Power off Volume plus / previous song Long press: close the breathing light Volume up / down No beep White light long light 15 seconds off In any state short press to open the cycle of color light breathing light, in short press to change to Power on / mode / light button Camping light Wireless Speaker Instructions monochrome breathing light mode, continue to short press to restore the cycle mode, long press to AUX / TF / Bluetooth mode Linein/music/Bluetooth mode Volume down / next song close the breathing light Audio × 1 Instruction manual Type-C charging cable X1 Fully charged Charging full charge red light is always on 6) Volume button + Start up Blue light blinking Long press the volume key +: turn up the volume Tips Blue light out Short press the volume keys +: switch the next song Shutdown 1. Do not attempt to disassemble or replace any parts inside the product except for the operation method Matching search status Blue light blinking **Product Specifications** specifically indicated in the manual. Product diagram 2. Do not put the product into water or any other liquid, this product is not designed to be waterproof. 3. If any liquid accidentally enters the product, please immediately disconnect and remove the product. Voice Prompt Bluetooth version: V5.0 4. To avoid electric shock, please make sure there is no water on your hands when installing or Function Kevs -Communication distance: 10M 5. Do not place this product near a heat source or expose it directly to a fire source. 6. Do not place this product in an environment where there is a strona electromaanetic force, as this may Music time: 12H(50% volume) Incoming call Follow the phone cause the product to malfunction. Long press 3 seconds to turn on/off Speaker: 52mm 4Ω10W\*2 It is recommended not to operate the device while it is charging. Power on (after power on, first time use or no device connection automatically enters pairing mode) Connection with cell phone Connected Charging time: 5.5H Short press: answer/end call, play/pause music Low battery (less than 15% battery) Ticking sound Battery capacity: 10000mAh/3.7V ) Volume keys-Camping light Wireless Speaker instrucions Answering No beep Charging voltage: DC4.7~5.5V Long press the volume key - : turn down the volume Short press the volume key - : switch the previous song Maximum volume Rated power: 20W AUX/TF-Card Interface -Power on Turn on the phone Type-C/USB Interface -Bluetooth/TF card/AUX switching/TWS pairing Short press mode switch Long press 2 devices at the same time TWS pairing (before connecting any devices)