

Installing your doorbell ringer

1. Turn off the power to your doorbell.
2. Remove your doorbell ringer's mounting bracket by unscrewing the hinge screw.
3. Remove your existing doorbell and disconnect the two wires attached to it.
4. Attach one wire to each terminal on your doorbell ringer's illuminated LED button. It doesn't matter which wire is attached to which terminal.
5. Hold the mounting bracket in place and screw it in place using the enclosed screw. **NOTE:** There needs to be a 5/8" hole for the back of the doorbell button to recess into. In most cases the hole left by your old button will already be 5/8".
6. Reattach your doorbell ringer to its mounting bracket and return power to the doorbell.

Caring for your doorbell ringer

The protective coating on your doorbell ringer will last many years. You can extend the life of the coating by occasionally applying a car wax to your doorbell ringer.

Your doorbell ringer can be cleaned with a mild soap and water if needed. Do not use solvents, such as brass cleaners, as these can damage the protective coating.