


Assembly Instruction

Item NO: Console Wall




Preinstallation notes:

- Always build near final resting position.

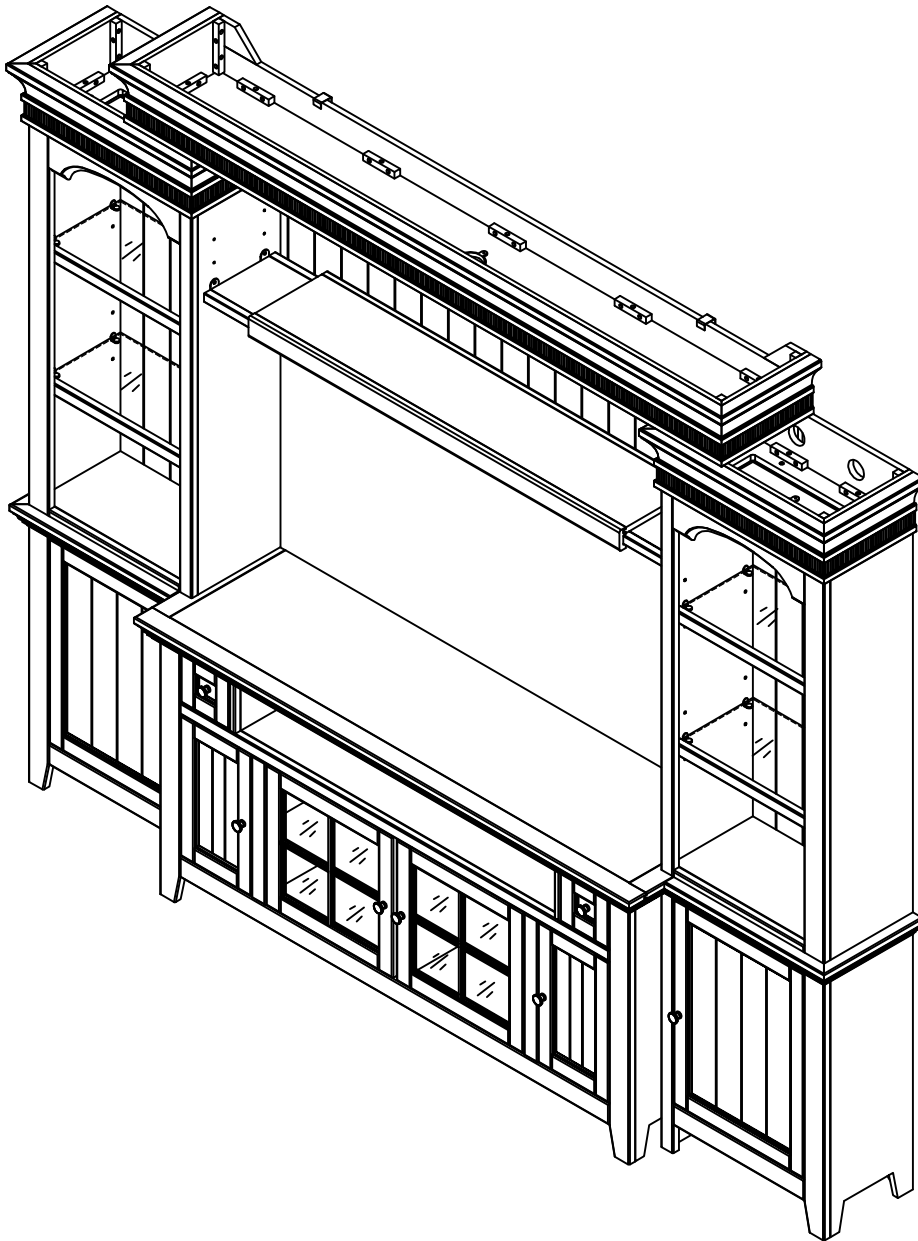




Assembly Instruction

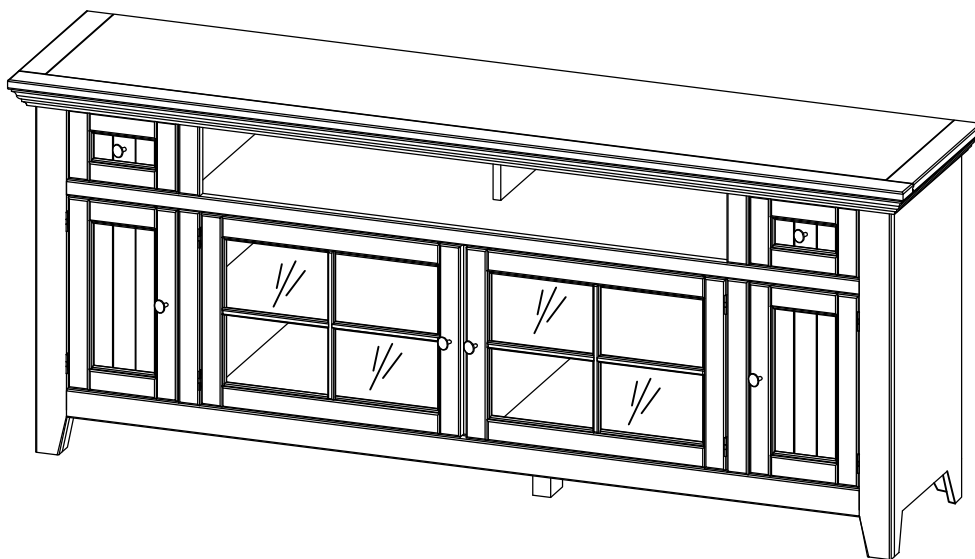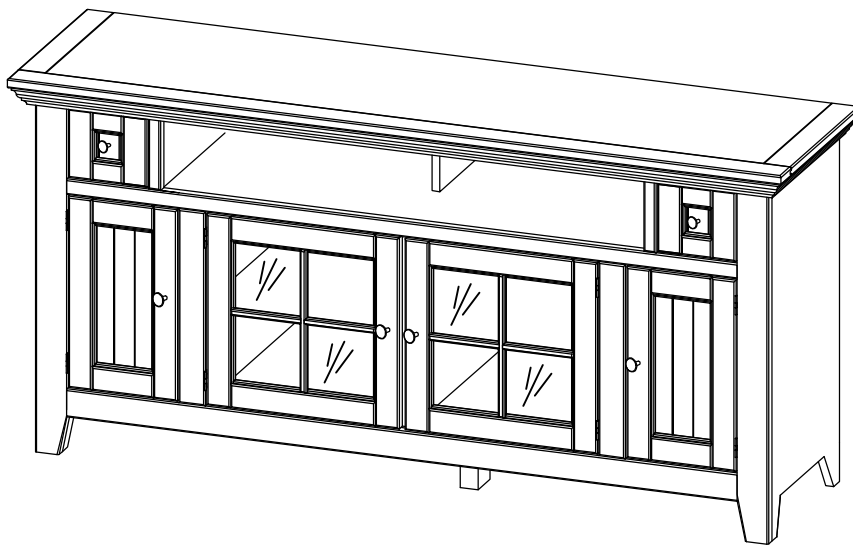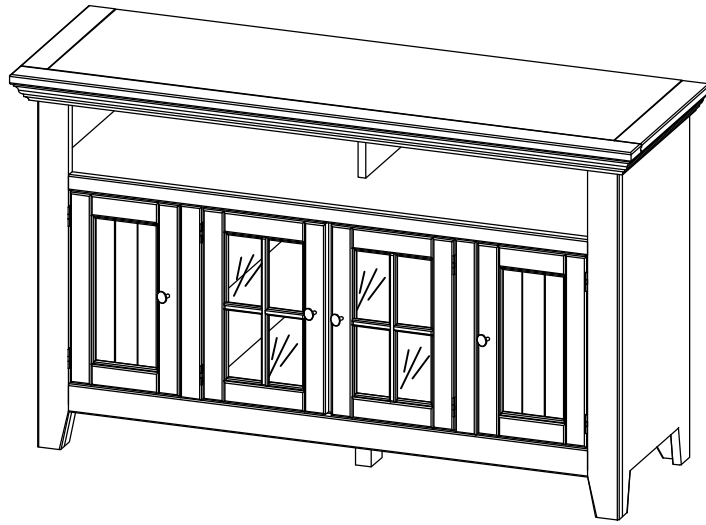
The Bridge & Piers is compatible with the following TV Consoles:



Assembly Instruction

Secure Crowns onto each Pier with Wood Screw (A) as shown.
 Note: Crown is not load bearing when moving unit into final position.

NO	Description	Sketch	Q'TY
A	Wood screws 1"		16
B	Shelf pin		16
	Touch up pen		1

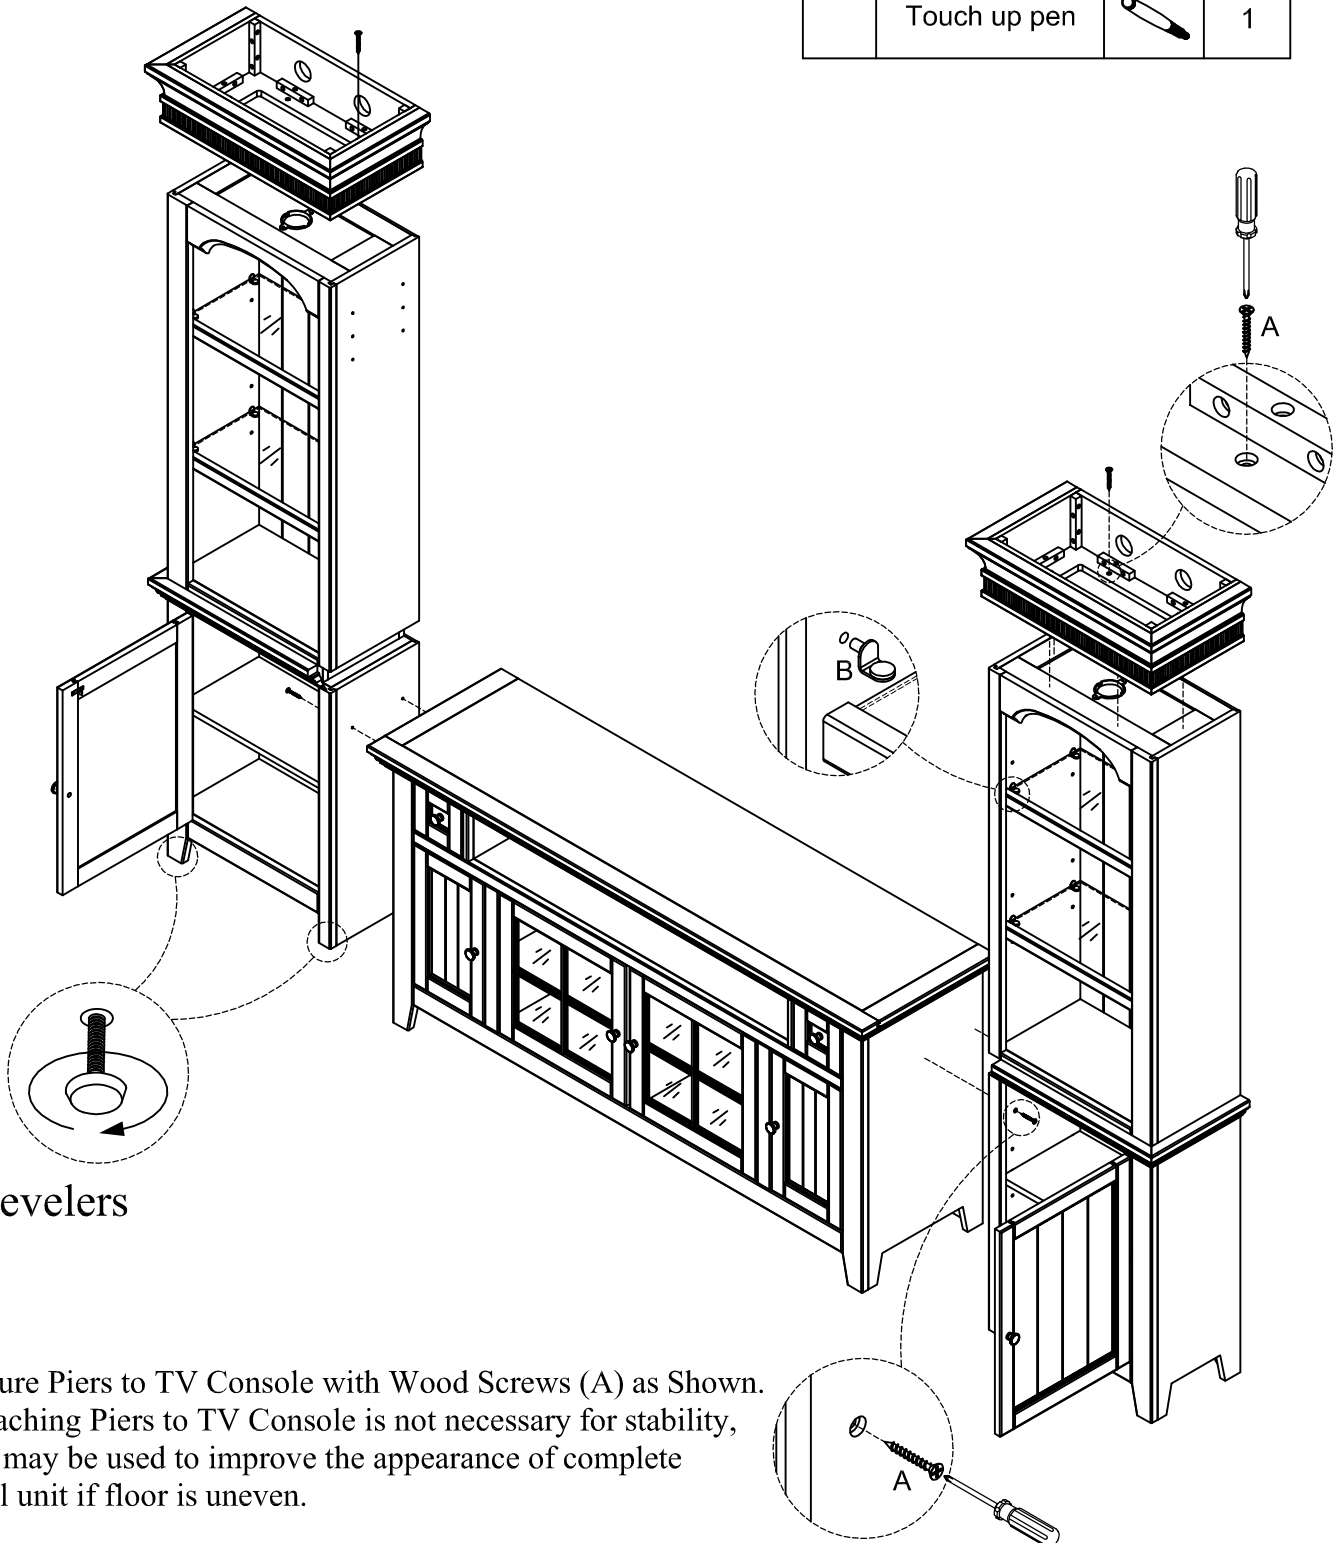


Levelers

Secure Piers to TV Console with Wood Screws (A) as Shown.
 Attaching Piers to TV Console is not necessary for stability,
 but may be used to improve the appearance of complete
 wall unit if floor is uneven.


Assembly Instruction

Secure Large Shelf Pin to both Pier and expandable TV area shelf as shown with Wood Screws (A). To expand shelf, loosen screws underneath it, expand shelf extensions, to proper position in TV area, then re-secure shelf extensions by re-tightening screws.

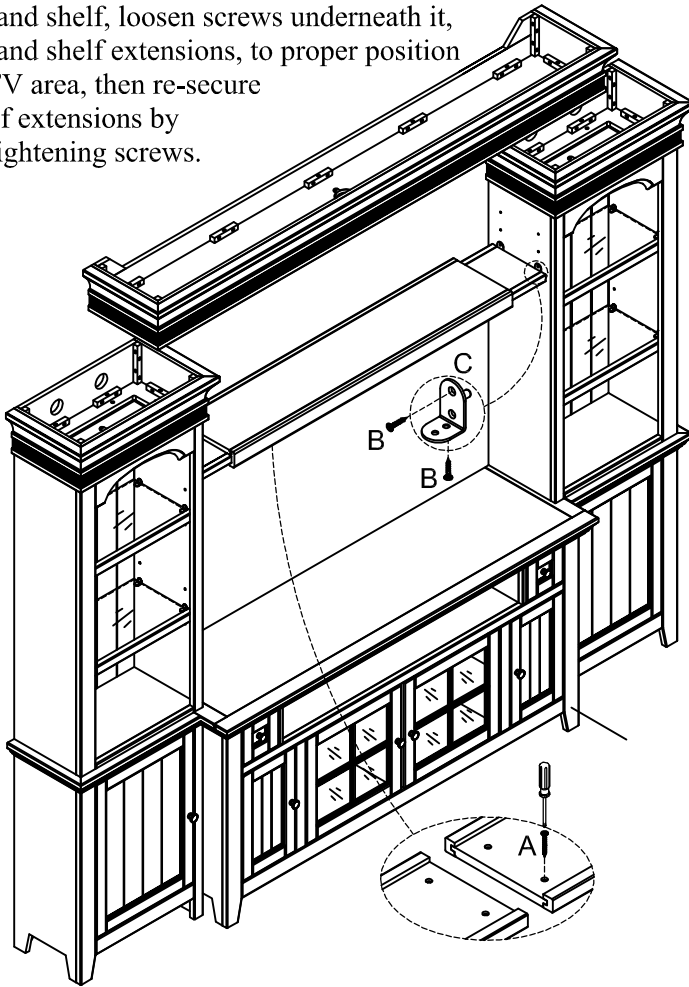

NO	Description	Sketch	Q'TY
A	Wood screws 1"		4
B	Wood screws 1/2"		22
C	Large Shelf Pin		4
D	Hooks		2
E	Wood screws 10mm		4
	Touch up pen		1

Connect Pier lights to dimmer unit on Bridge.

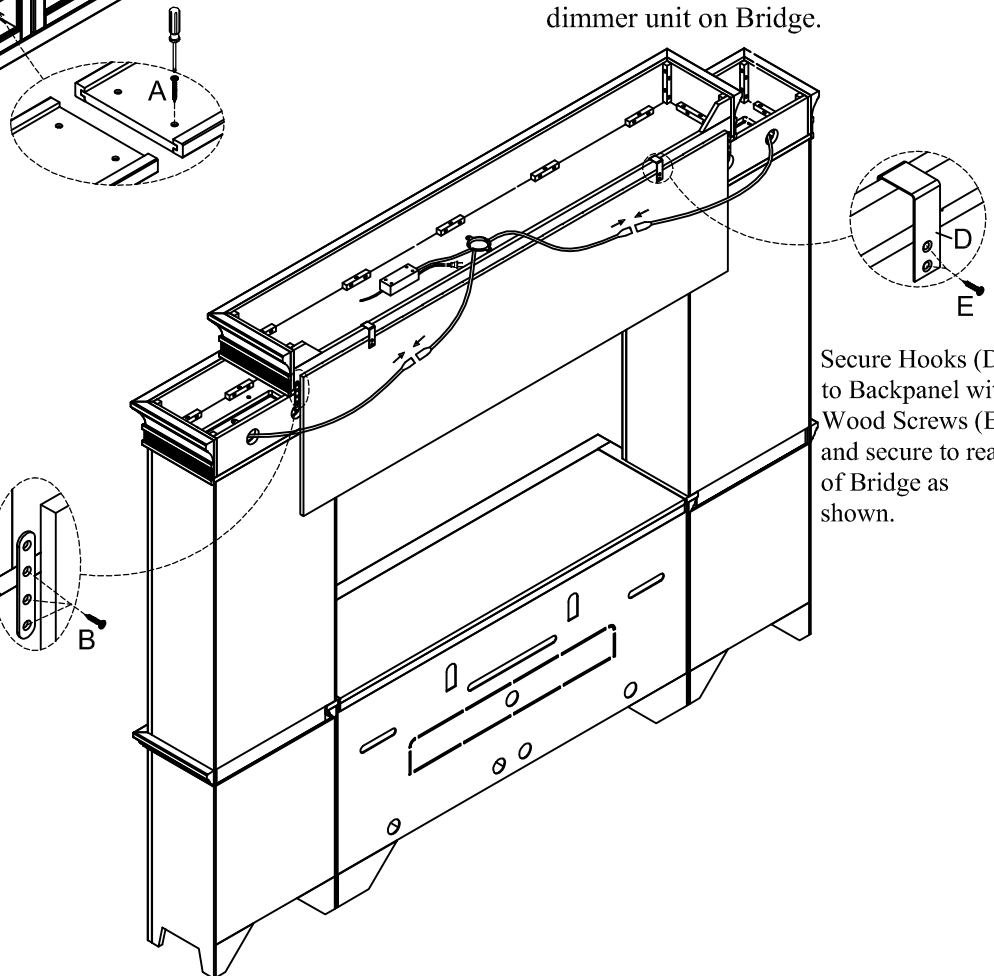

To secure Bridge to Pier, adjust Connector Plate located at rear of Bridge, and secure with Wood Screws (B) as shown.

Secure Hooks (D) to Backpanel with Wood Screws (E), and secure to rear of Bridge as shown.