

Frequently Asked Questions ●●●

The curve/ indents of the cross-frame on the front and back allows for smooth opening and closing of the product. Please note that it is not damaged.



3. Lift the base handle and fold/ collapse the wagon completely.



4. Secure the cart with the hook-and-loop strap, then cover it with the storage bag and zip it closed.



5. To Remove a Wheel: Press and hold the button, then pull the wheel straight out.

Thank you support!

Thank you for choosing our collapsible wagon.
We hope it brings you lasting convenience and reliability.
Should you have any questions, need assistance,
please do not hesitate to contact us through your Amazon order page.
We are always here to help and value your satisfaction.
Enjoy your new wagon!

USER MANUAL



⚠ WARNING

Immediate Discontinuation: Discontinue use immediately if any defect is found.

Personal Safety: Wear gloves during assembly, installation, or disassembly to protect against moving parts.

Intended Use: This wagon is designed for cargo transport only. It must never be used to transport children or adults under any circumstances.

Load & Environment: Always stay within the recommended weight capacity to ensure safety and prevent product failure. Avoid prolonged exposure to direct sunlight, water, or moisture. If the wagon gets wet, dry it thoroughly immediately.


Proper Handling: For optimal performance and durability, use on level ground with secure footing and avoid rough, uneven, or icy terrain. Assemble and fold with care, avoiding excessive force to prevent damage. A slight odor from the tires upon unboxing is normal and harmless.

1.Parts Checklist ●●●



2.Assembly&Use ●●●


Step 1:

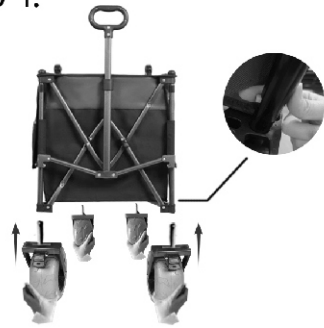

To install each wheel: align the holes, press the button gently, and push inward.

Step 2: Expand Frame

●Unzip the storage bag completely and detach it.

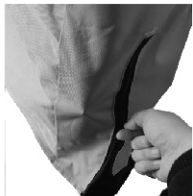

●Undo the hook-and-loop strap by peeling it apart to free the cart.




●Pull the wagon frame to both sides until it locks in place.




Step3:

The back push handle:
Align the holes on the tubes.
Depress the button and slide the handle inward until it clicks and locks.

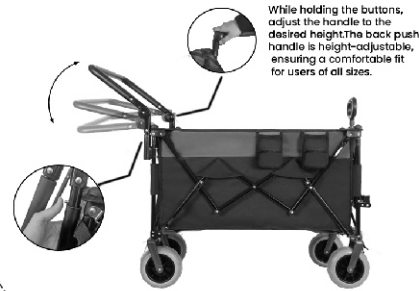

Step4: Use Handle

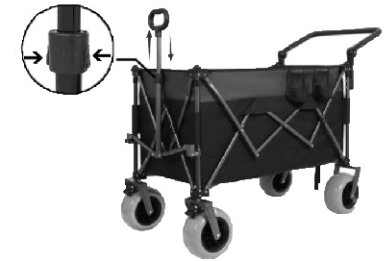

The front pull handle: Pull the handle upward to extend it to your desired length for use. The front pull handle is telescopic and adjustable, allowing to extend it to desired length for easy steering.

3.Storage Instructions ●●●



1.To remove the handle, depress the button, then pull it outward until it releases and can be retracted.



2.Press and hold the button while pushing the handle downward.