 


# Assembly Instructions

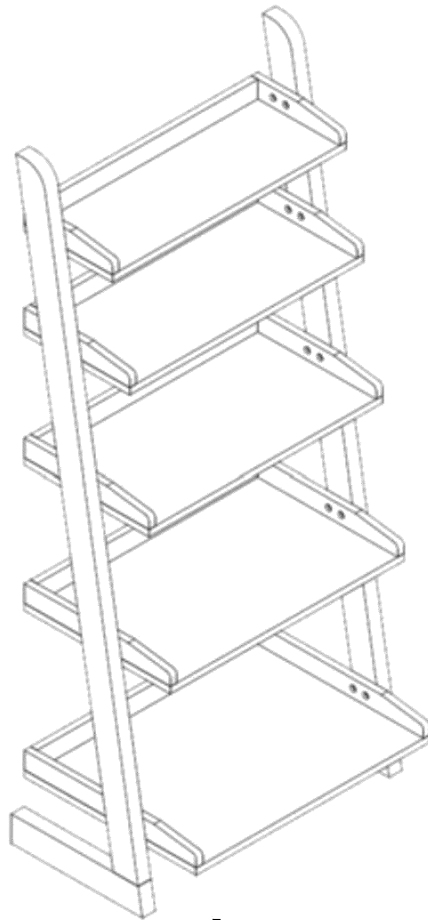

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

## Tools Required for Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

EASY

 


DIFFICULT

# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

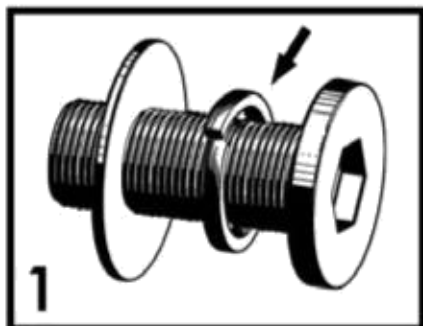


1 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



 
2 Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

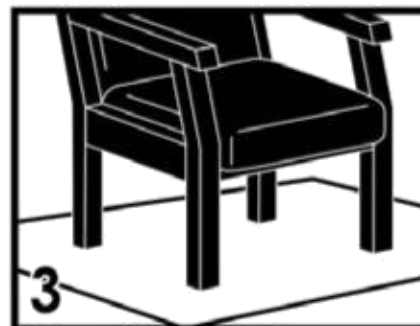

 3 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

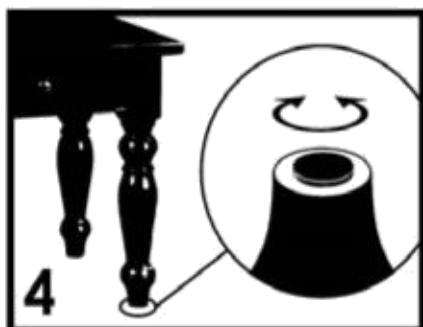

 4 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

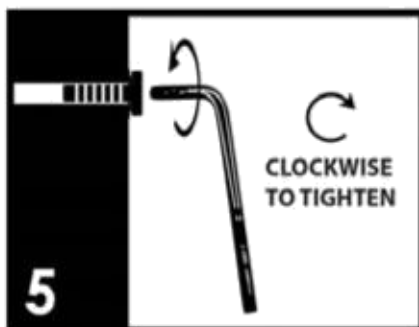

5 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



6 Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.










Before you begin, please read Page 2 of “Assembly and Care Advice”.







And remember, do not tighten until each step is completed or instructed.

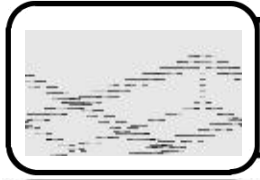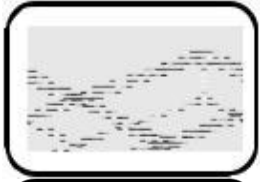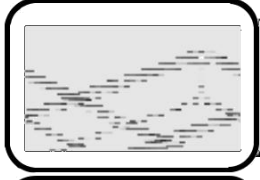MD

### Parts List

-  #1 x 1 pc  
Left Stand
-  #2 x 1 pc  
Right Stand
-  #3 x 1 pc  
Shelf A
-  #4 x 1 pc  
Shelf B
-  #5 x 1 pc  
Shelf C
-  #6x 1 pc  
Shelf D
-  #7 x 1 pc  
Shelf E
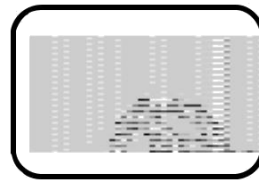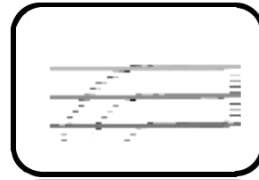
### Hardware List

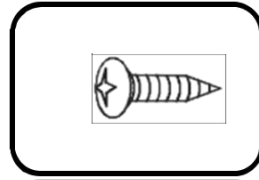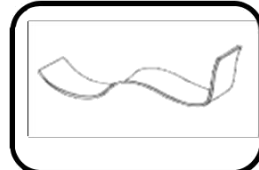
-  #A x 20 pcs  
Bolt 1/4"x1-1/4"
-  #B x 1 pc  
Allen Wrench
-  #C x 2 pcs  
Wall Anchor
-  #D x 2 pcs  
Wall Screw
-  #E x 2  
pcs Screw
-  #F x 2 pcs  
Wall Strap

# Step 1

 - I. Align shelf A (#3) with the 2 pre-drilled holes towards the top of the left stand (#1).
- II. Insert the two bolts (#A) through the two holes of shelf A (#3) and secure those bolts using the Allen wrench (#B) to lock them in with the left stand (#1).
- III. Repeat the above process to assemble shelf B (#4) through shelf E (#7) in that order.

Note: Right and left is determined by standing in FRONT of the unit in its upright position.


#A x 10 pcs →

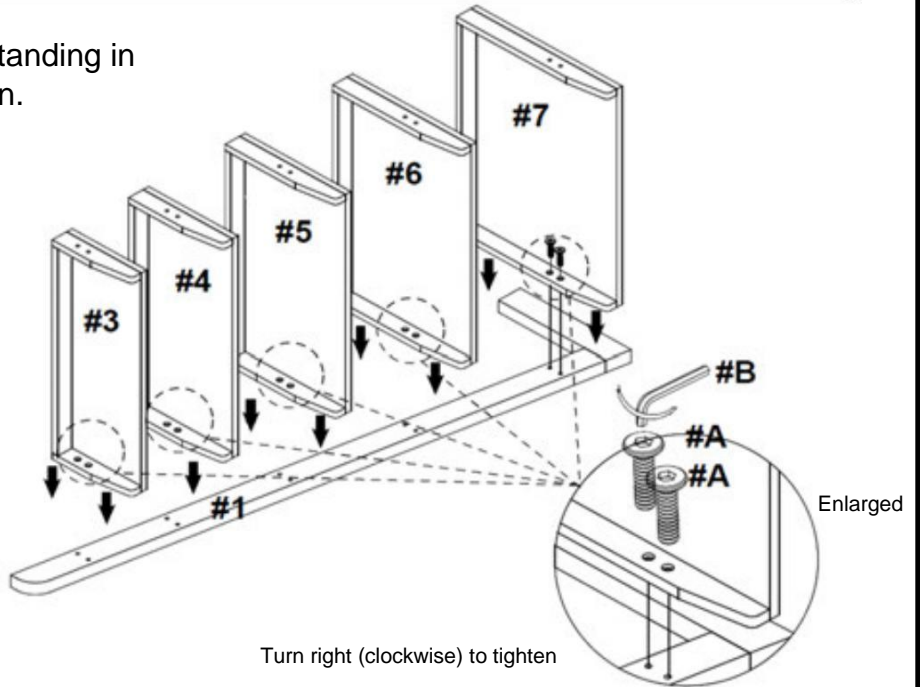

# Step 2


Repeat Step 1 to assemble the right stand (#2) to all the shelves (#3 through #7).
 
#A x 10 pcs →

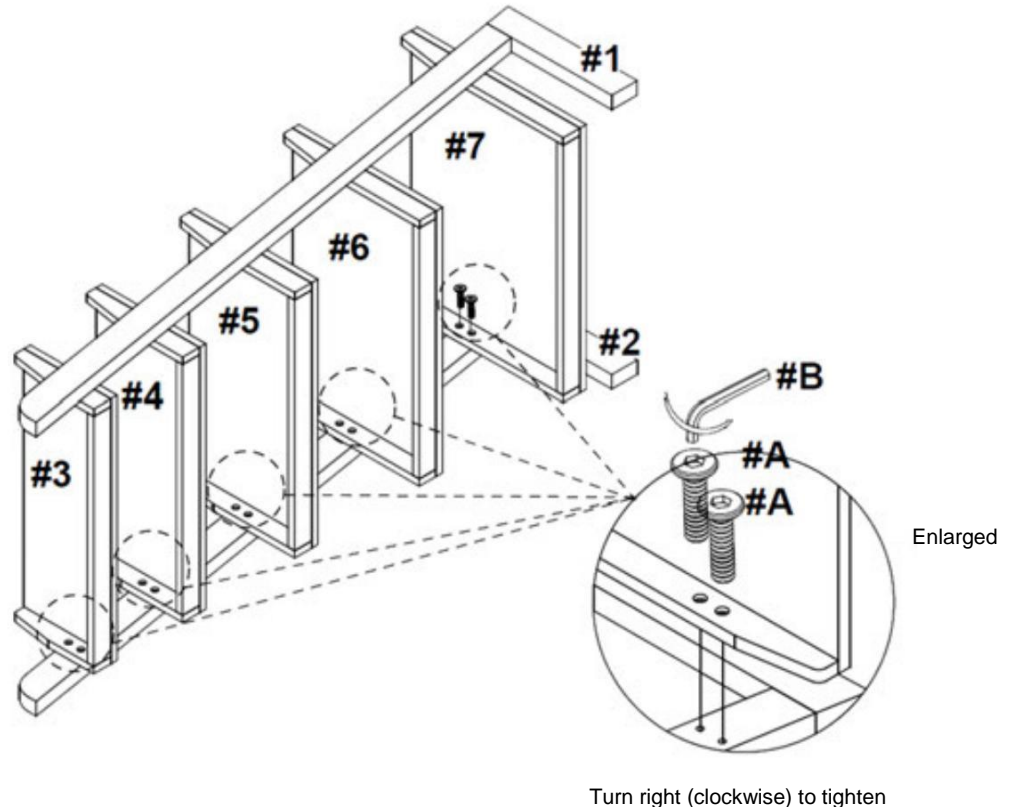

## Step 3

 Carefully turn the completed unit upright. Make sure the unit is rested on a flat surface and it does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tighten.

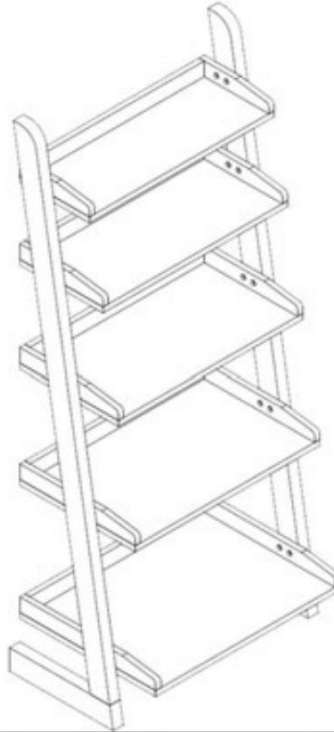

## Step 4

### SECURING THE DISPLAY TO THE WALL

#C x 2 pcs  
#D x 2 pcs  
#E x 2 pcs  
#F x 2 pcs



- I. Insert the screw (#E) near the end of the the wall strap (#F) and tighten that screw using a Phillips screwdriver to secure it with the right stand (#2). Repeat the process for the other side.
- II. Select a location where you want to the unit to be displayed. Mark on the wall the two locations where the wall anchors (#C) will be placed. Drill a hole for each anchor slightly smaller then the size of the screw. Push the wall anchor (#C) as far as it will go with your finger. Tap gently with a hammer until the wall anchor (#C) is flush with the wall surface.
- III. Insert the wall screw (#D) through the other end of the wall strap (#F) and tighten that screw using a Phillips screwdriver into the wall anchor. Repeat the process for the other side.

