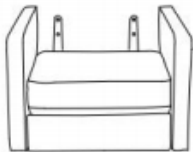
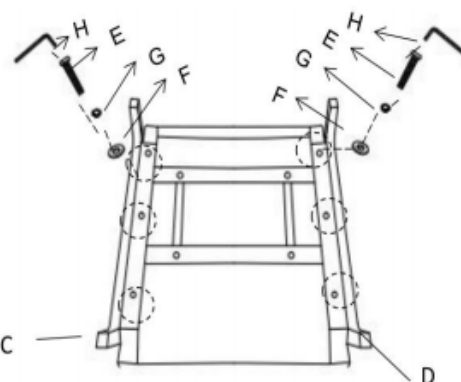
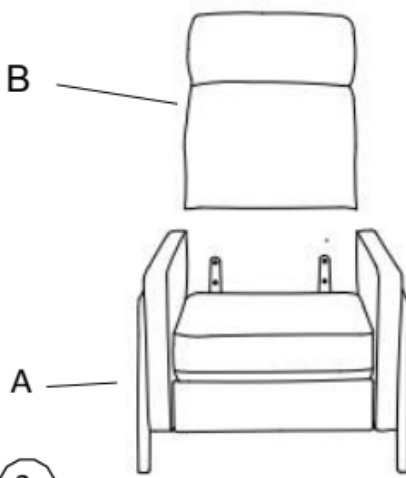
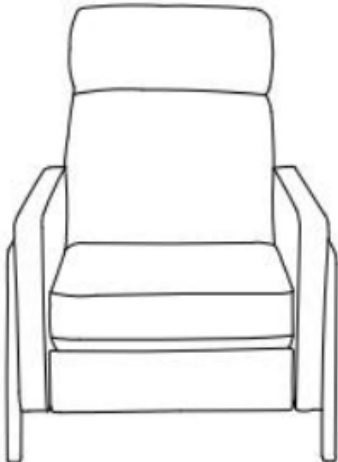


ASSEMBLY INSTRUCTIONS

PUSH BACK RECLINER

A BODY  1PC	 ①	 ②
B BACK  1PC		
C LEFT LEG  1PC		
D RIGHT LEG  1PC	 ③	RECLINER BACK TENSION ADJUSTMENT  If you find pushing back to a reclining position requires more "push" than expected the tension on the springs can be adjusted for ease of push back. Carefully lay the recliner back on the ground to access the bottom. To loosen turn the wing nuts counter clockwise. The manufacturer suggests turning each wing nut one complete turn counter clockwise then test the recliner back push by sitting in the recliner and going to the reclining position. Repeat as needed. DO NOT turn the wing nuts so many times that the spring falls off. If needed, spring can be removed to eliminate the push back tension . Thank you for your purchase.
E Bolt Φ5/16"*2"  6PCS		
F Flat washer Φ5/16"*16MM  6PCS		
G Spring washer Φ5/16"  6PCS		
H Allen Key 5MM  1PC		

NOTE: 1: MAXIMUM WEIGHT LIMIT 330LBS