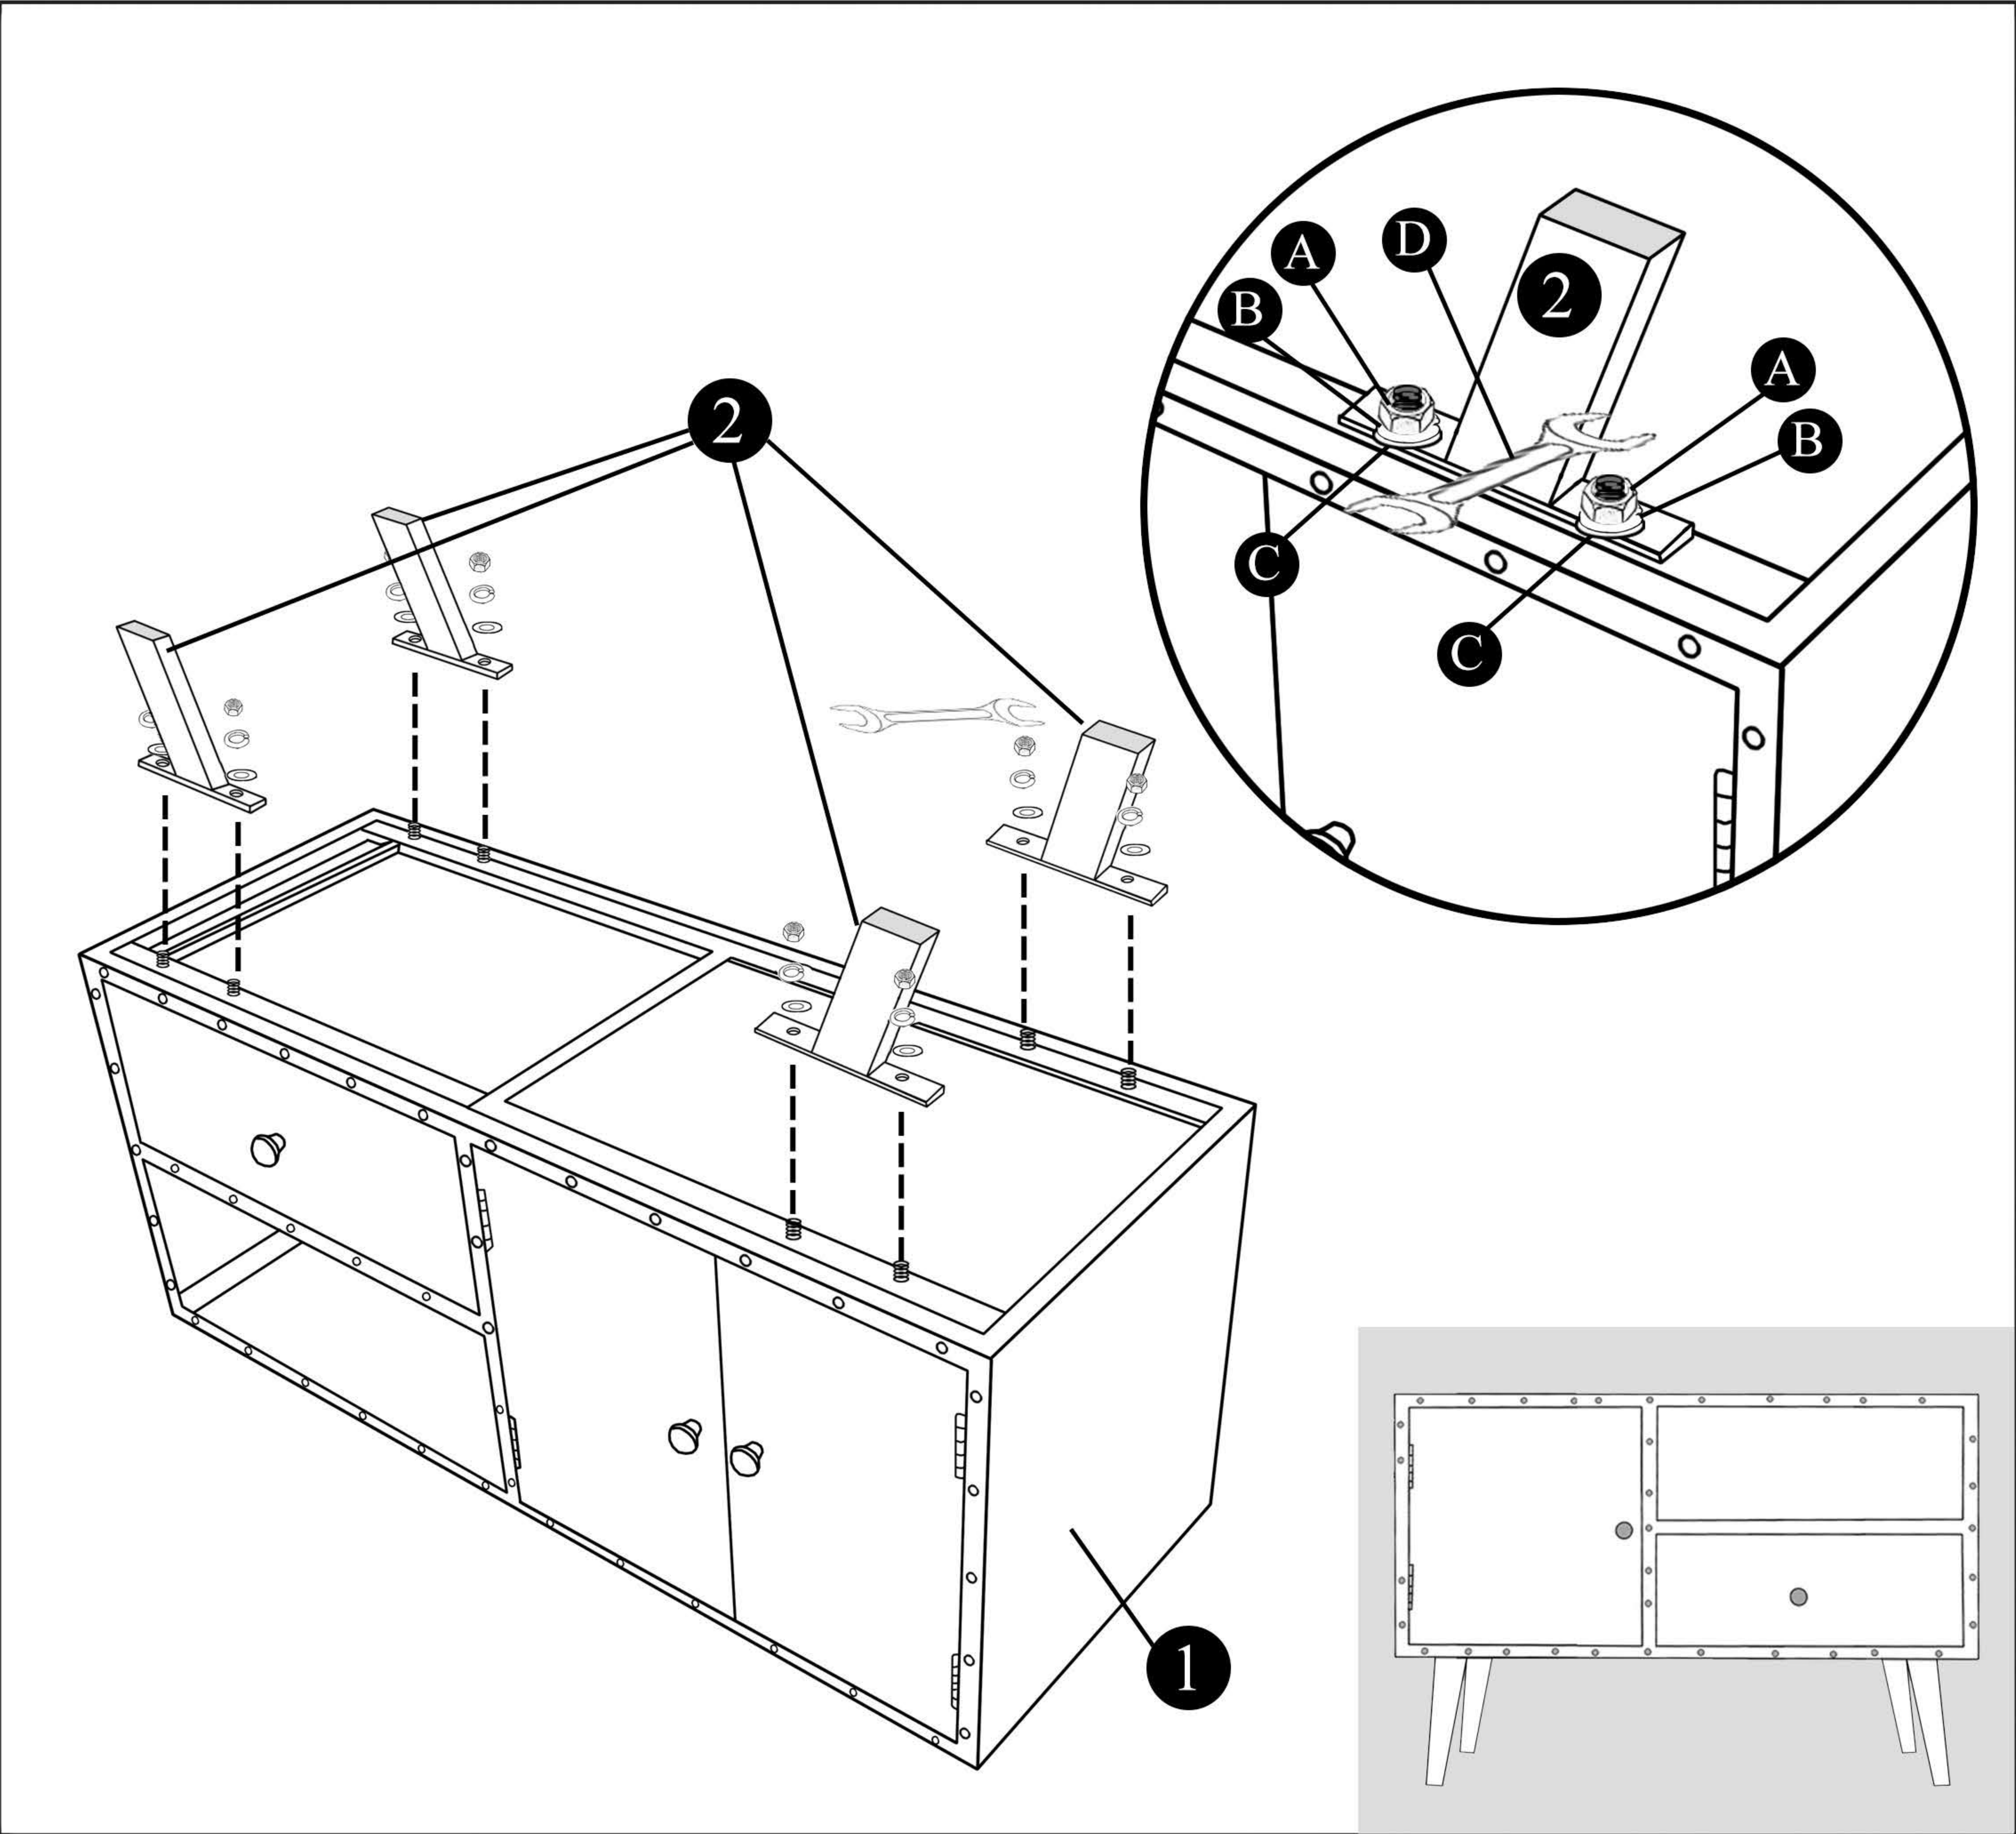
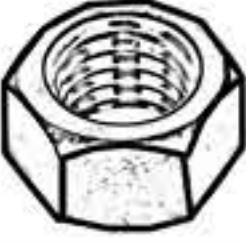
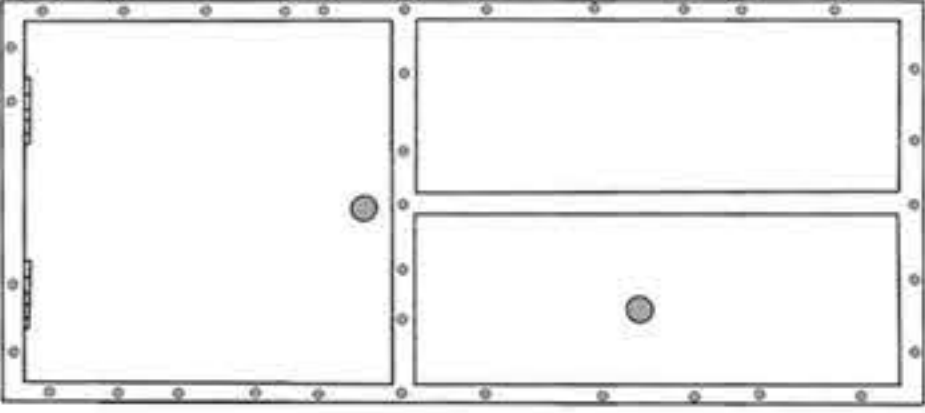

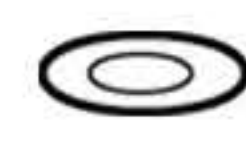
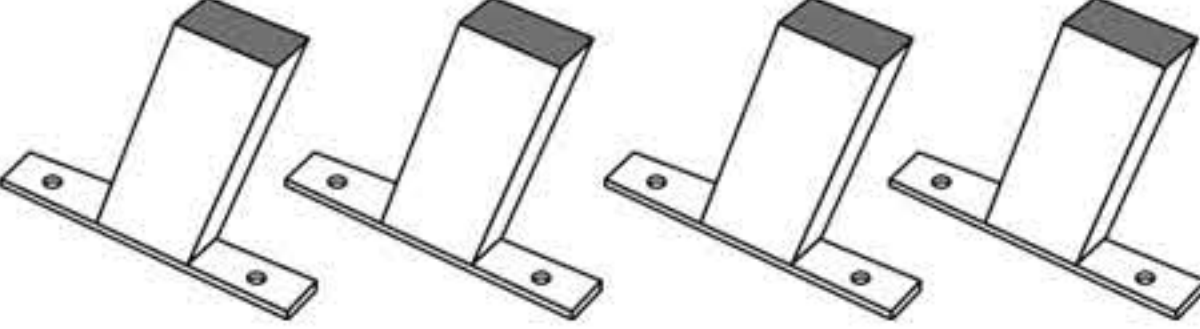



ASSEMBLY INSTRUCTIONS

Console

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all parts and compare with the parts list below.
Do not completely tighten until the item has been fully assembled.



HARDWARE LIST					PARTS LIST			
A		Nutt	Ø 0.35"	8pcs	1		TOP PART	1pc
B		Lock Washer	Ø 1"	8pc				
C		Flat Washer	Ø 1"	8pc	2		LEGS	4pcs
D		Spanner	No. 14 - 15	1pc				

Cleaning Instruction: Clean the TV Cabinet surface with a furniture polish and a soft cloth.