

INSTRUCTIONS



The product you have purchased requires some assembly. This item has been carefully inspected before packing to ensure it's adherence to our strict Quality Control Standards. Proper assembly will ensure not only your safety, but many years of enjoyable use of this quality product. We STRONGLY suggest that you familiarize yourself with these instructions prior to assembling this product. It's up to you to follow carefully EACH STEP of the assembly process. For your safety, DO NOT SKIP any step indicated in these instructions. Use all the hardware provided as indicated. Be sure to tighten all fasteners securely. The manufacturer will not be responsible for any damage or injury that results from improper assembly of the swing.

****Attention/Stop****



Please read before assembling this product!

In the unlikely event that there are incorrect or missing parts or that parts become damaged during shipping, following the instructions below will protect you (The Customer) from accepting responsibility for a product that is damaged or incomplete.


1st) Inspect all parts for any imperfection that might have occurred during shipping.

2nd) In the case of damaged parts, individual parts will be sent as replacements.

3rd) When you have determined that all parts are available and undamaged, proceed with steps 1 through 4.

This product is intended for a covered porch or indoors. This product should be cleaned weekly as you would with any other wooden furniture product.

ASSEMBLY INSTRUCTIONS

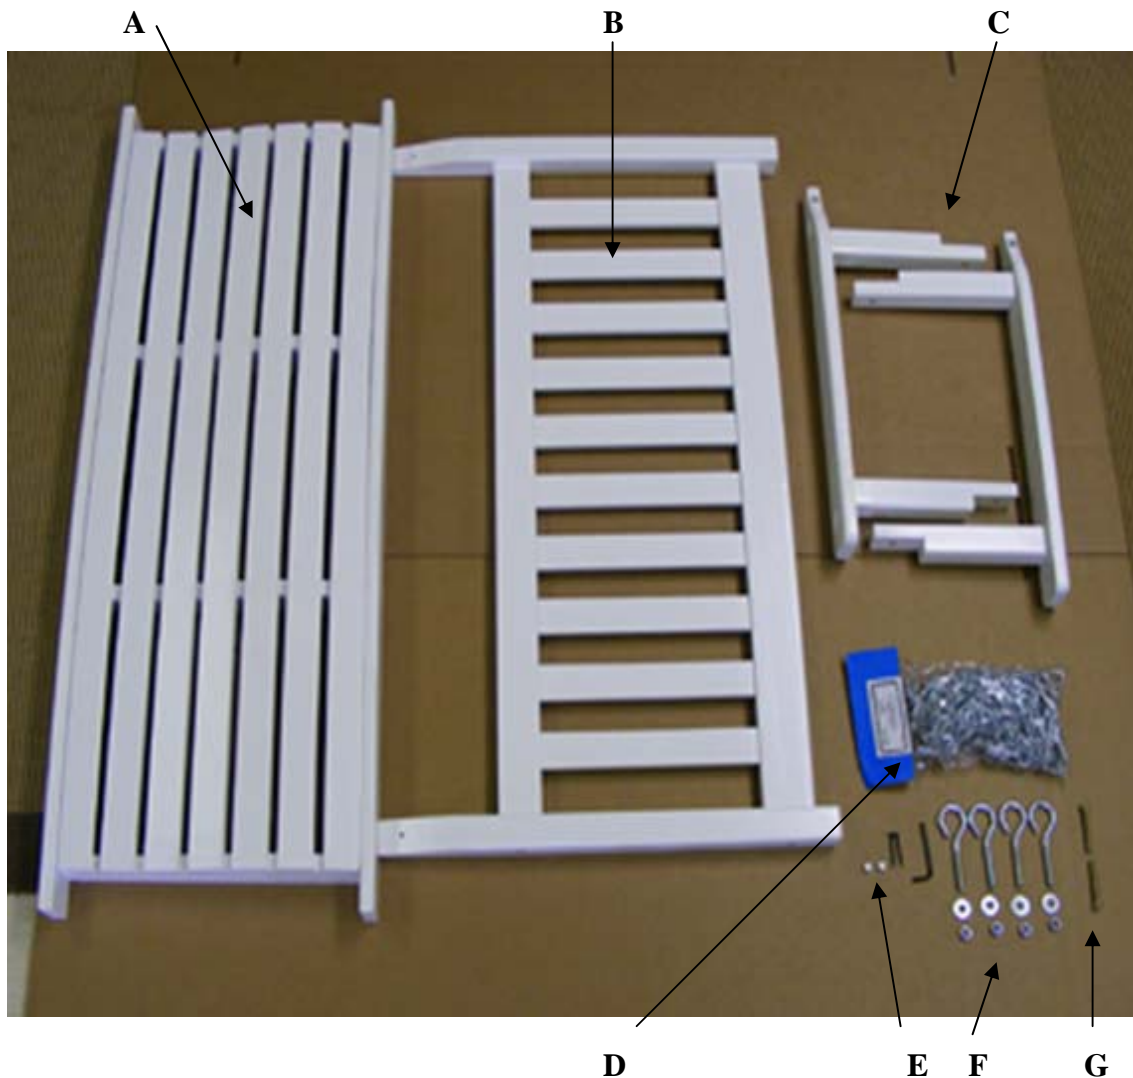

Parts Included:

- 1 - Swing Seat (A) *marked front and back
- 1 - Swing Back (B) *marked front and back
- 2 - Swing Arms (C) *marked left and right
- 1 - Chain Assembly (D)
- 2 - Back Screws w/Buttons (E)
- 4 - Eye Bolts, Washers, and Nuts (F)
- 2 - Arm Bolts (G) w/wrench

Tools Required For Assembly (not included)

Small Hammer

Screwdriver

Crescent Wrench or 1/2" Wrench

STEP 1:

Lay Swing on the shipping box during assembly to protect it from scratching. Attach swing arm (C) to swing seat (A) using eyebolts. (F). Place the bolt through, place washer on the inside and then the nut. Hand tighten Fig. 1. Complete this for both front and back. Then repeat for other side.

FIG. 1



Note : **BACK**

FRONT

STEP 2:

Place Swing Back (B) in between the Arms (C) at back of swing. Place Arm Bolts in pre-drilled hole and align with Swing Back (B). Hand tighten nut and repeat for other side. Fig. 2.


FIG. 2



STEP 3:

Push Swing Back (B) so that it makes contact with the back of Swing Seat (A). Place Back Screw (E) into pre-drilled hole in Swing Back (B). Thread screw all the way in until tight. Fig. 3. Complete this for the other side.


FIG. 3

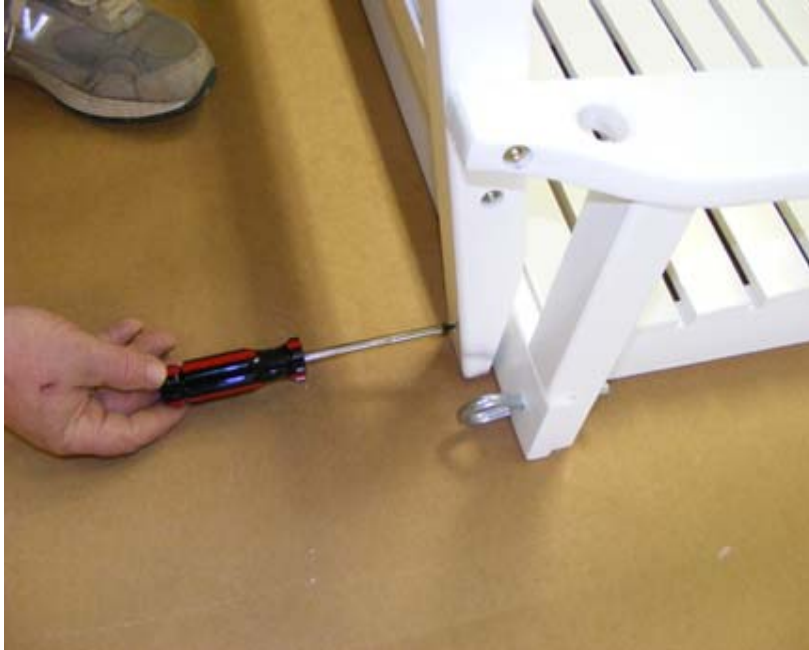

STEP 4:

Place Button (E) into hole after the Back Screw is installed and tap in with hammer. Assembly is now complete. Go back through all steps and fully tighten all hardware.

FIG. 4

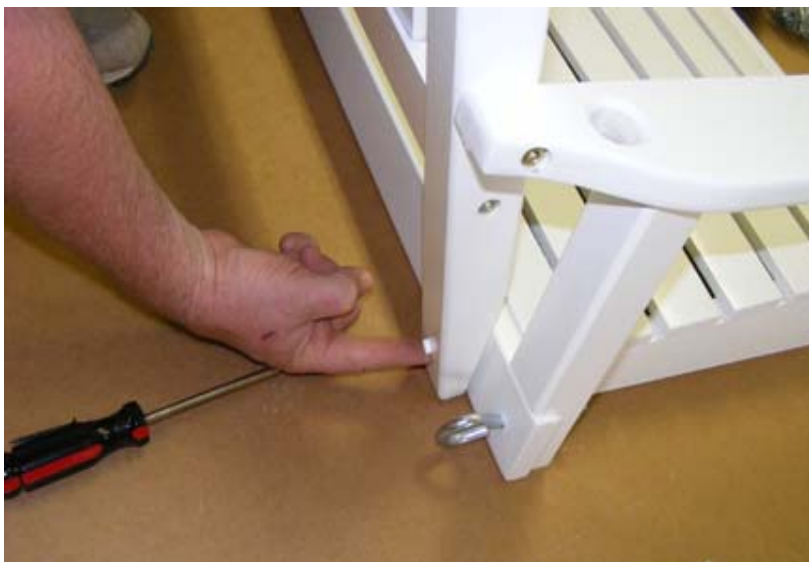

STEP 5:

Place Swing Chain (D) through holes in Swing Arms (C) and attach to Eye Bolts (F). Fig. 5. Complete this for both sides. .


FIG. 5



STEP 6:

When installing the provided ceiling hooks it is very important that the pilot hole drilled for the ceiling bolts is no larger than 5/32". Also, the wood must be solid and sturdy enough to handle the load being placed on it.

CAUTION: Not screwing the ceiling bolt all the way into the material can cause hardware failure and possible injury. Fig. 6 Ensure the ceiling hook is correctly threaded all the way in the material. Fig. 7

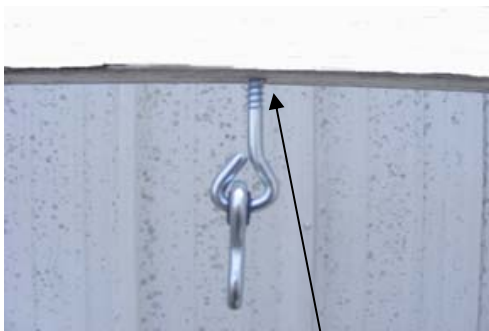

WRONG EXPOSED THREADS

FIG.6



CORRECT NO EXPOSED THREADS

FIG.7

