 




INSTALLATION

Product Manual

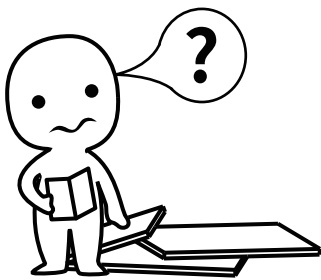


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

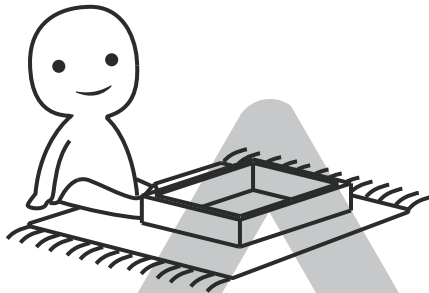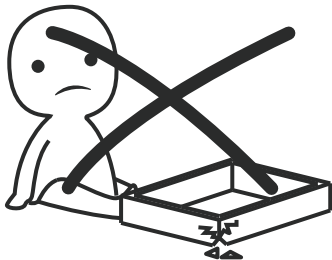



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

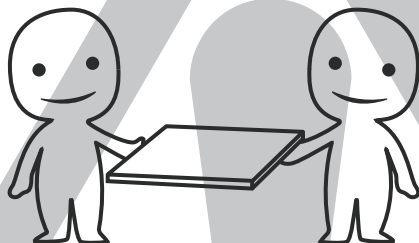

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

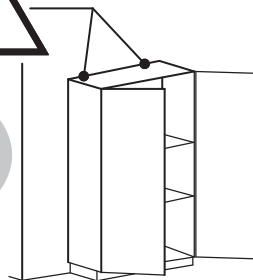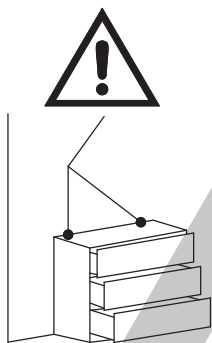

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

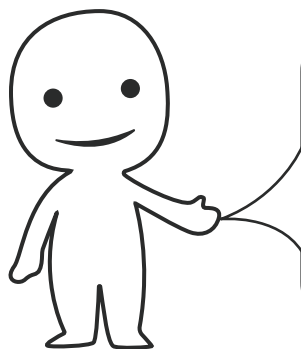

Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 95



 
M5 x 35 mm

B x 95



15 x 10 mm

C x 8




M8 x 30 mm

D x 74



M3.5 x 12 mm

 E x 28



Ø 6 x 40 mm

F x 32



M5 x 40 mm

G x 4



M6 x 12 mm

H x 12



M6 x 30 mm

I x 24



 
M6 x 50 mm

J x 4




M6 x 16 mm

K x 2



M5 x 10 mm

 L x 4



M6 x L12 mm

M x 16

 


15 x 6 x 2 mm

N x 8




O x 4

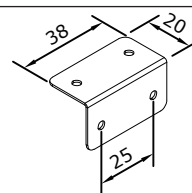

P x 8




 Q x 4




ZW(12)

 
R x 5




x 1

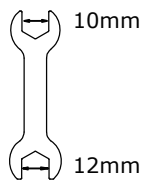 



x 1

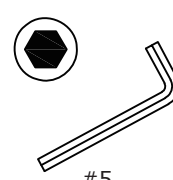 

x 1

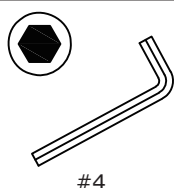 

#4

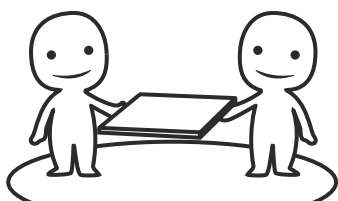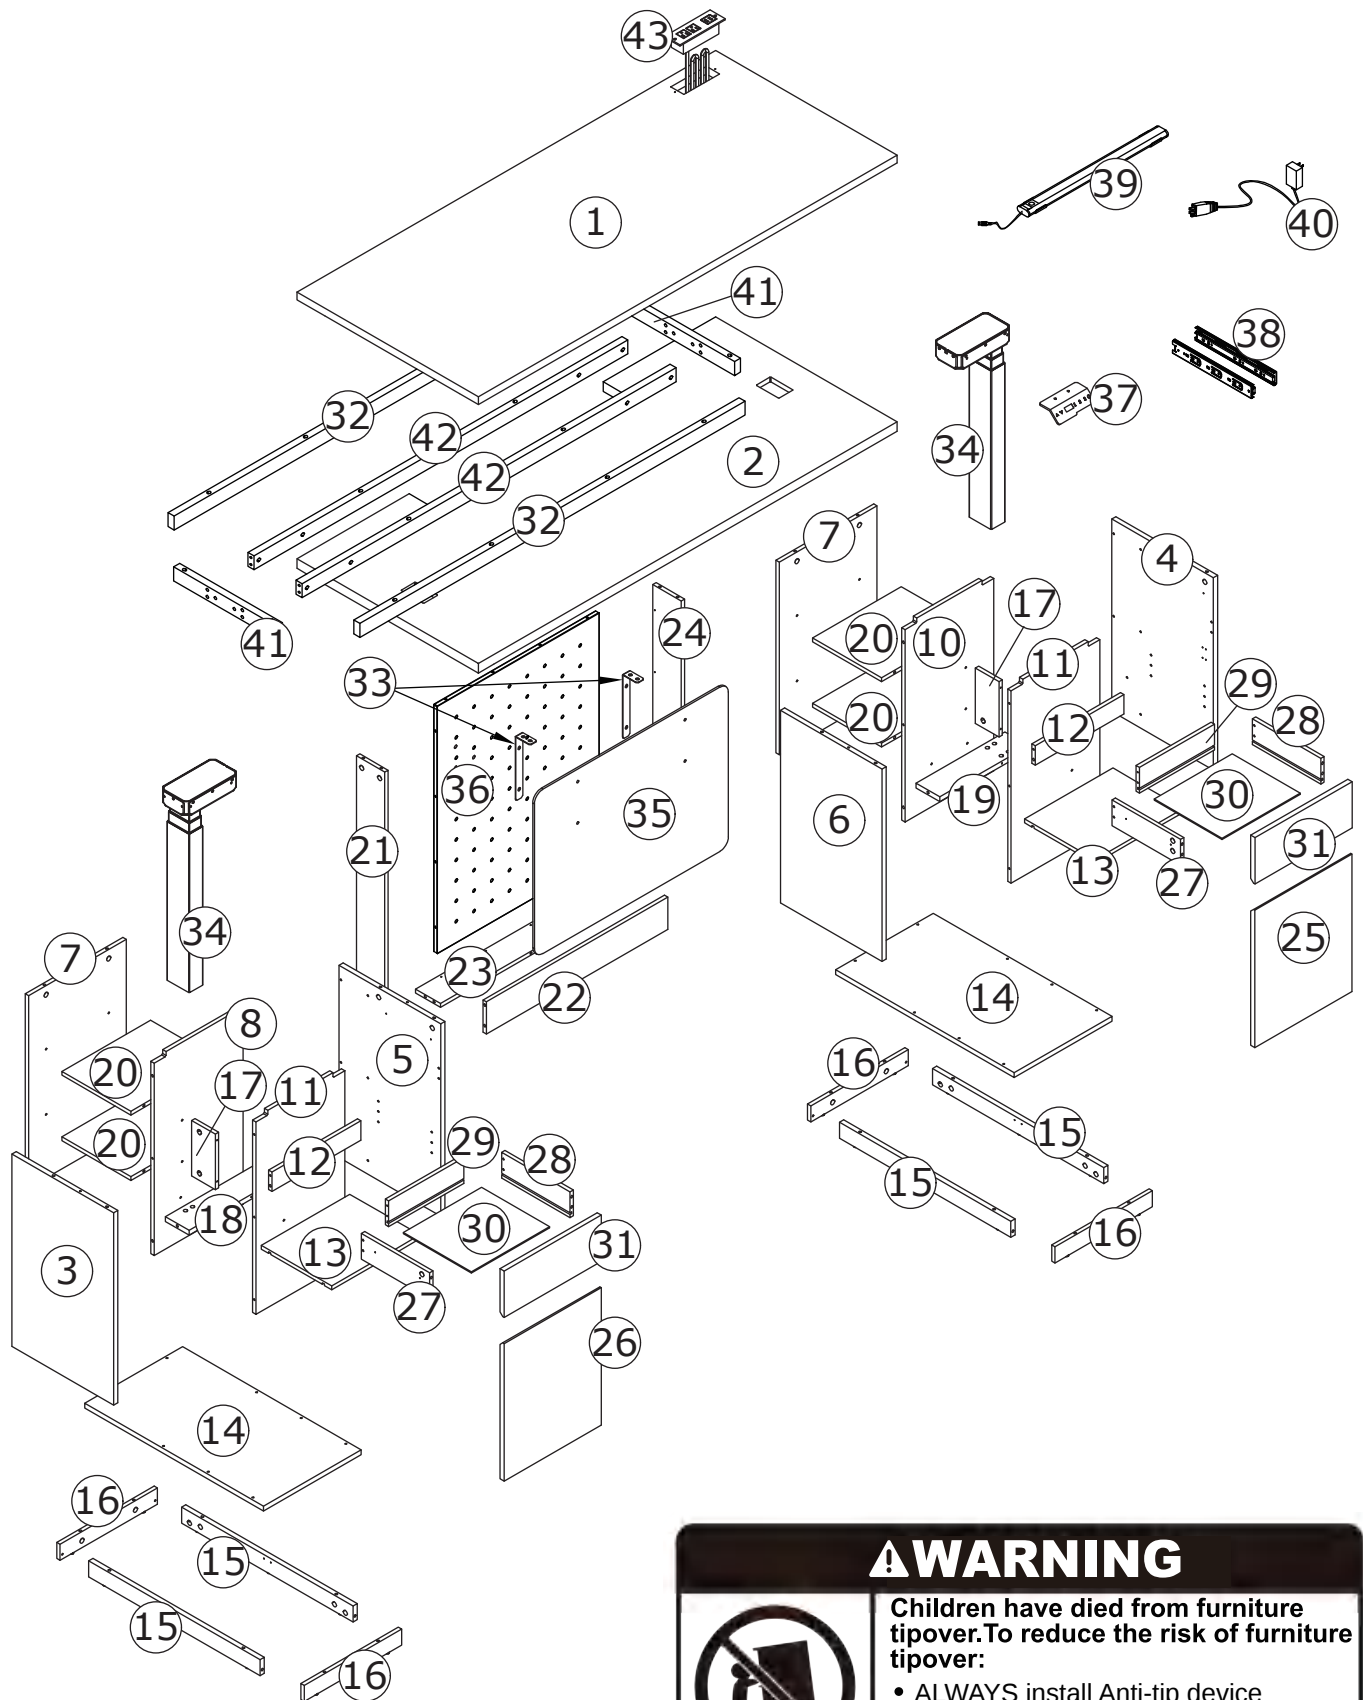  

ASSEMBLED BY 2 ADULTS

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

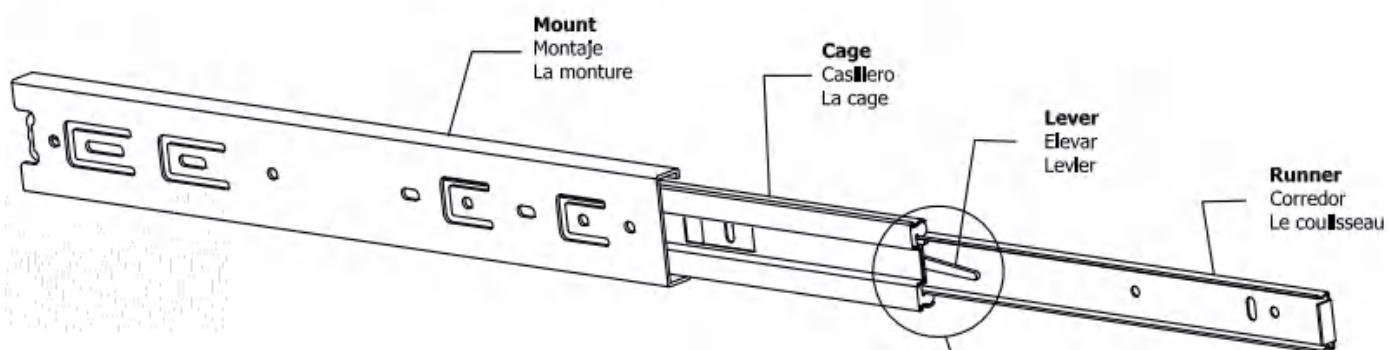

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

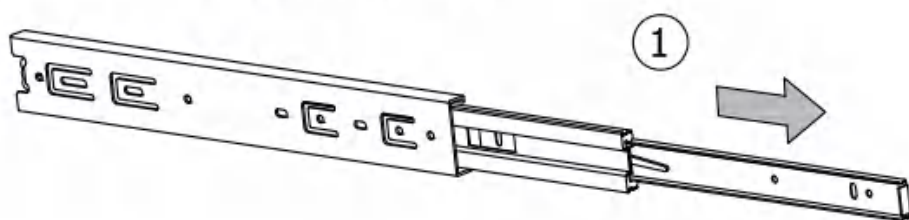


 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

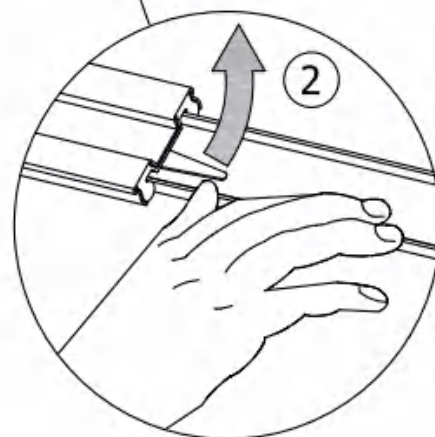

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

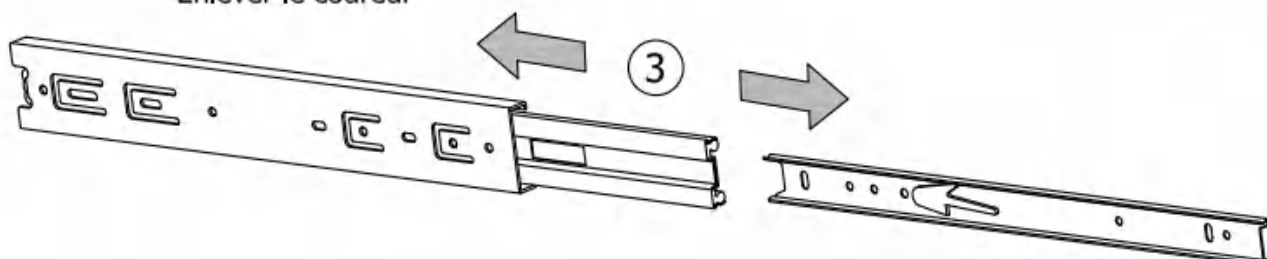

1


 
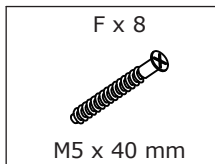 


 Secure Plate 17 and 18 to Plate 11 using screw (F).
Pay attention to the orientation of Plate 11.

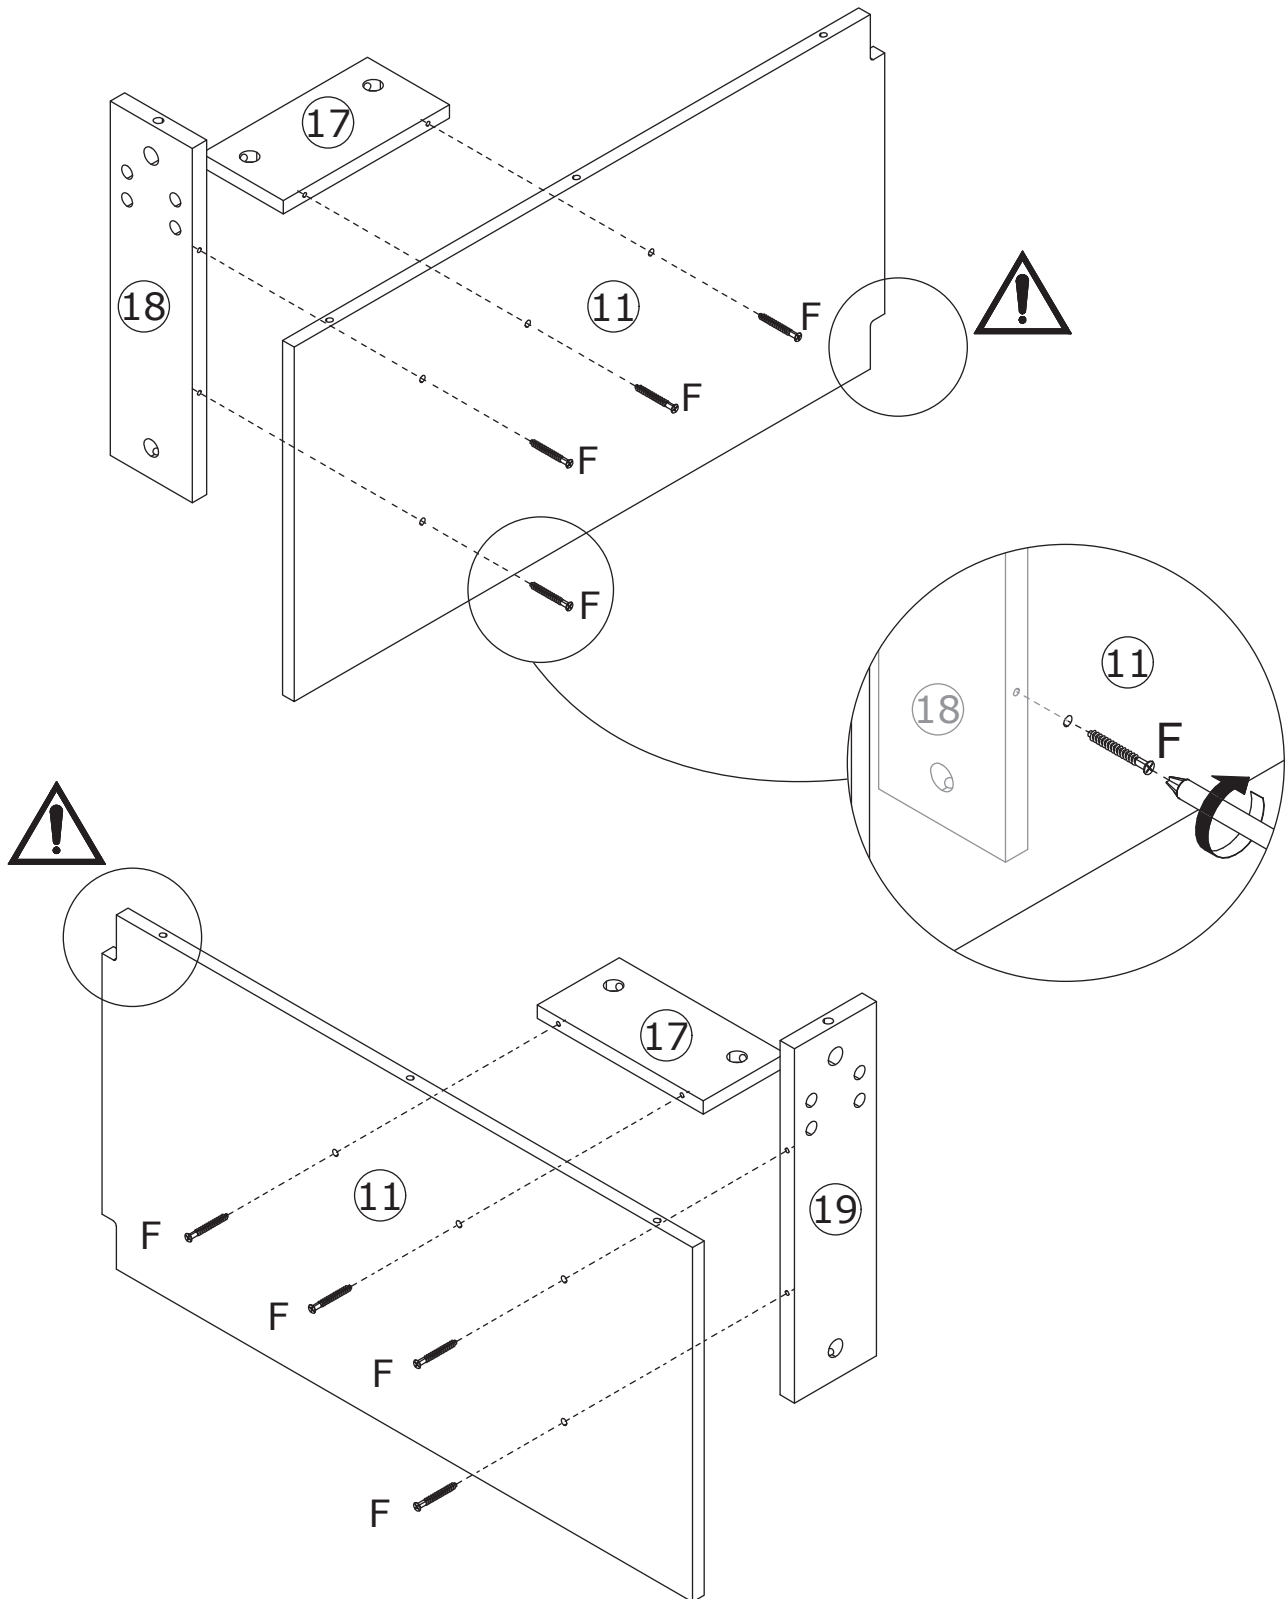







2

   A x 4
M5 x 42 mm

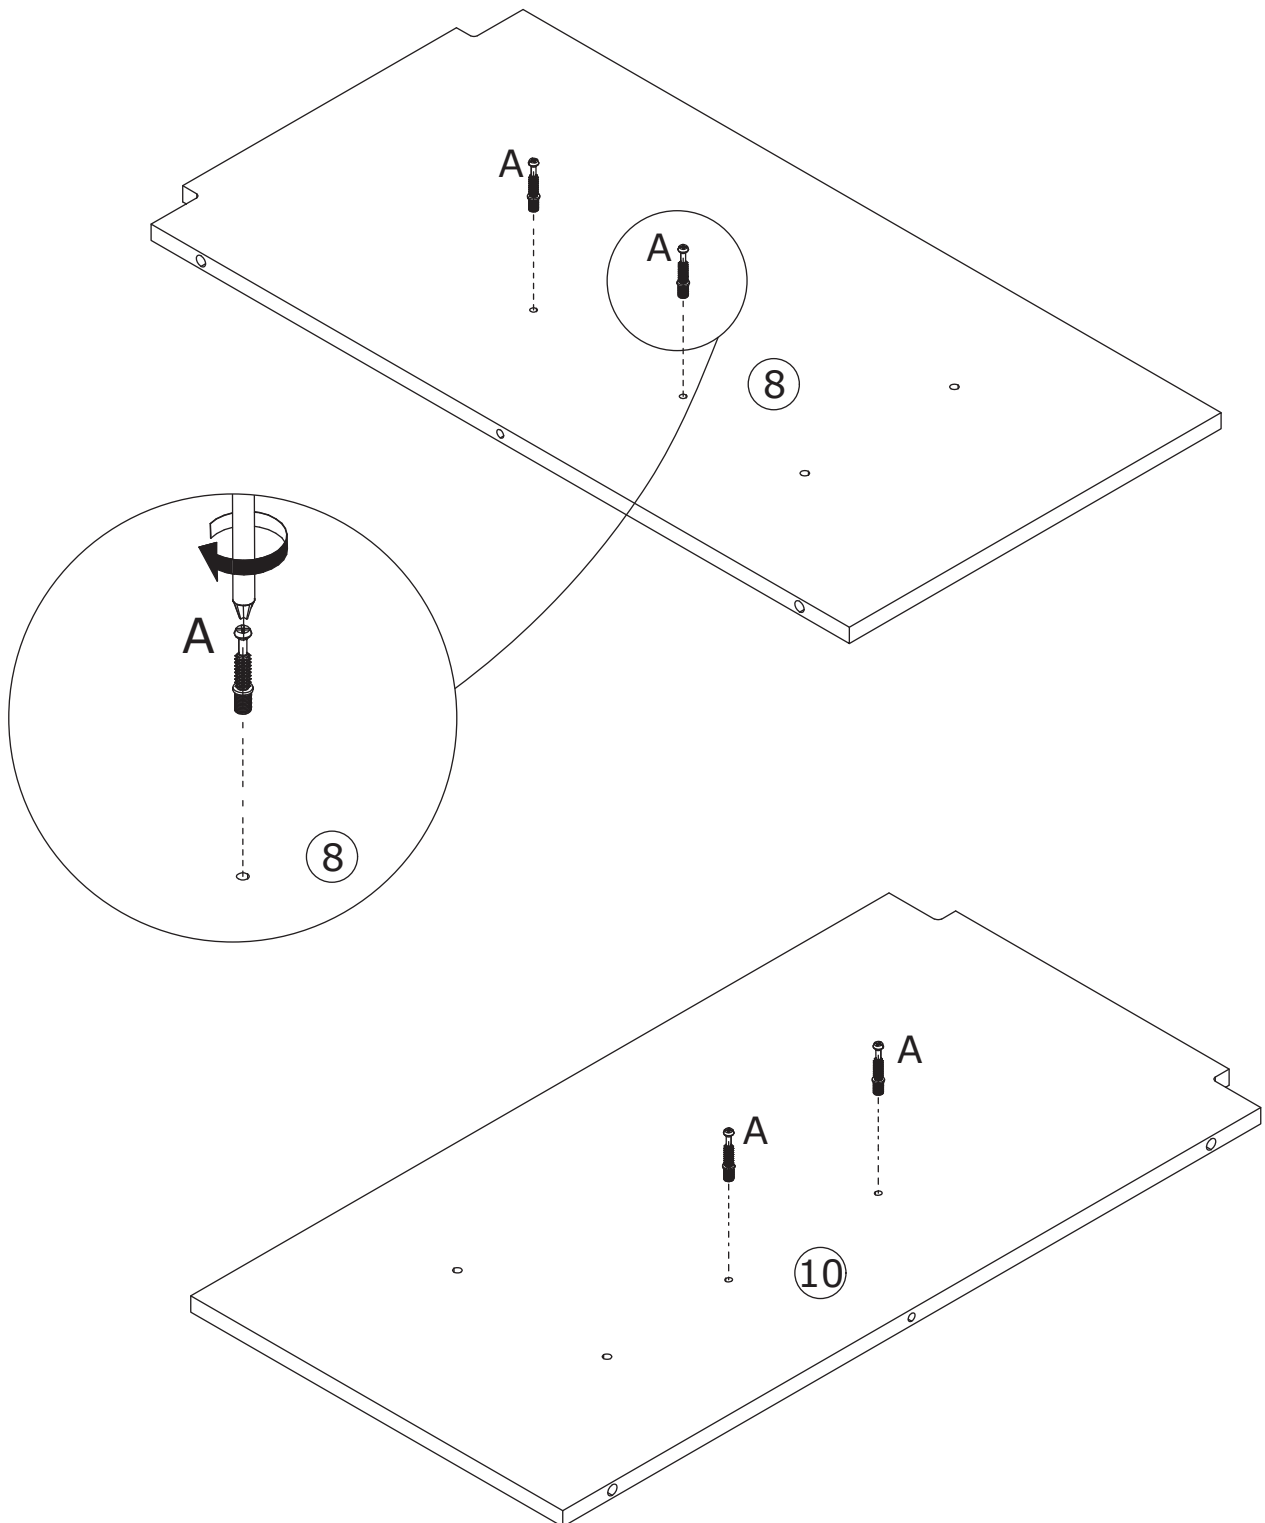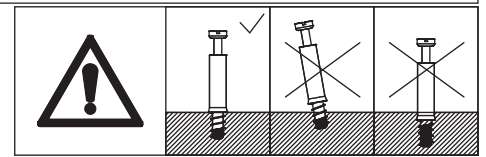



Screw eccentric rod (A) onto Plate 8 and 10.

      3

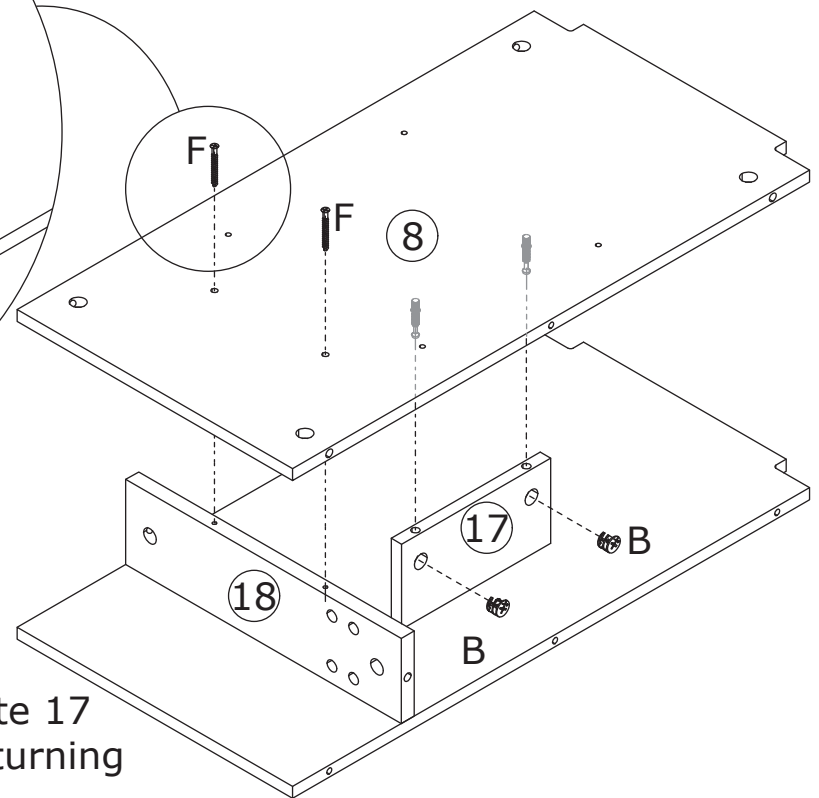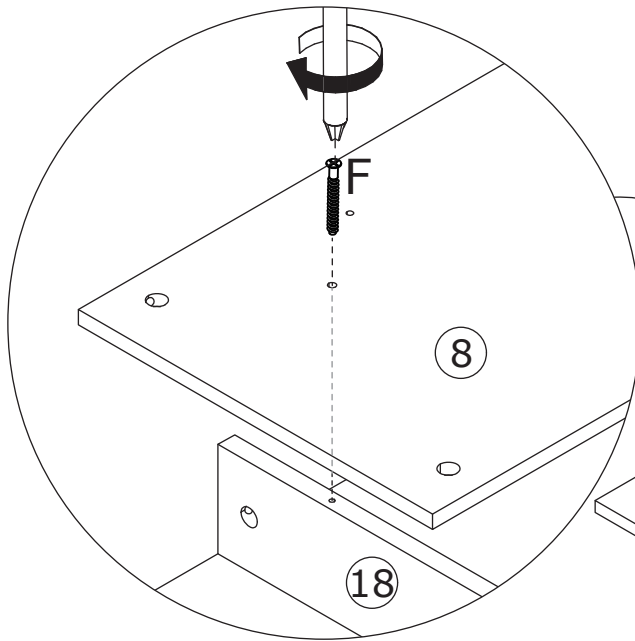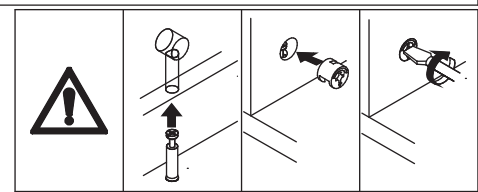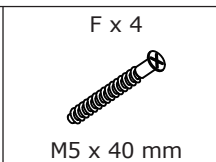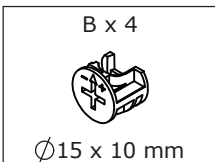



Connect Plate 8 and 10 to Plate 17 respectively, then tighten by turning eccentric wheel (B) clockwise.

  Secure Plate 8 and 10 to Plate 18 and 19 respectively using screw (F).


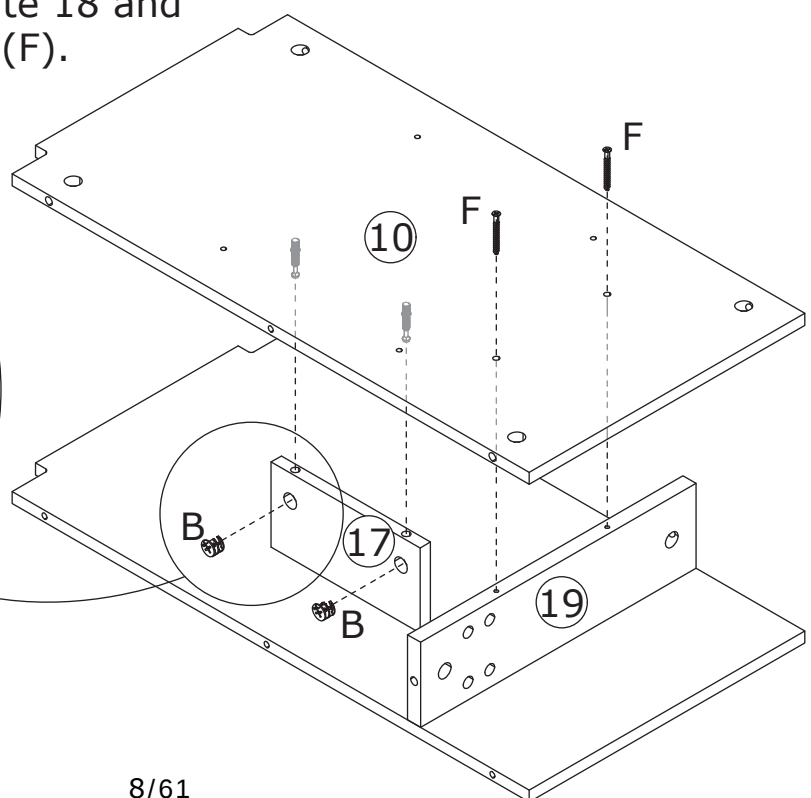
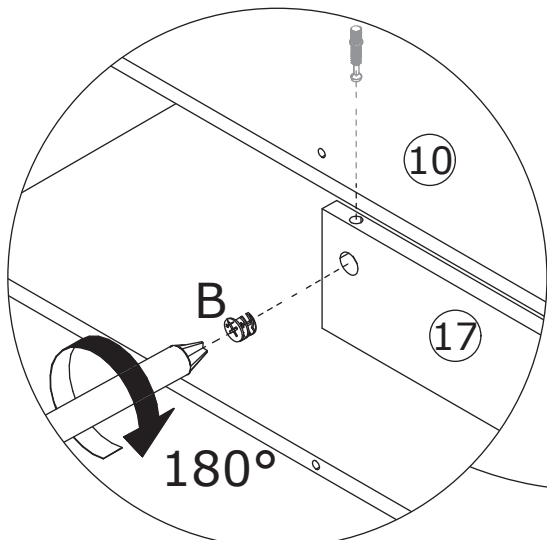


4


 
 
A x 8
M5 x 42 mm

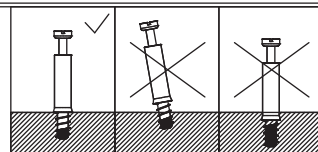

   
Screw eccentric rod (A) onto Plate 8 and 10.

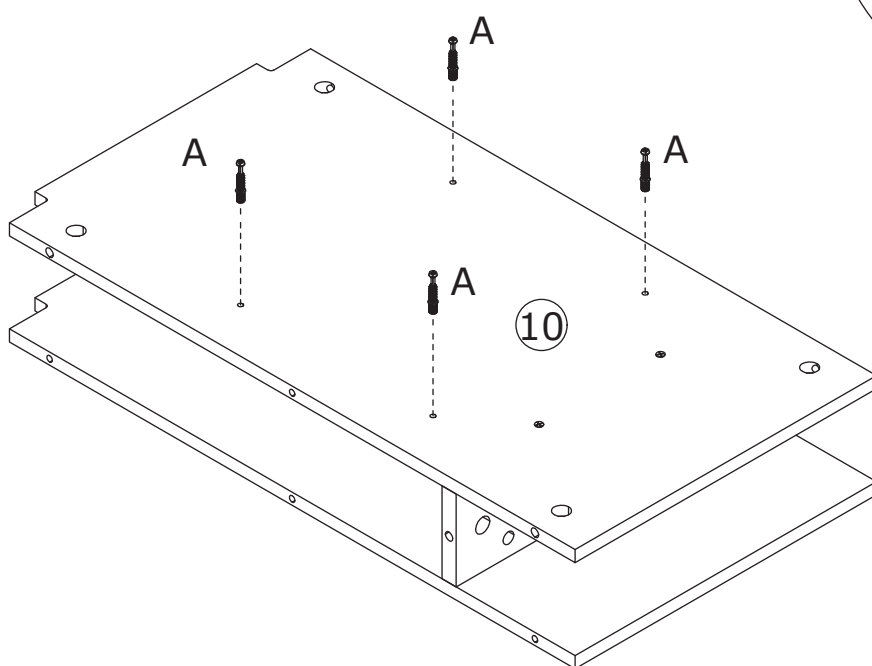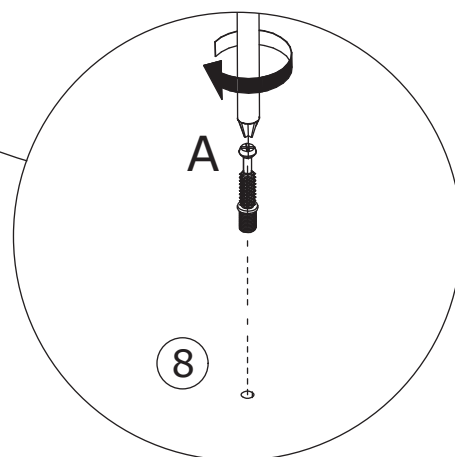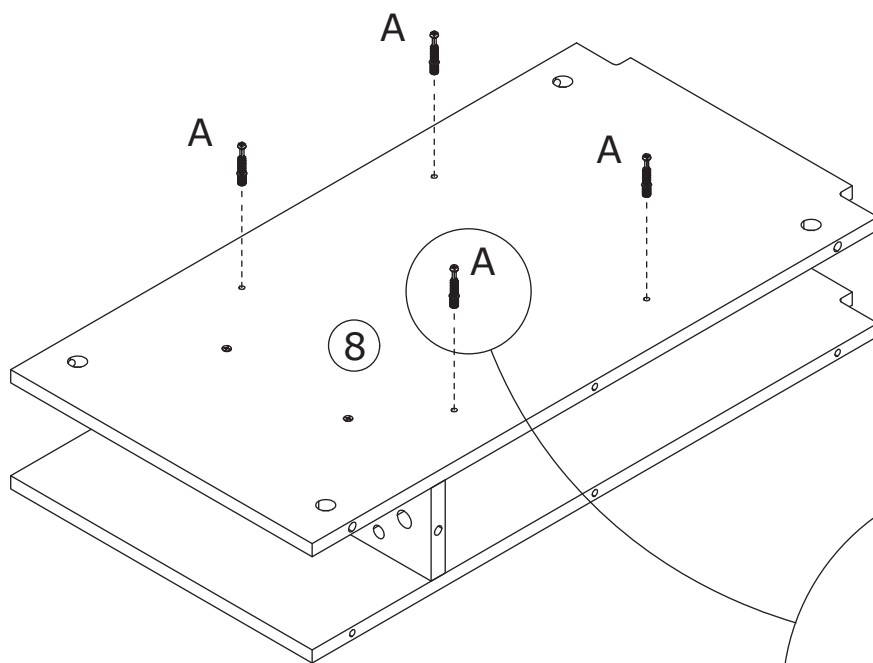

5



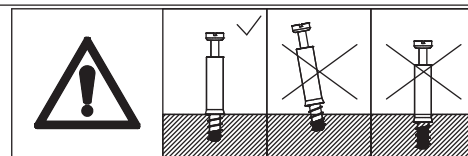 
 
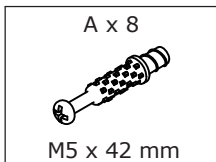 


Screw eccentric rod (A) onto Plate 7.

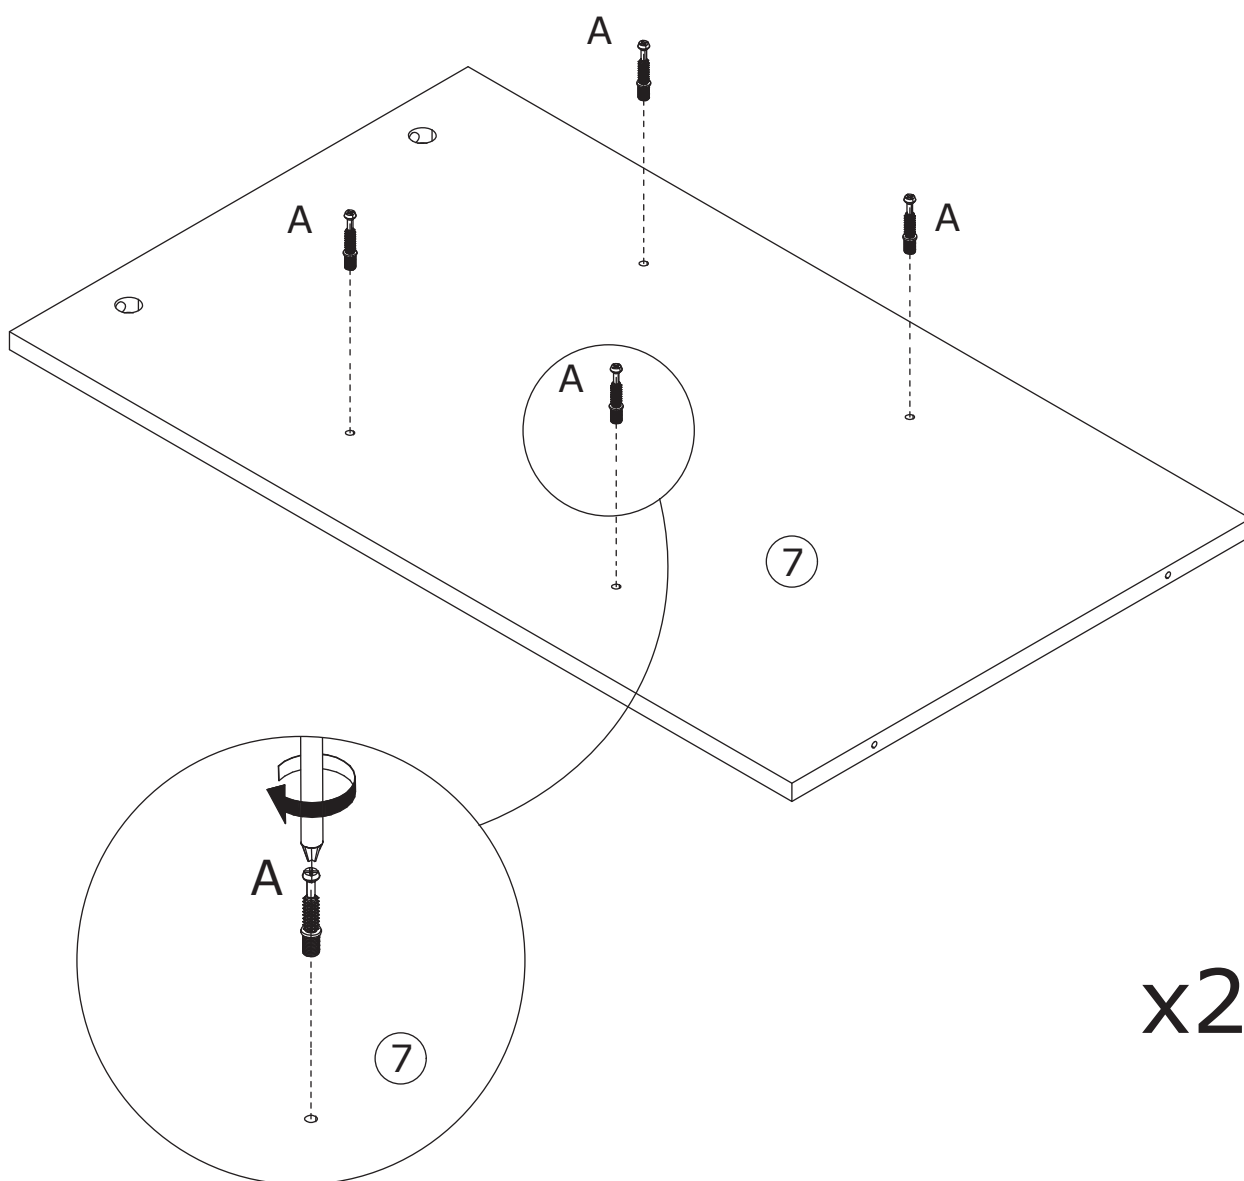 

6

     B x 4

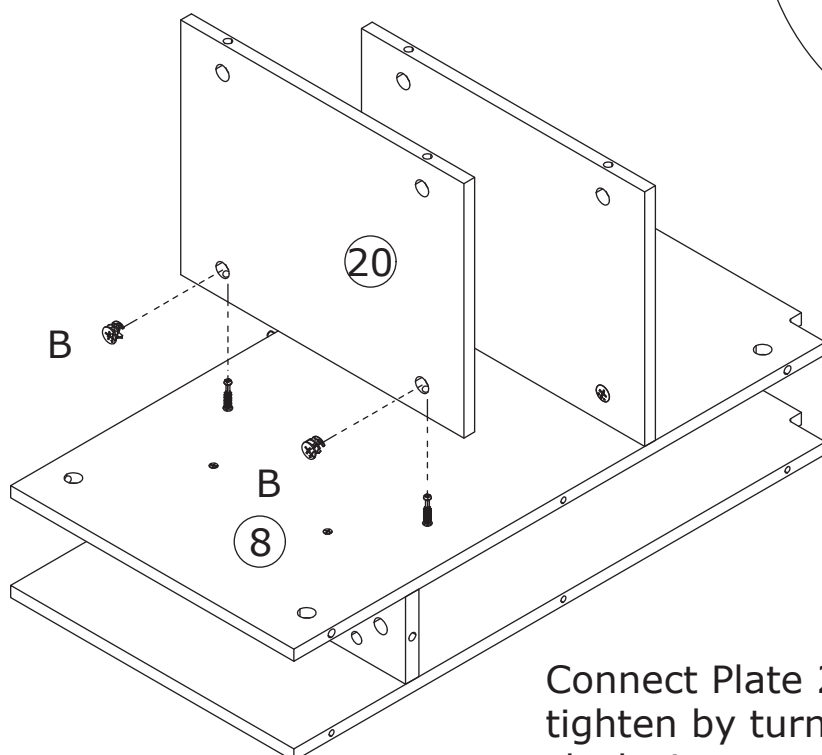
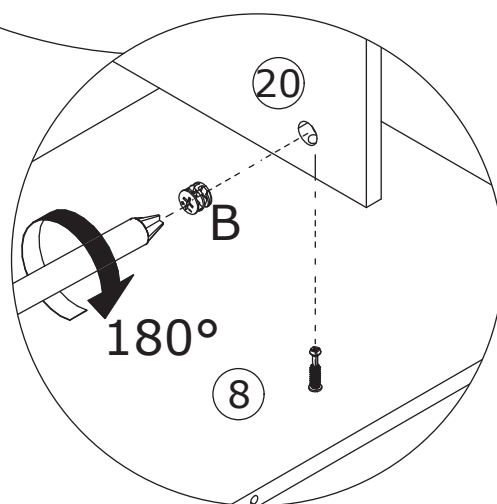
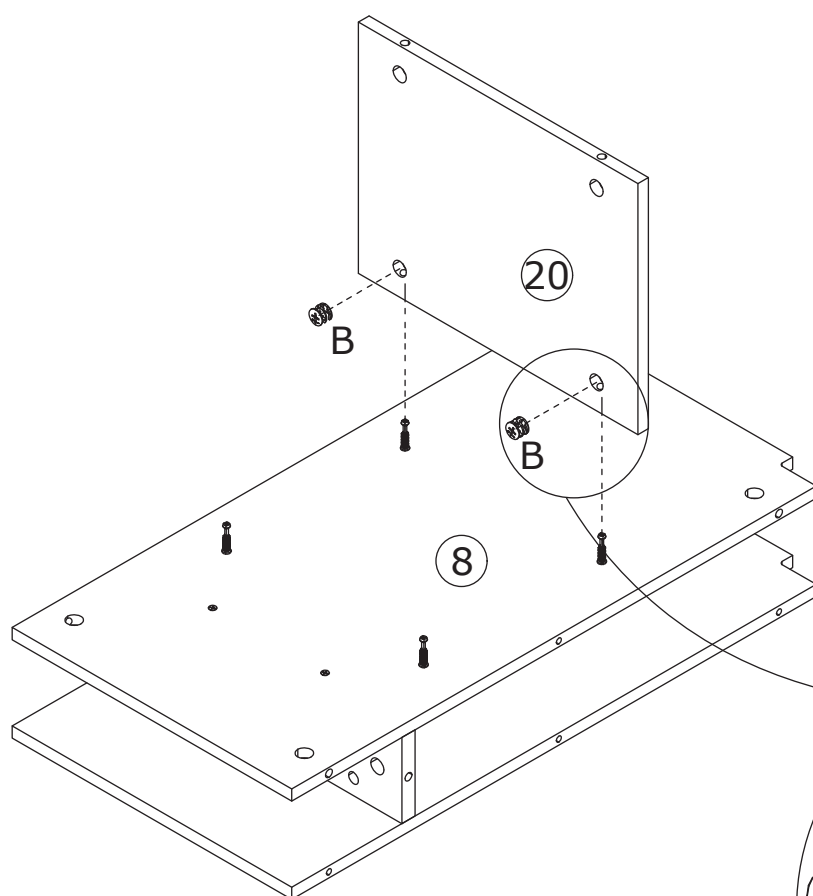
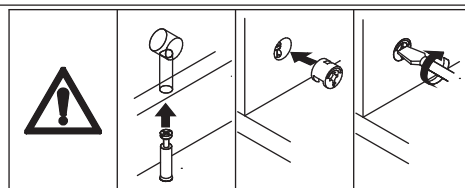

 $\varnothing 15 \times 10 \text{ mm}$ 

Connect Plate 20 to Plate 8, then tighten by turning eccentric wheel (B) clockwise.

7




B x 4

      Ø15 x 10 mm

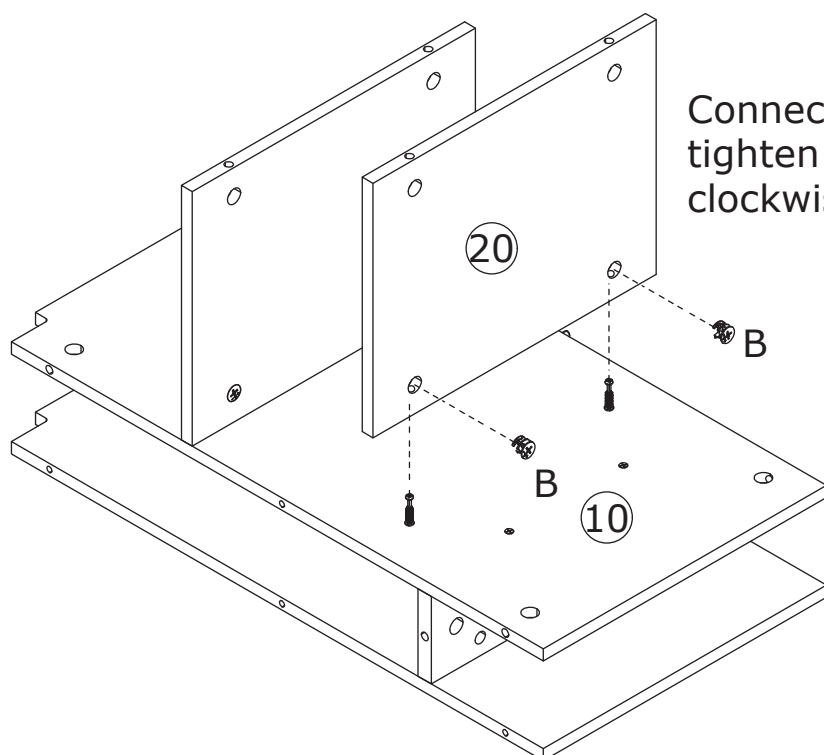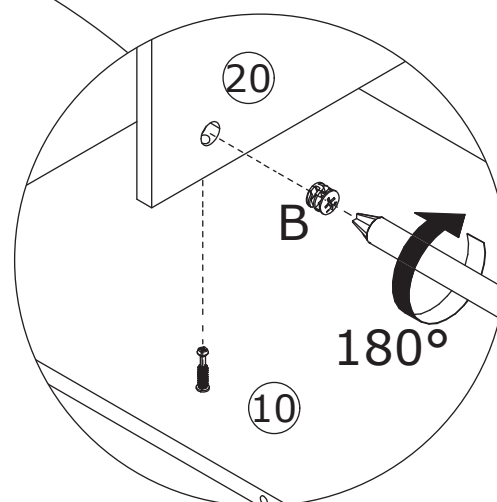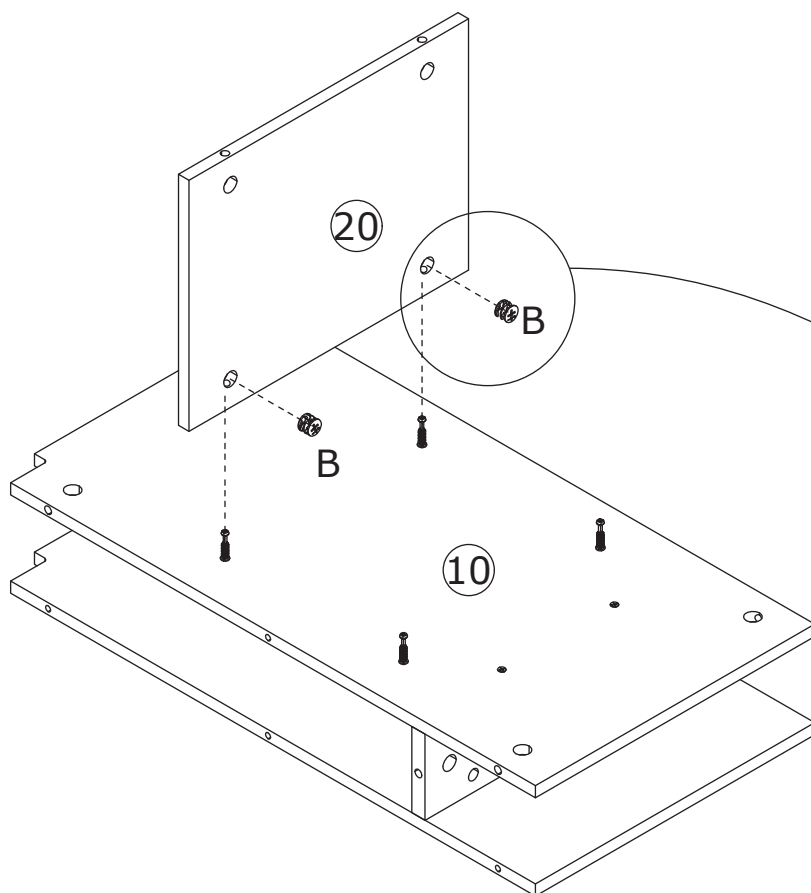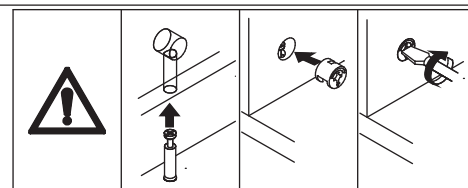


Connect Plate 20 to Plate 10, then
 tighten by turning eccentric wheel (B)
 clockwise.

   8


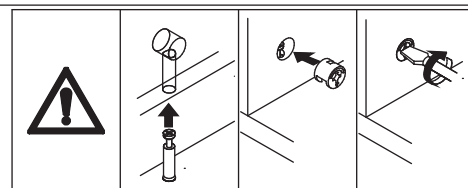

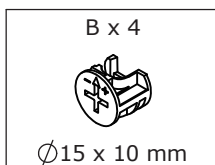


 Connect Plate 7 to Plate 20, then tighten by turning eccentric wheel (B) clockwise.

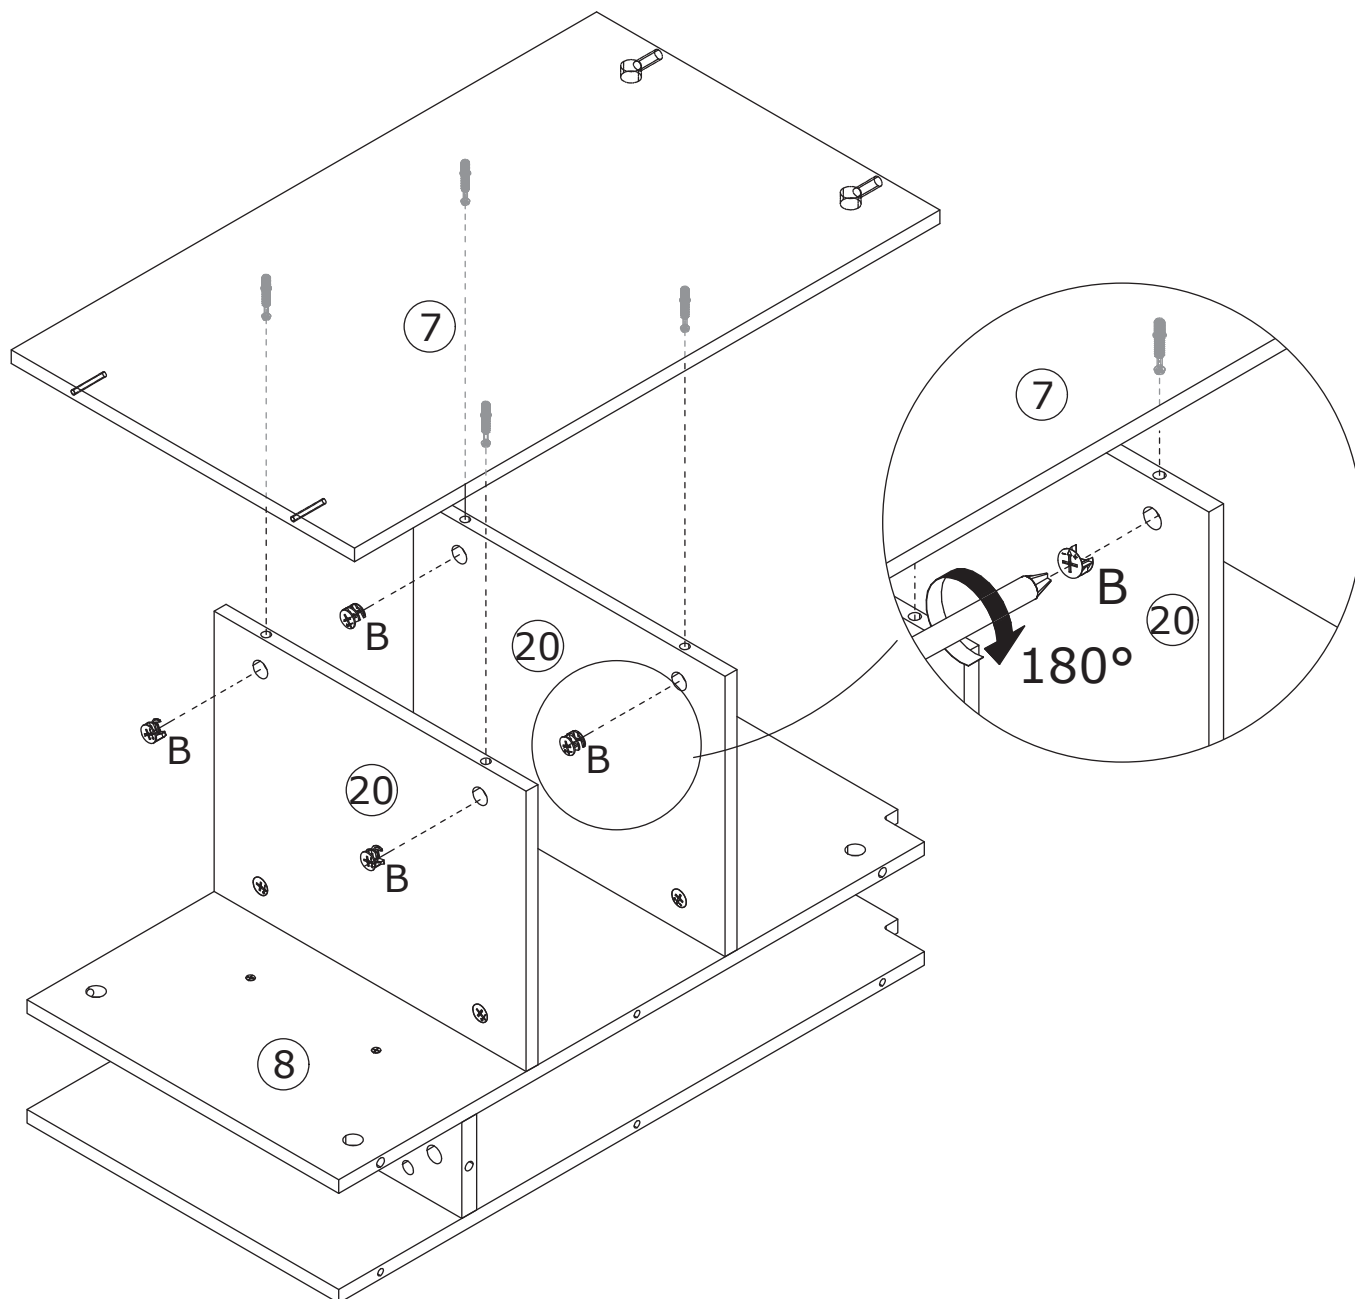


9




 
 
 
 
B x 4

 $\varnothing 15 \times 10 \text{ mm}$ 

 Connect Plate 7 to Plate 20, then tighten by turning eccentric wheel (B) clockwise.

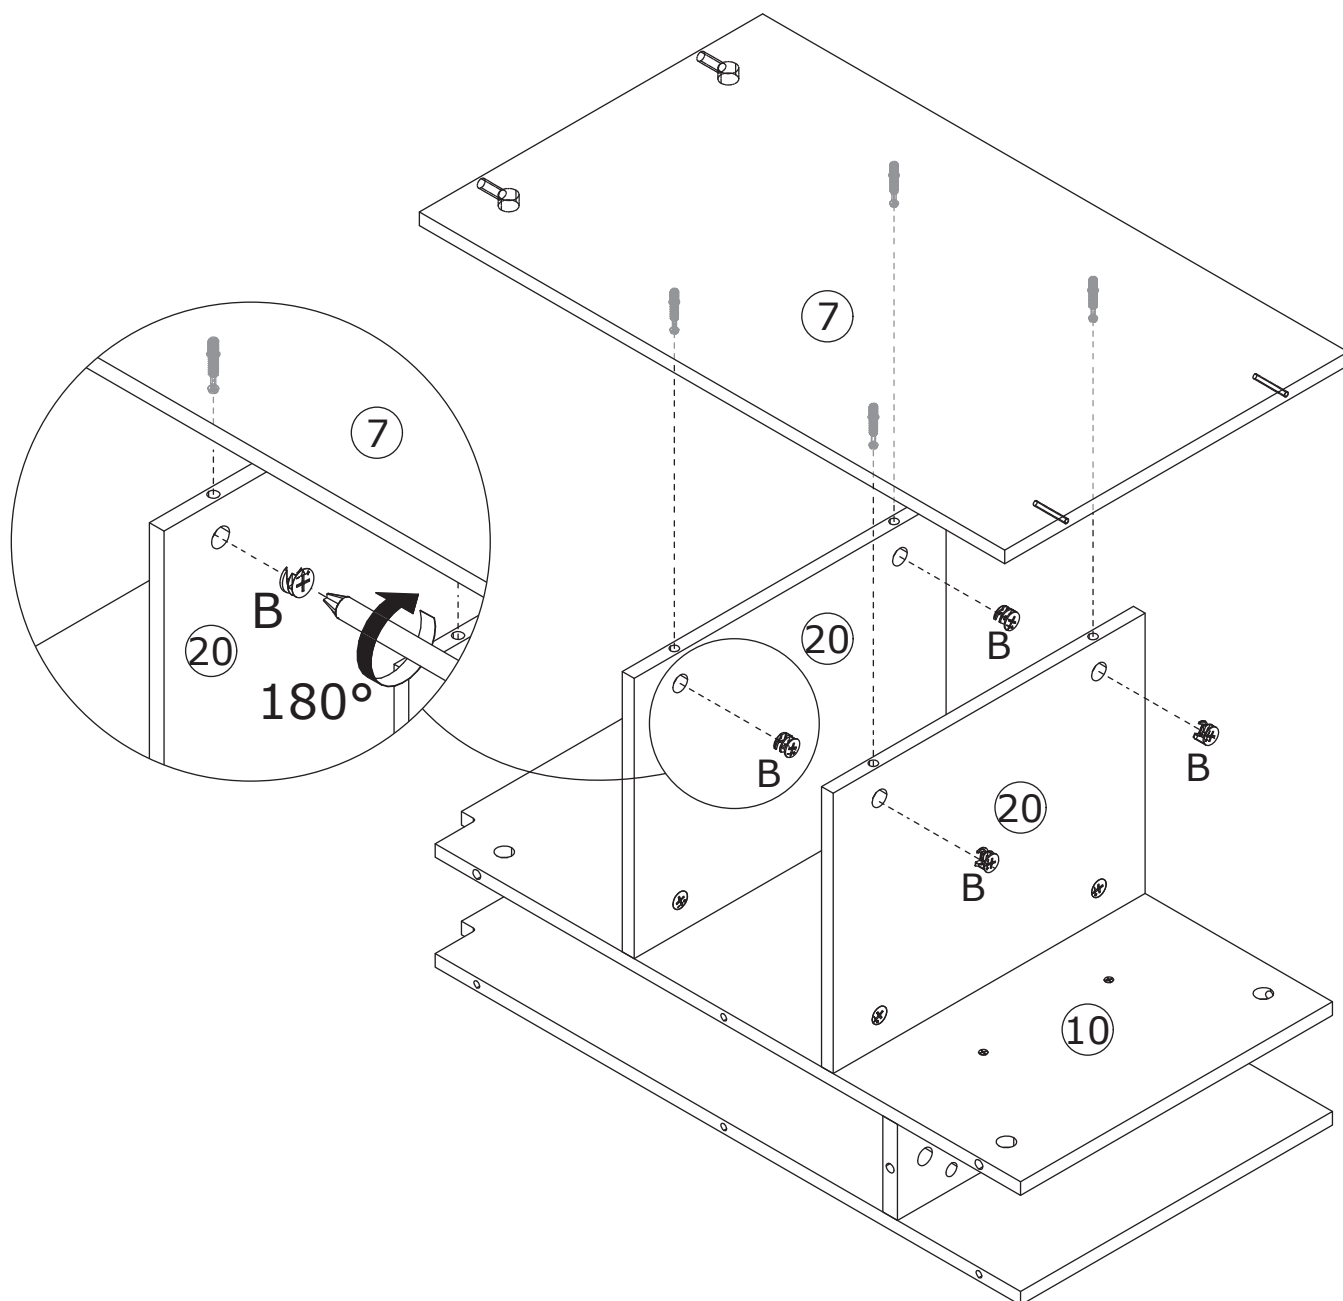

10

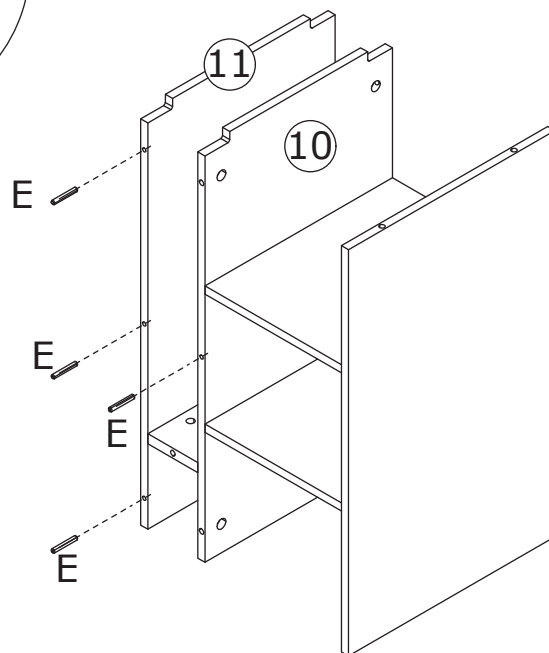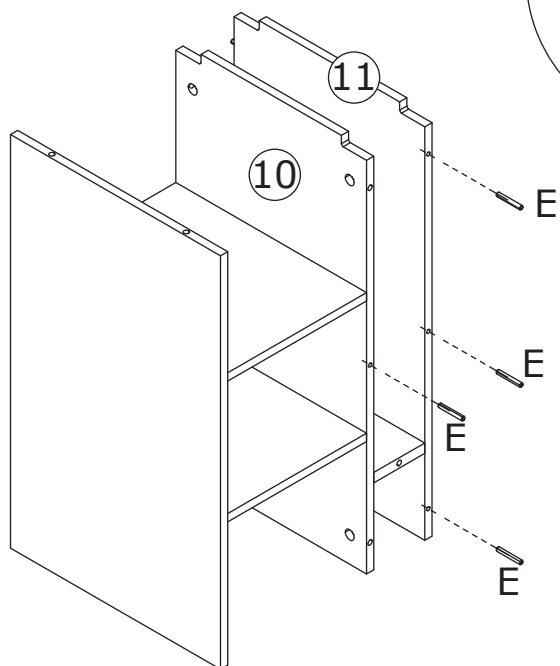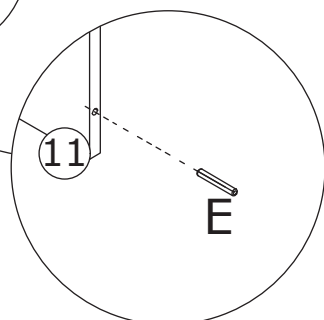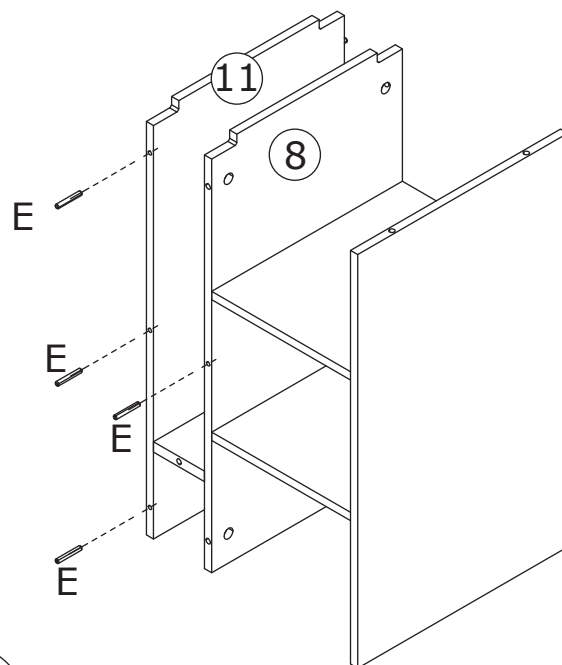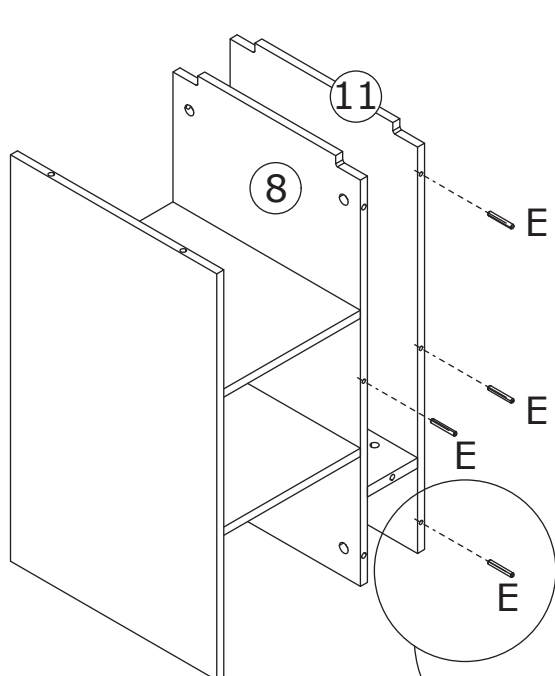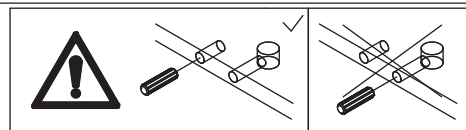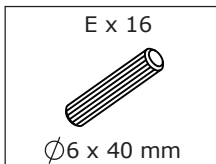       

Insert wooden dowel (E) into Plate 10 and 11.

11

A x 4

 
 
 
 


M5 x 42 mm


D x 2





M3.5 x 12 mm

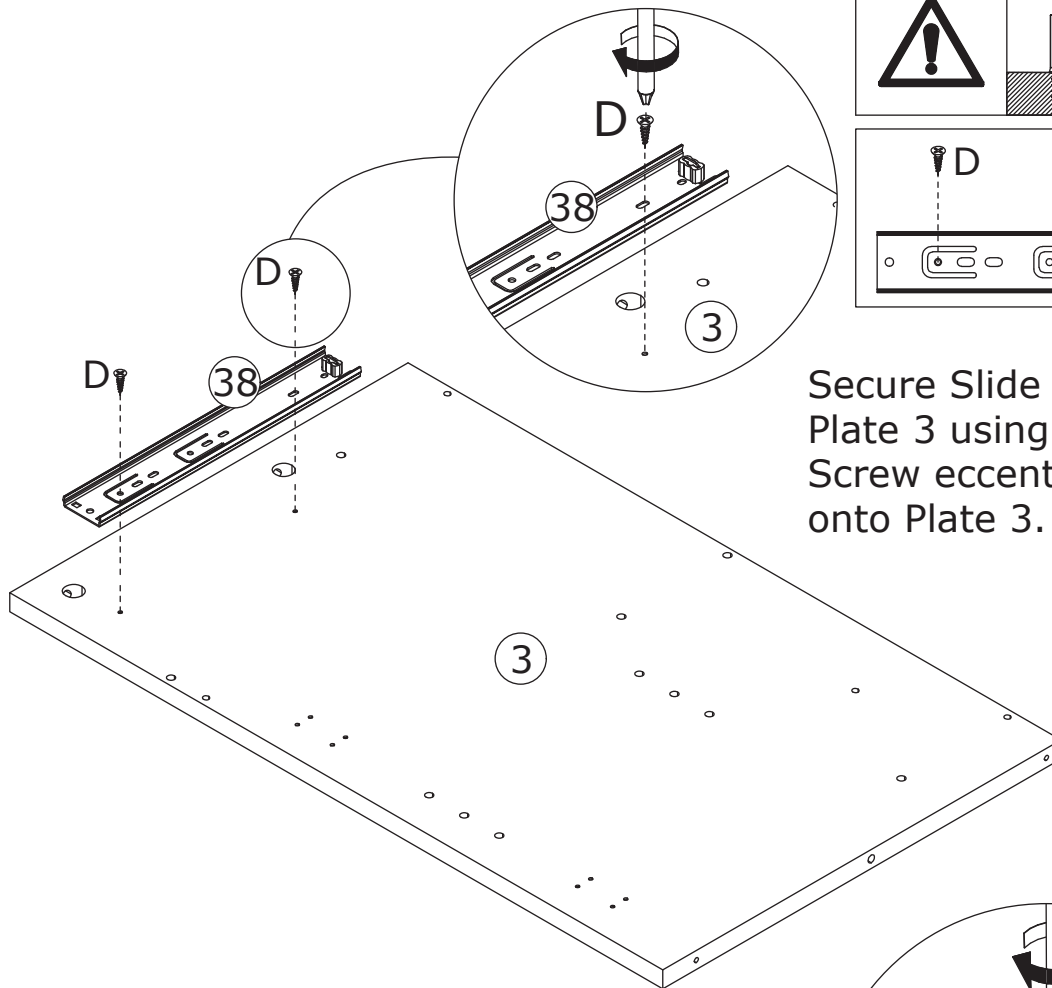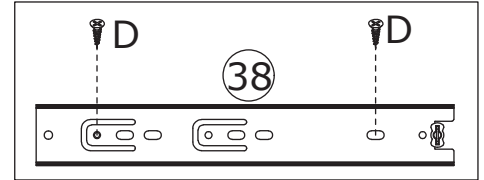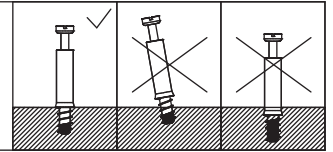



 
Secure Slide Rail 38 to Plate 3 using screw (D).
Screw eccentric rod (A) onto Plate 3.

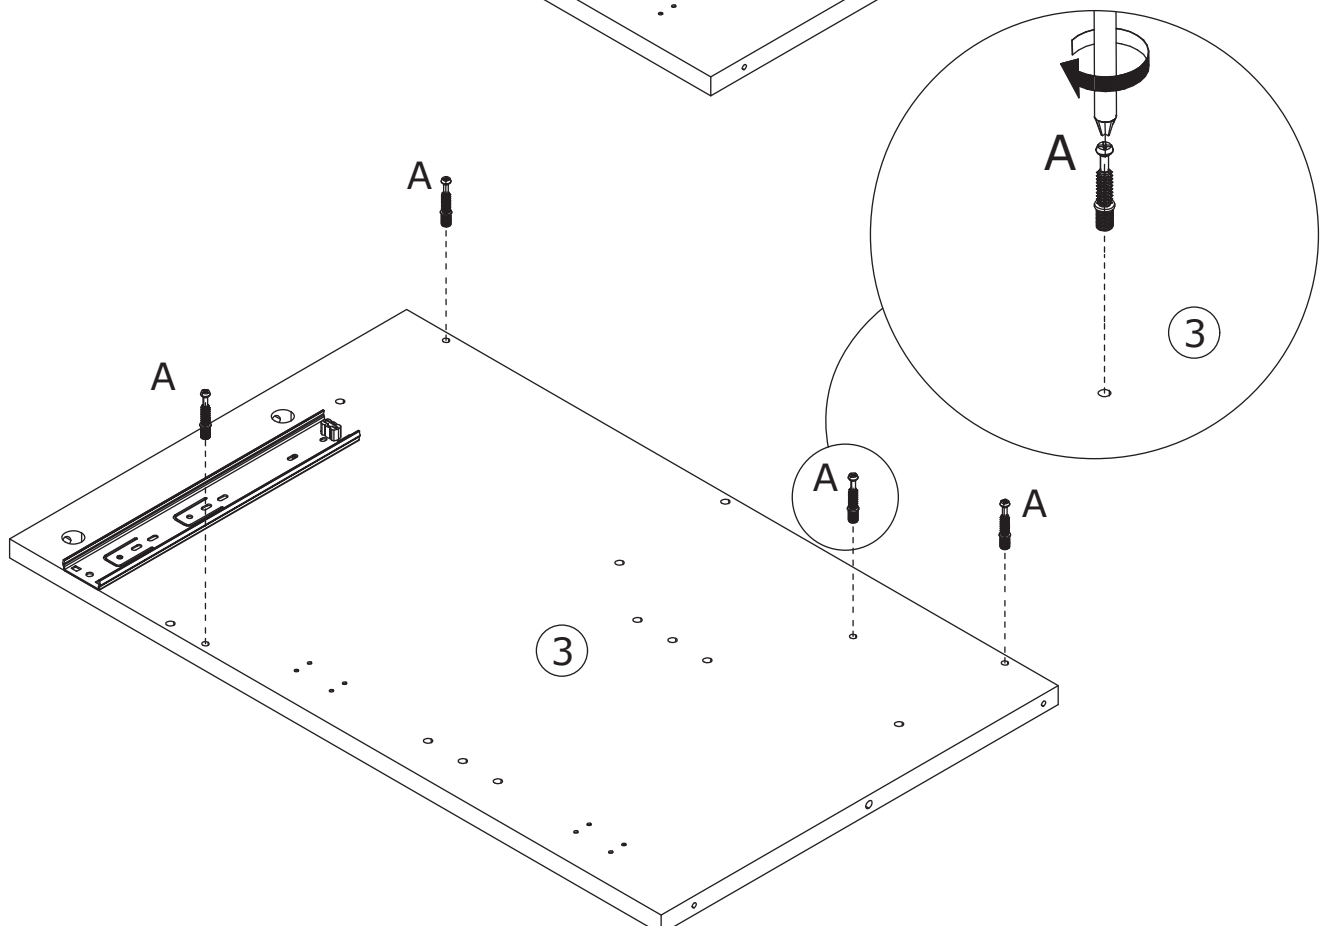



12

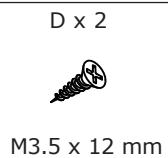  




 
 
 
Secure Slide Rail 38 to Plate 4 using screw (D).
Screw eccentric rod (A) onto Plate 4.

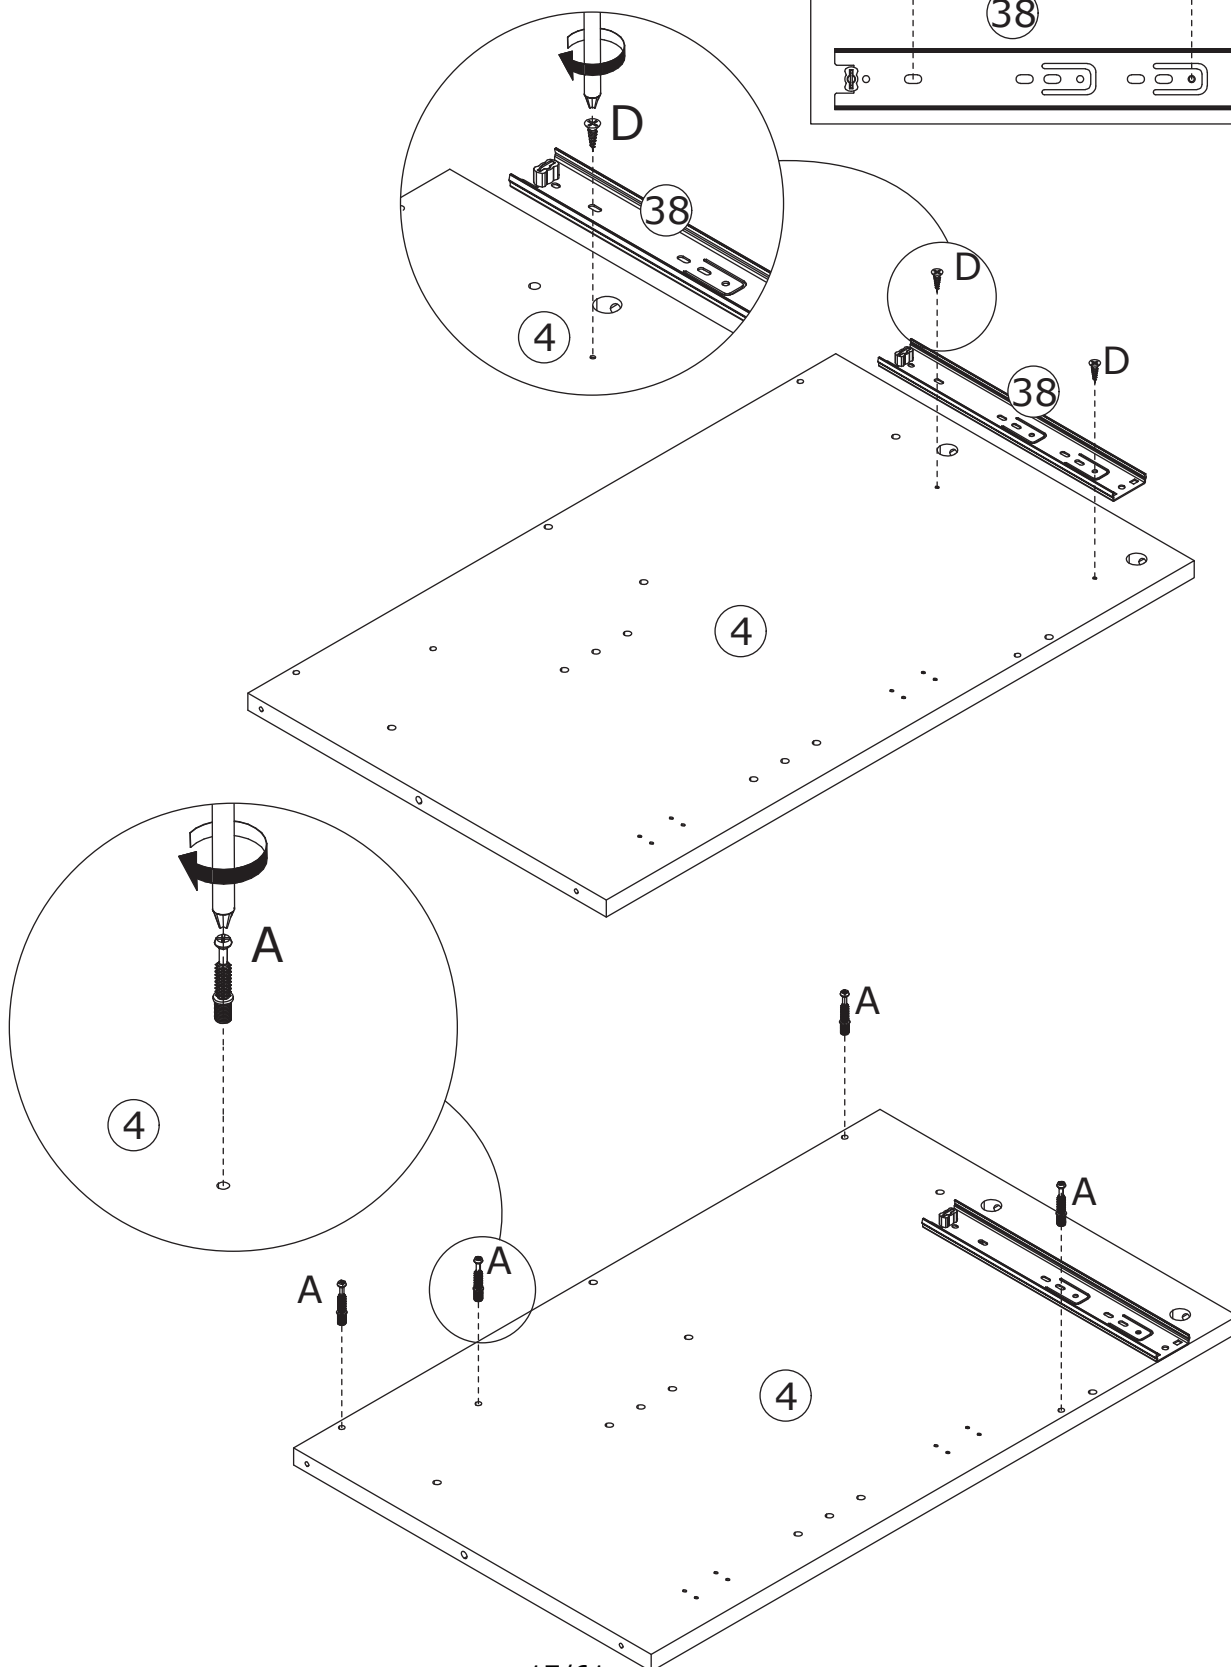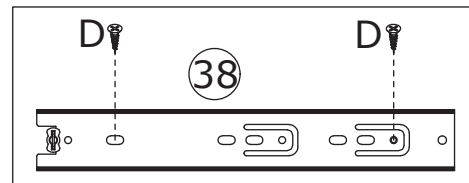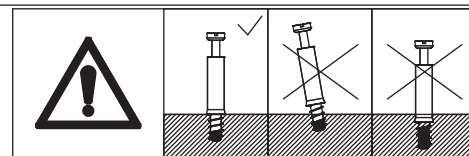



13

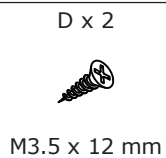  

    
 
 
Secure Slide Rail 38 to Plate 5 using screw (D).
Screw eccentric rod (A) onto Plate 5.

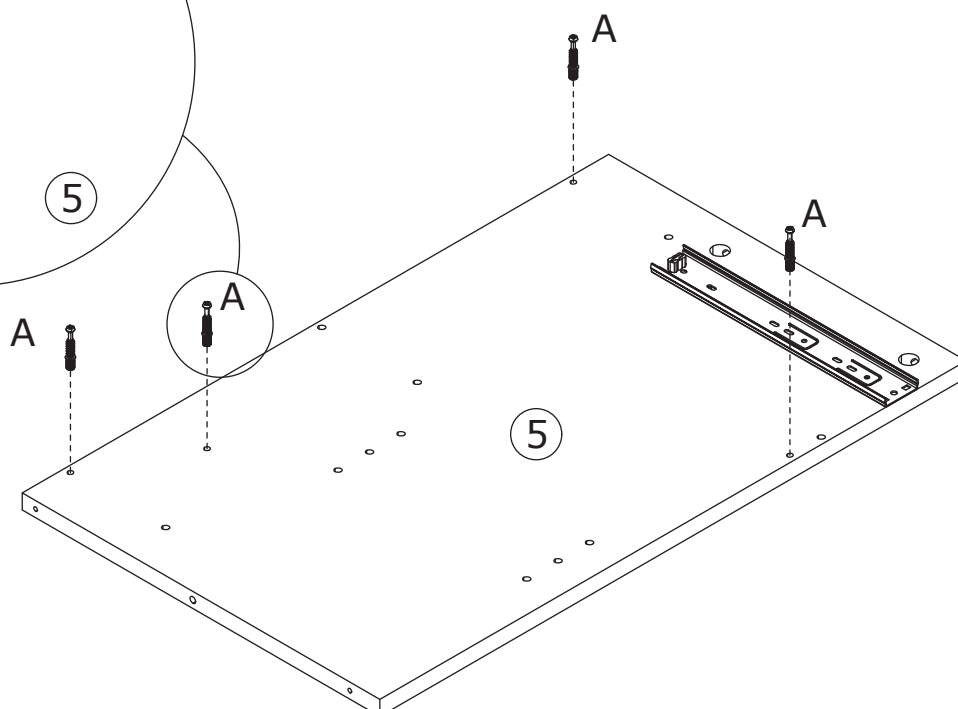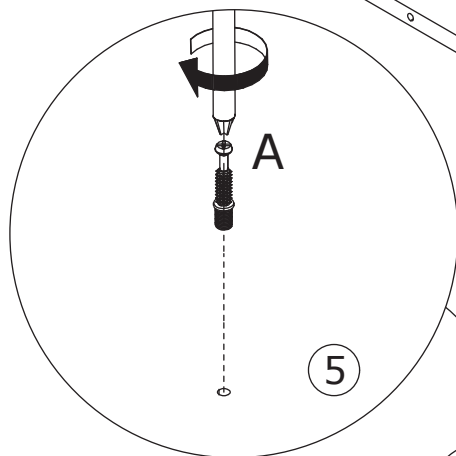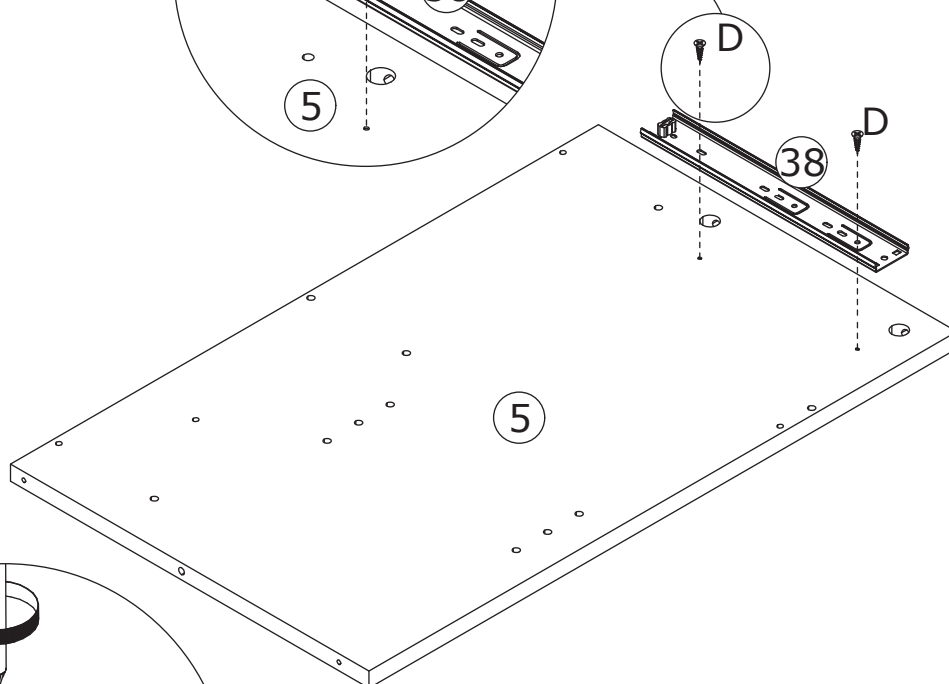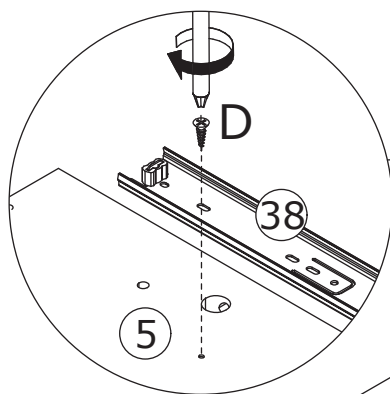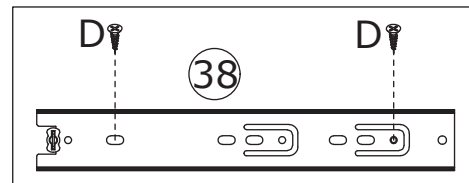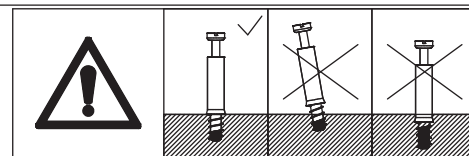

14

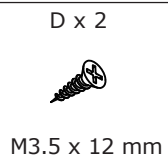  

   Secure Slide Rail 38 to Plate 6 using screw (D).
Screw eccentric rod (A) onto Plate 6.

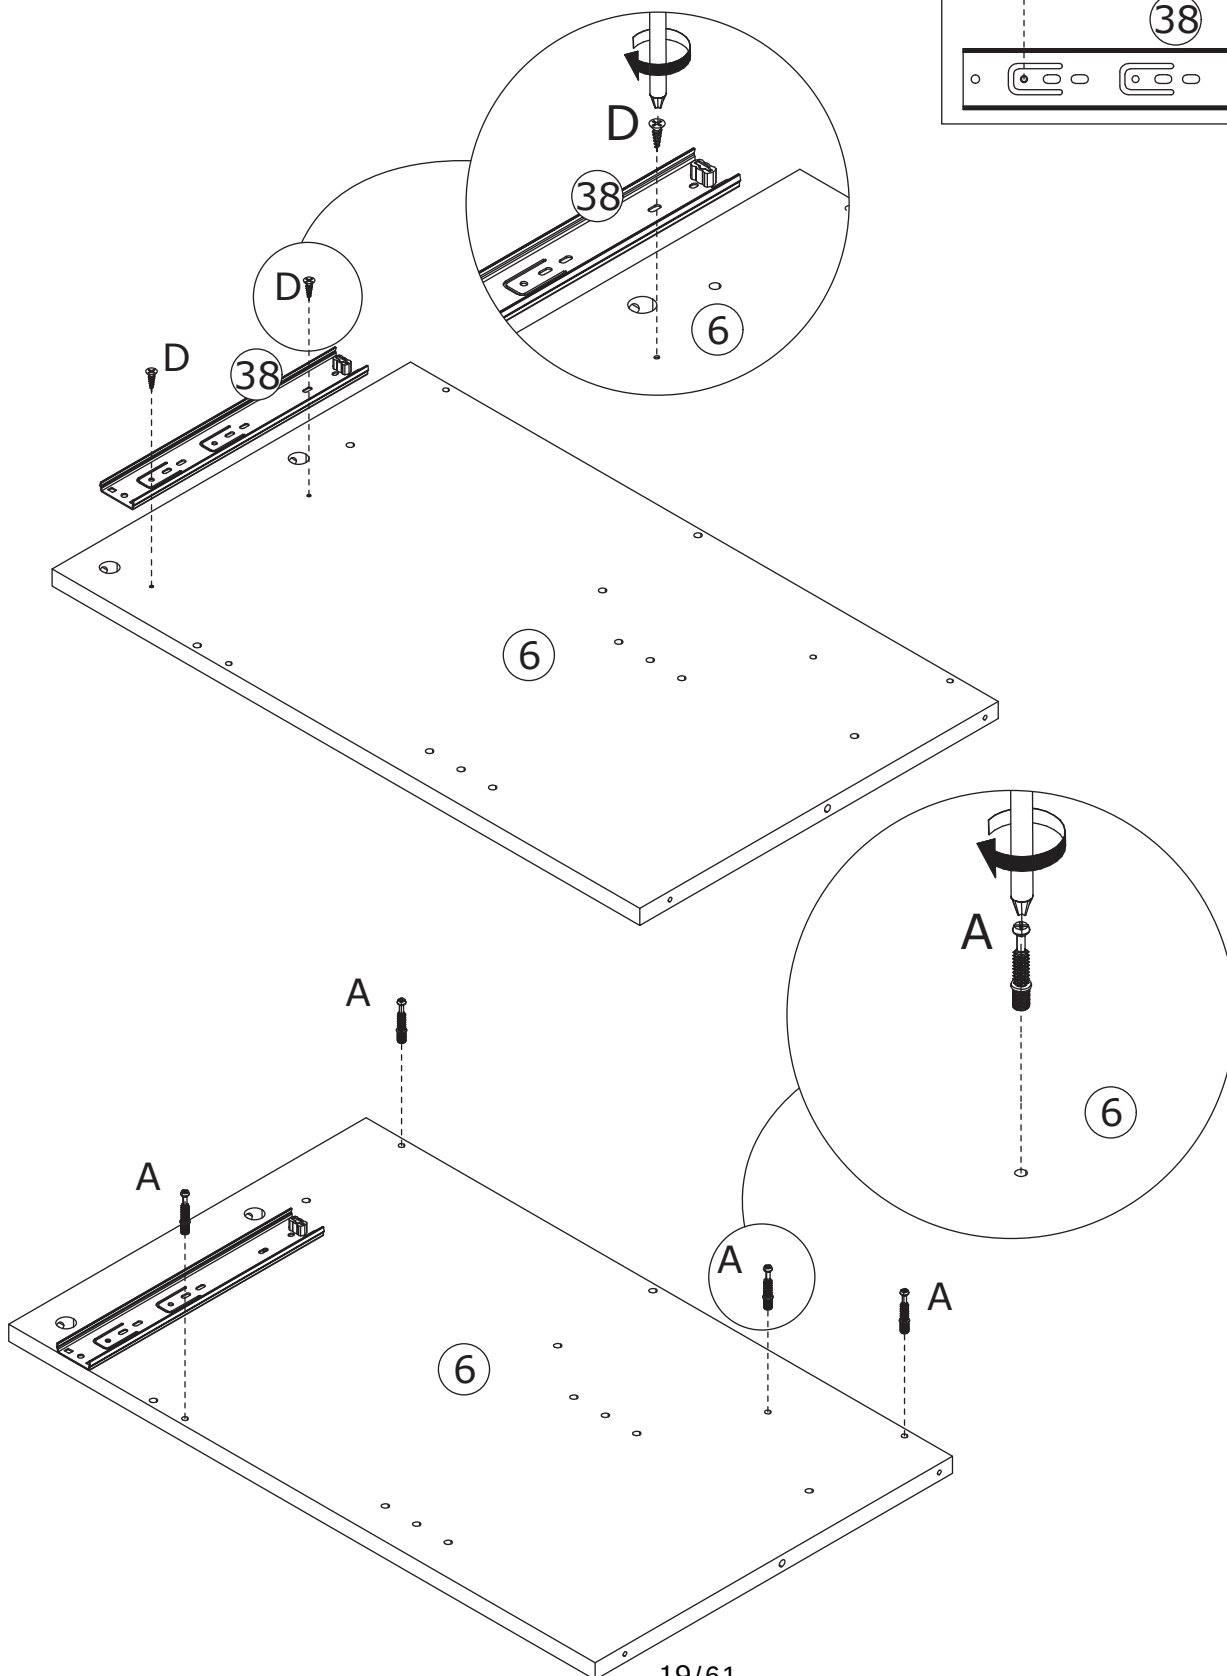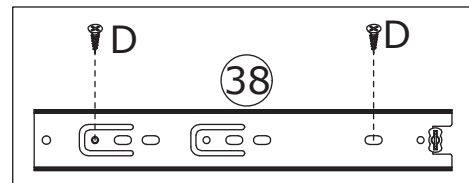
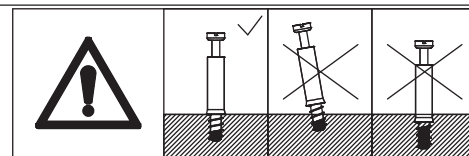


15


B x 2



  Ø15 x 10 mm

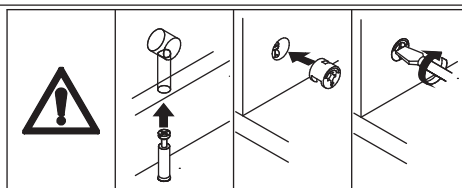

 Connect Plate 3 to Plate 8, 11, and 18, then tighten by turning eccentric wheel (B) clockwise.

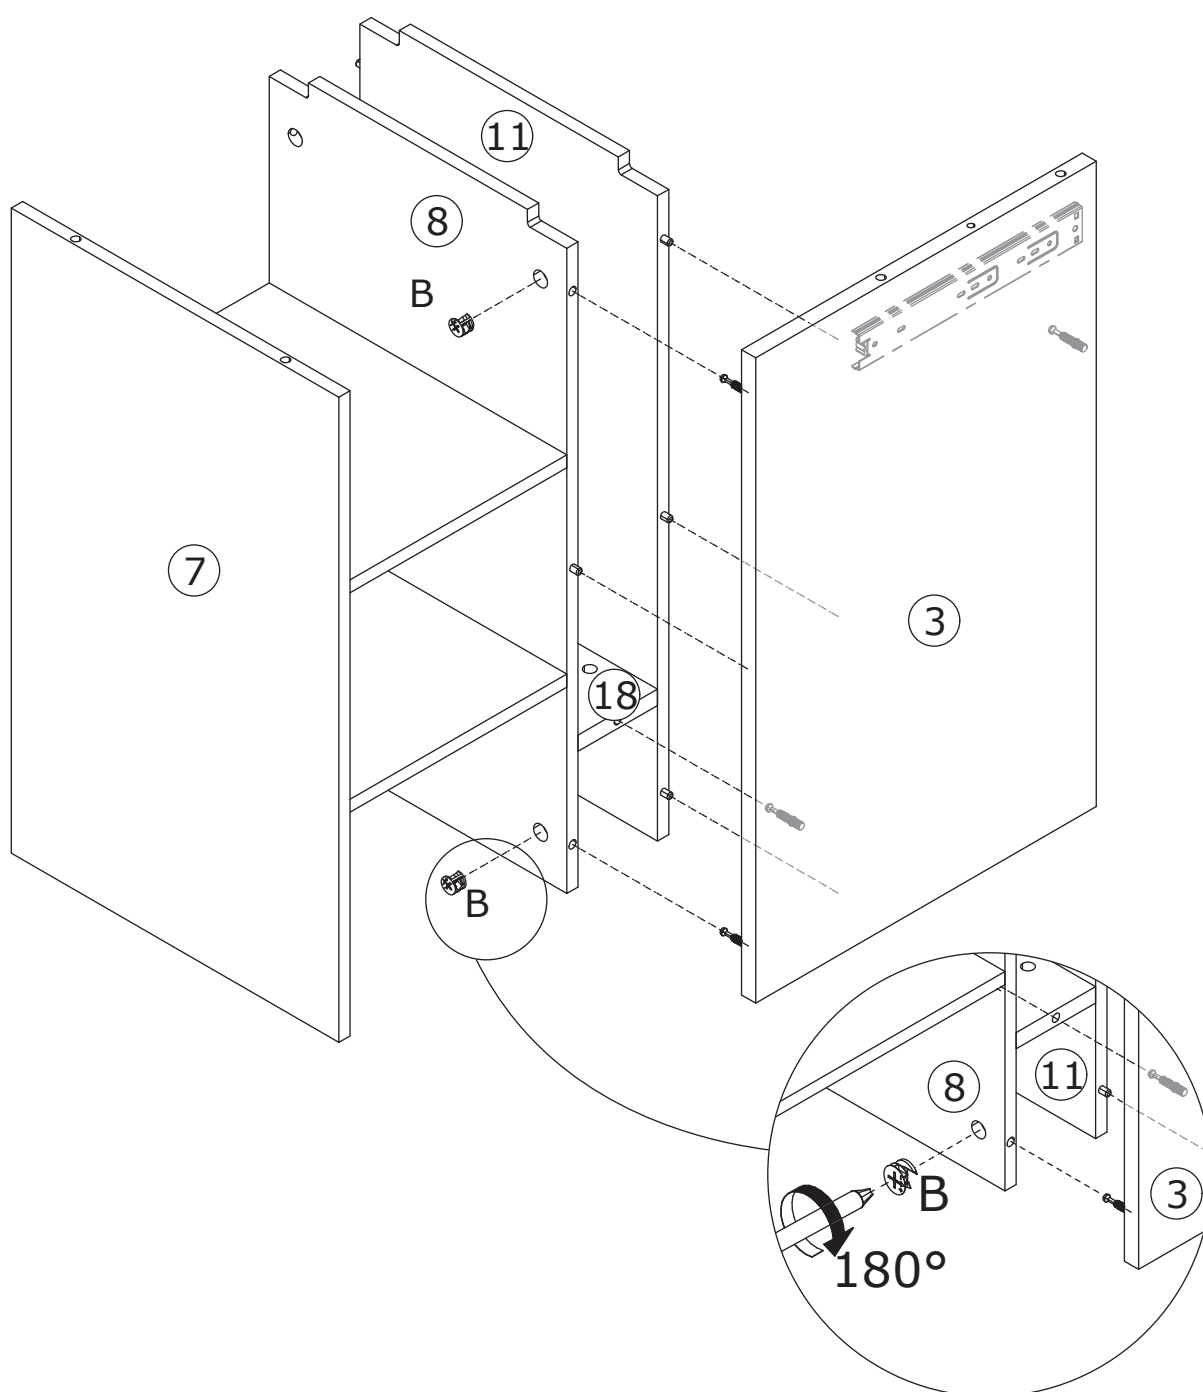

16

B x 1

 


Ø15 x 10 mm






E x 4





Ø6 x 40 mm



    
 
Insert wooden dowel (E) into Plate 12.
Connect Plate 12 to Plate 3, then tighten
by turning eccentric wheel (B) clockwise.

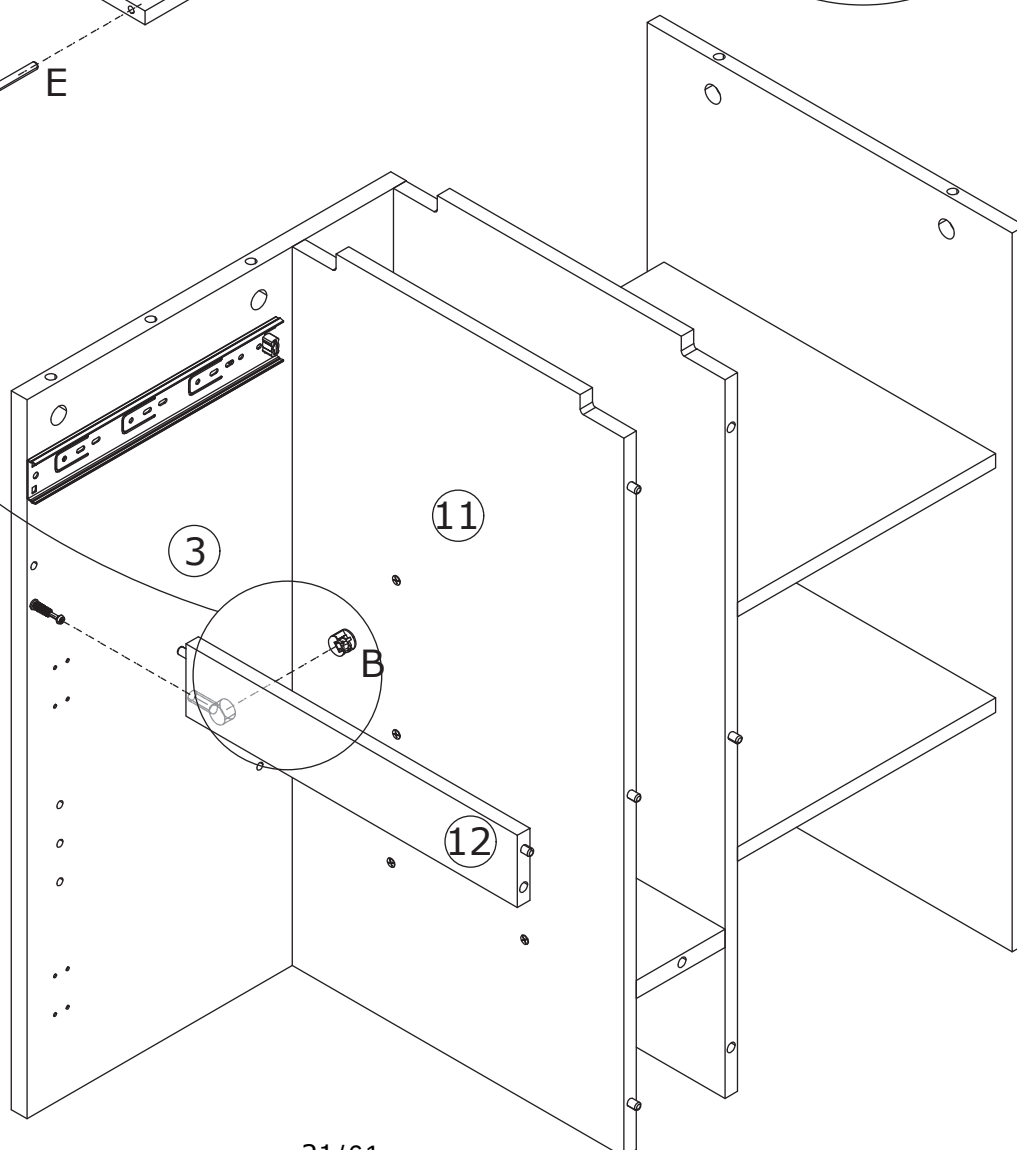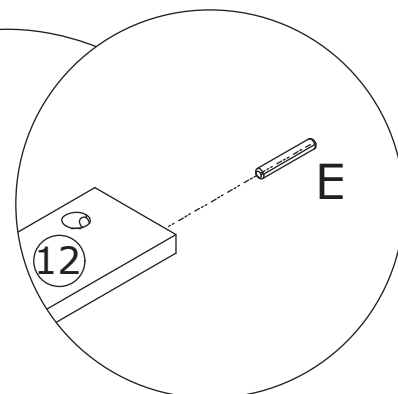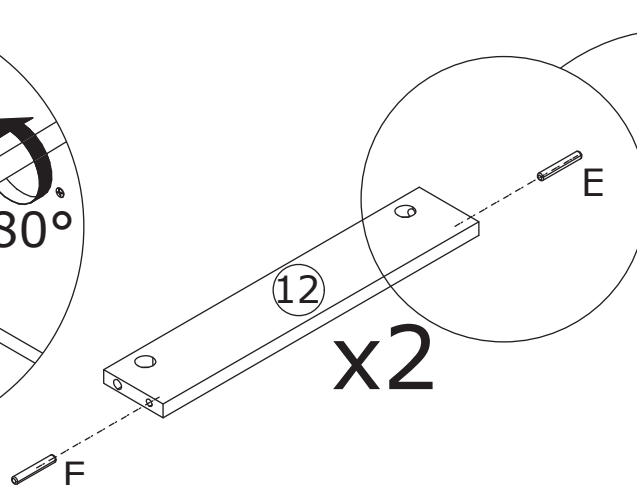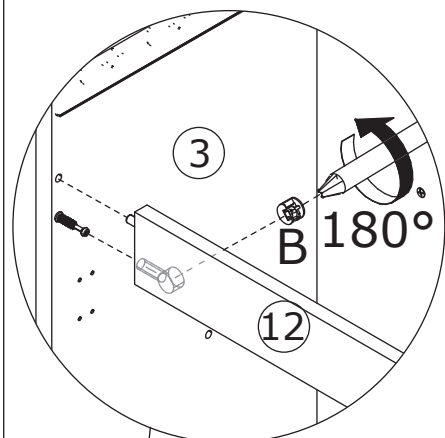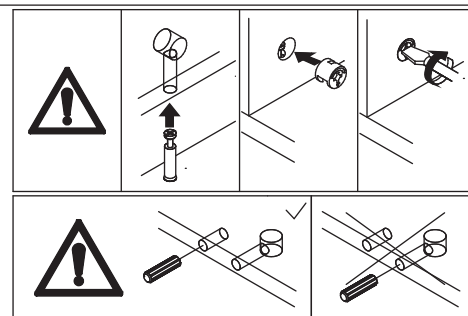

17

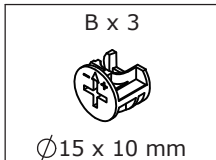  

  Connect Plate 5 to Plate 8, 11, 18, and 12, then tighten by turning eccentric wheel (B) clockwise.

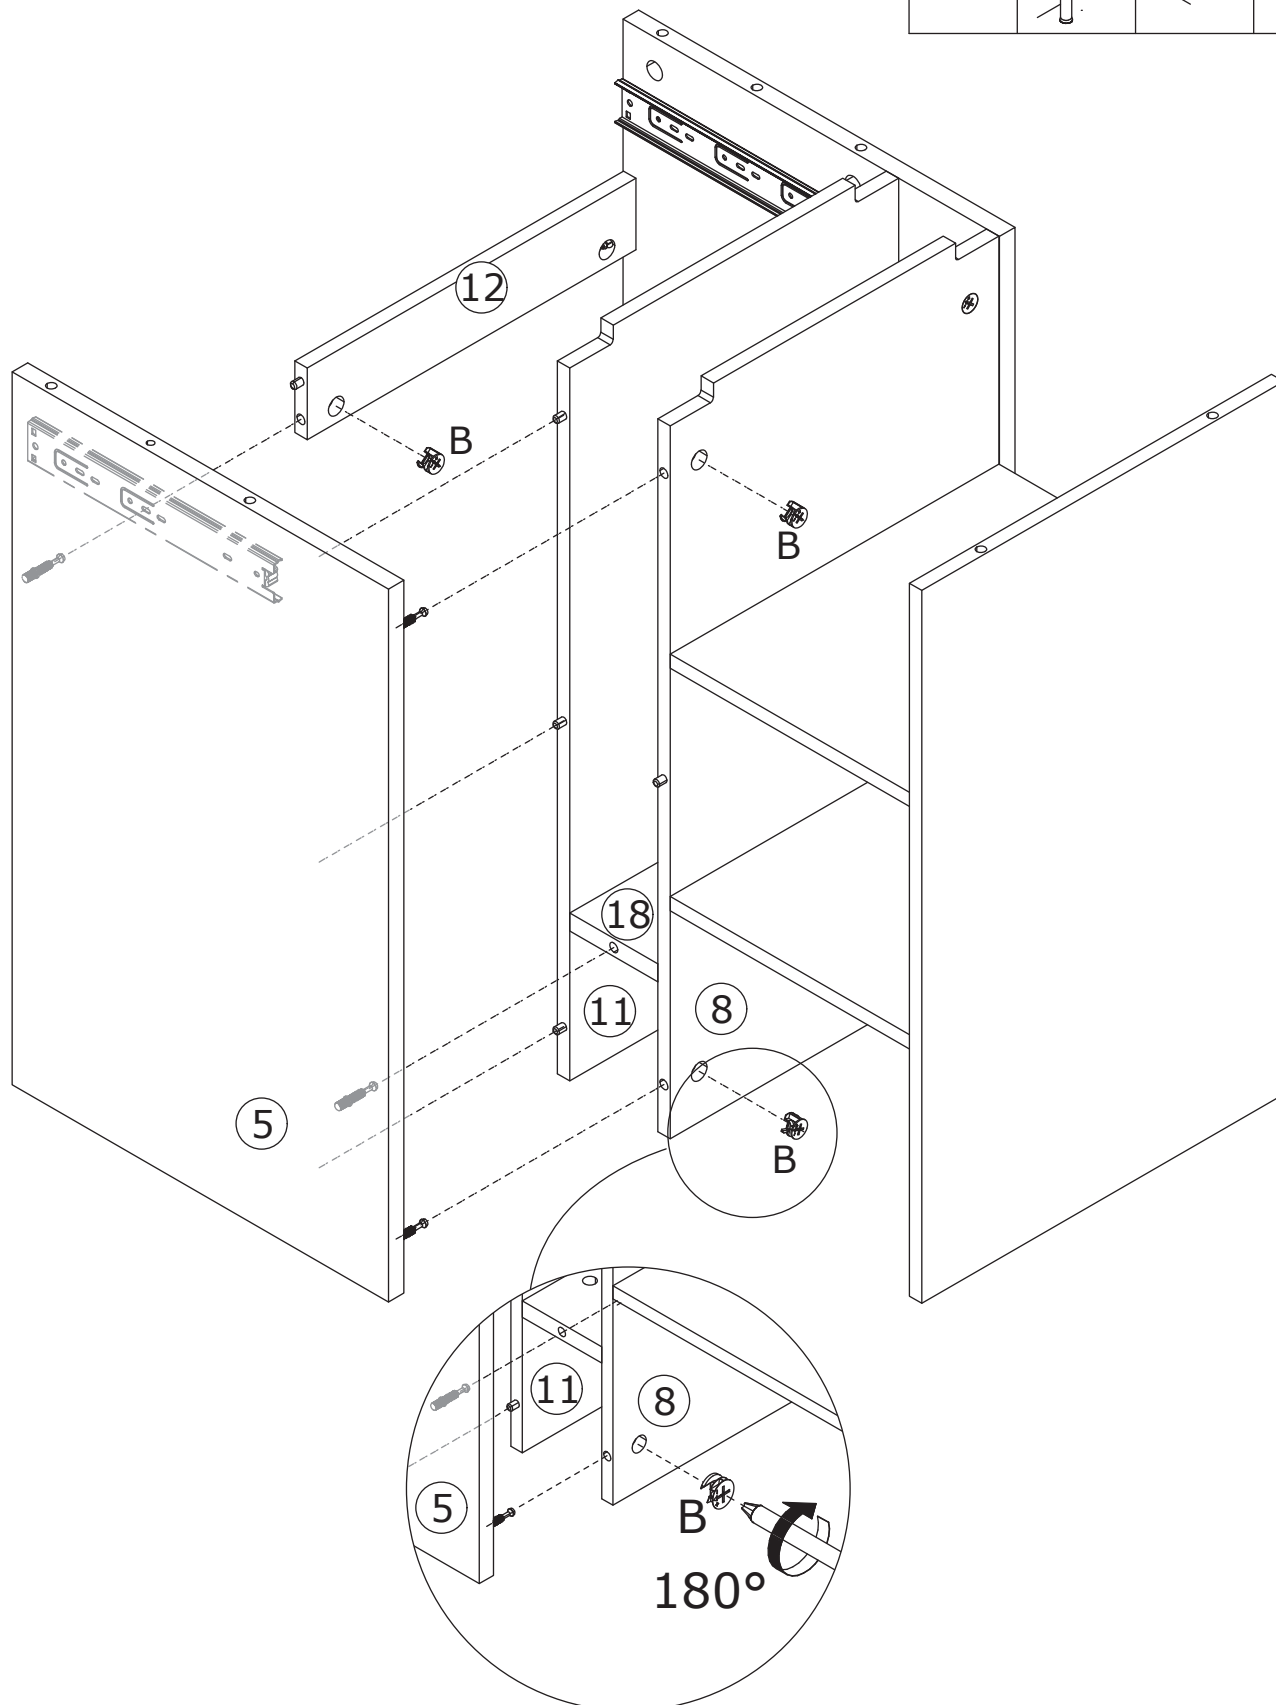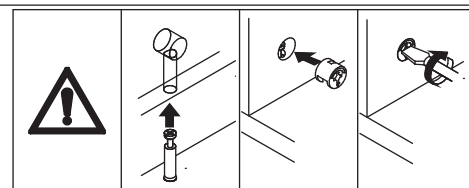


18



B x 2



 Ø15 x 10 mm



  Connect Plate 4 to Plate 10, 11, and 19,
then tighten by turning eccentric wheel (B)
clockwise.

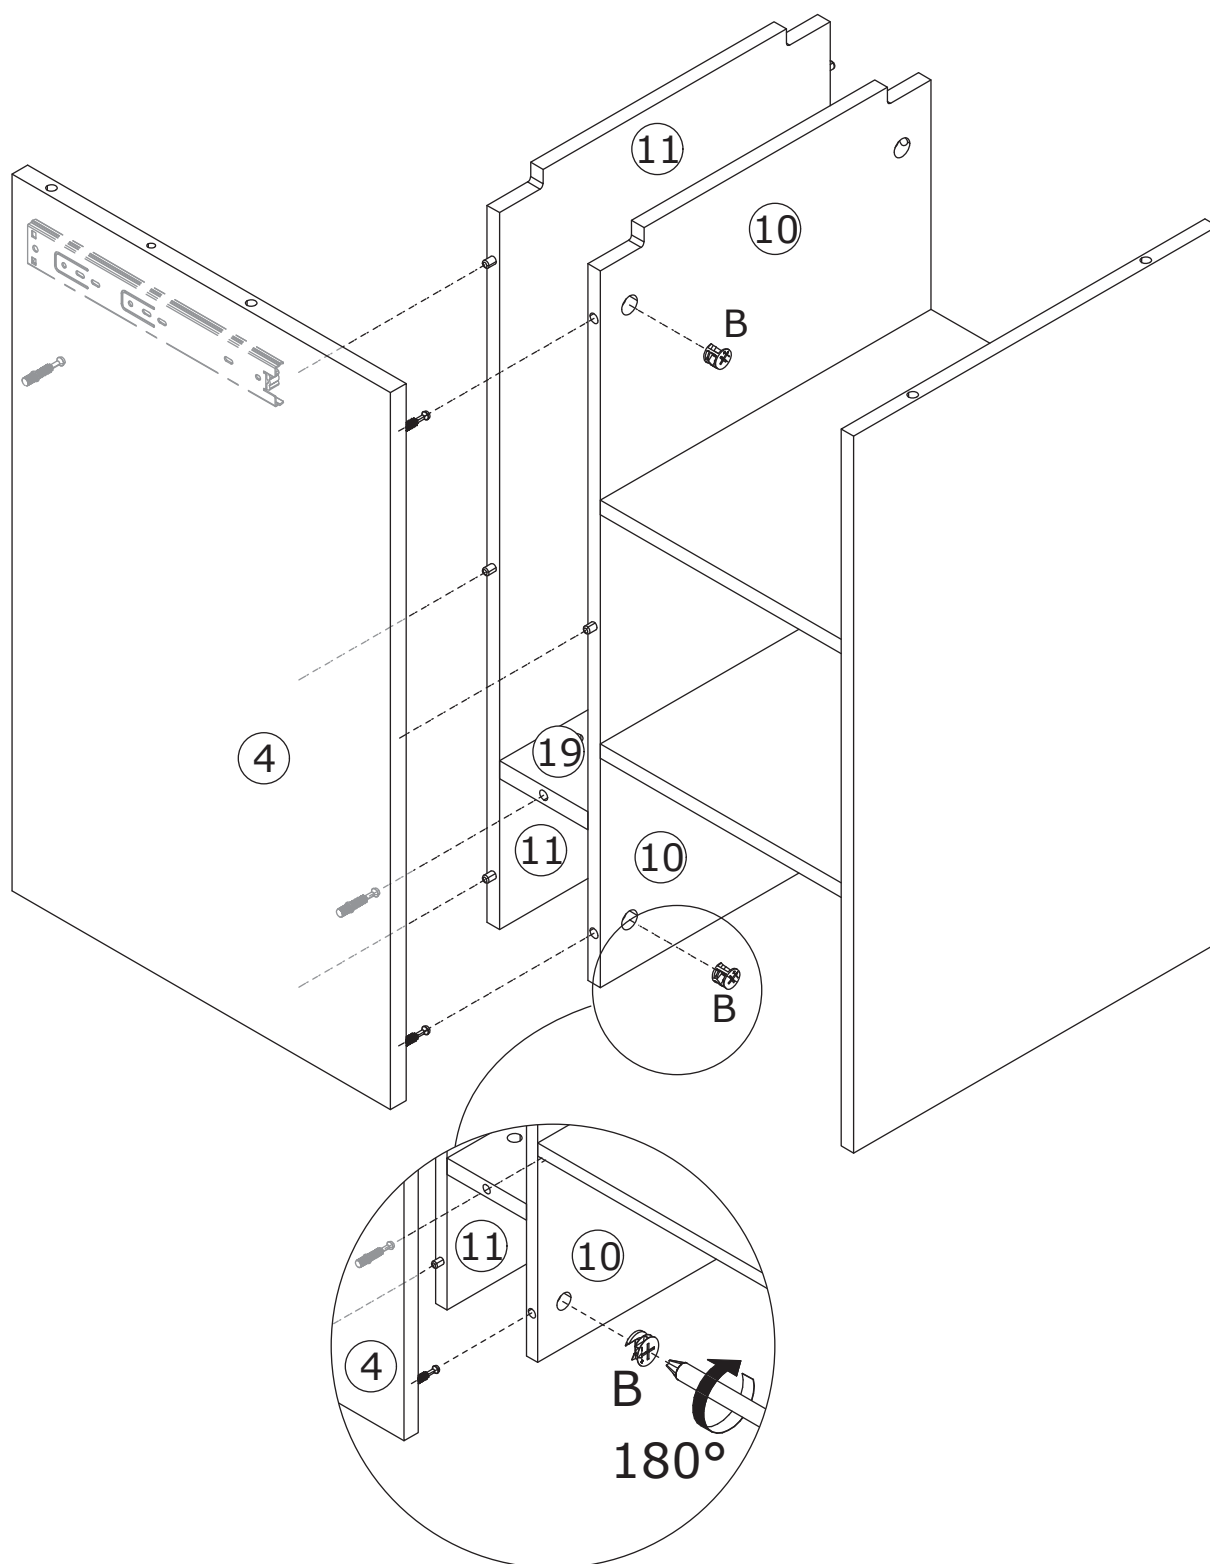
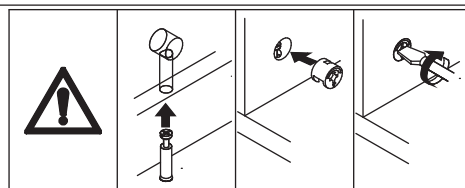


19


B x 1



  Ø15 x 10 mm

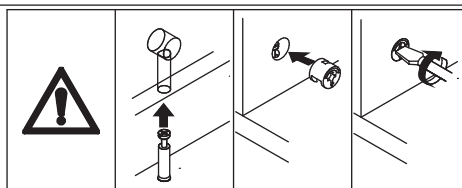

 Connect Plate 12 to Plate 4, then tighten by turning eccentric wheel (B) clockwise.

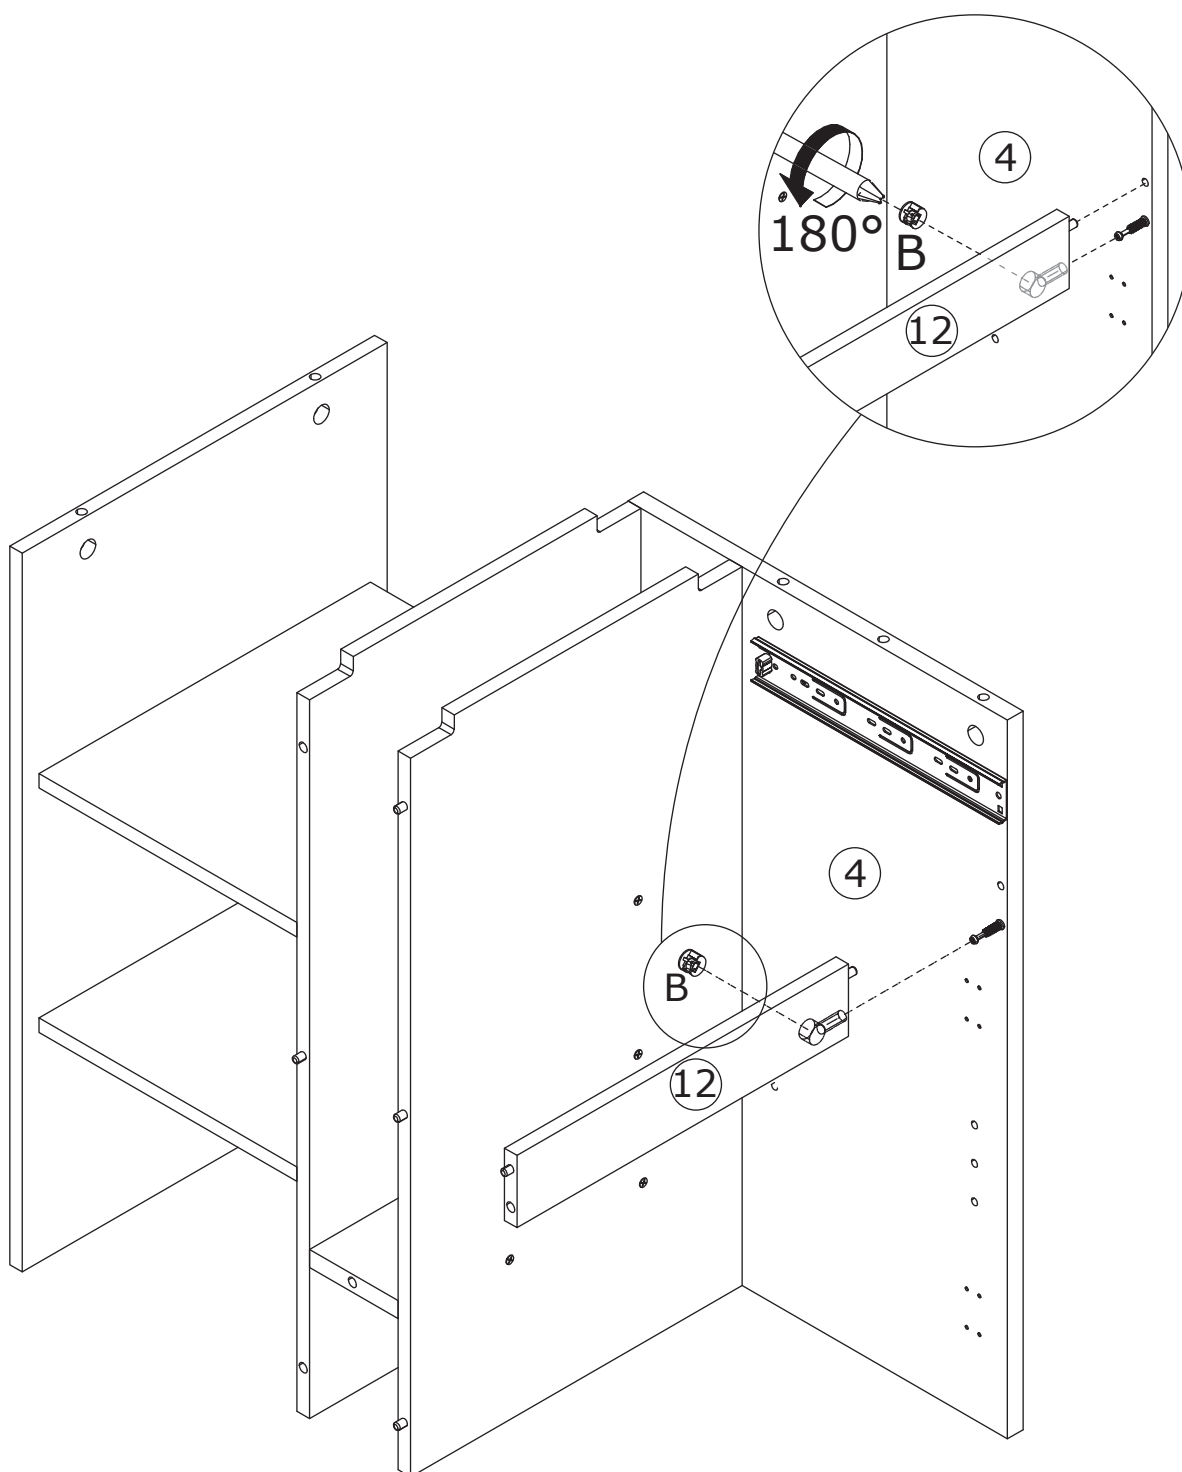


20




B x 3



 Ø15 x 10 mm





   Connect Plate 6 to Plate 10, 11, 19, and 12, then tighten by turning eccentric wheel (B) clockwise.

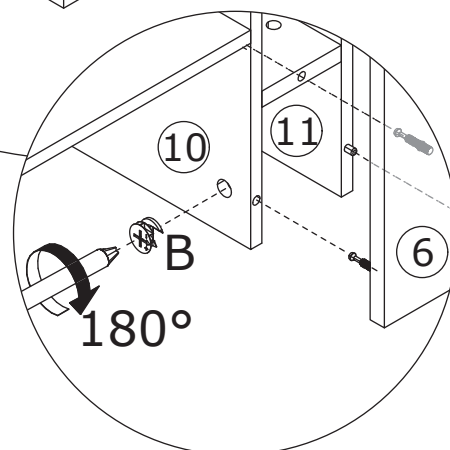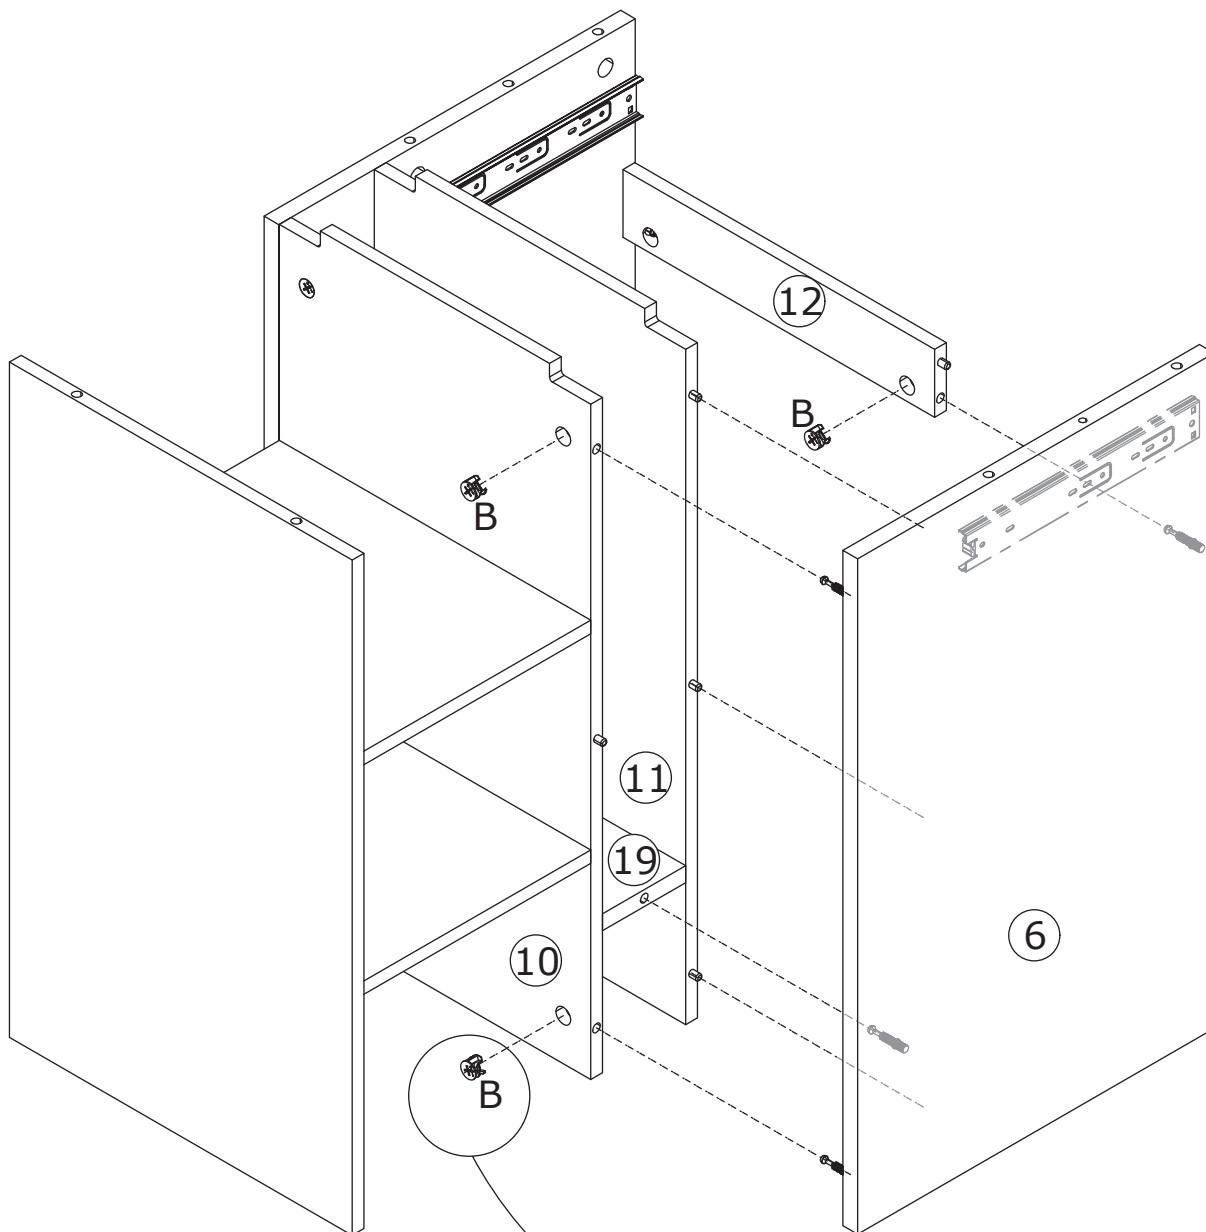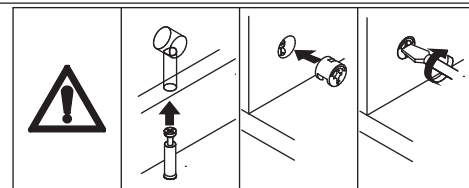


21



 
 
A x 12
M5 x 42 mm

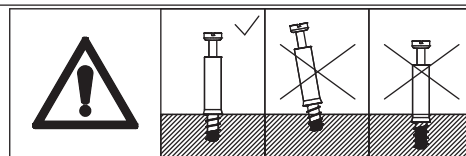

Screw eccentric rod (A) onto Plate 2.

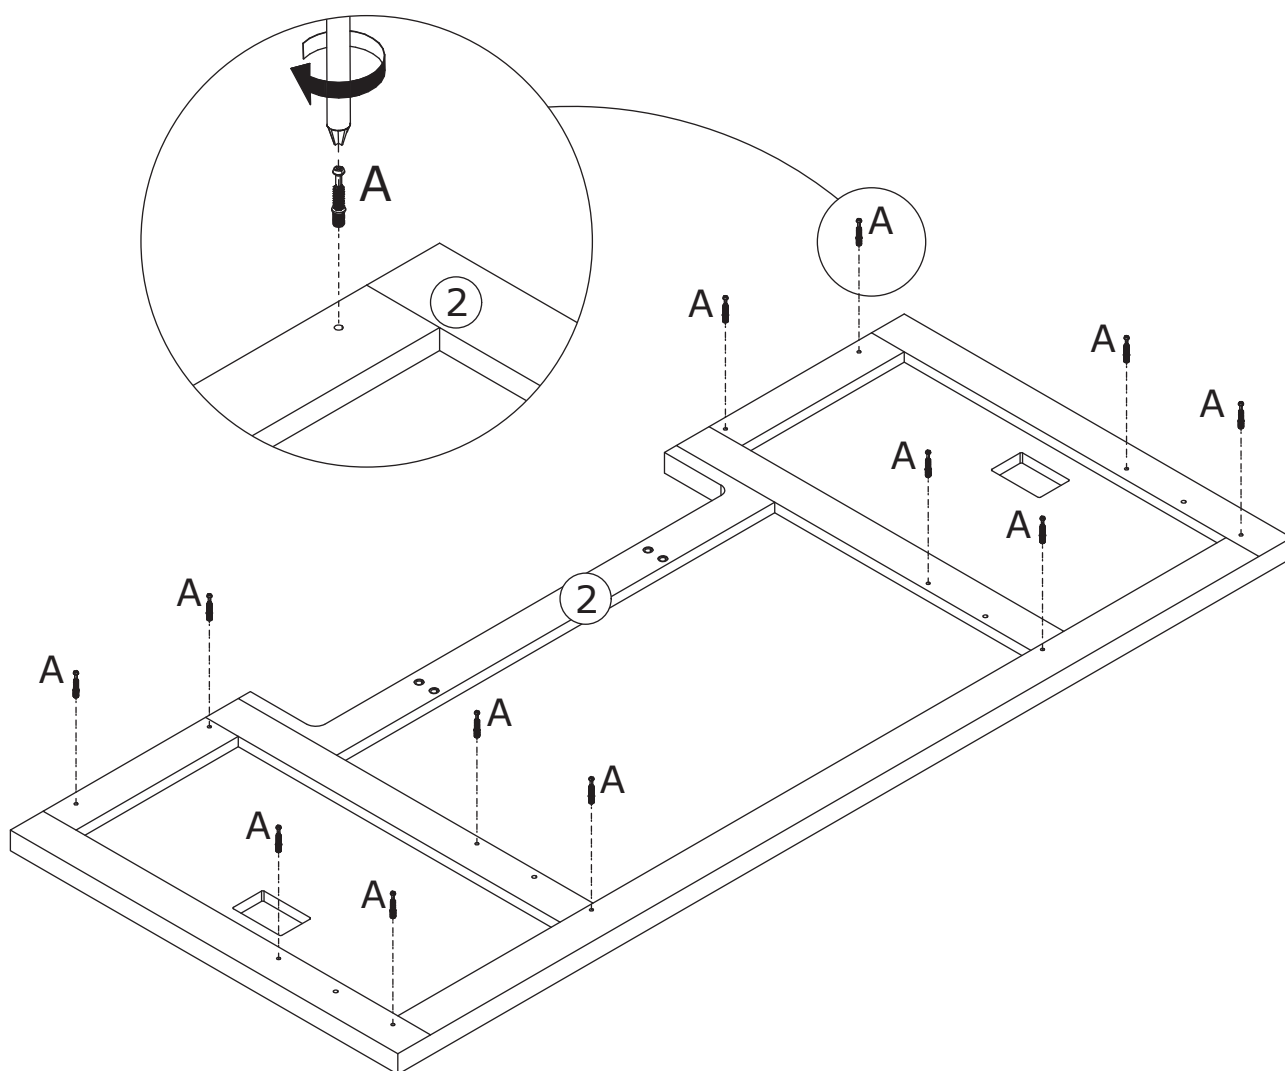 

22

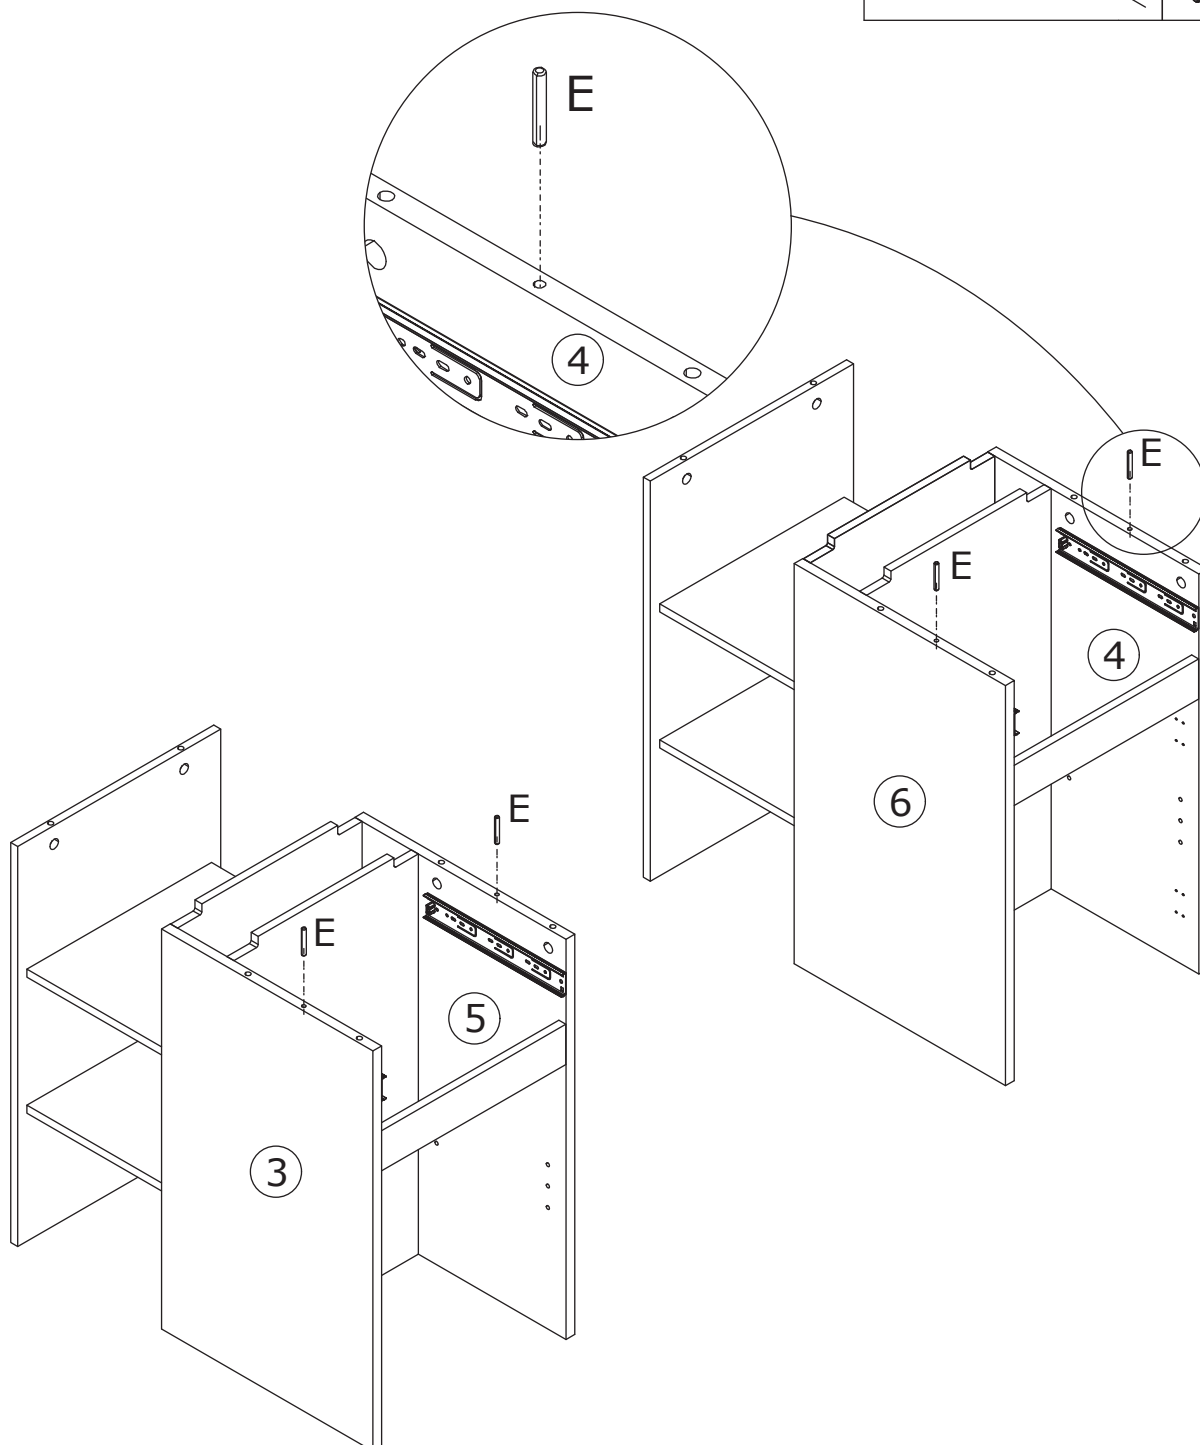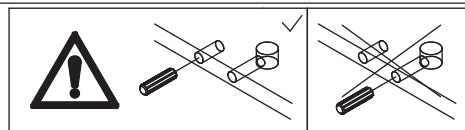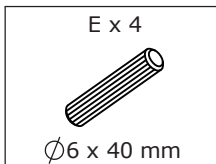    


Insert wooden dowel (E) into Plate 3, 4, 5, and 6.

23



B x 12



 Ø15 x 10 mm



  Connect Plate 2 to Plate 3, 5, 6, 4, and 7,
then tighten by turning eccentric wheel (B)
clockwise.

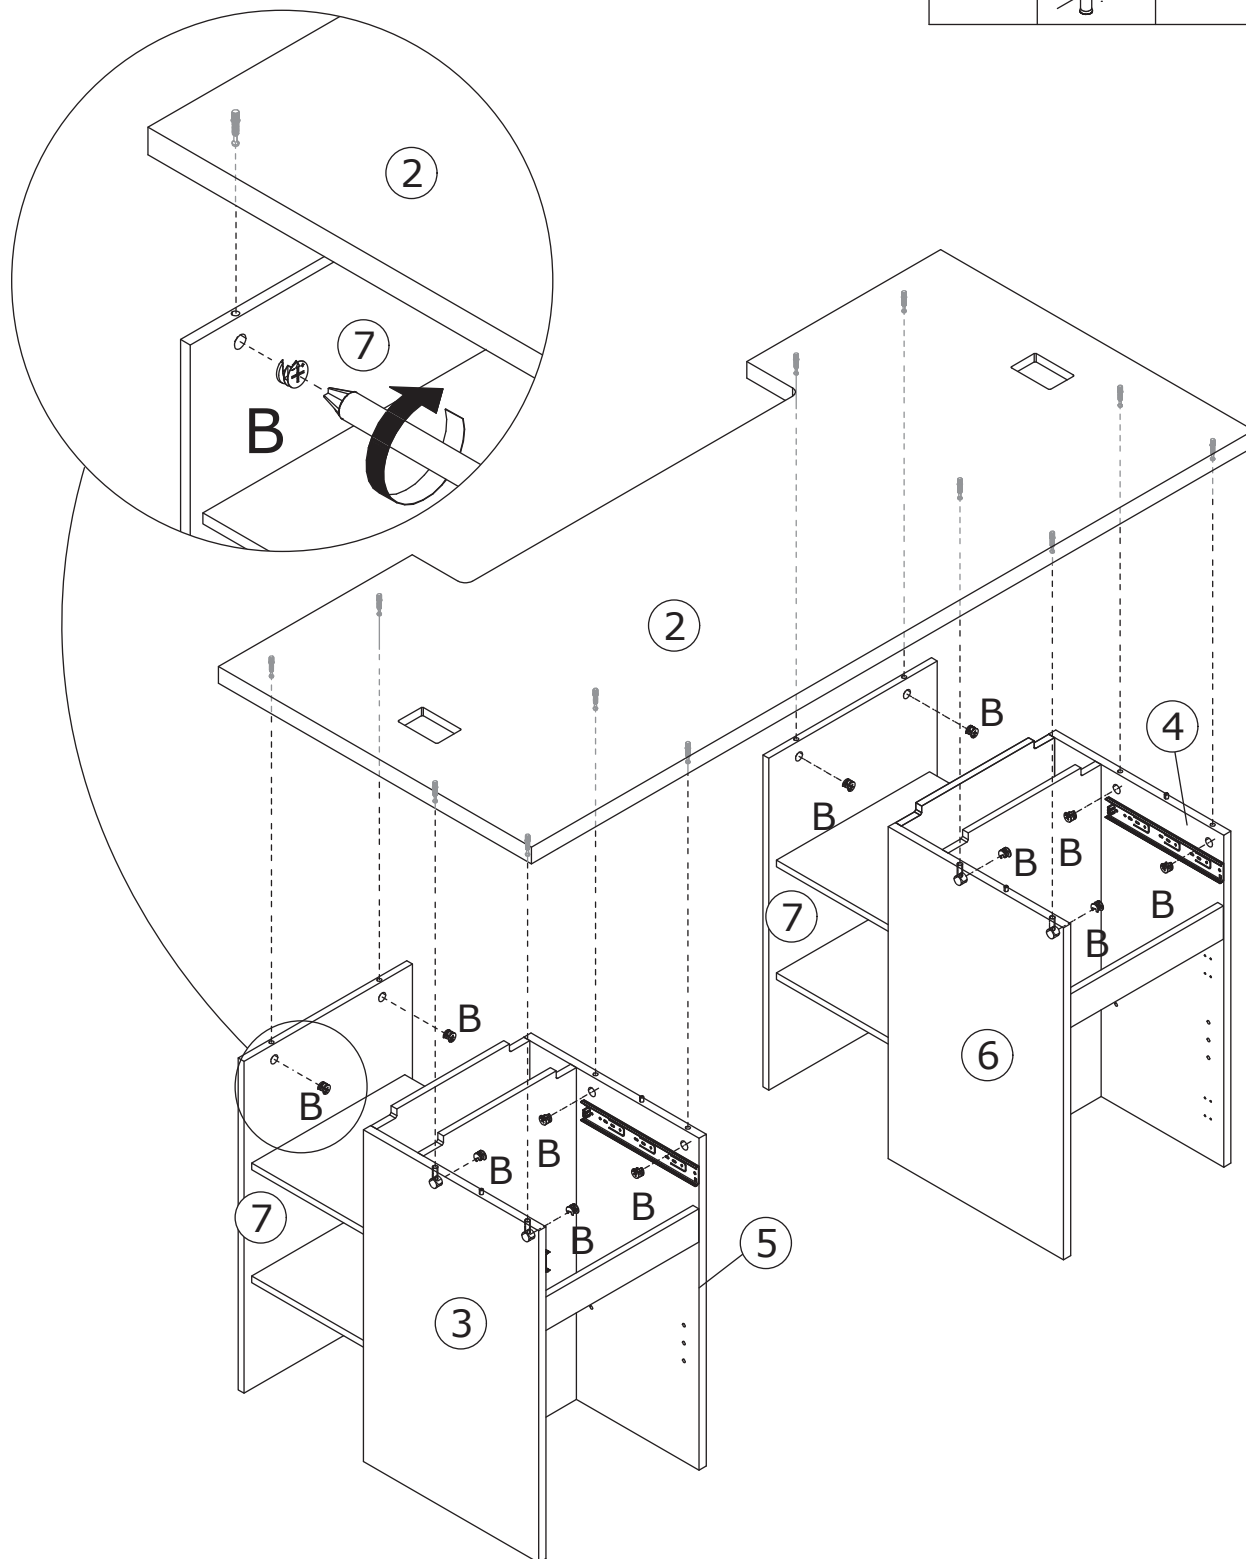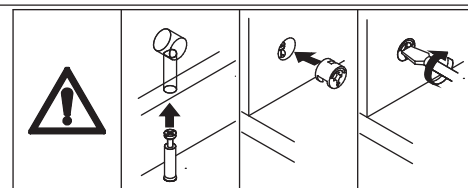

24

B x 4

 
 


Ø15 x 10 mm

E x 4




Ø6 x 40 mm

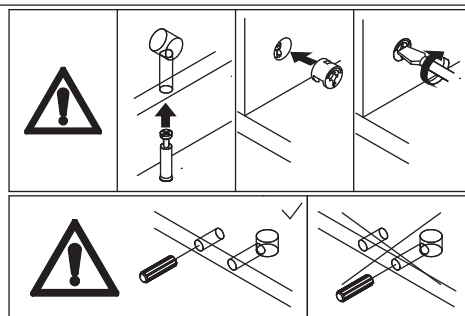



Put eccentric wheel (B) to Plate 18 and 19, and tighten them by turning clockwise.

 
Insert wooden dowel (E) into Plate 3, 4, 5, and 6.

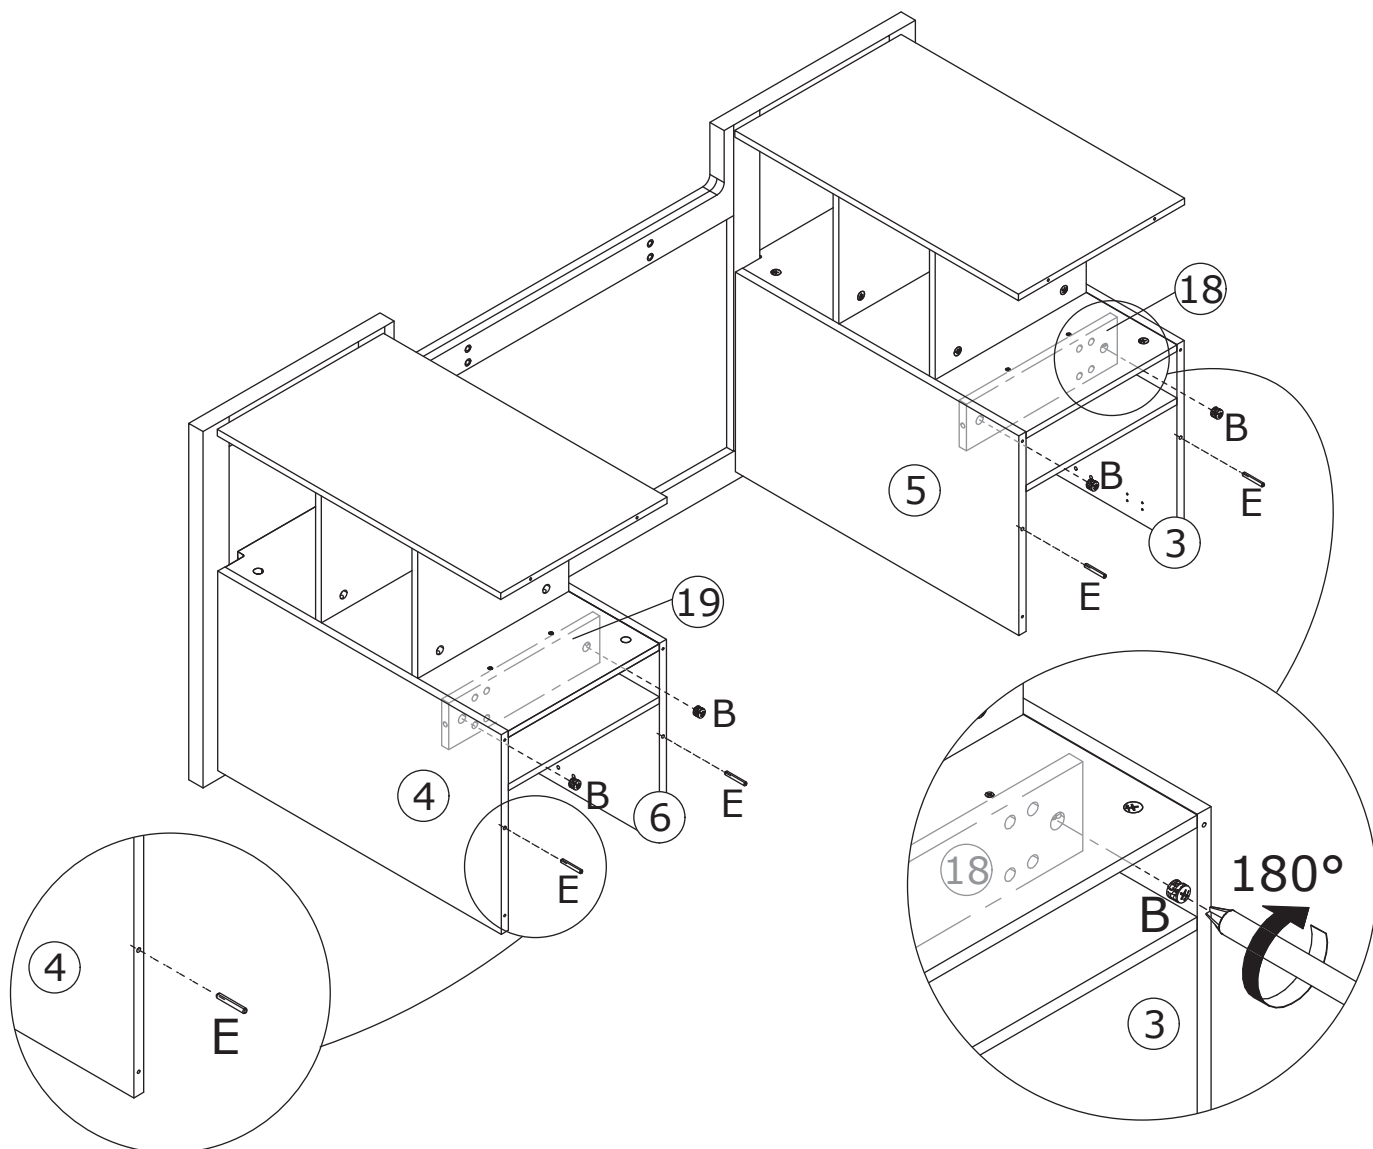

25


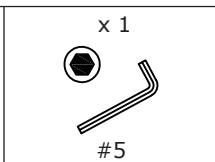 
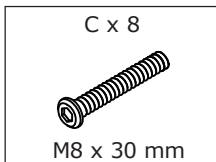 


 Insert Part 34 to the holes and secure it to Plate 18 and 19 using screw (C).

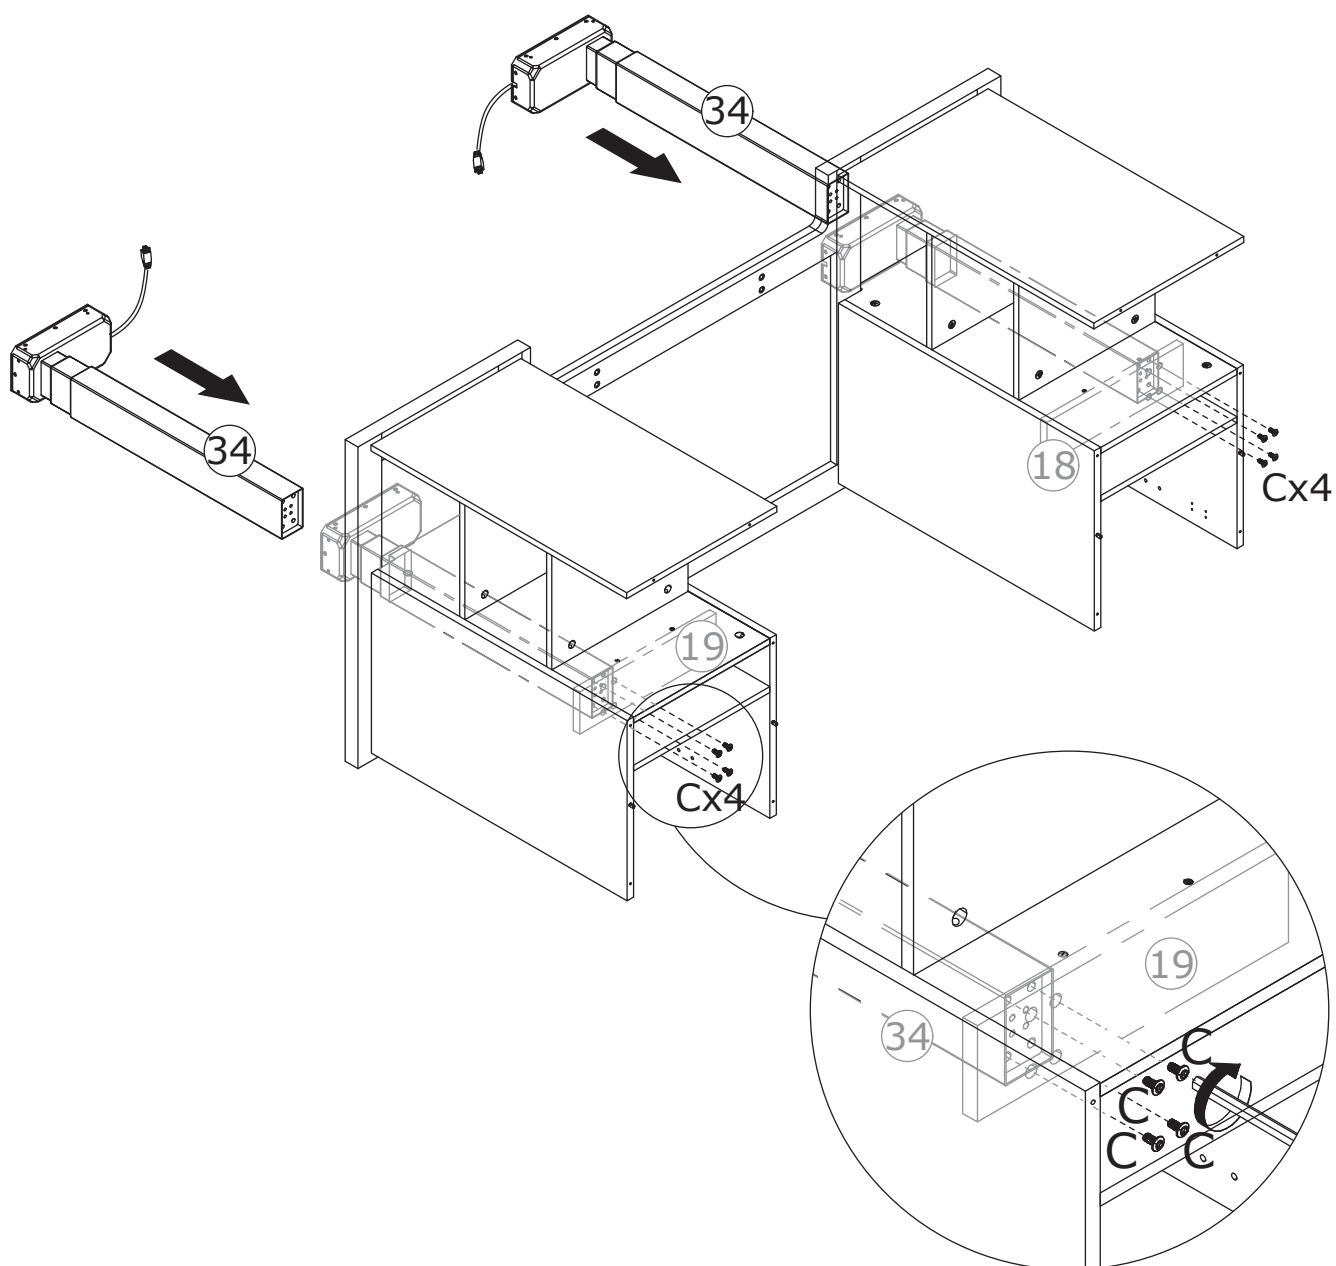

26

  
 
A x 16
M5 x 42 mm

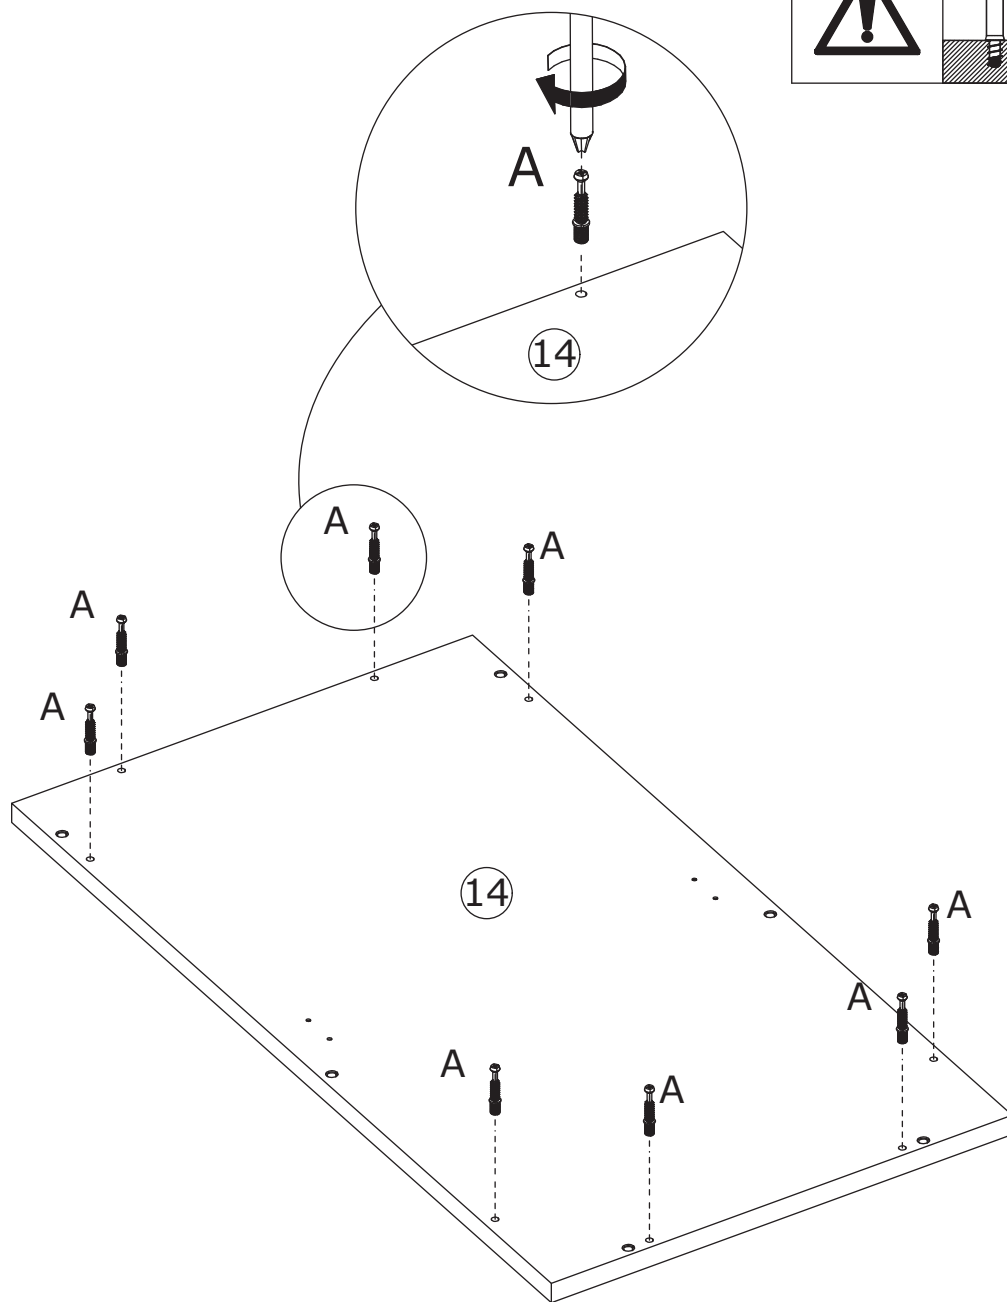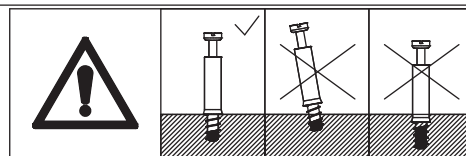


x2

Screw eccentric rod (A) onto Plate 14.




 
 
27

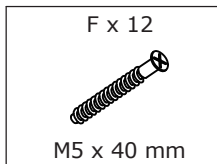

 
Secure Plate 14 to Plate 3, 4, 5, 6, and 7 using screw (F).

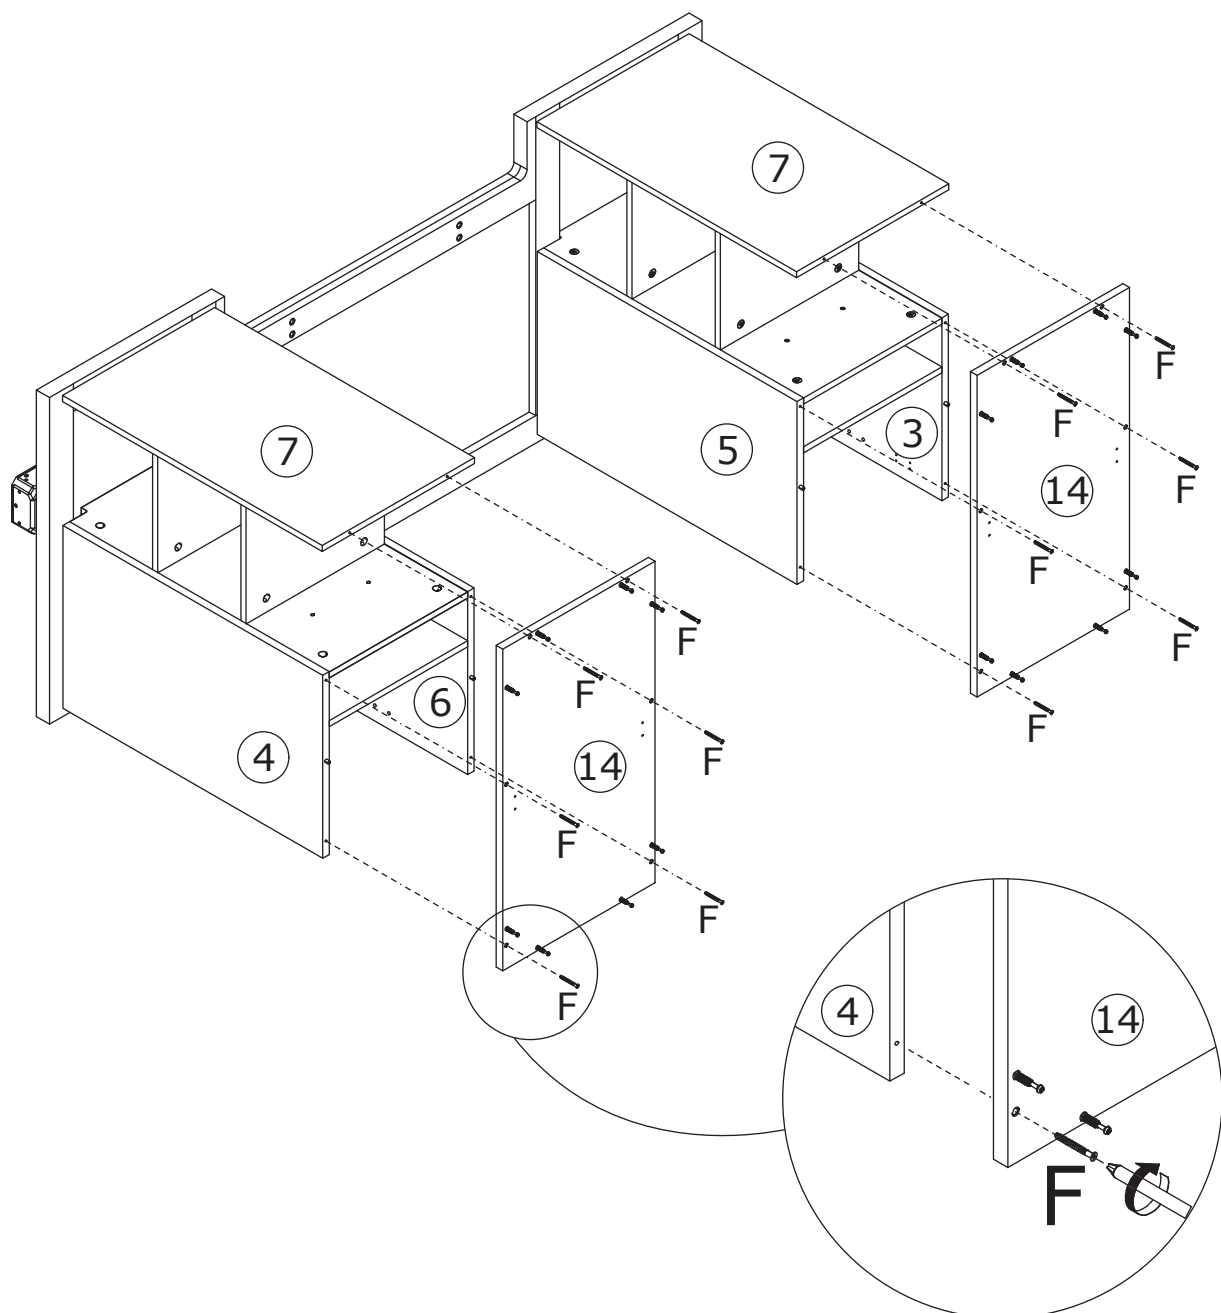

28

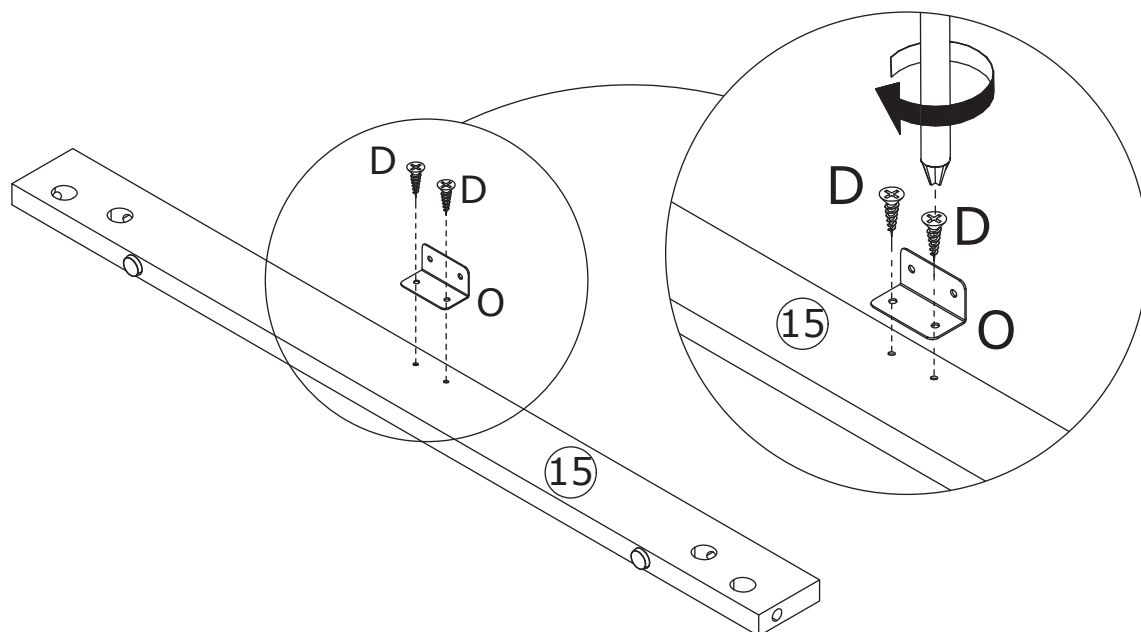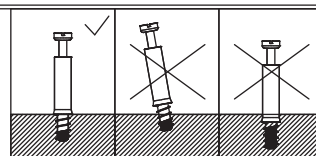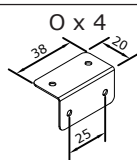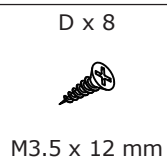     

x4

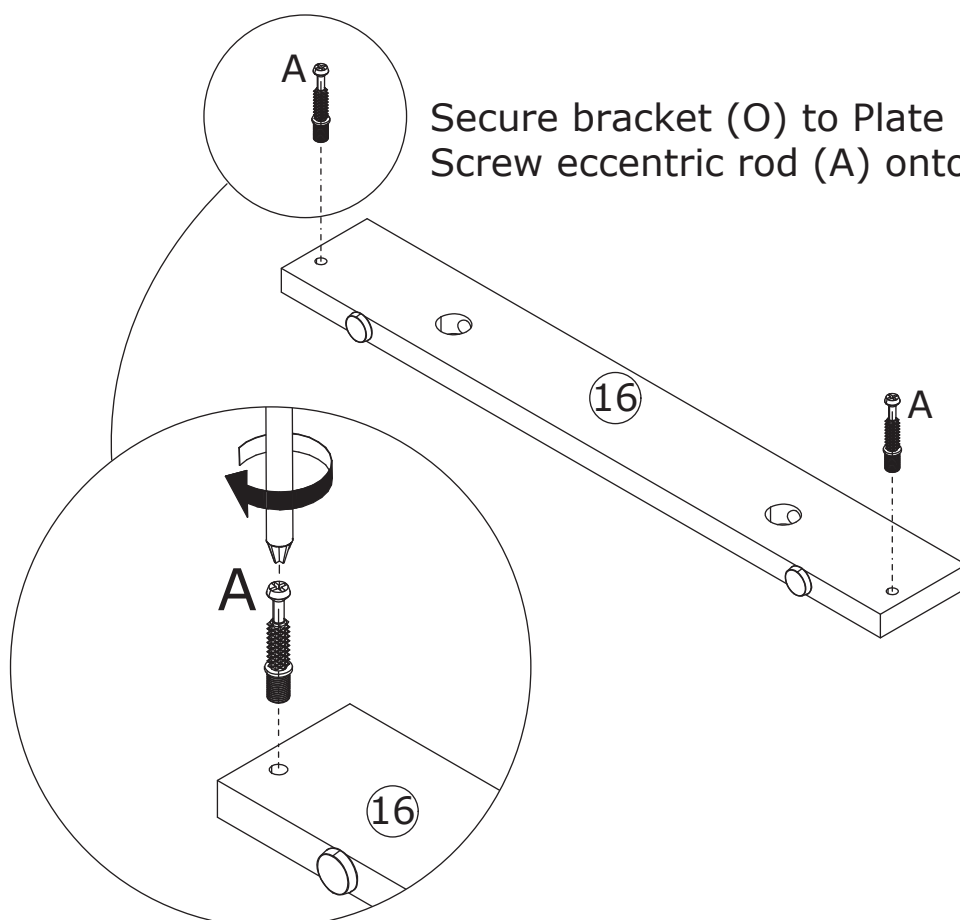 

x4

 
 
 
Secure bracket (O) to Plate 15 using screw (D).
Screw eccentric rod (A) onto Plate 16.

29

B x 8






Ø15 x 10 mm

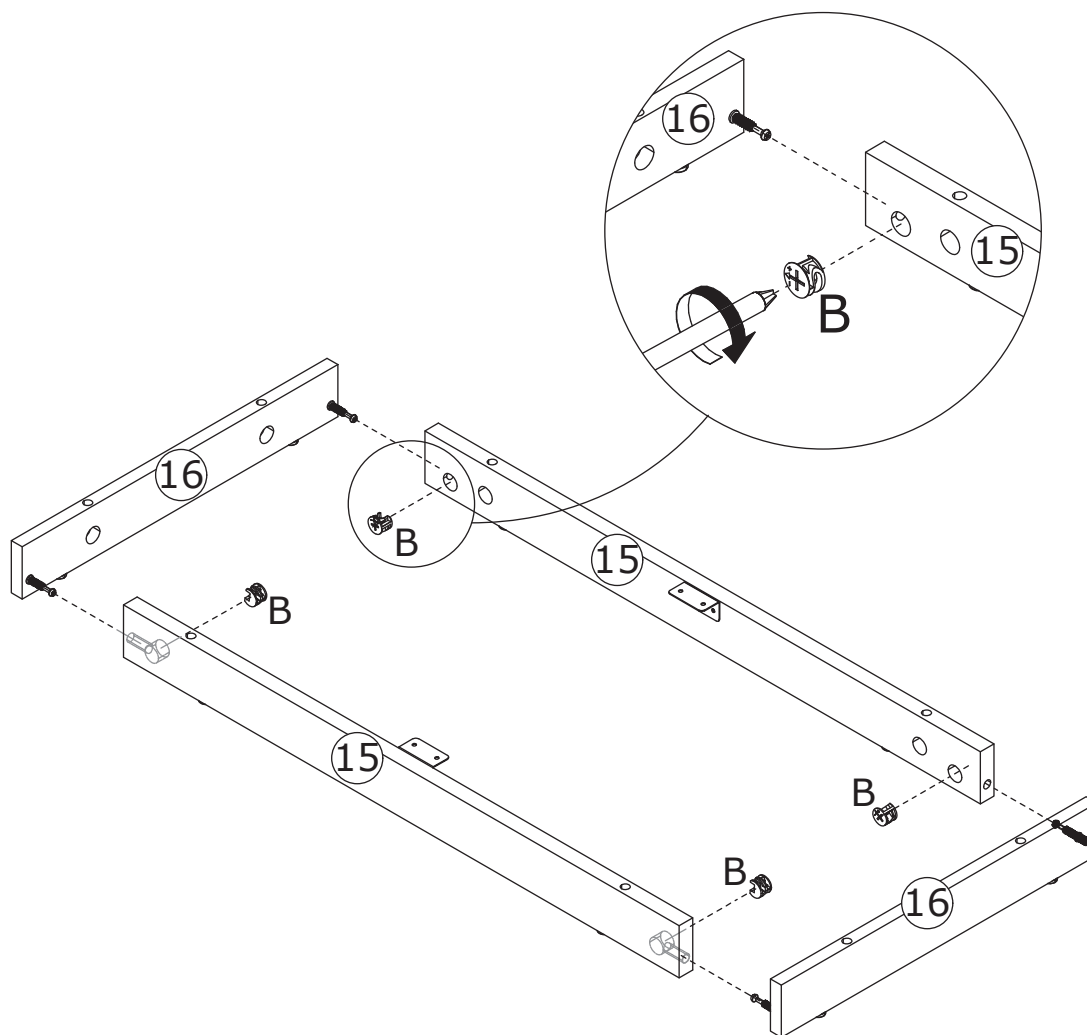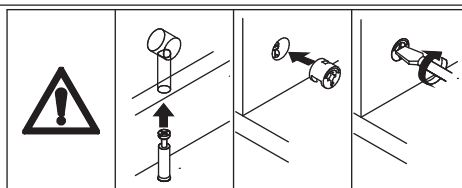


Connect Plate 15 to Plate 16, then tighten by turning eccentric wheel (B) clockwise.

x2

   30

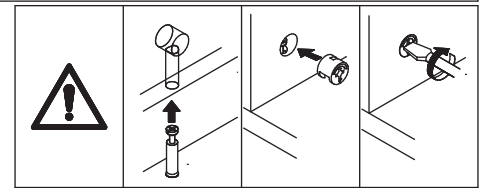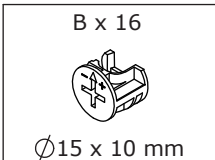

 Connect Plate 14 to Plate 15 and 16, then tighten by turning eccentric wheel (B) clockwise.

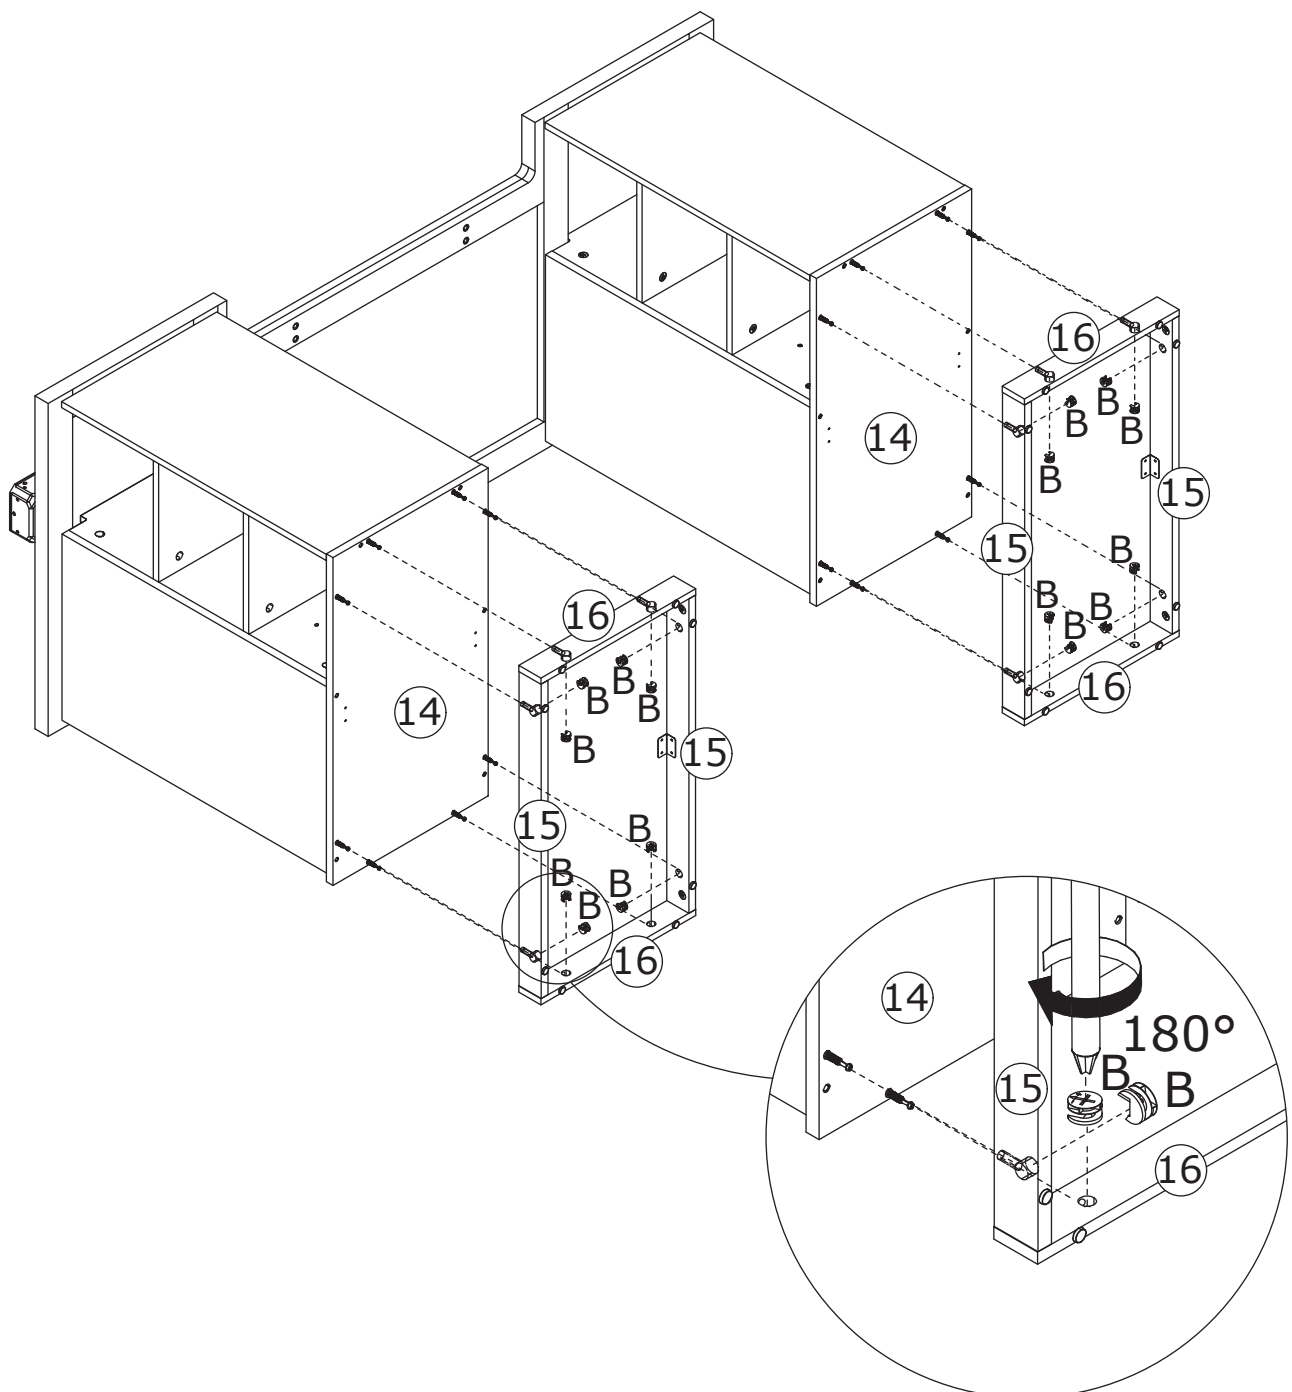


31


D x 8




 
M3.5 x 12 mm



 
Secure bracket (O) to Plate 14 using screw (D).

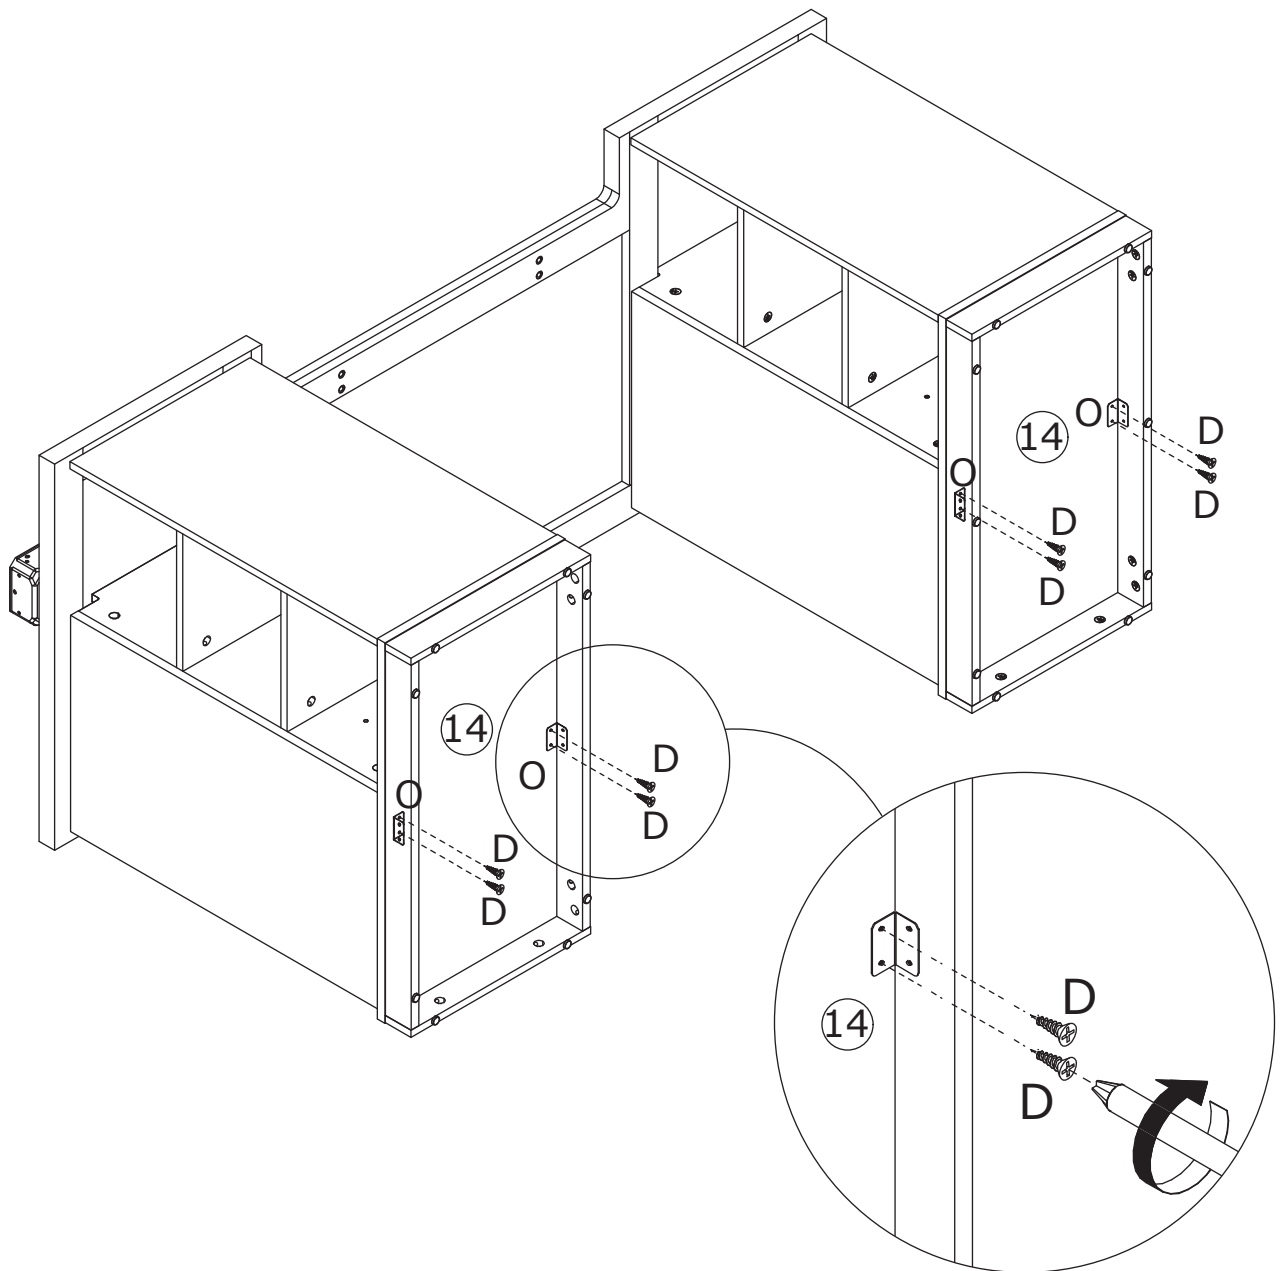

32

  J x 4  M6 x 16 mm	L x 4  M6 x L12 mm	x 1  10mm 12mm	x 1  #4	
--	---	---	---	--

 
Peel off the protective film, then secure Part 33 to Plate 35 using screw (J) and nut (L).

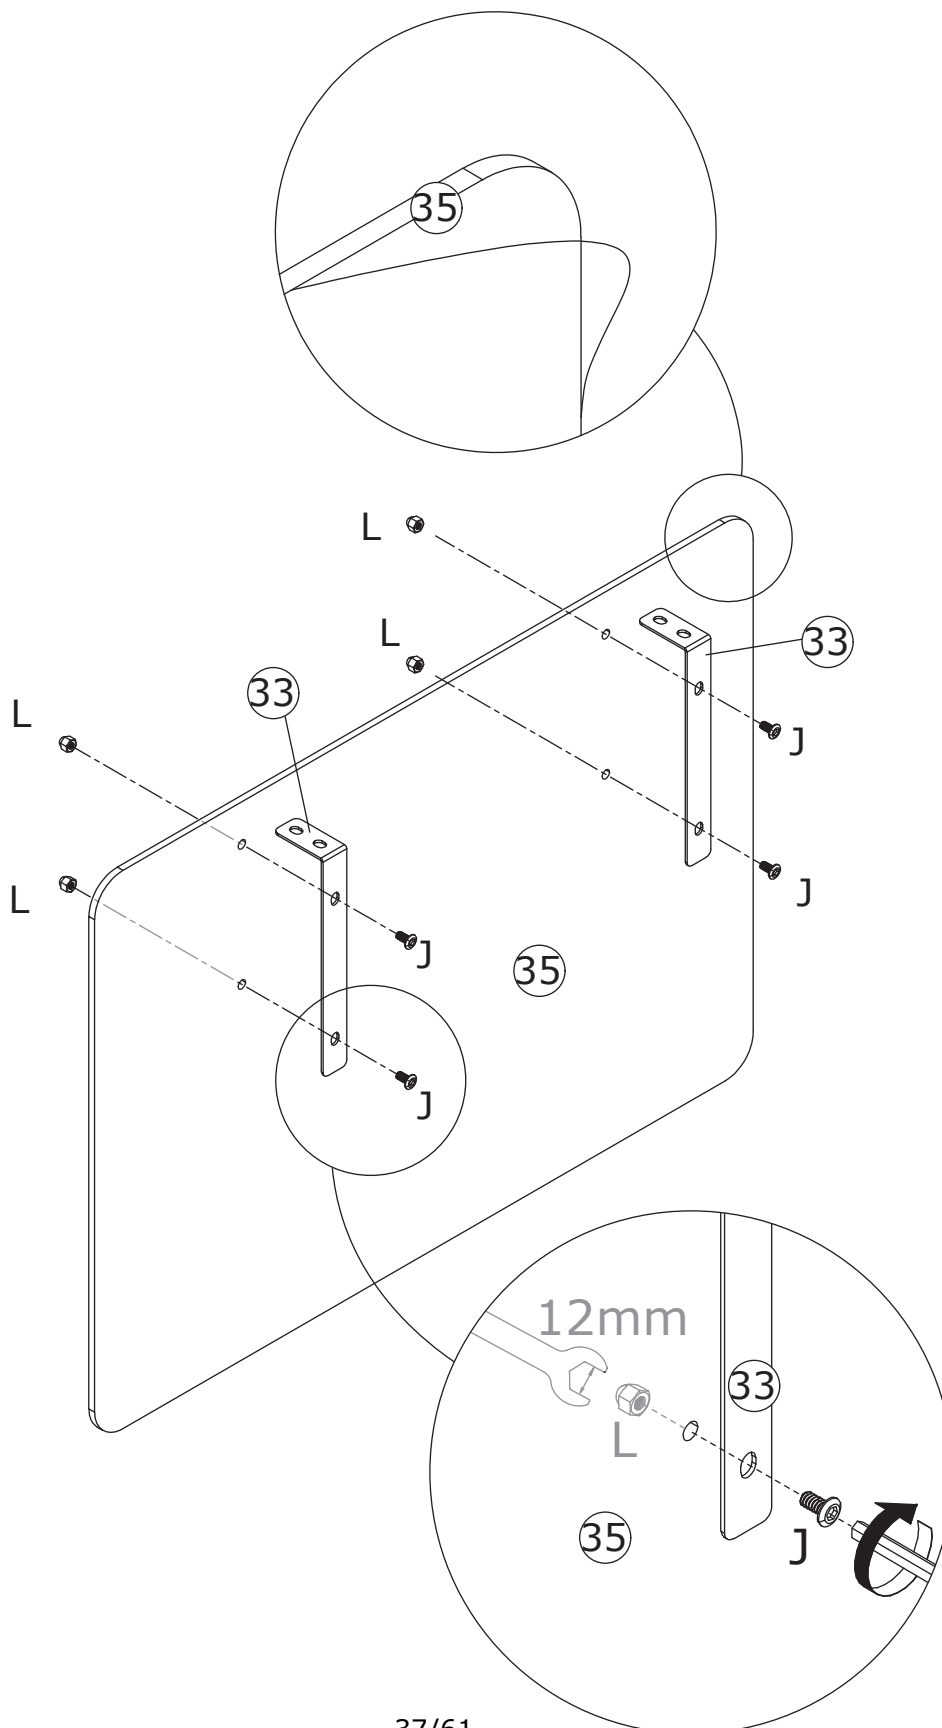

33

G x 4  M6 x 12 mm	x 1  #4	
--	--	--

 Secure Part 33 to Plate 2 using screw (G).

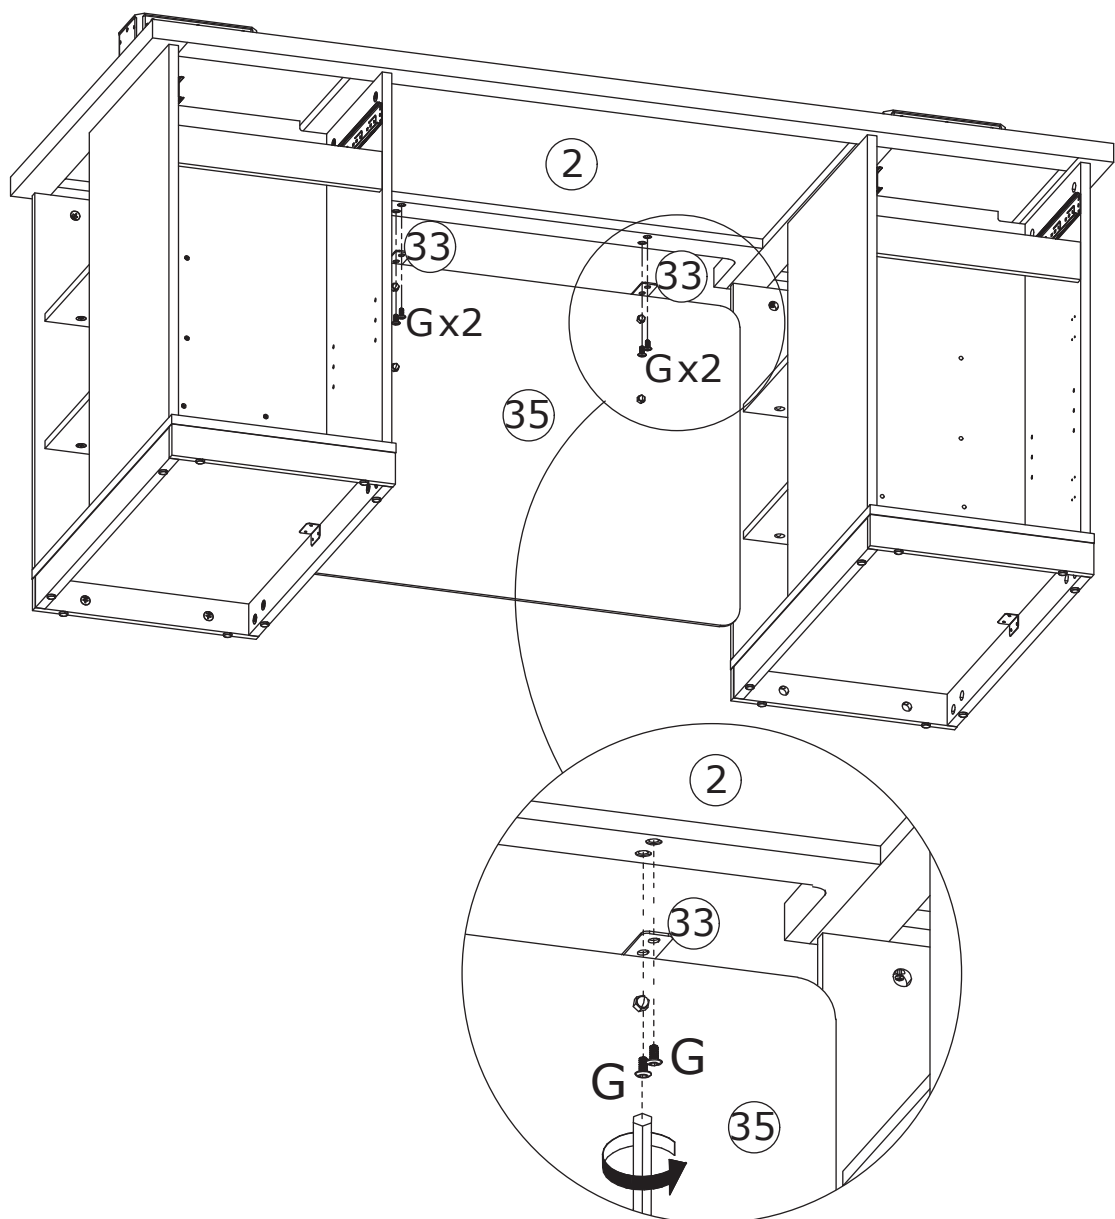


34

H x 4  M6 x 30 mm	x 1  #4	
--	--	--

Secure Part 41 to Part 34 using screw (H).

 Screw tightened 80%

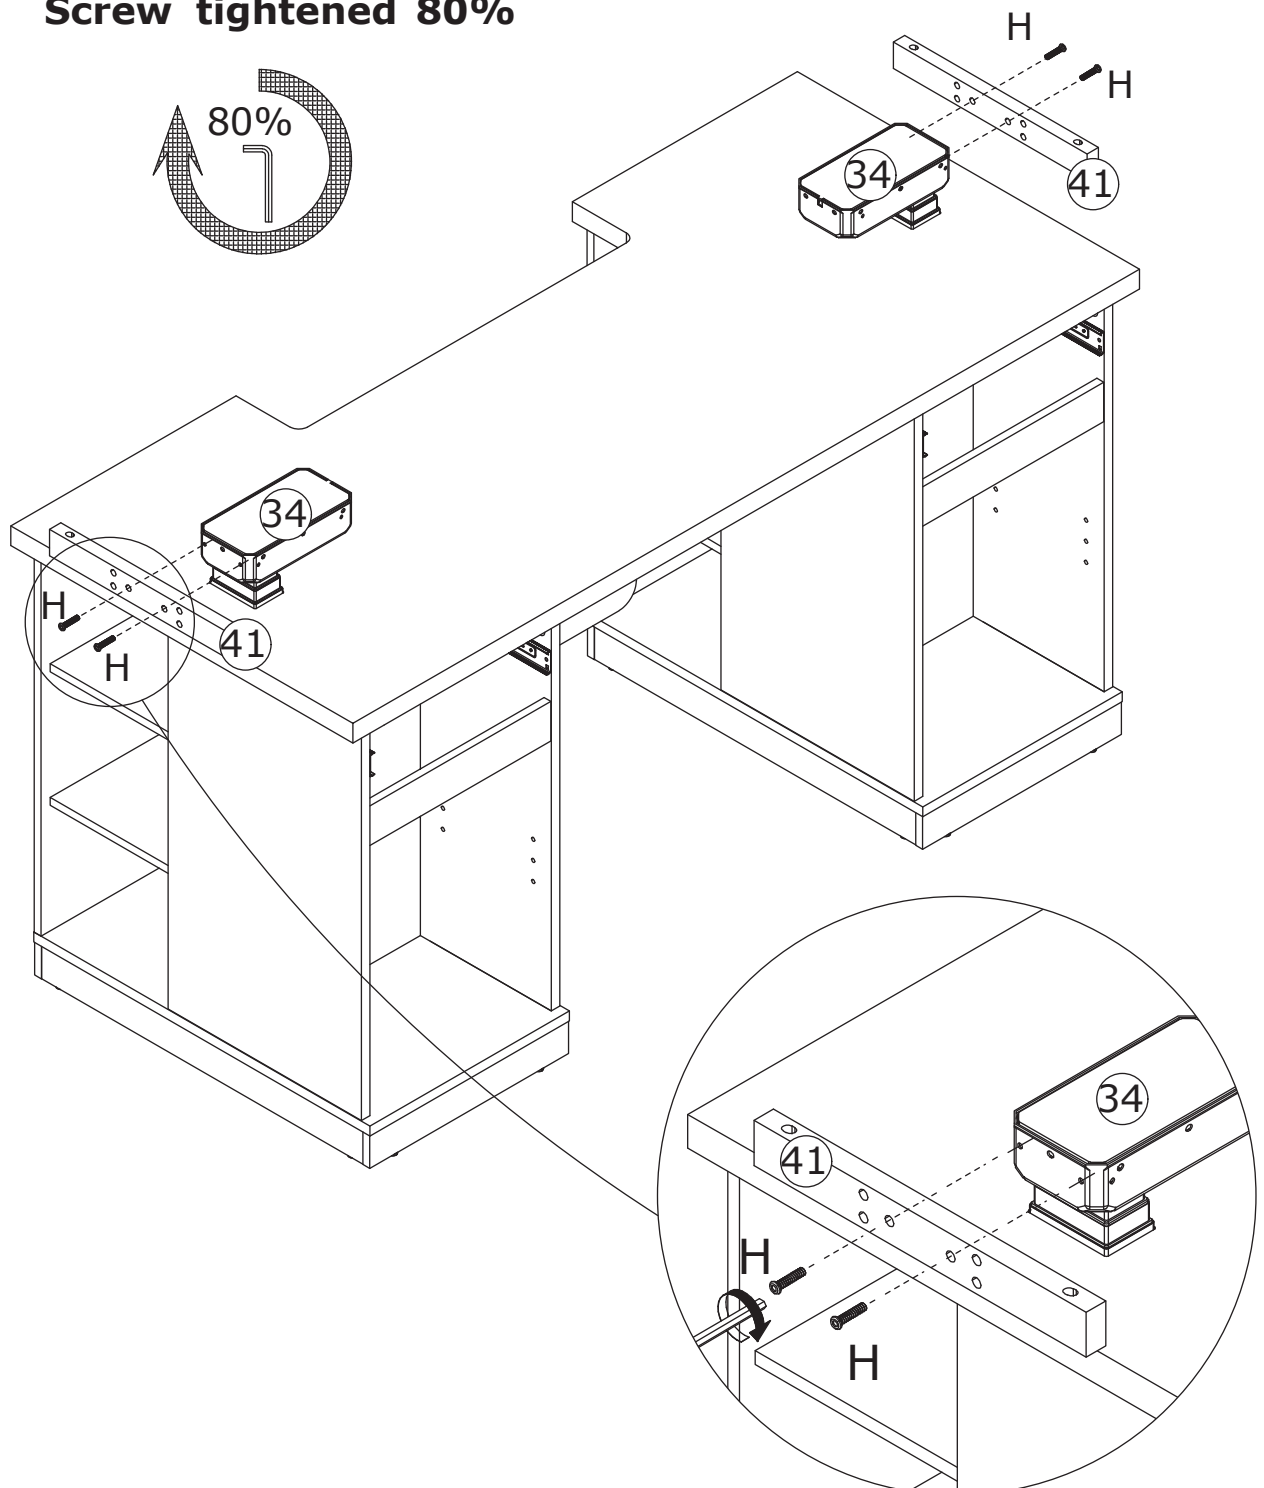


35



Secure Part 42 to Part 34 using screw (H).

 
Screw tightened 80%

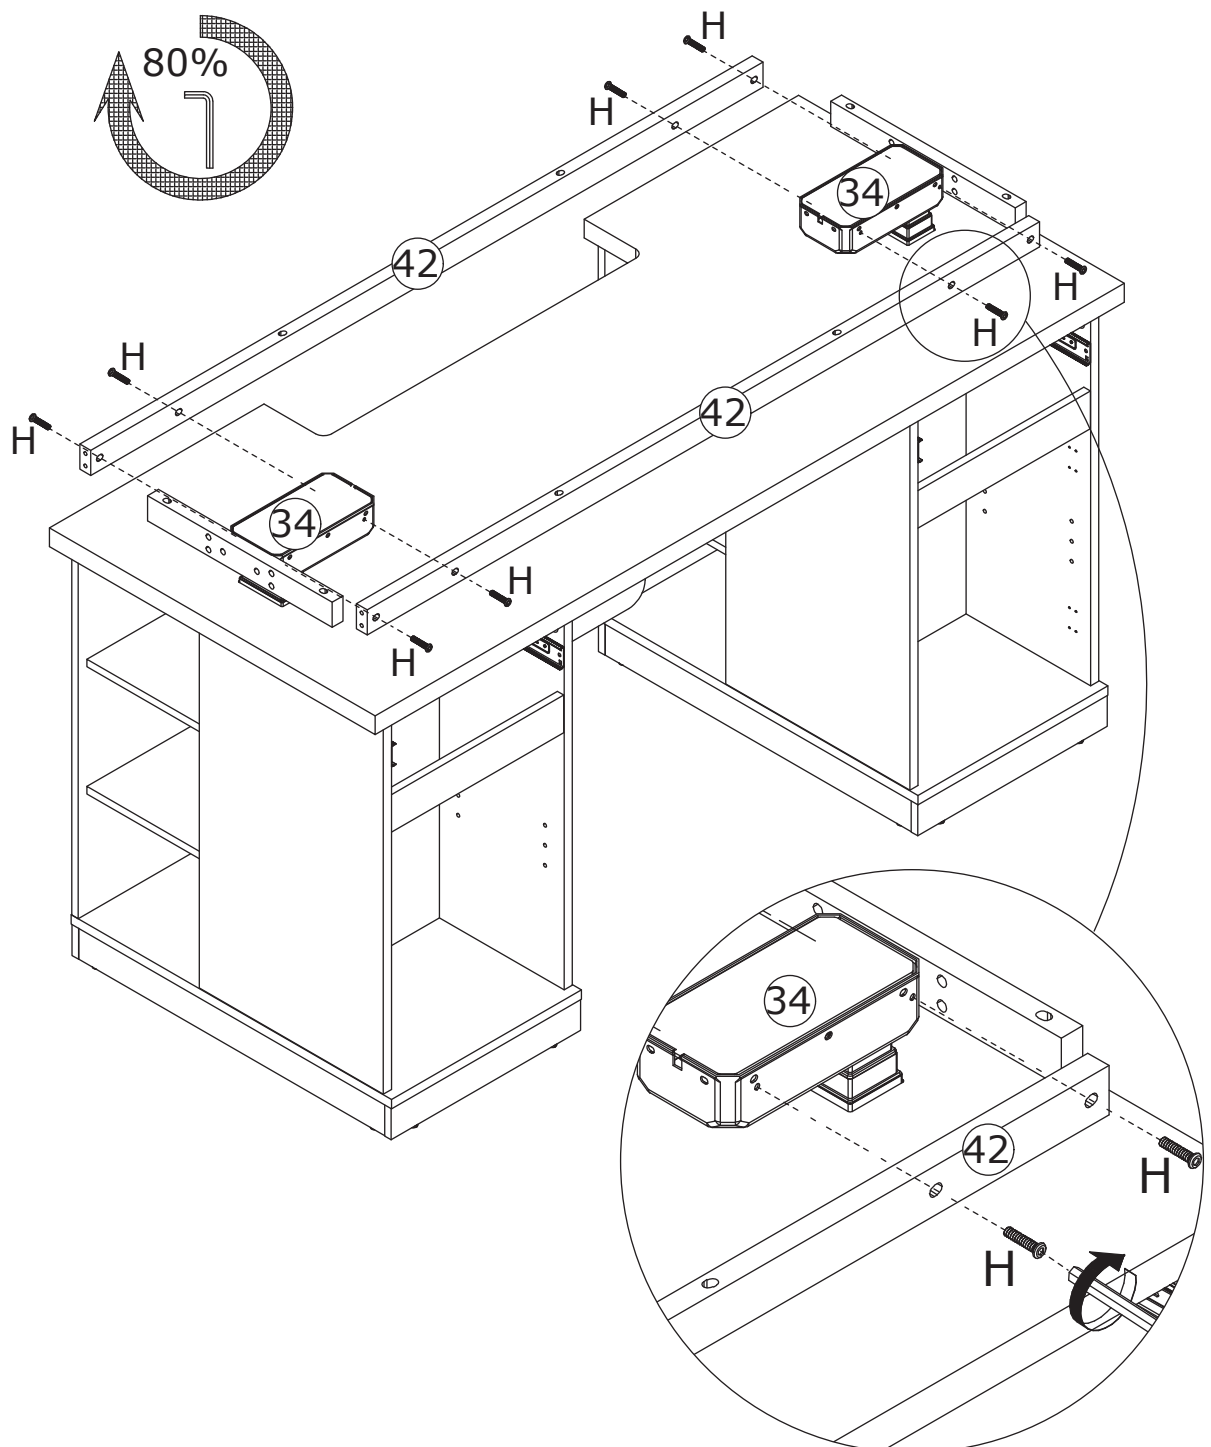


36



 Secure Part 41 to Part 41 using screw (I).

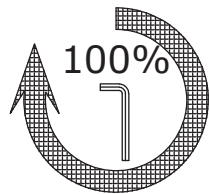


**All screws are
100% tightened**


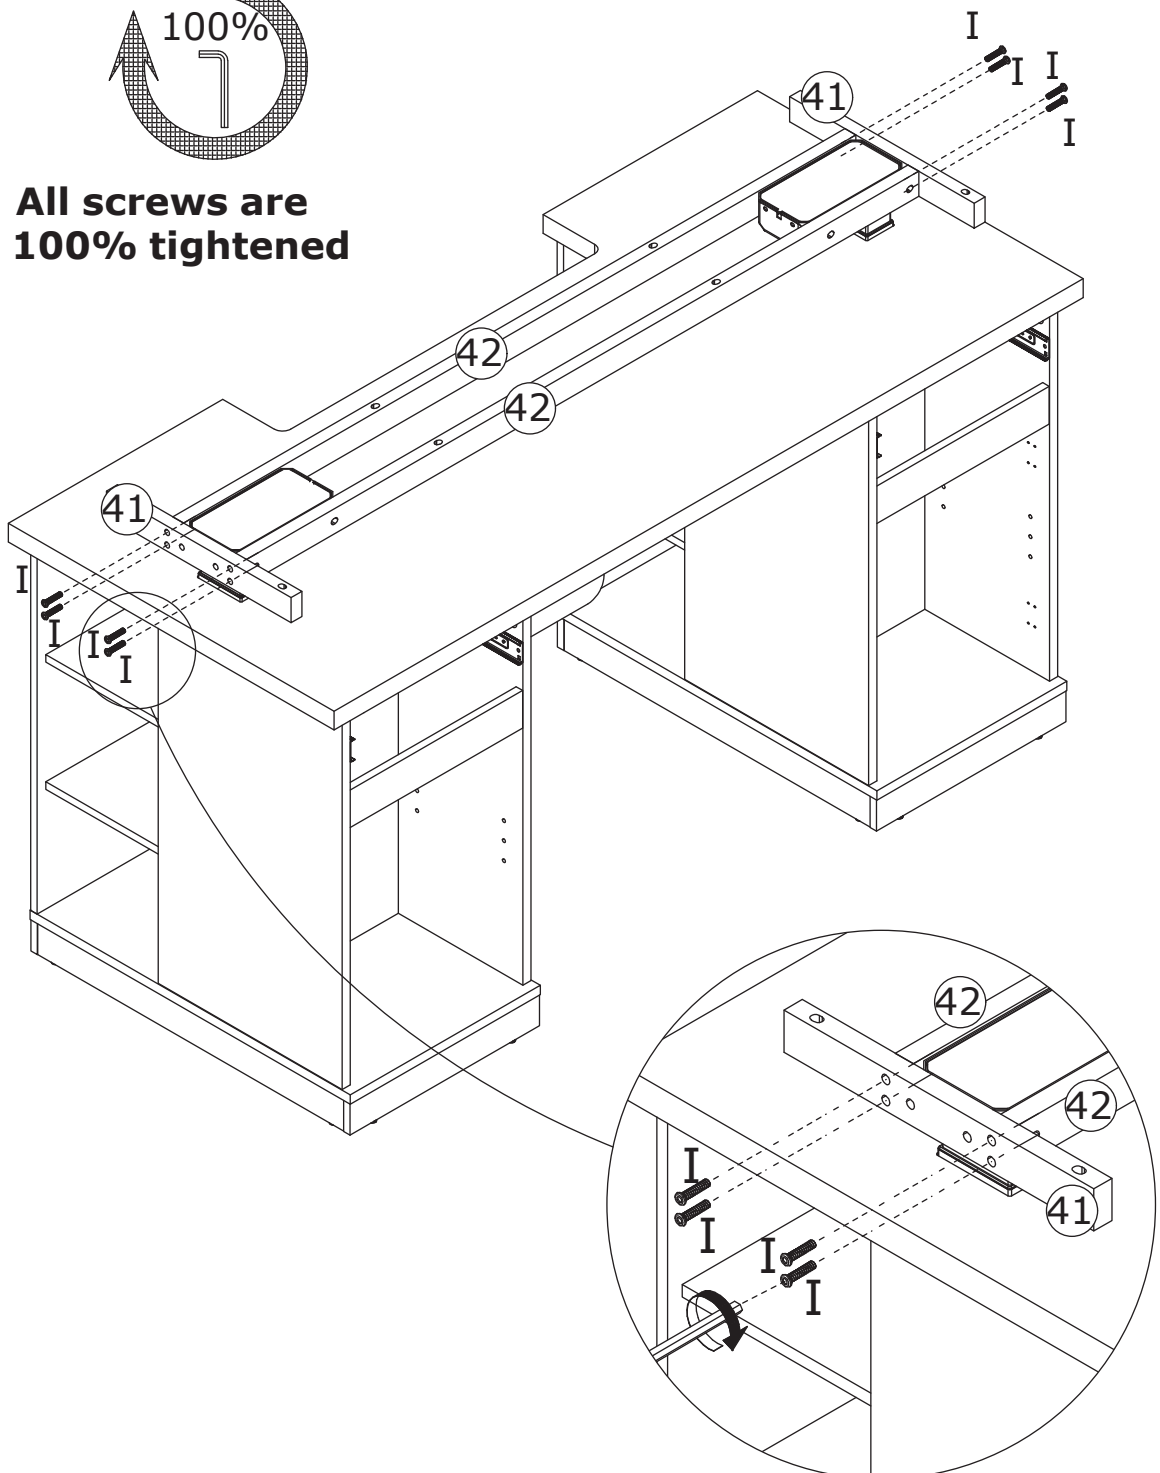 


37

 First, plug Wire 34 and Power Cord 40 to Switch Panel 37, and press "3" to raise the legs to its highest position.



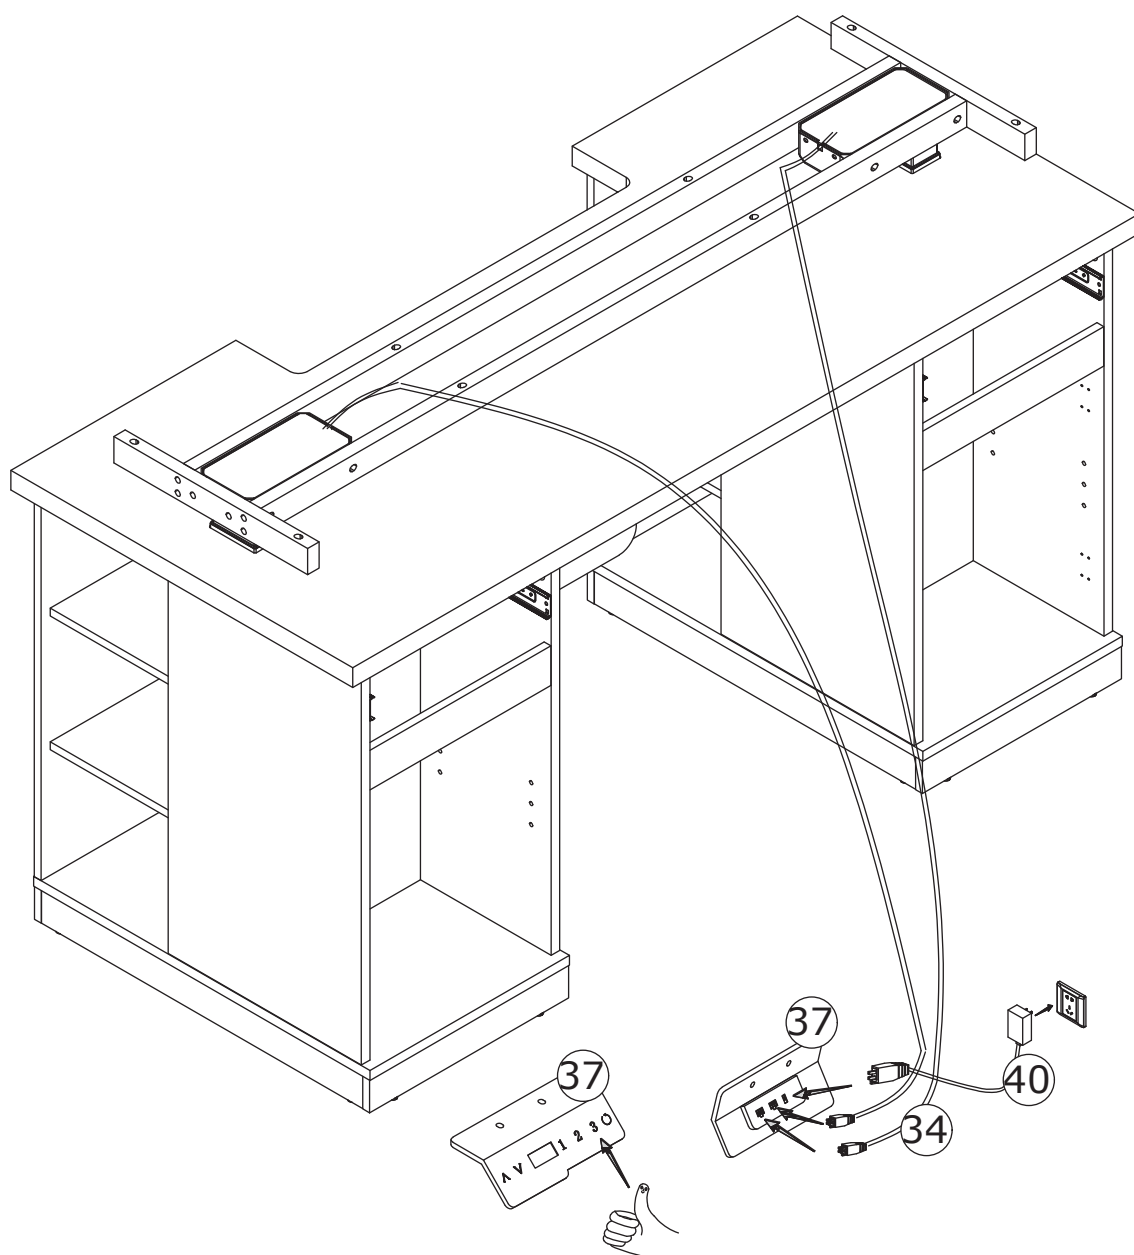


38

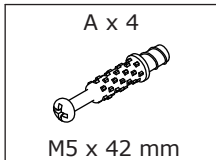  

Screw eccentric rod (A) onto Plate 1.
Peel off the protective film from the back of
Part 39 and attach it to Plate 1.

  
 
Pay attention to the orientation.

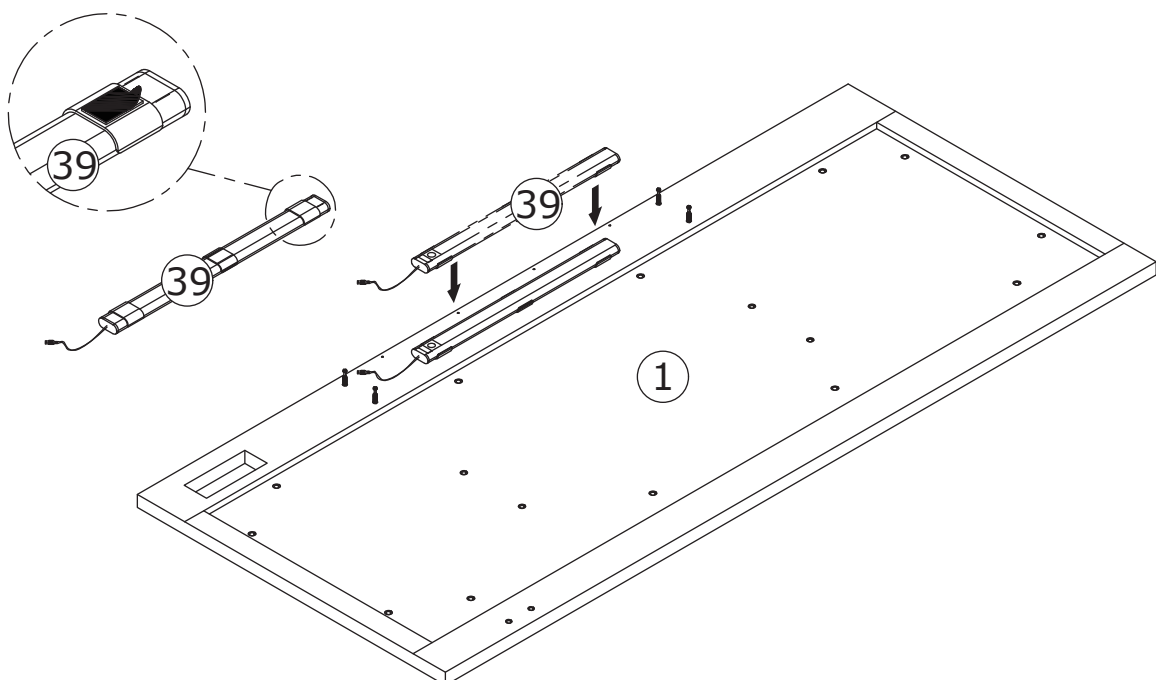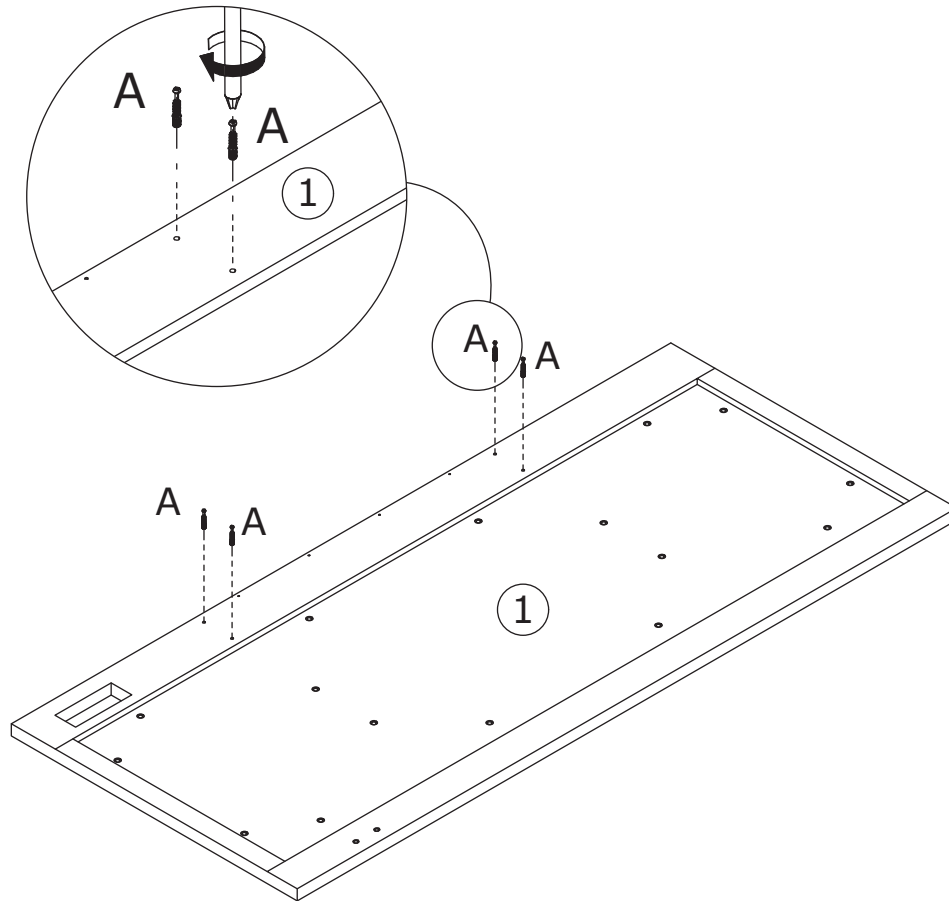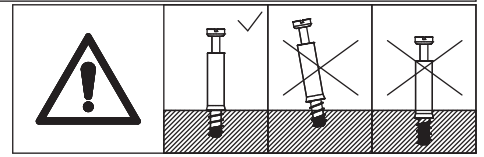

39

I x 8  M6 x 50 mm	M x 8  15 x 6 x 2 mm	x 1  #4	
--	---	--	--

  Secure Plate 1 to Part 41 and 42 using screw (I) and washer (M).

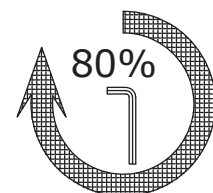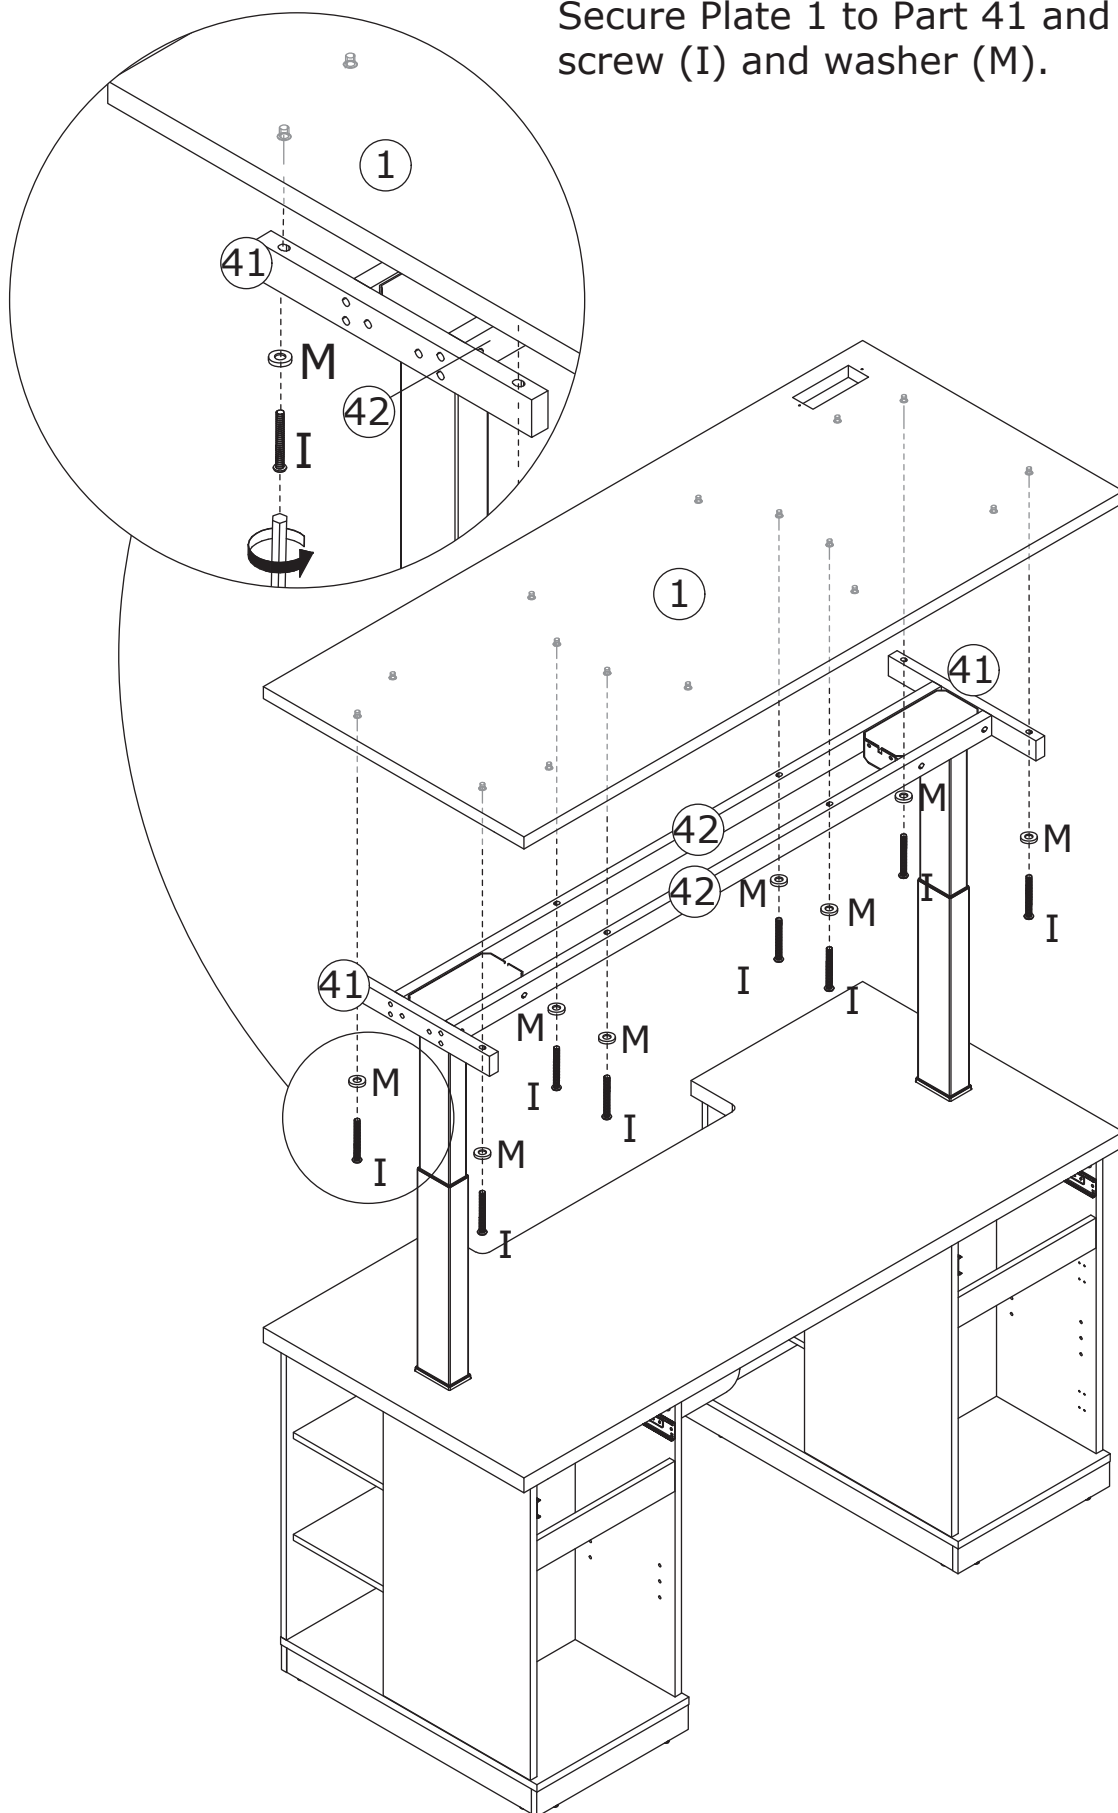


**Screw
tightened
80%**

40



I x 8  M6 x 50 mm	M x 8  15 x 6 x 2 mm	x 1  #4	
--	---	--	--

 Secure Part 32 to Plate 1 using screw (I) and washer (M).




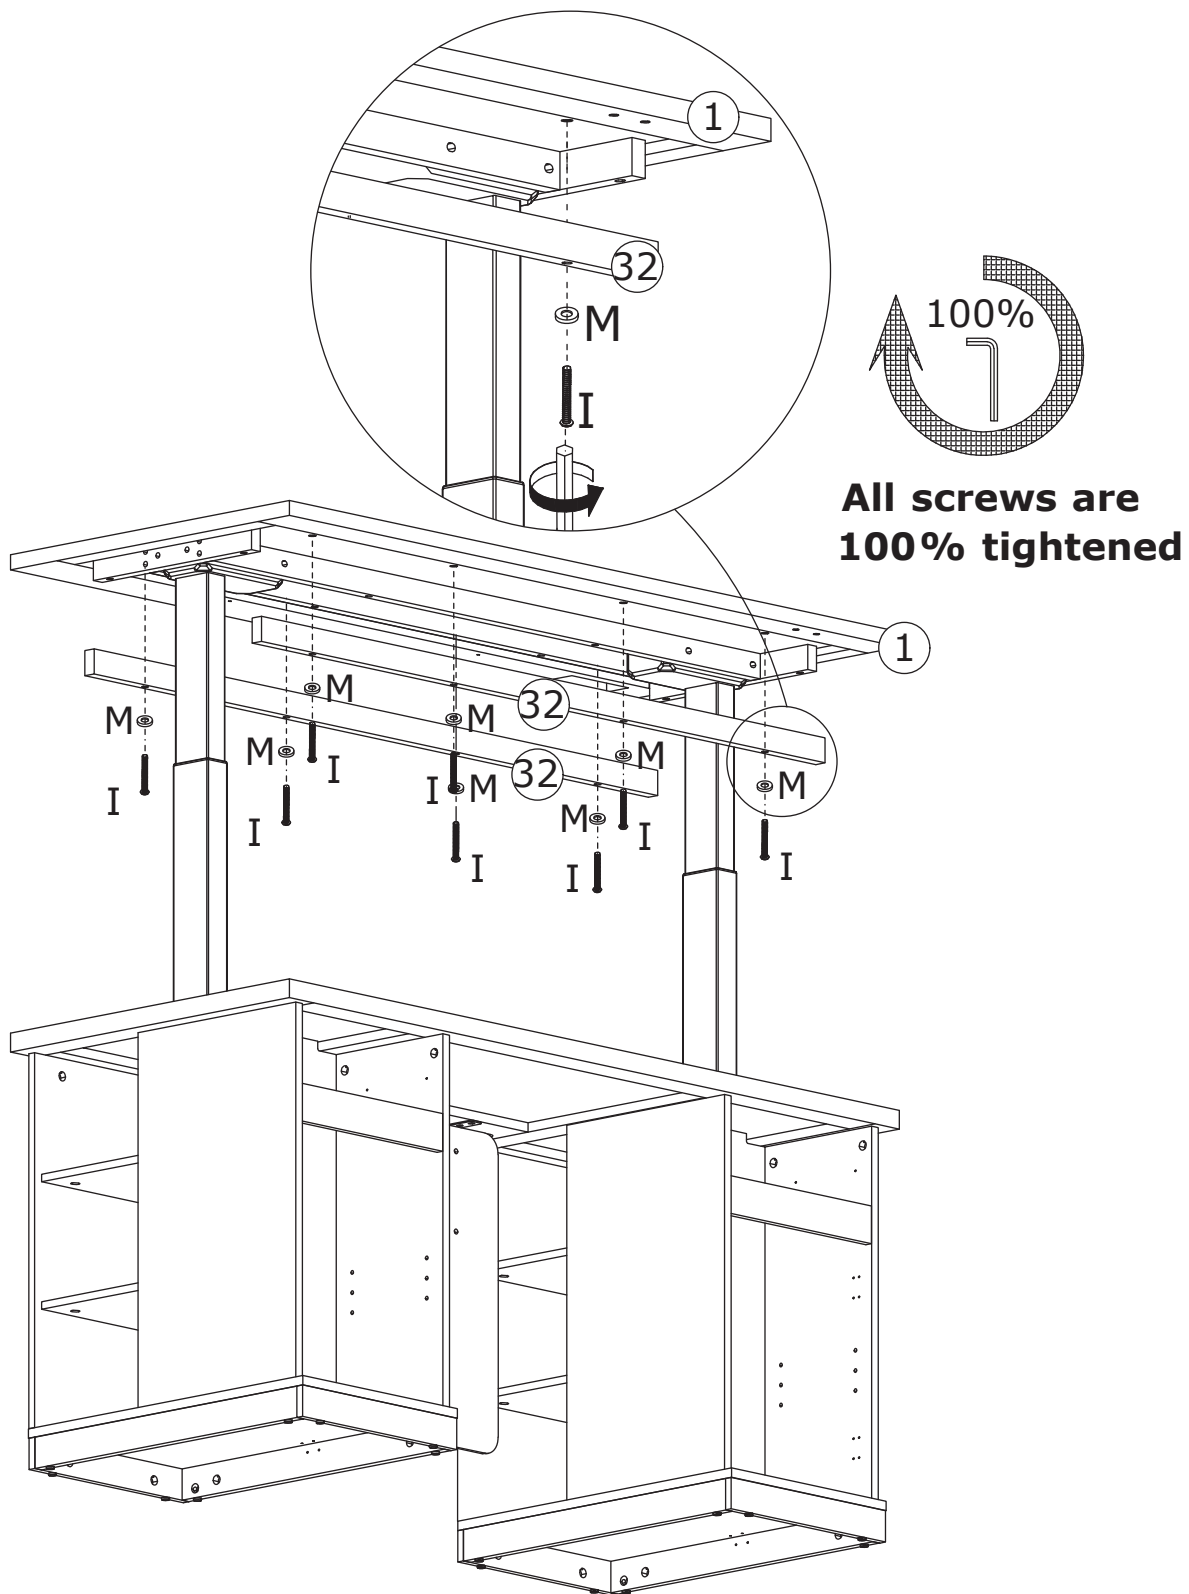


41

  A x 11
M5 x 42 mm

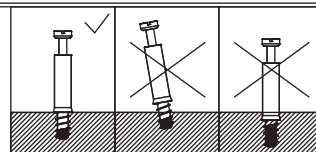



    Screw eccentric rod (A) onto Plate 21, 22, and 24.

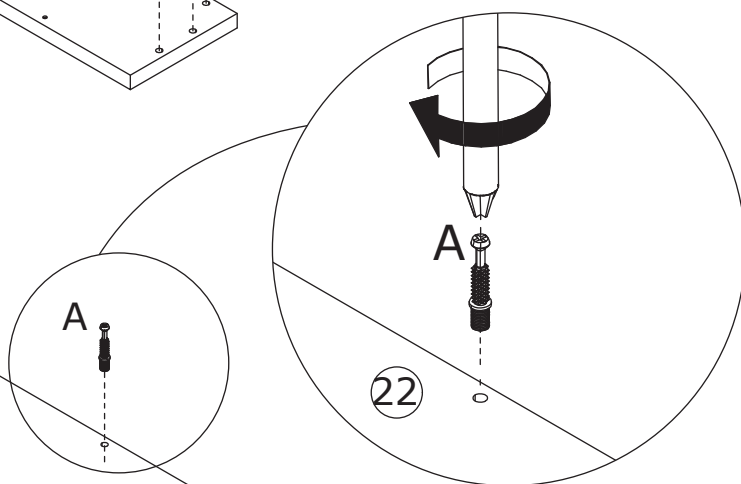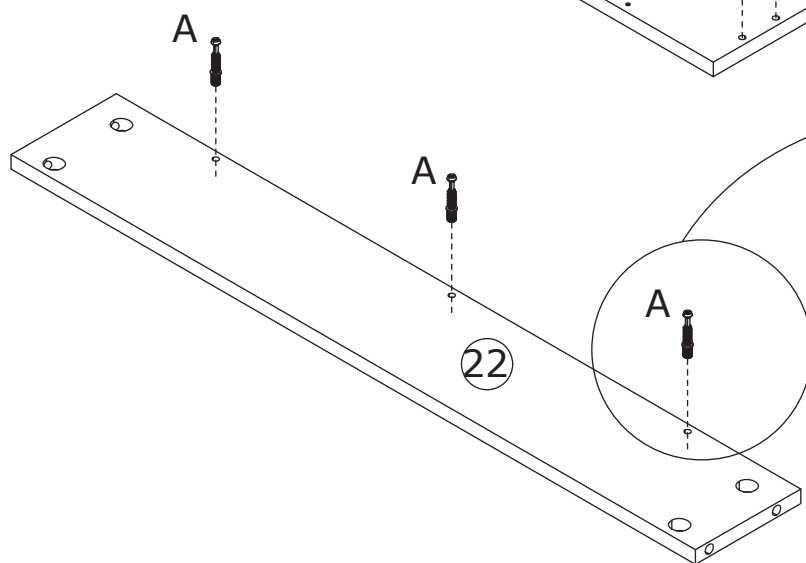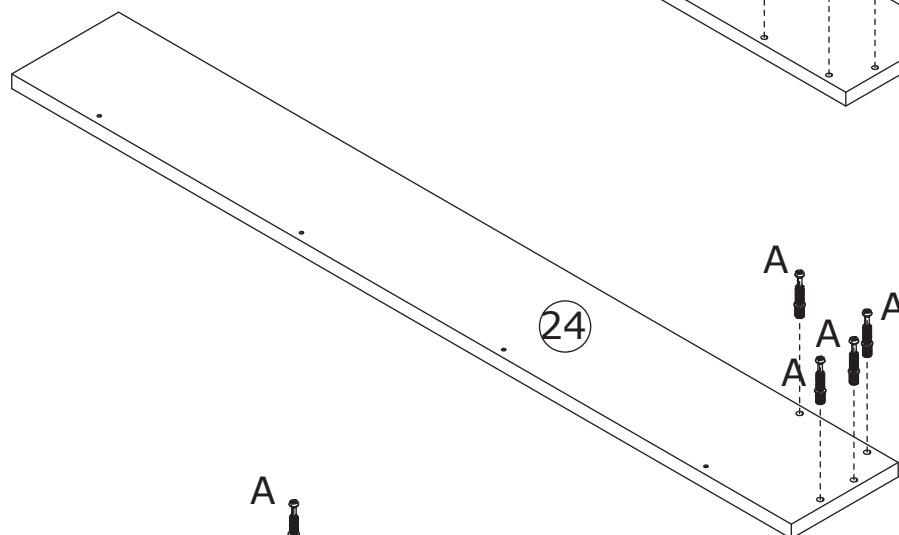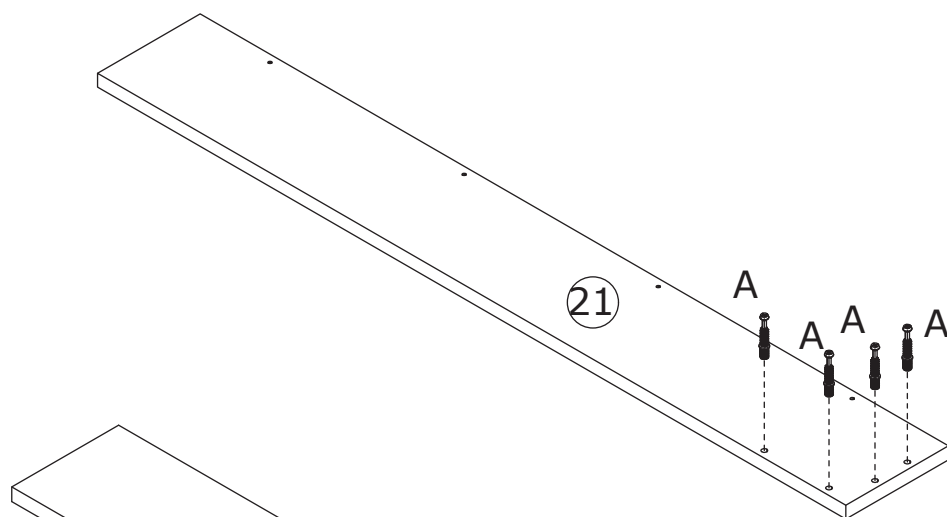


42

  B x 3

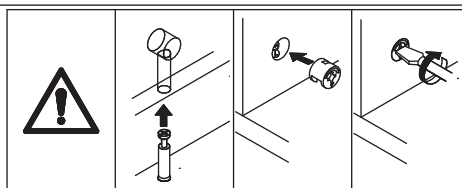 $\varnothing 15 \times 10 \text{ mm}$ 

 Connect Plate 23 to Plate 22, then tighten by turning eccentric wheel (B) clockwise.


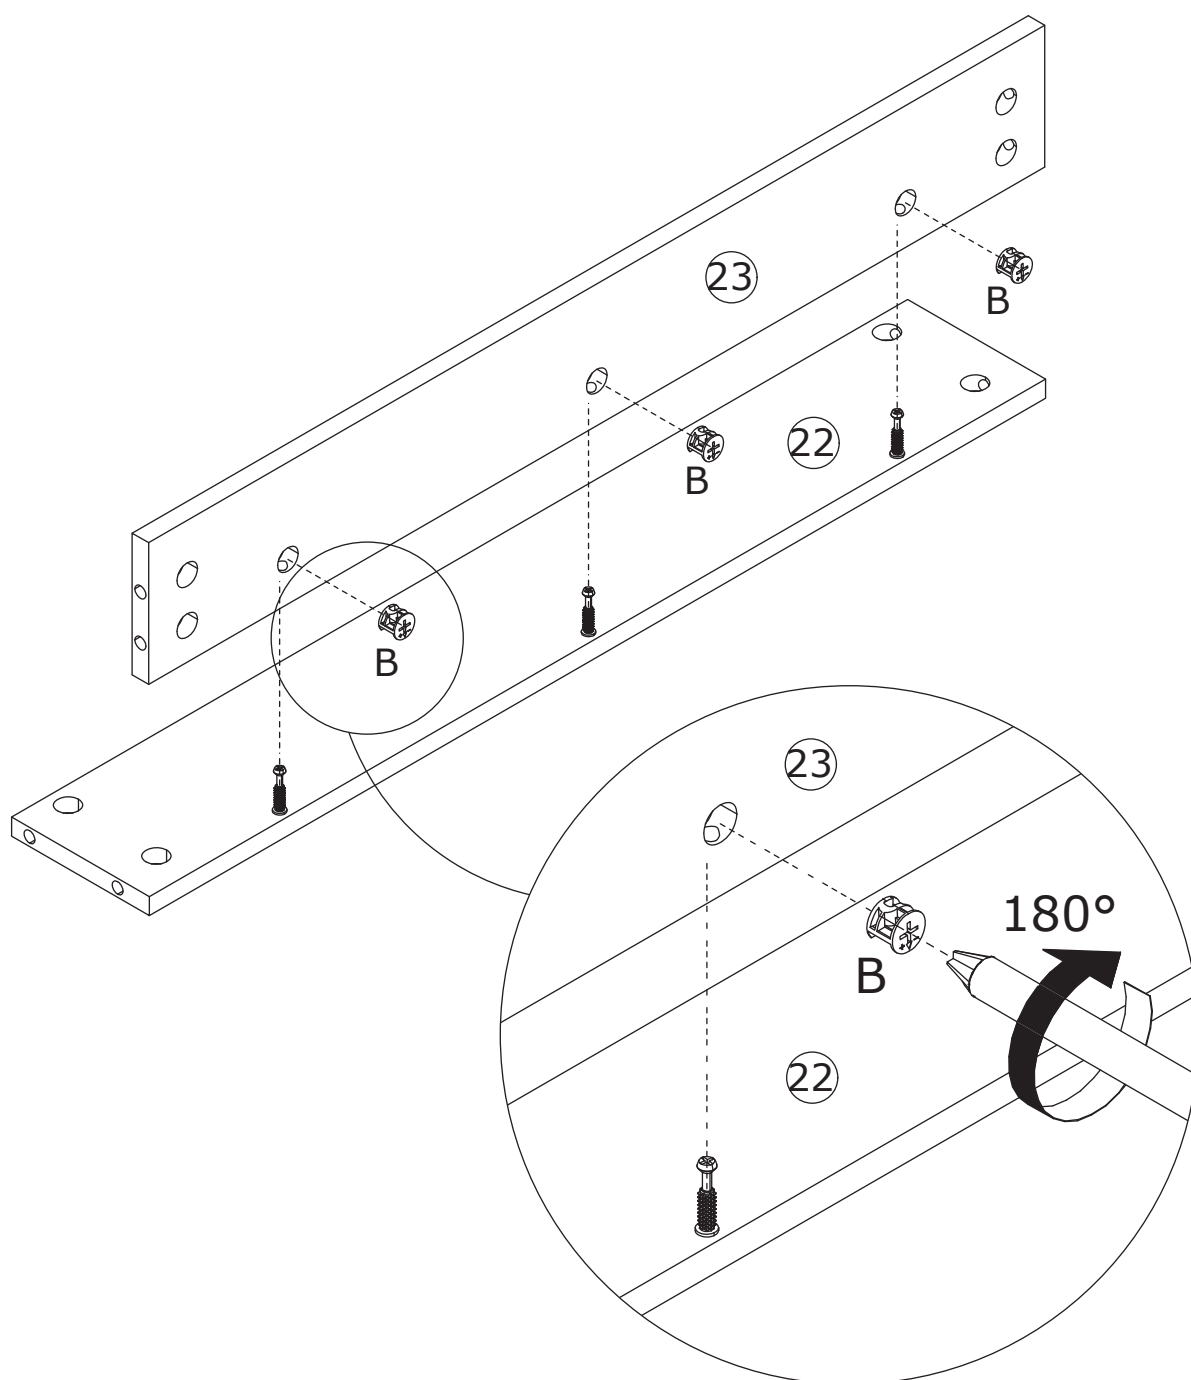


43


B x 8



  Ø15 x 10 mm

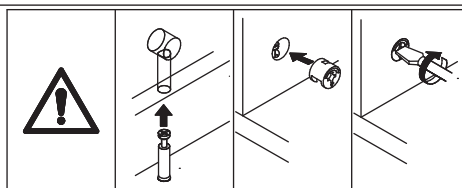

 Connect Plate 21 and 24 to Plate 23 and 22, then tighten by turning eccentric wheel (B) clockwise.

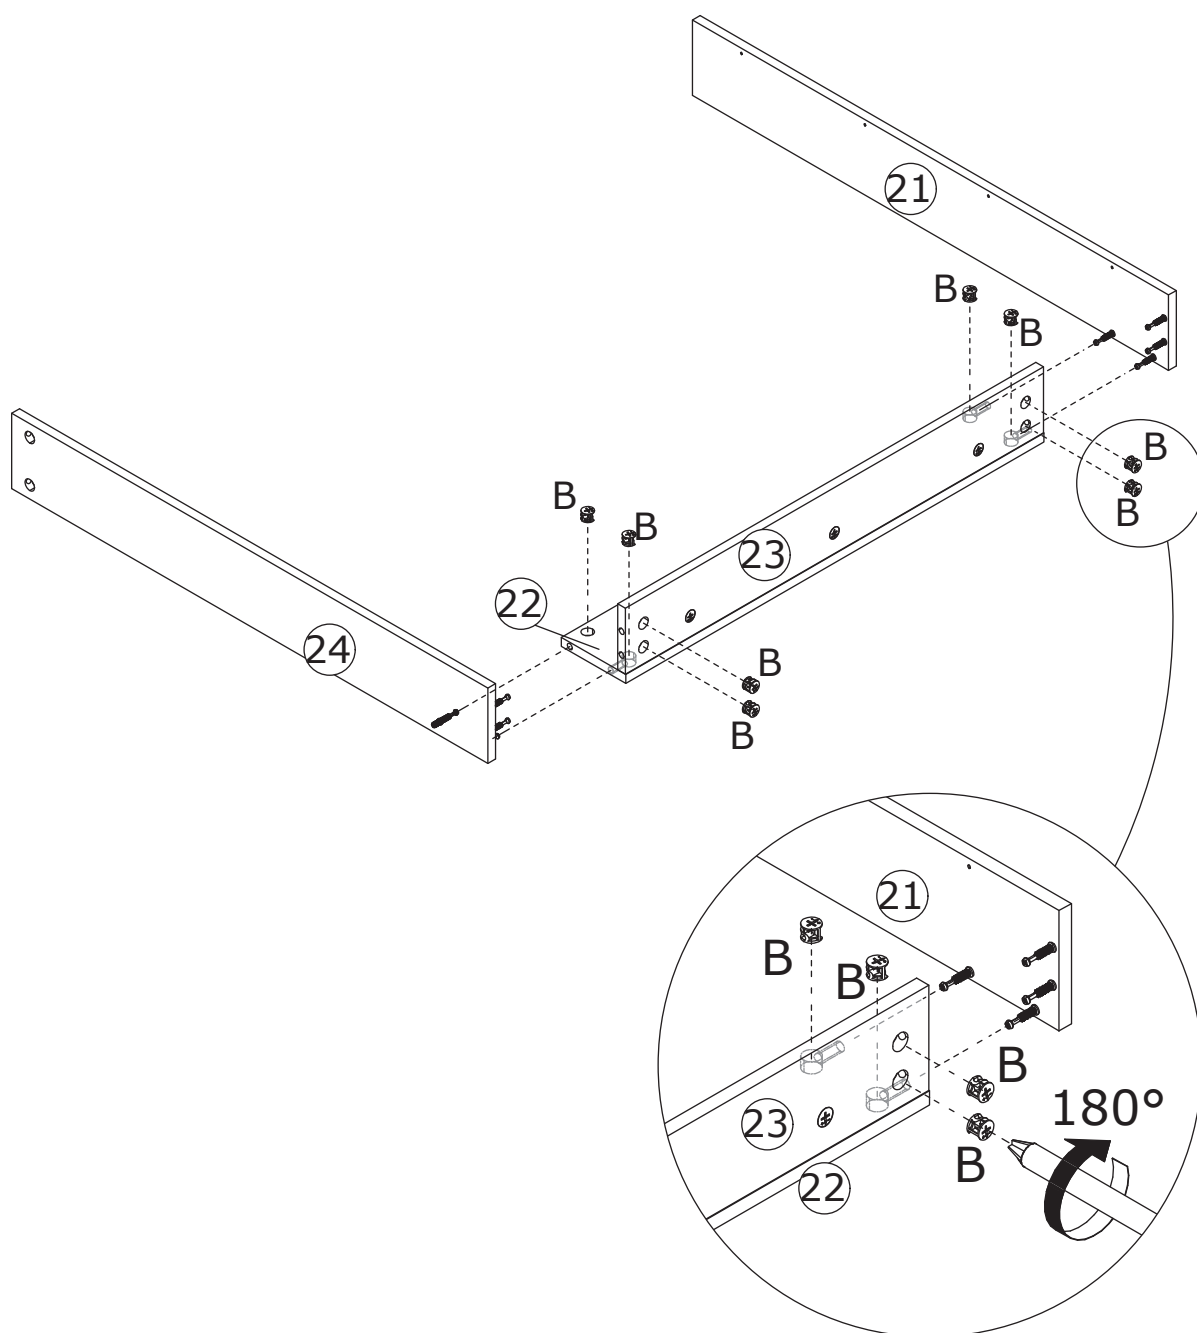


44

D x 4




 M3.5 x 12 mm



Secure Plate 36 to Plate 22 using screws (D).

 Pay attention to the orientation of the perforated panel.

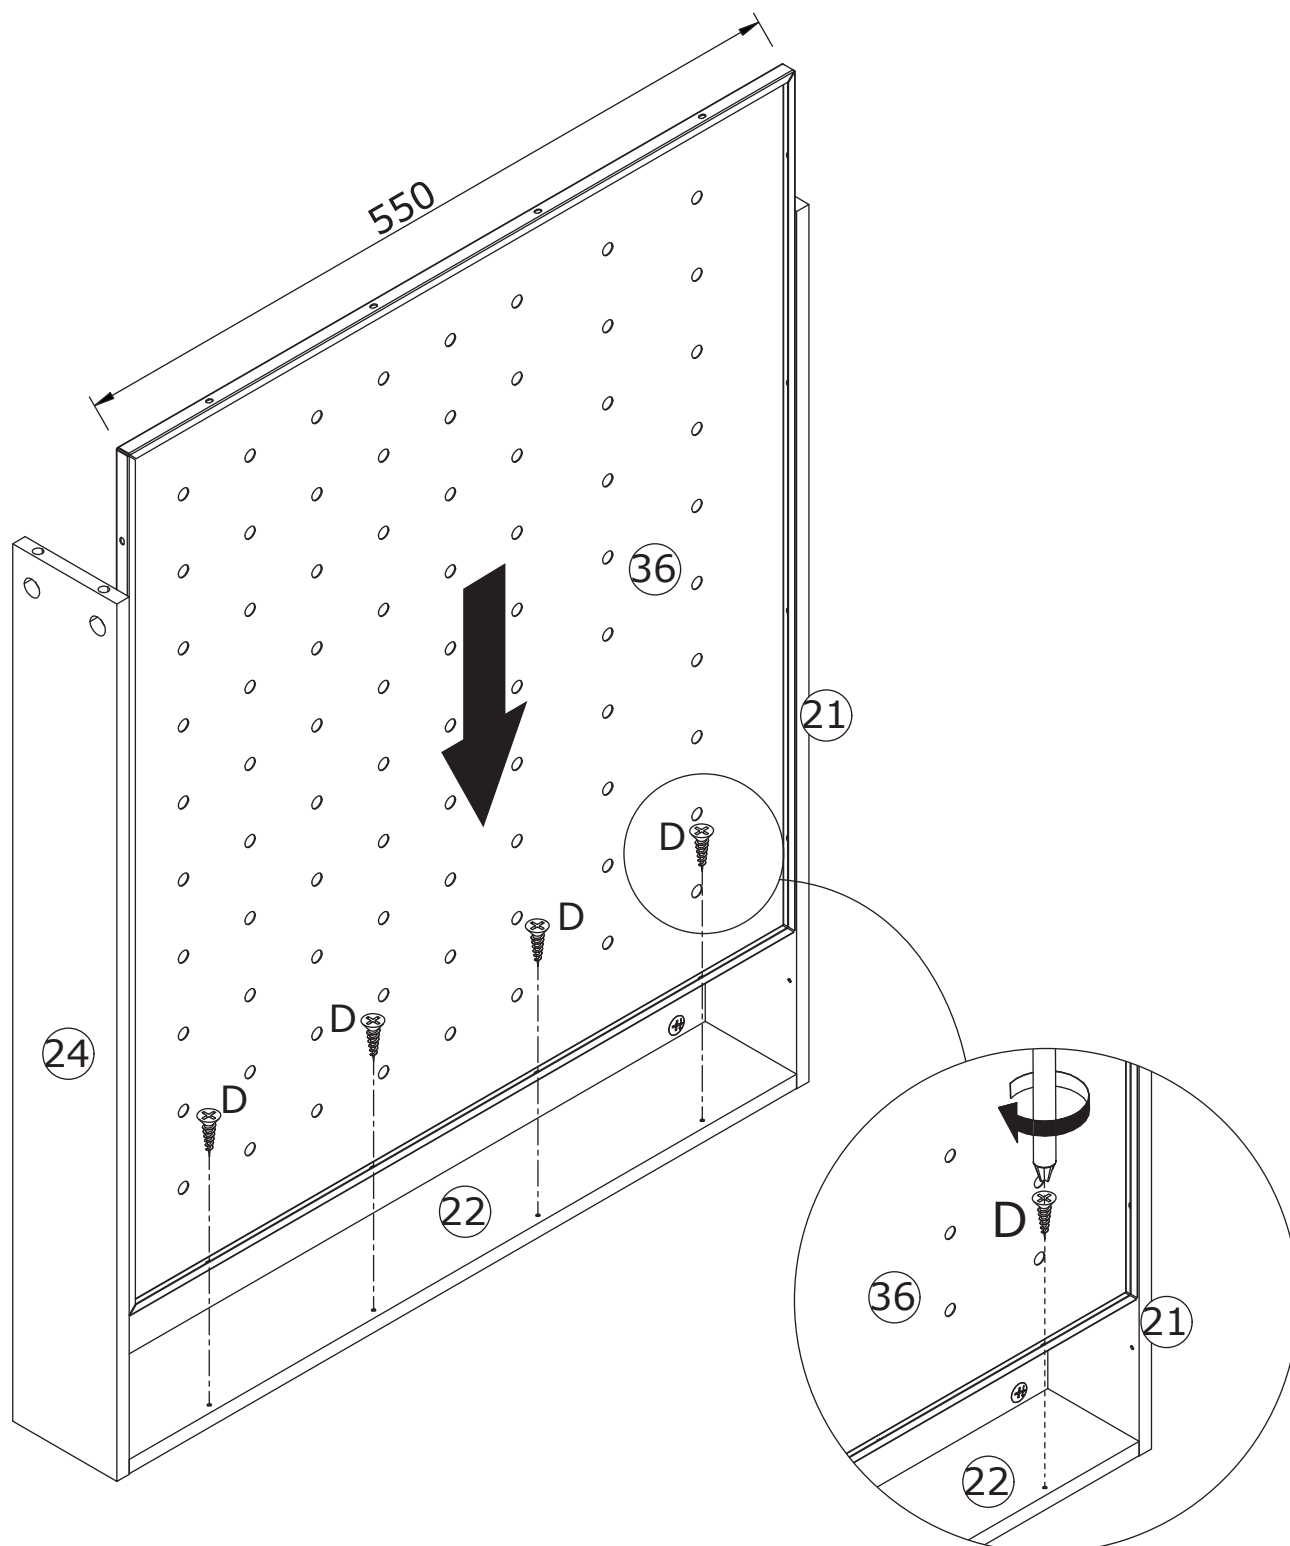


45


D x 8



 M3.5 x 12 mm



 Secure perforated Plate 36 to Plate 21 and 24 using screw (D).


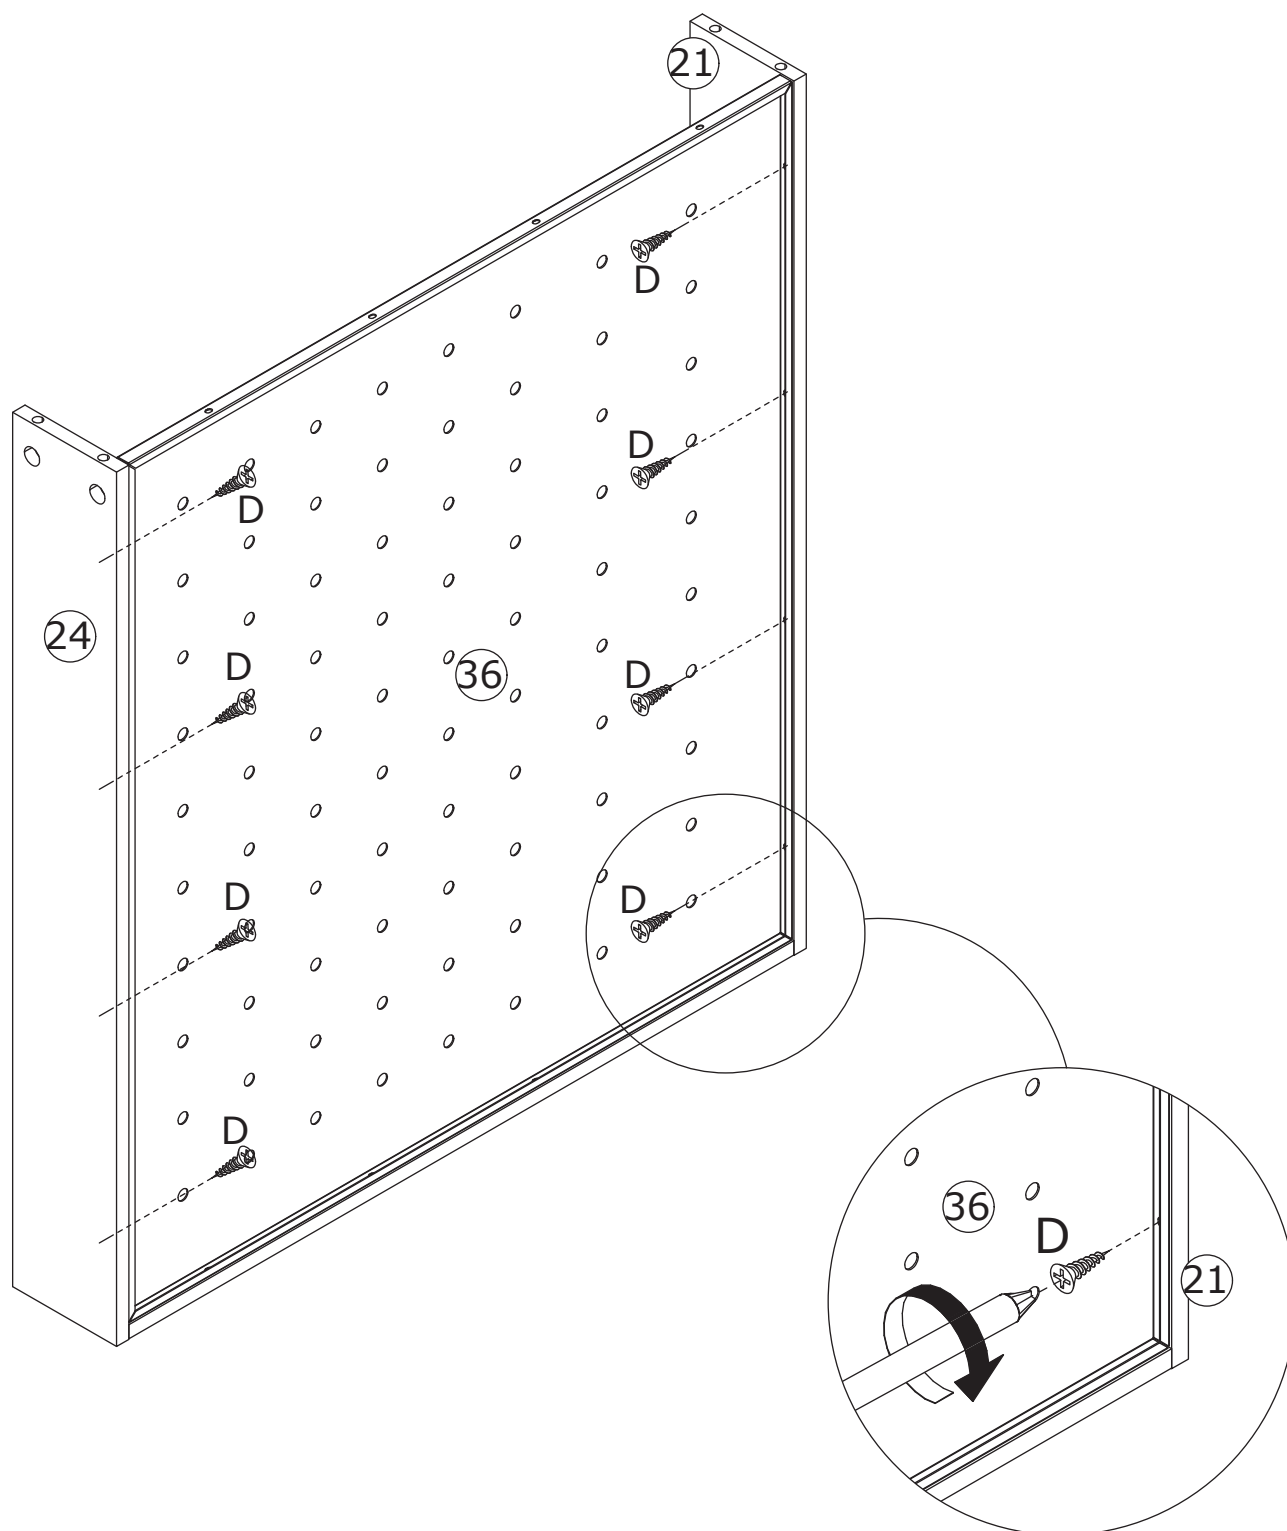


46


B x 4



  Ø15 x 10 mm

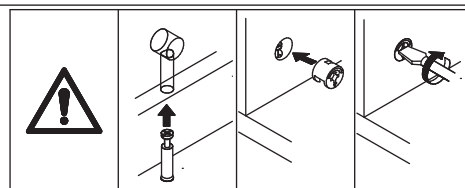

 Connect Plate 21 and 24 to Plate 1, then tighten by turning eccentric wheel (B) clockwise.

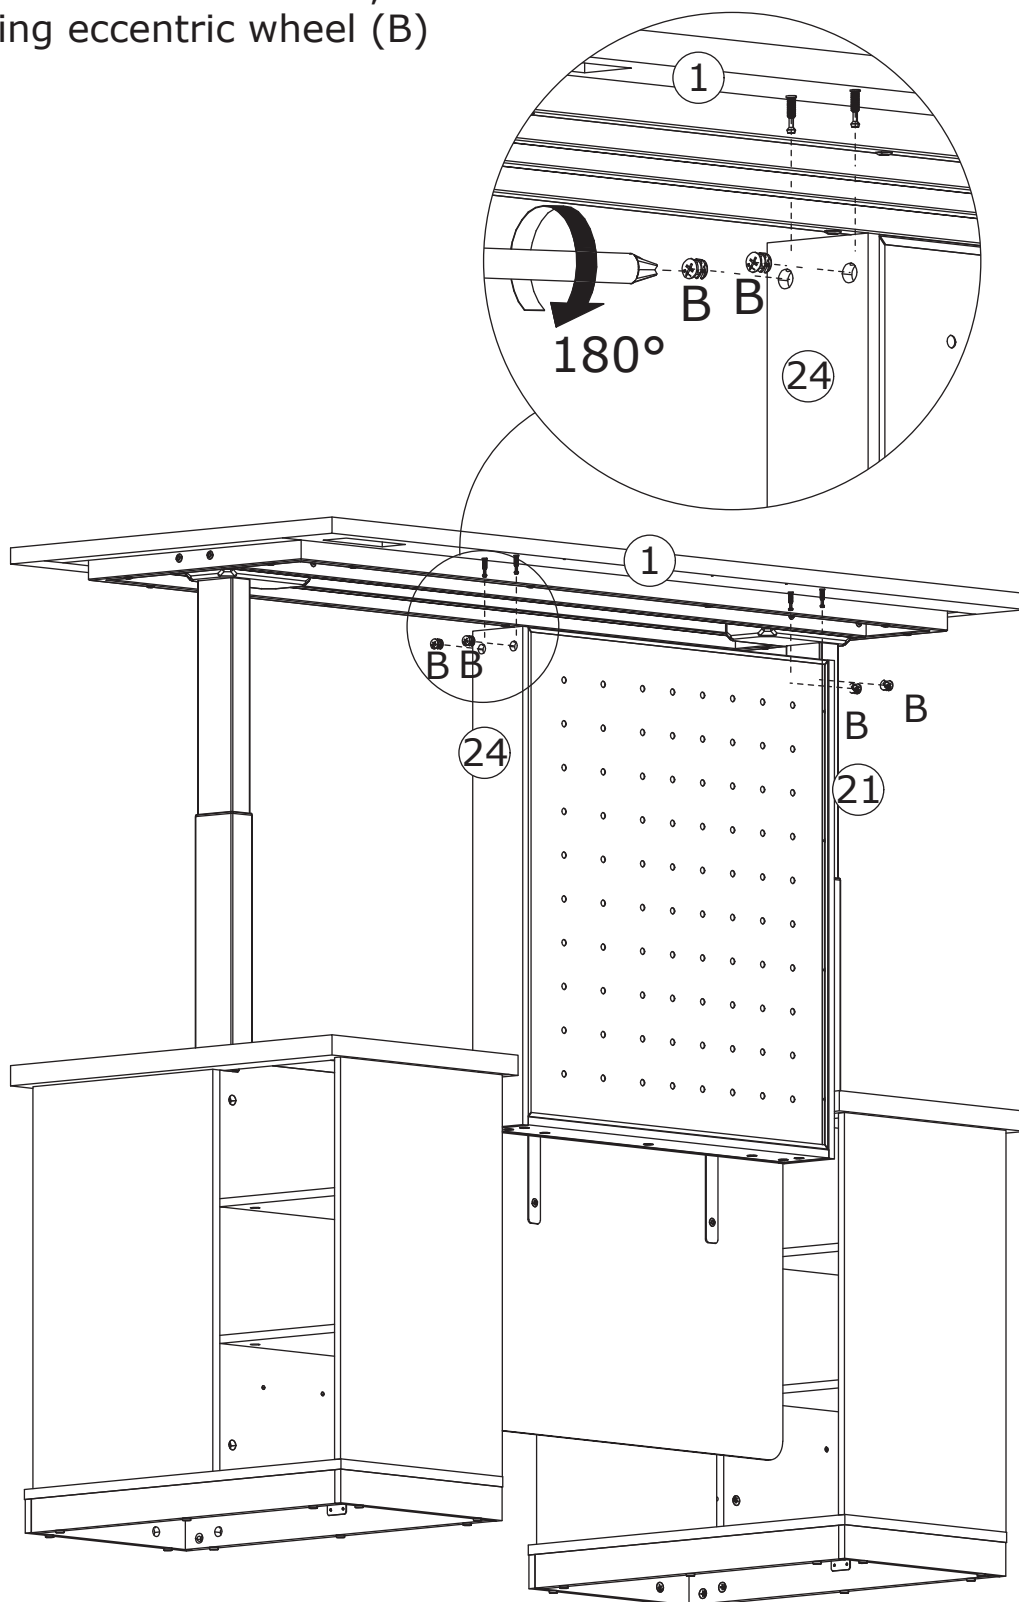


47


D x 4



 M3.5 x 12 mm



 Secure perforated Plate 36 to Plate 1 using screw (D).

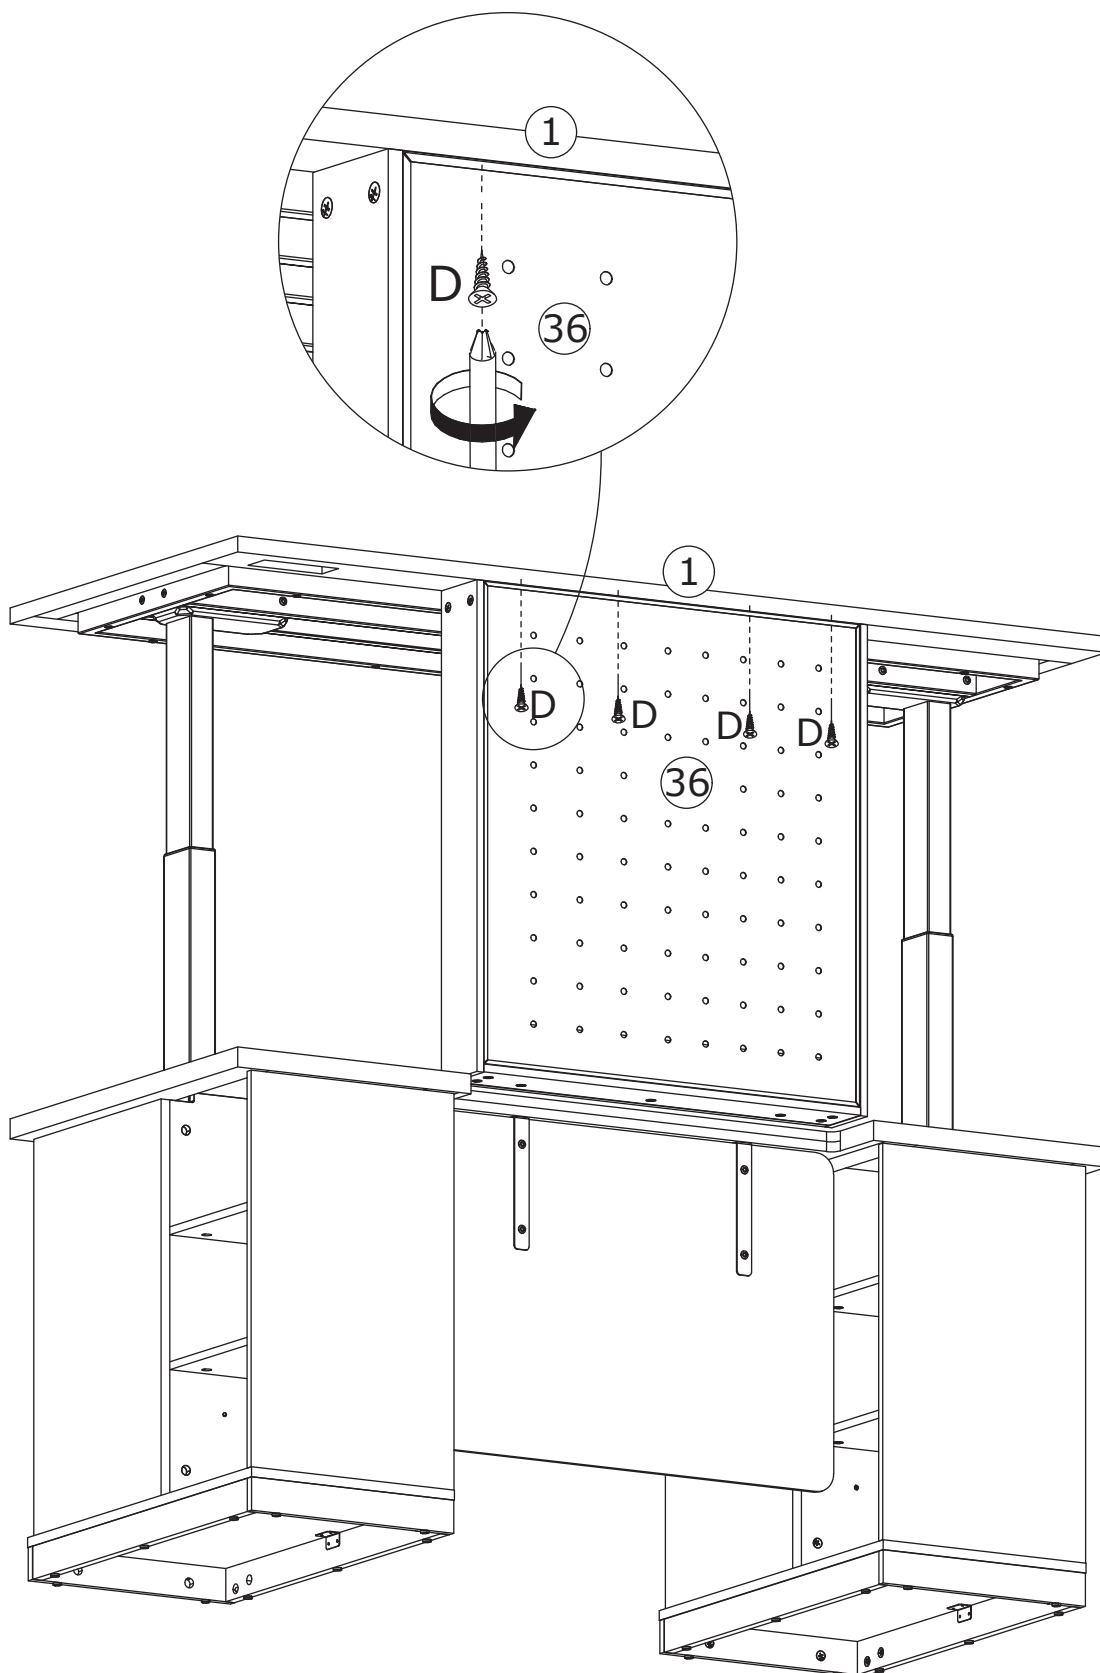

48

D x 2



M3.5 x 12 mm

K x 2

 


M5 x 10 mm

P x 8



R x 5









First, use part (P) to organize the tangled wires.



Then hang Hook (R) on Plate 36.

Next, unplug the switch panel, secure it to Plate 1.

      Press "1" to lower top, and finally secure Part 43 to Plate 1.

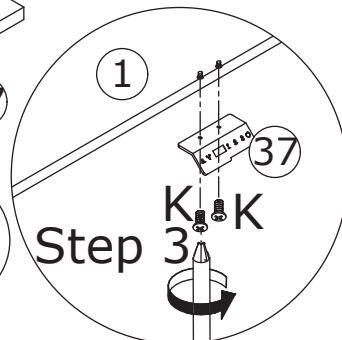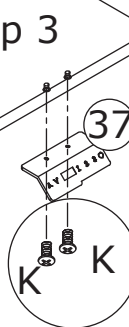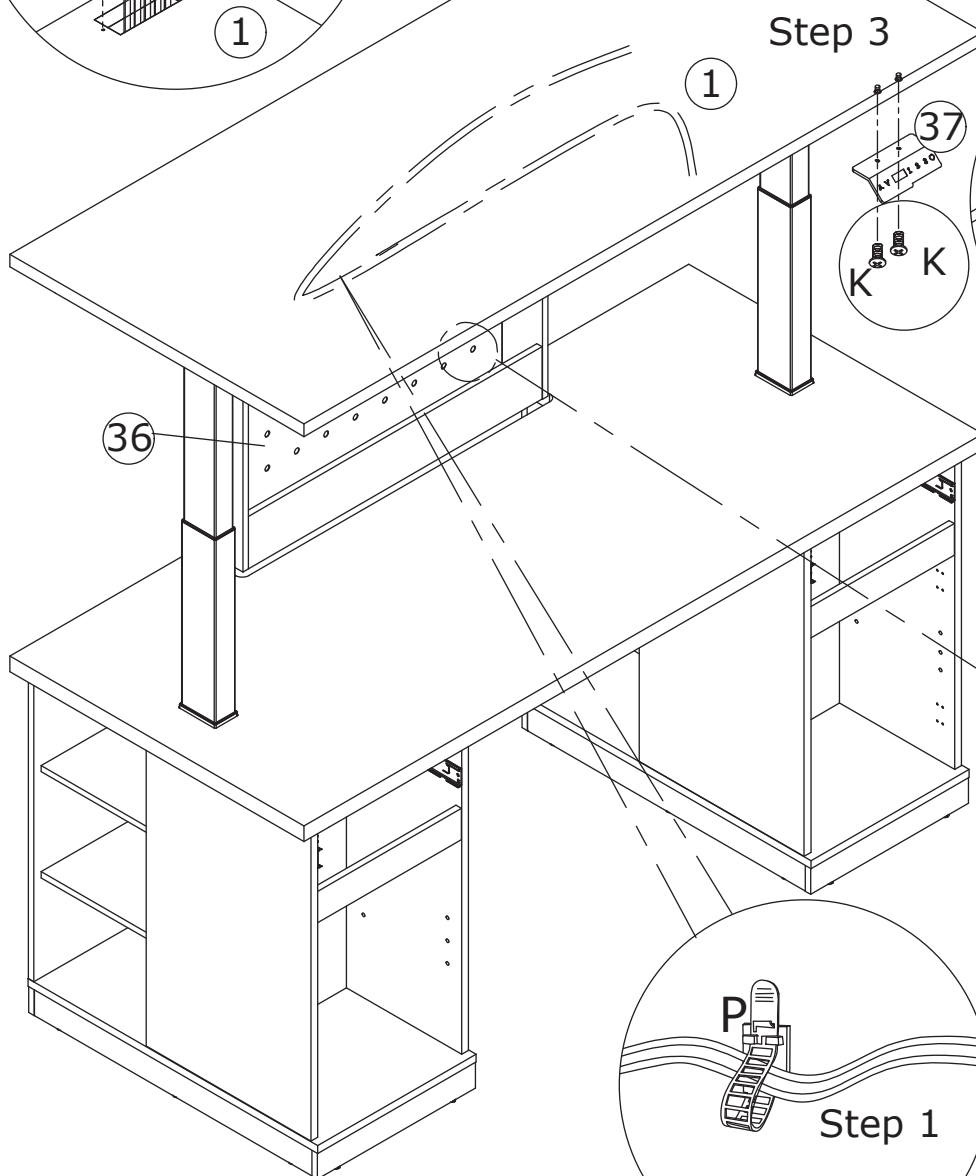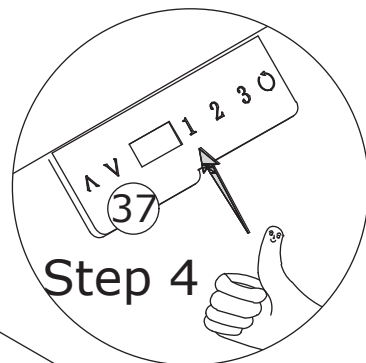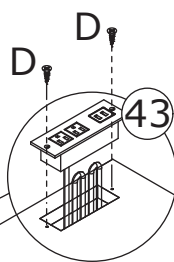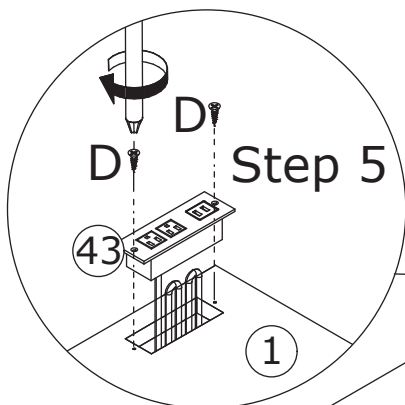

  Unplug the plug, tighten the screws, and then plug it back in.

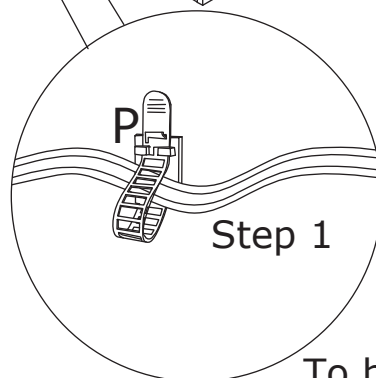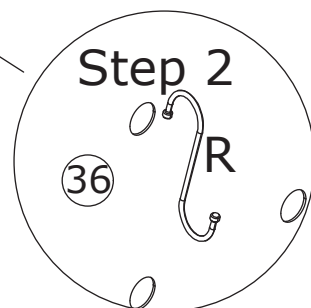

To be neater, tidy up the messy wires.

49

D x 8

 


M3.5 x 12 mm


Q x 4



ZW



 Secure hinge (Q) to Plate 25 and 26 using screw (D).

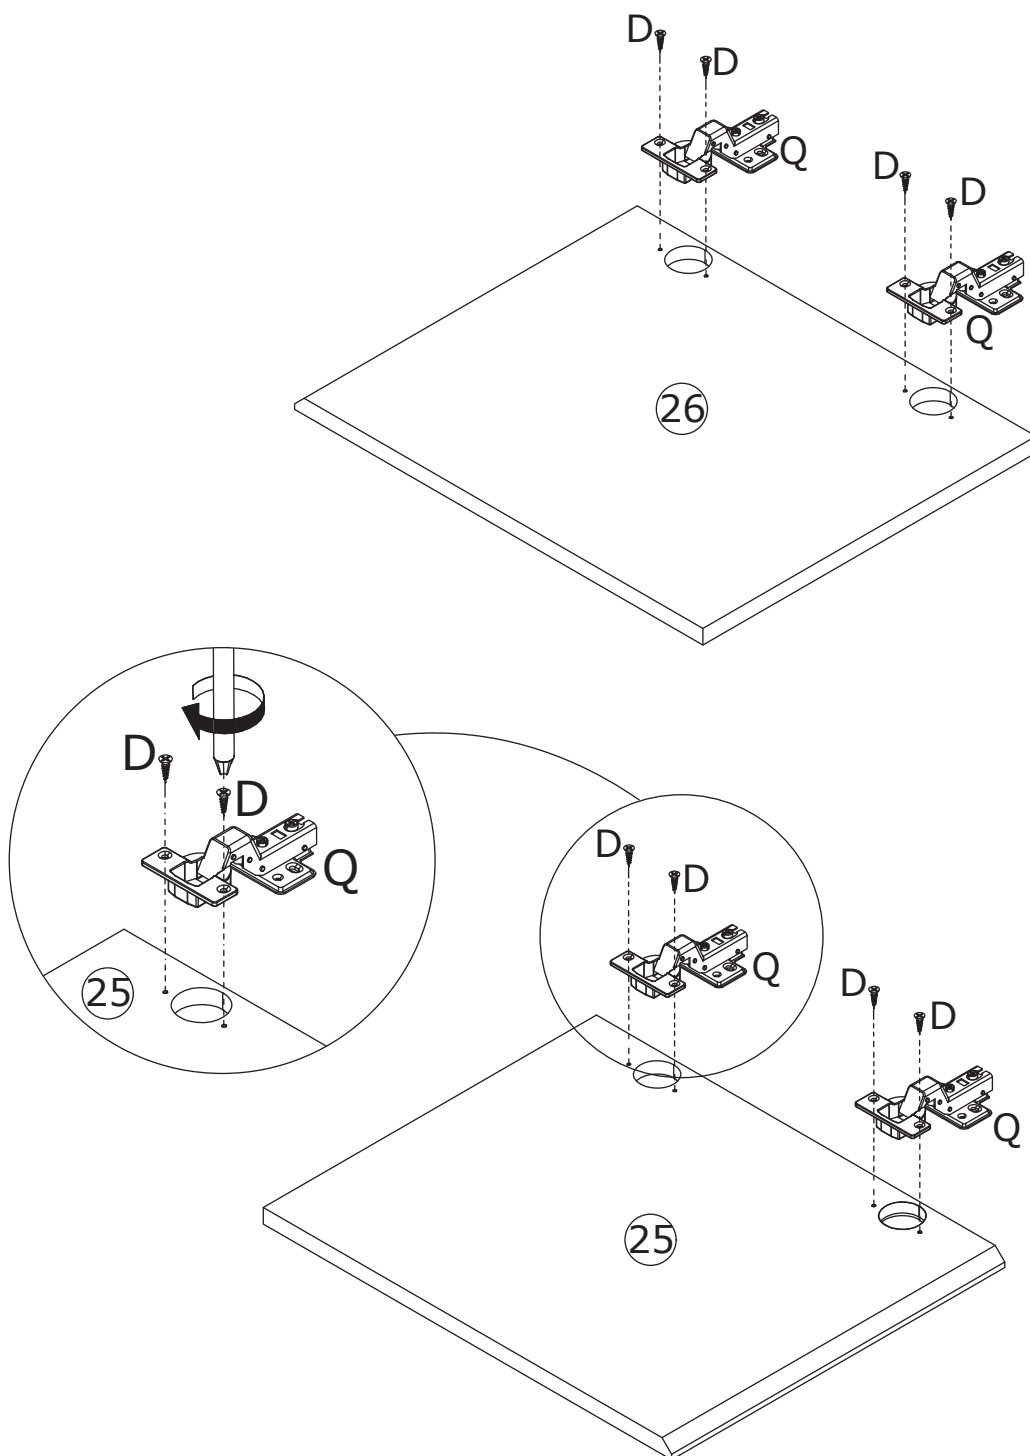


50


D x 16



 M3.5 x 12 mm




 Connect Plate 25 and 26 to Plate 4 and 3, respectively, via hinges using screw (D).

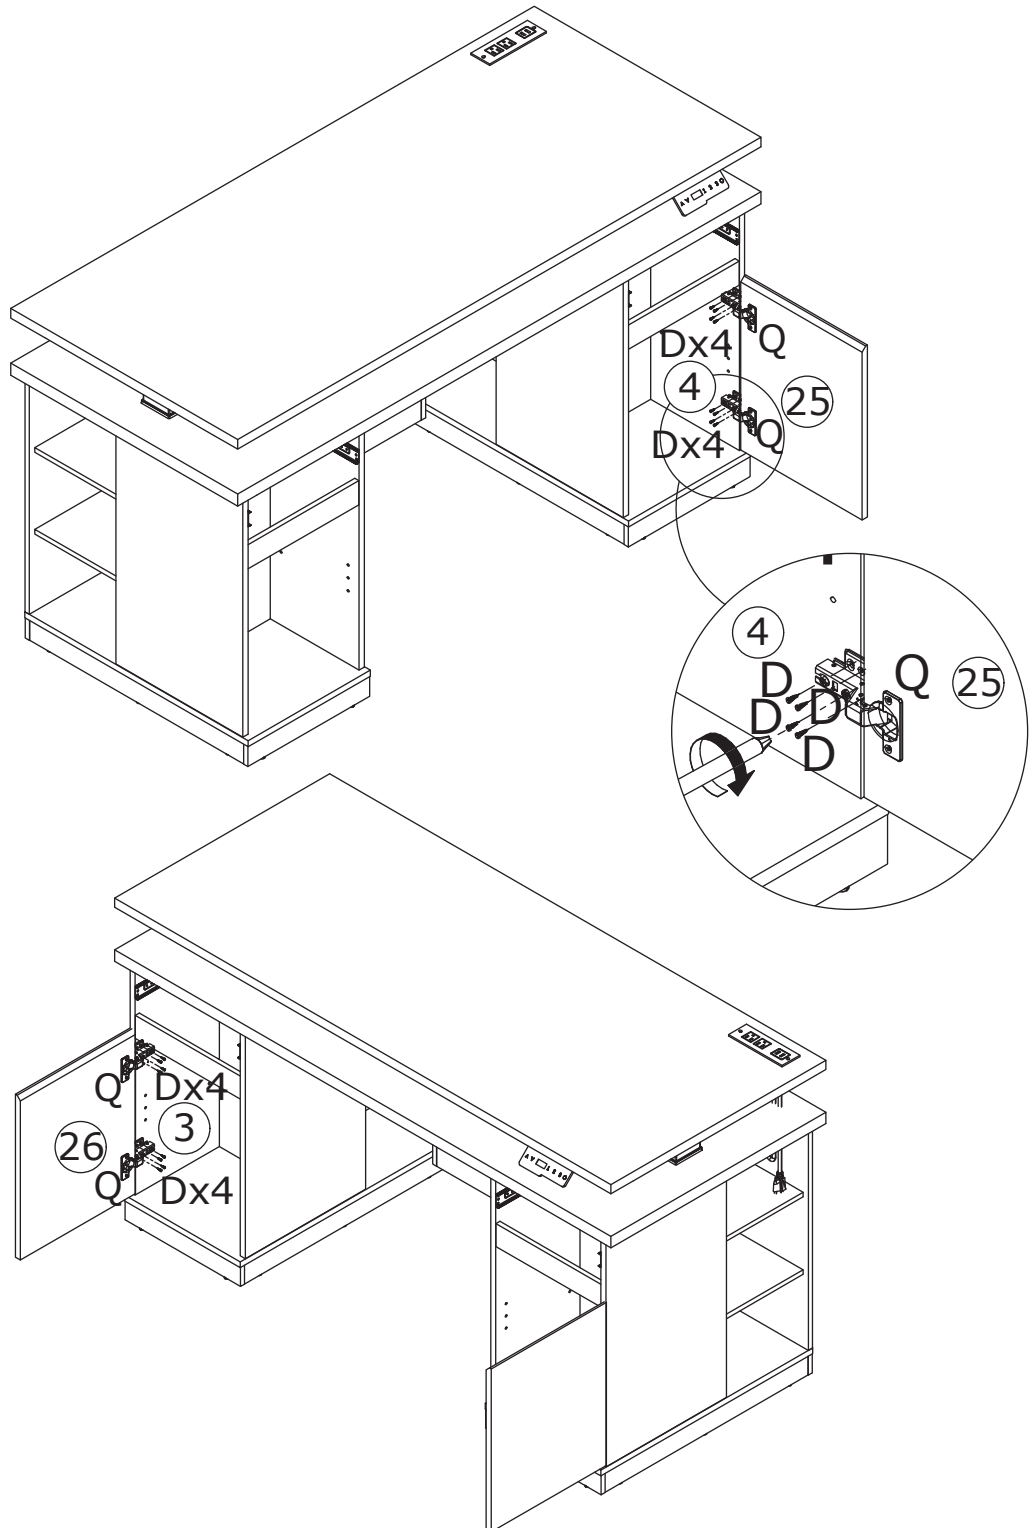


51

 
N x 8

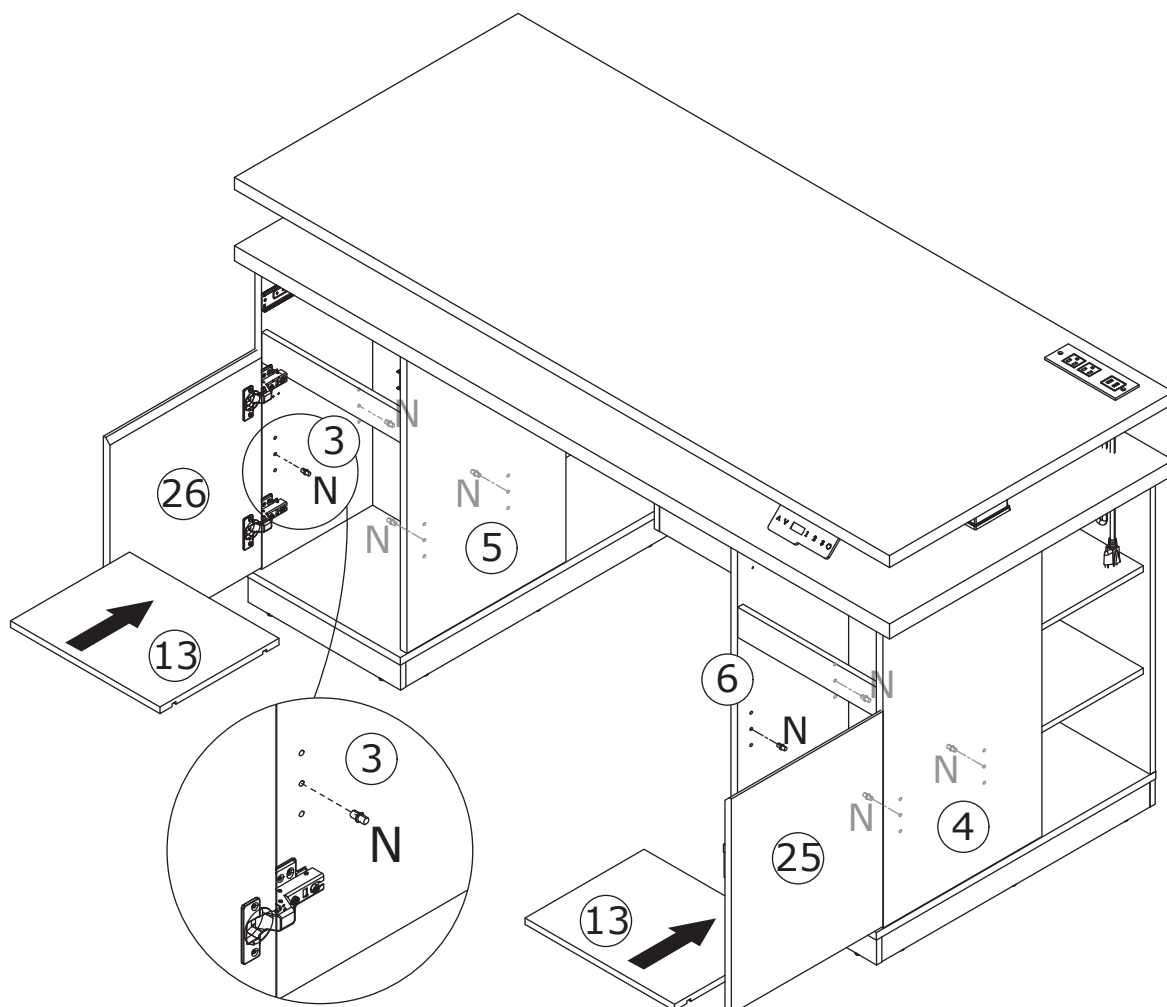

 
1.

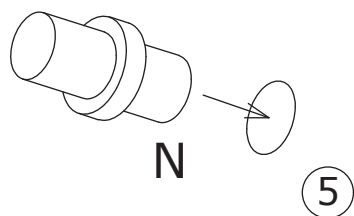

 2.


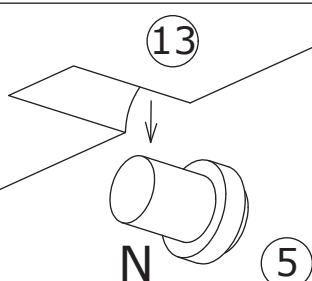


 3.

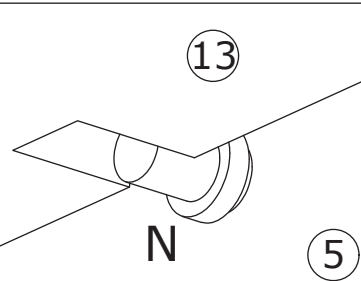


Install Pin (N) onto Plate 3, 4, 5, and 6, and place Plate 13 on.



 
 
52

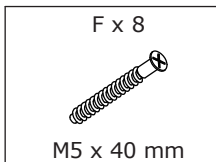

 Secure Plate 27 and 28 to Plate 29 using screw (F).
Insert Plate 30 into the available slots.

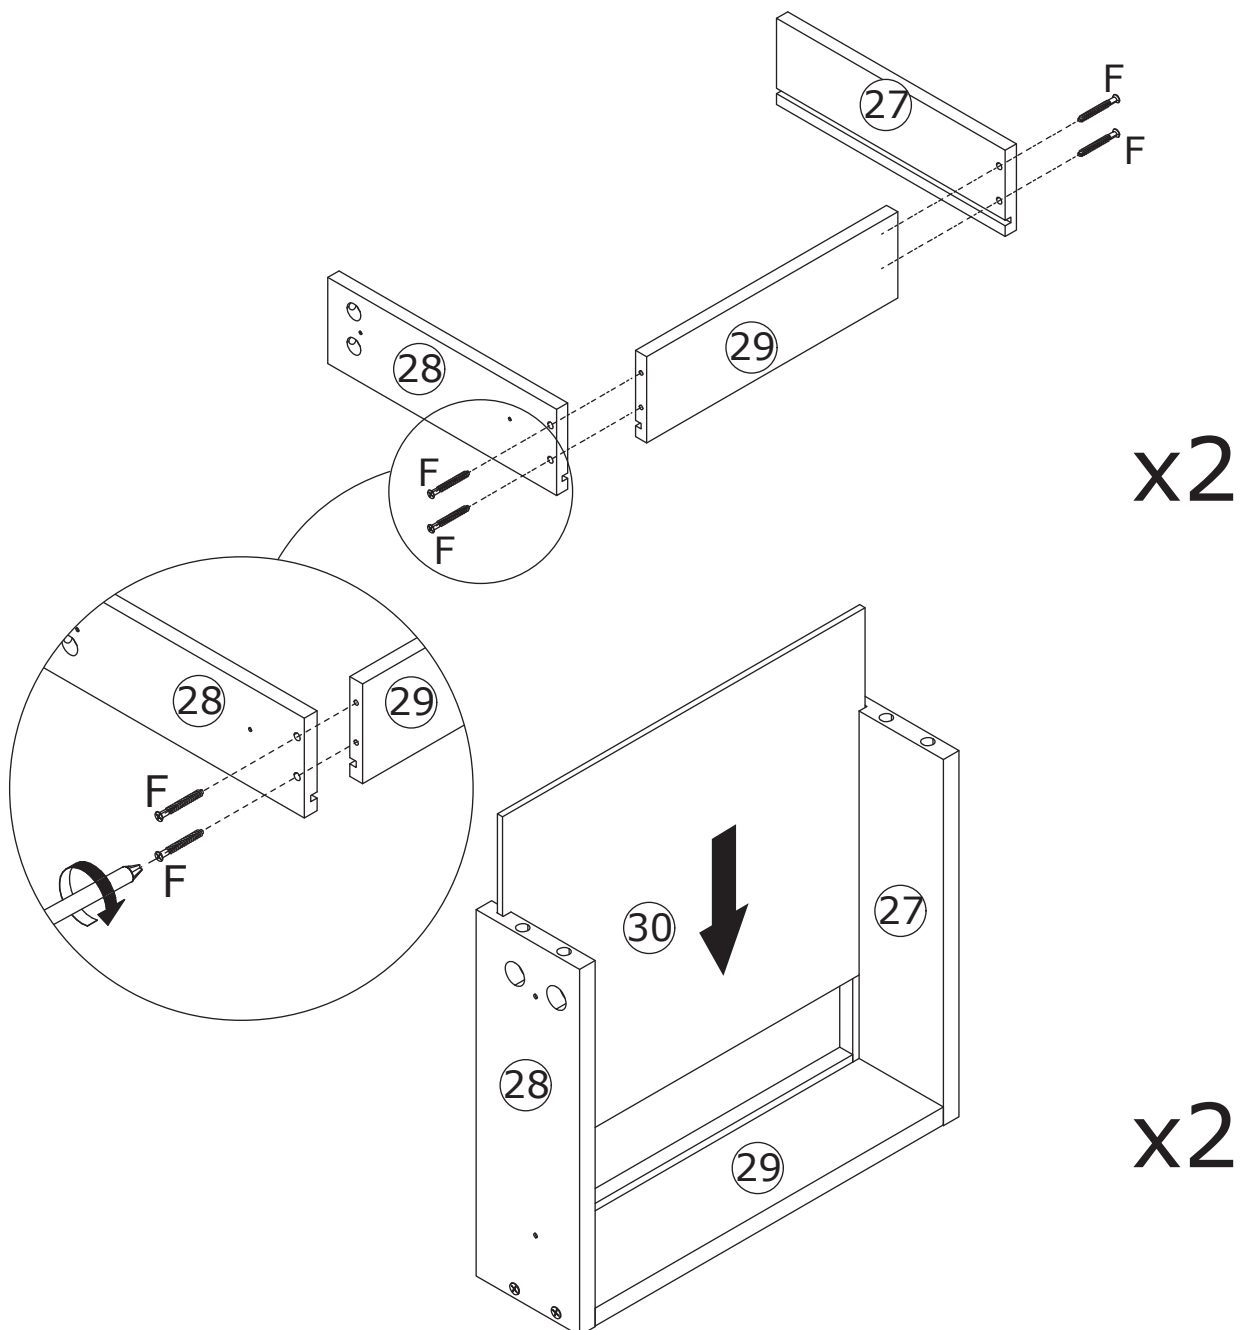


53

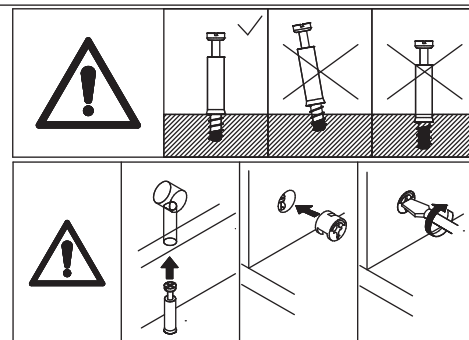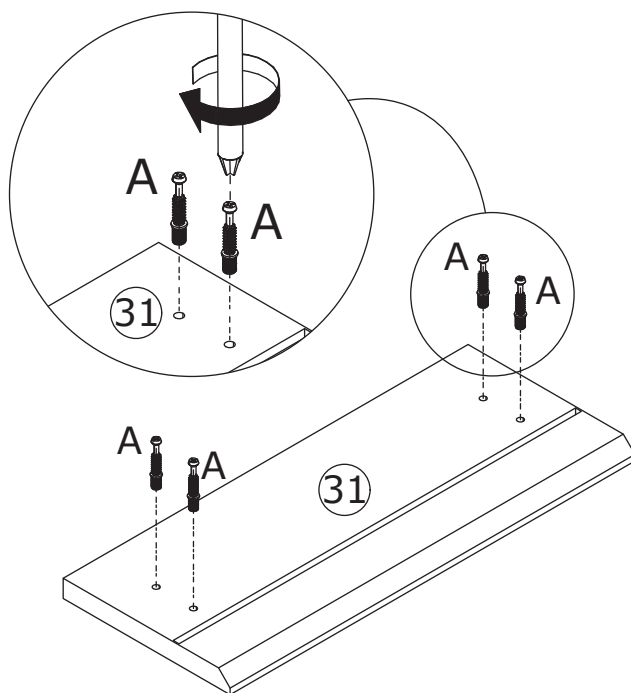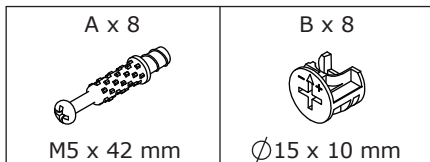    

x2

Screw eccentric rod (A) onto Plate 31.

 Connect Plate 31 to Plate 27 and 28, then tighten by turning eccentric wheel (B) clockwise.

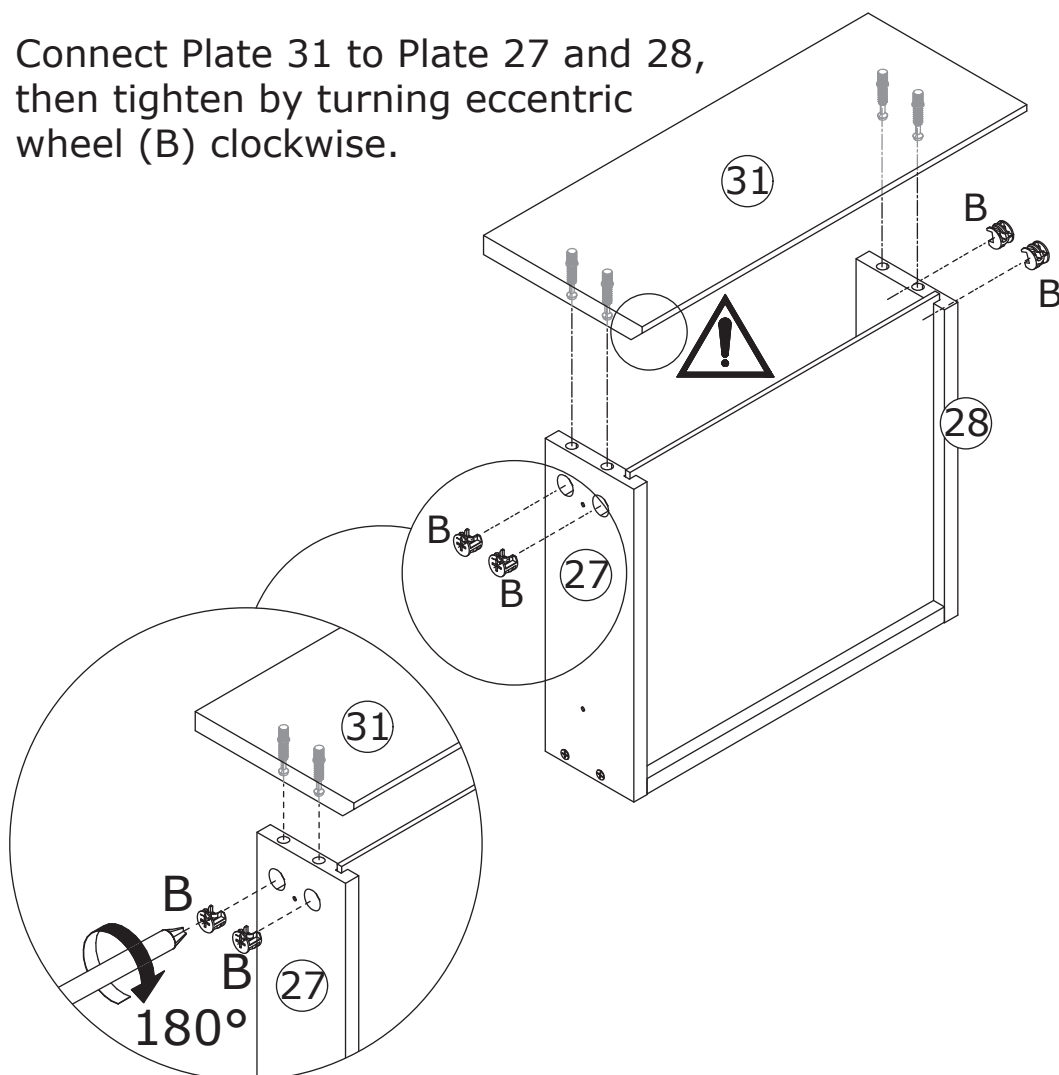



x2

54


D x 8



  M3.5 x 12 mm

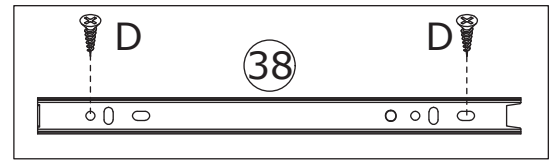


 
Secure Slide Rail 38 to Plate 27 and 28 using screw (D).

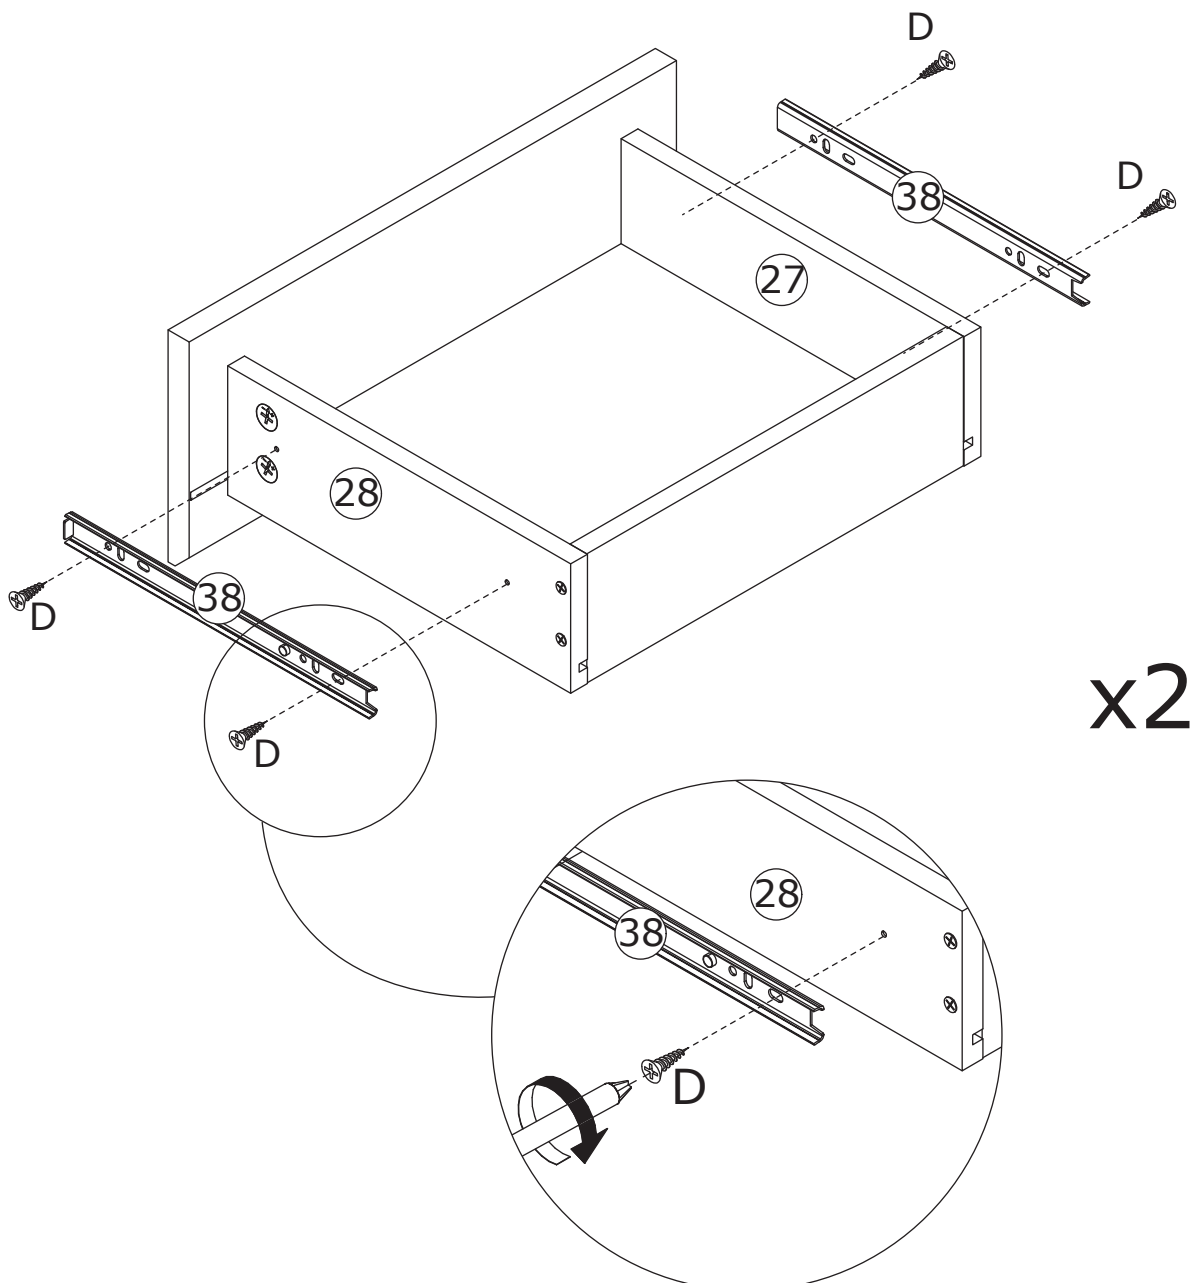

x2

  Insert Power Cord 39 into Part 43 as shown.
Install the drawers as shown.


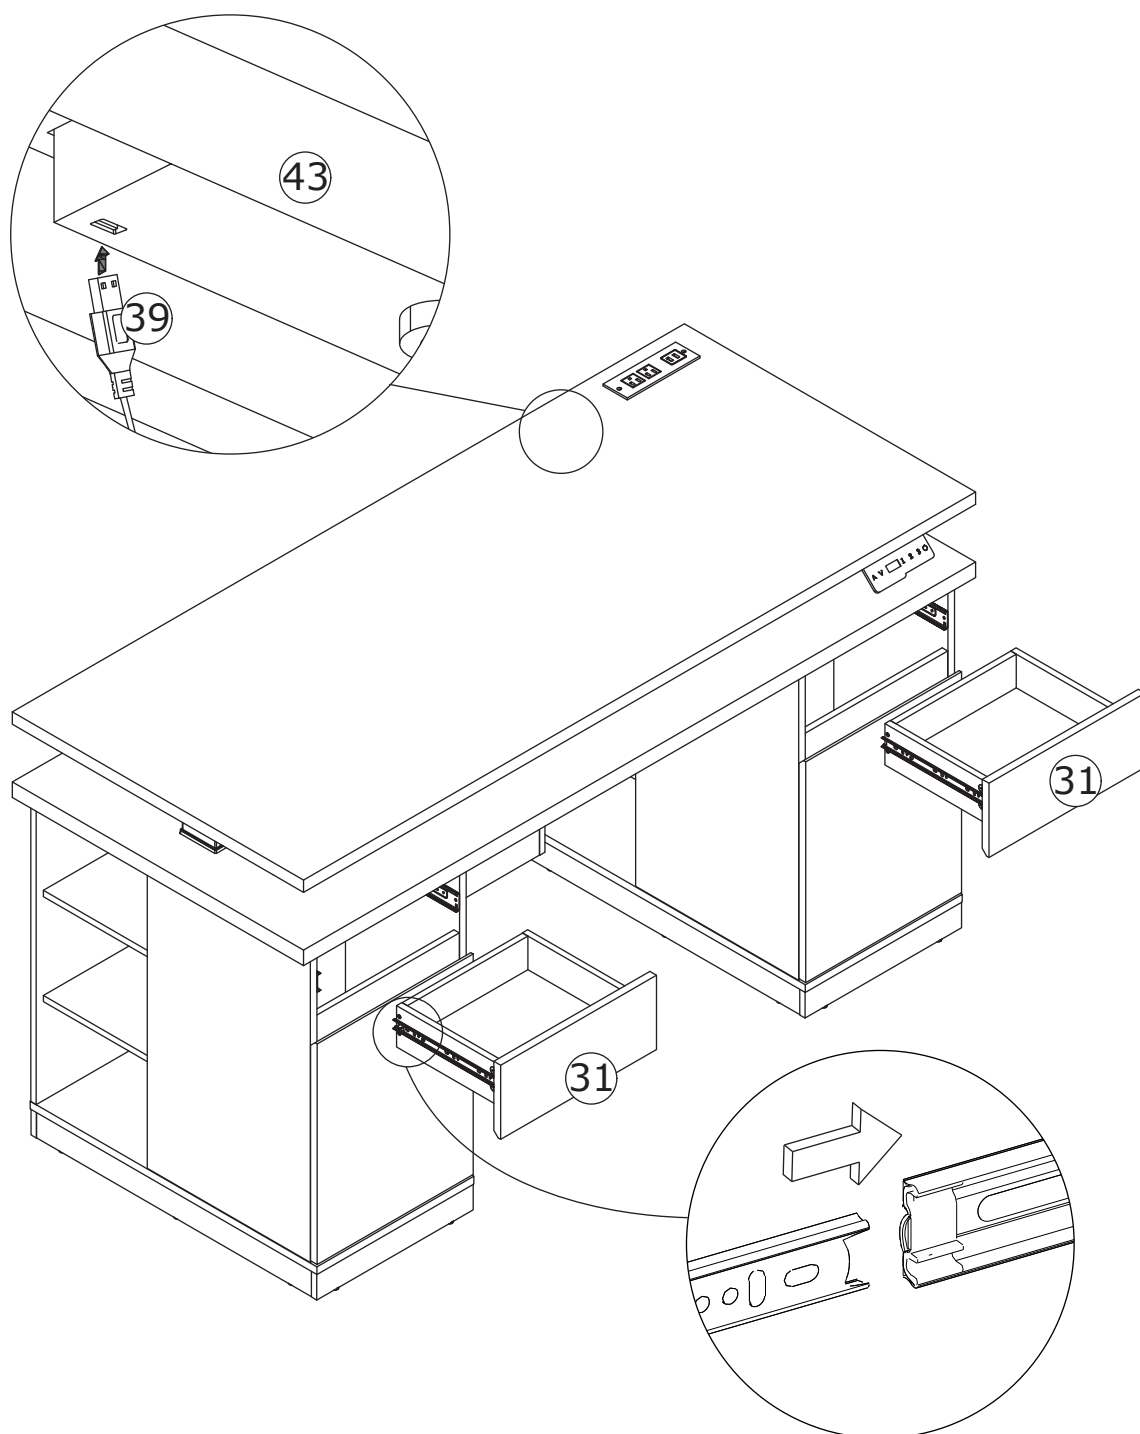





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

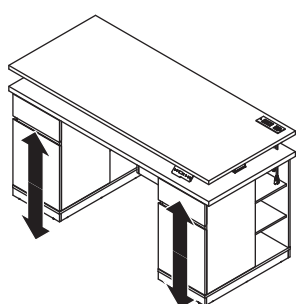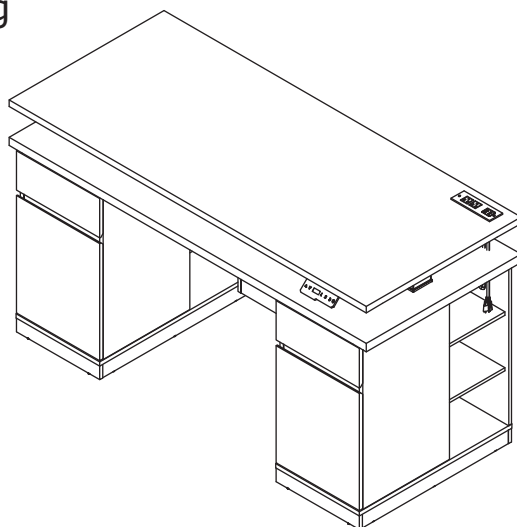



I

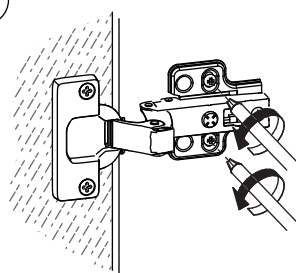 


II

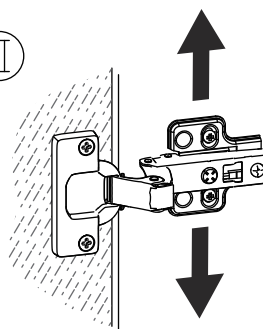 


III

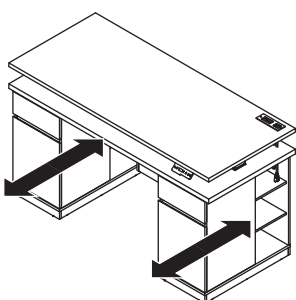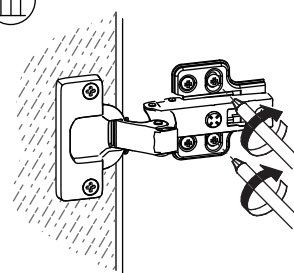  



I

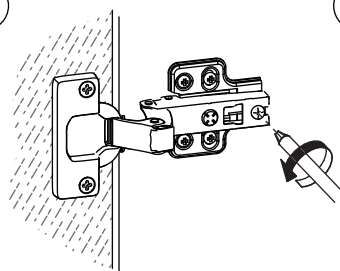 


II

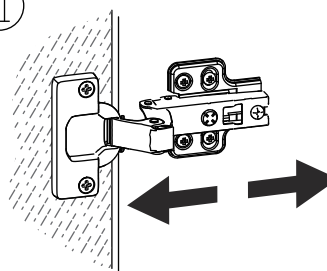 


III

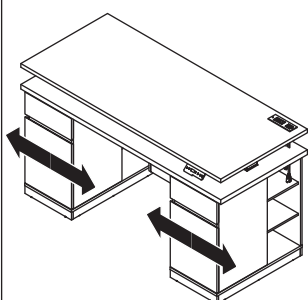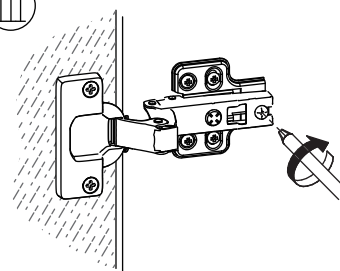  

I

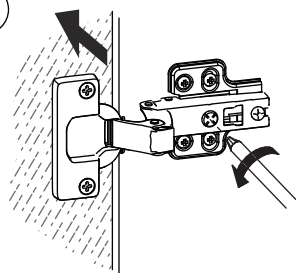 

II

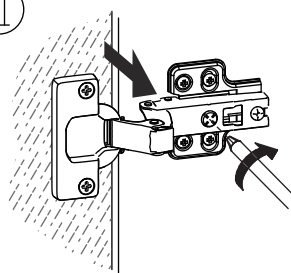 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.