 


Kitchen Cart

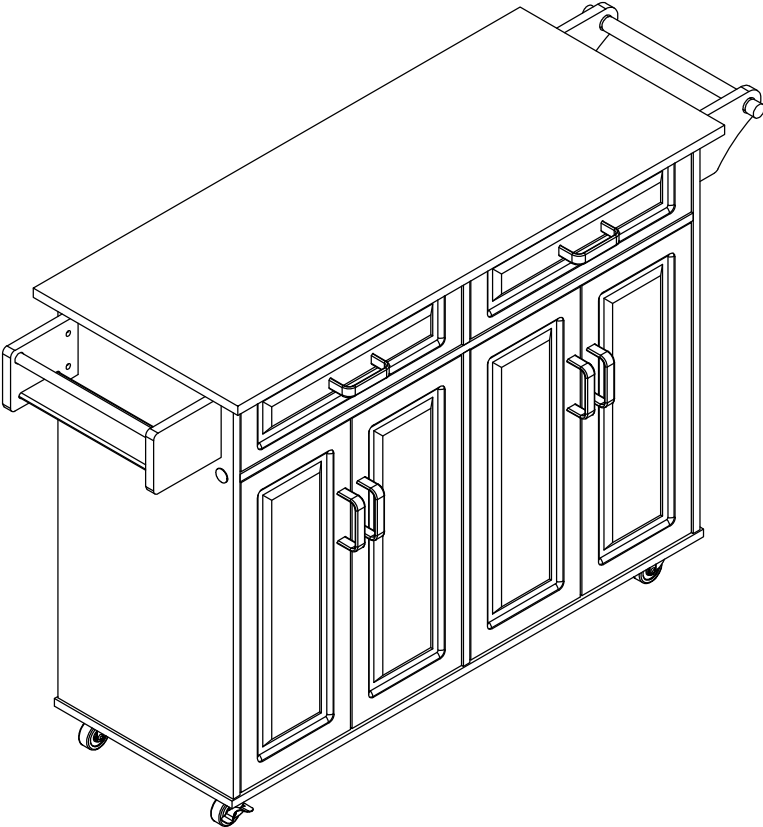

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.


Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.

PART LIST

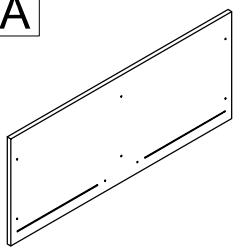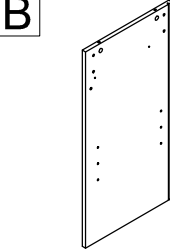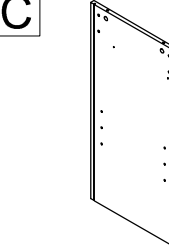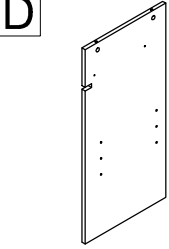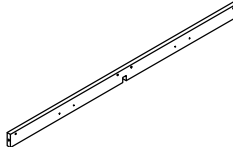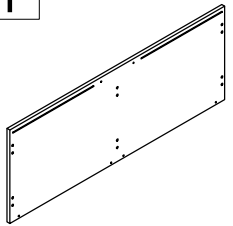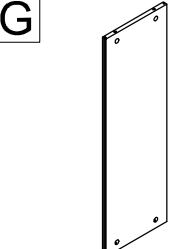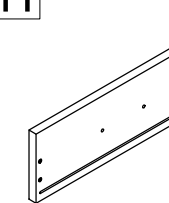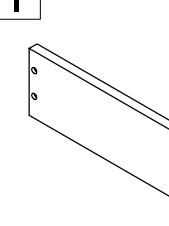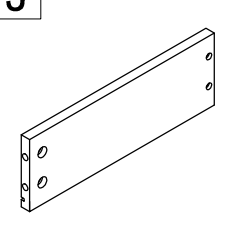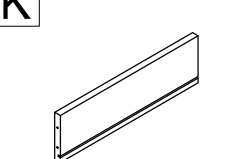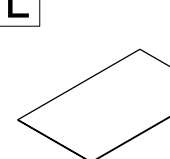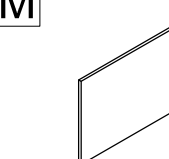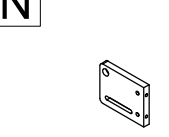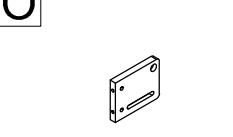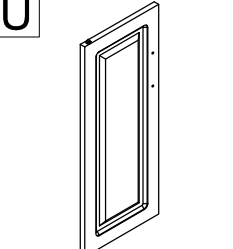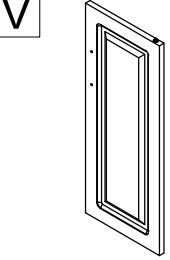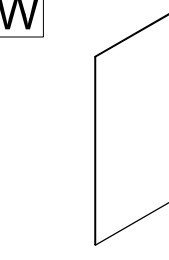				
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Partition Panel 1 PC</p>	<p>Center Rail 1 PC</p>
				
<p>Bottom Panel 1 PC</p>	<p>Back Post 1 PC</p>	<p>Drawer Front Panel 2 PCS</p>	<p>Drawer Left Panel 2 PCS</p>	<p>Drawer Right Panel 2 PCS</p>
				
<p>Drawer Back Panel 2 PCS</p>	<p>Drawer Bottom Panel 2 PCS</p>	<p>Adjustable Shelf 2 PCS</p>	<p>Spice Rack Left Support 1 PC</p>	<p>Spice Rack Right Support 1 PC</p>
				
<p>Spice Rack Bottom Panel 1 PC</p>	<p>Spice Rack Bar 1 PC</p>	<p>Towel Rack Left Support 1 PC</p>	<p>Towel Rack Right Support 1 PC</p>	<p>Towel Rod 1 PC</p>
				
<p>Left Door 2 PCS</p>	<p>Right Door 2 PCS</p>	<p>Back Panel 2 PCS</p>		

 
ASSEMBLY OVERVIEW

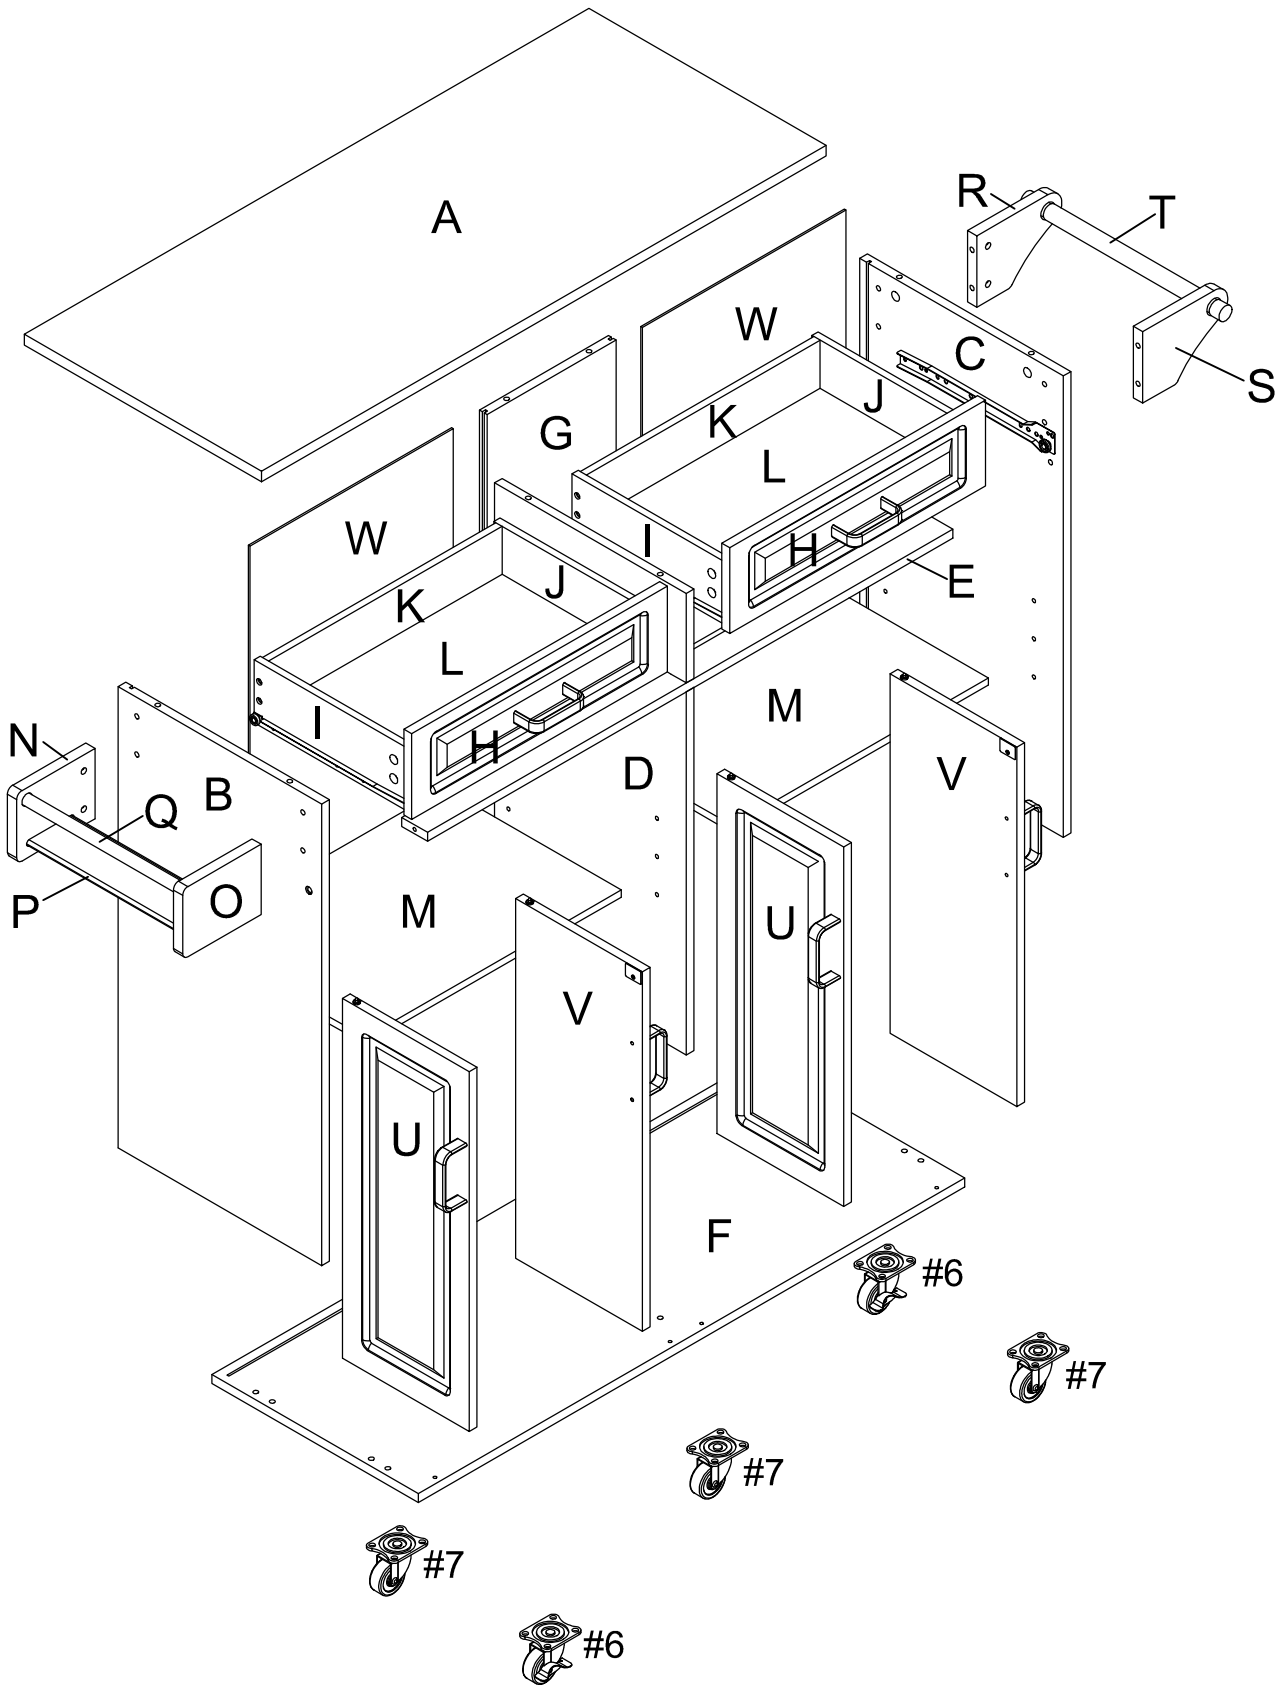

HARDWARE LIST

<p>#1</p>  <p>Ø7*38mm</p>	<p>#2</p>  <p>Ø8*30mm</p>	<p>#3</p>  <p>Ø8.5*25mm</p>	<p>#4</p>  <p>Ø6*35mm</p>	<p>#5</p>  <p>Ø15*9mm</p>
Screw	Wood Dowel	Screw	Cam-bolt	Cam-lock
8 PCS (Extra 2)	6PCS (Extra 2)	8PCS (Extra 2)	18PCS (Extra 6)	18PCS(Extra 6)
<p>#6</p>  <p>3"</p>	<p>#7</p>  <p>3"</p>	<p>#8</p>  <p>Ø4.5*13mm</p>	<p>#9</p> 	<p>#10</p>  <p>Ø3.5*15mm</p>
Caster With Lock	Caster	Screw	Back Bracket	Screw
2 PCS	3 PCS	20 PCS (Extra 4)	12 PCS	16 PCS (Extra 4)
<p>#11</p>  <p>102*25*20mm</p>	<p>#12</p>  <p>M4*20mm</p>	<p>#13</p>  <p>M6*Ø9.5*10mm</p>	<p>#14</p>  <p>M6*45mm</p>	<p>#15</p>  <p>Ø3.5*12mm</p>
Handle	Round Head Bolt	Barrel Nut	Bolt	Screw
6 PCS	12 PCS (Extra 2)	8 PCS (Extra 2)	8 PCS (Extra 2)	24 PCS (Extra 8)
<p>#16</p>  <p>Ø6.5mm</p>	<p>#17</p>  <p>70*17*13mm</p>	<p>#18</p>  <p>30*22*1mm</p>	<p>#19</p>  <p>4mm</p>	<p>#20</p>  <p>12"</p>
Shelf Holder	Door Magnet	Door Small Plate	Allen Wrench	Left Drawer Slide Set (A)
8 PCS (Extra 2)	2 PCS	4 PCS	1 PC	2 PCS
<p>#21</p>  <p>12"</p>	<p>#22</p>  <p>12"</p>	<p>#23</p>  <p>12"</p>	<p>#24</p>  <p>Ø20mm</p>	
Left Drawer Slide Set (B)	Right Drawer Slide Set (A)	Right Drawer Slide Set (B)	Holes Cover	Phillips Screwdriver
2 PCS	2 PCS	2 PCS	2 PCS (Extra 1)	1 PC

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

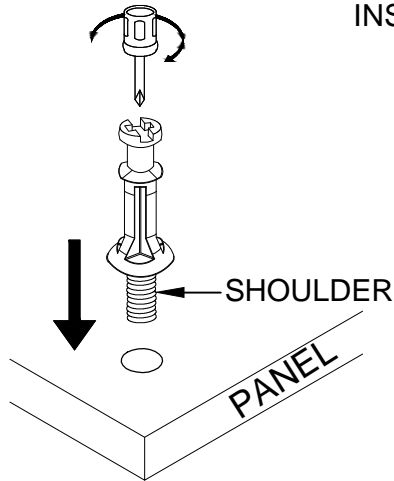 

 Place Cam-bolt on pre-drilled hole and screw in vertically

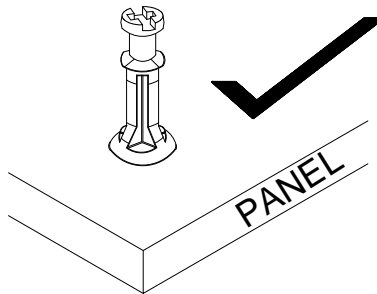

 
Shoulder is flushed (on the same level) with the panel.

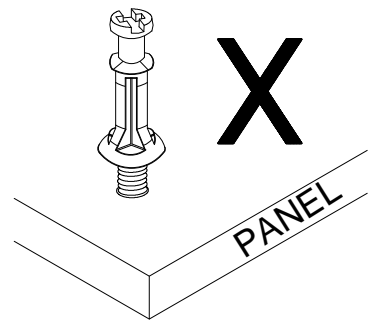

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

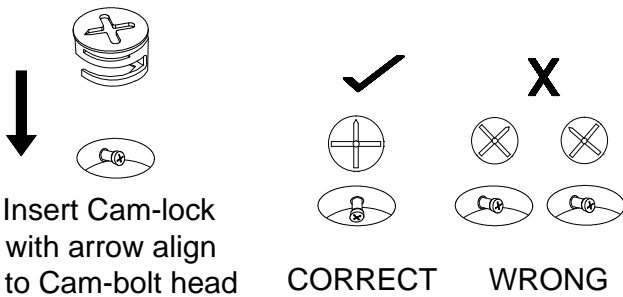


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK








Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

  
 
Step 1.

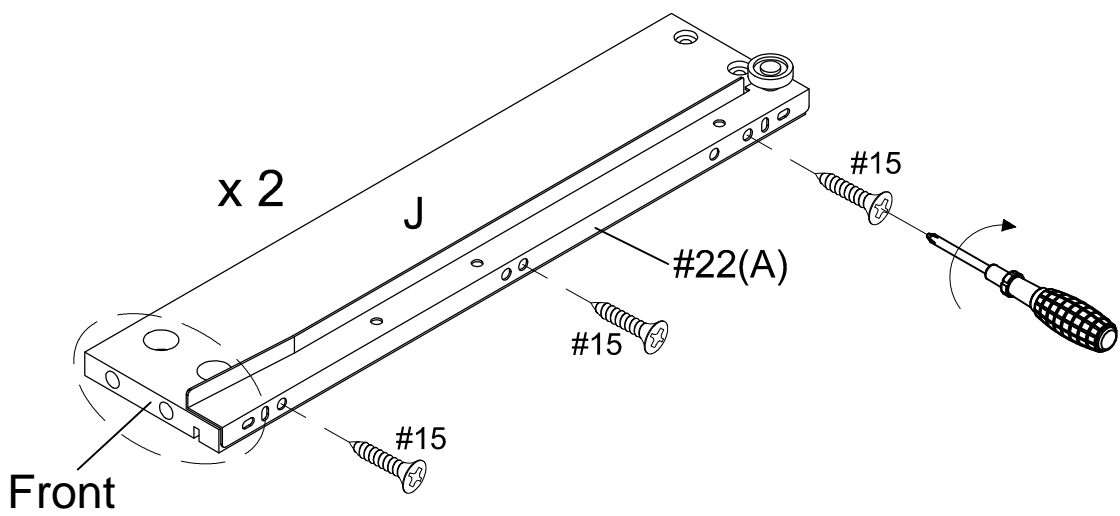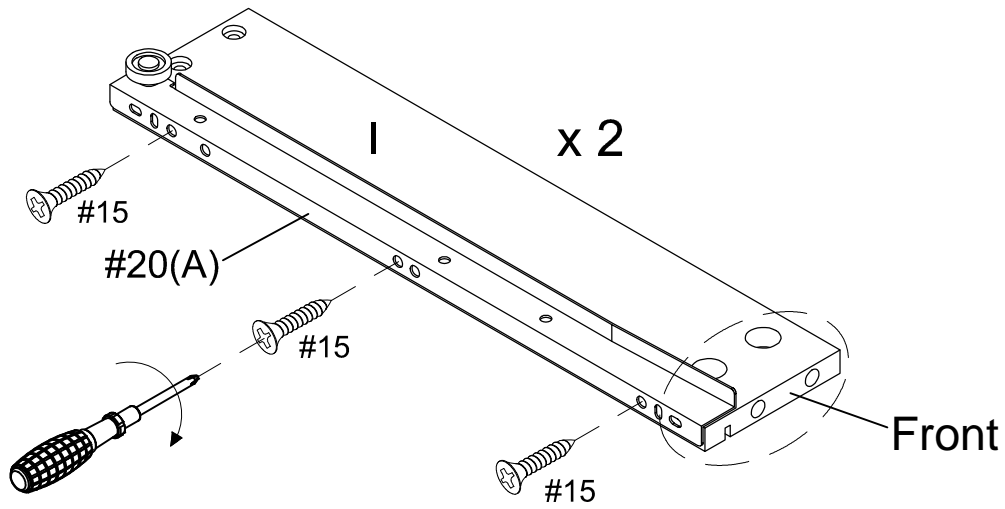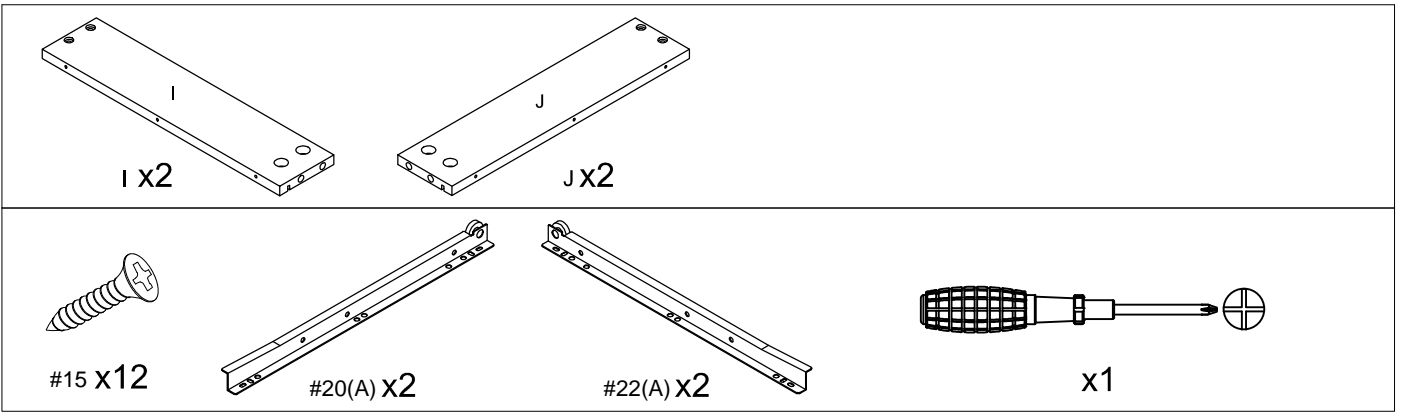

    
 
Step 2.

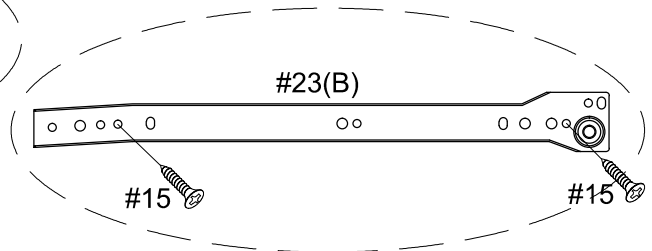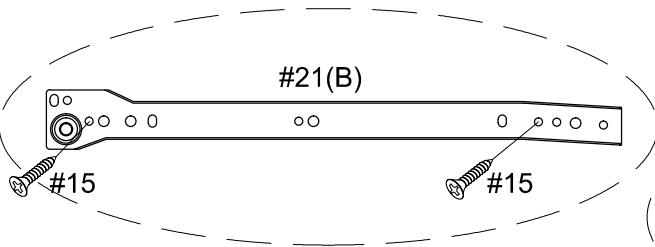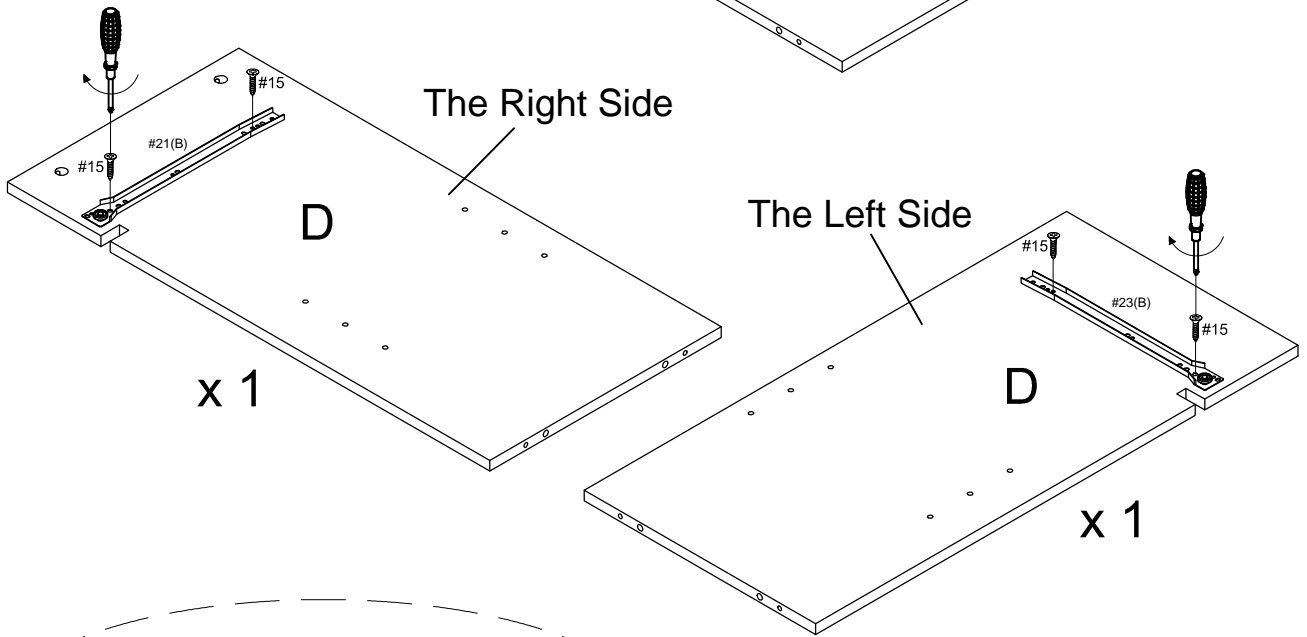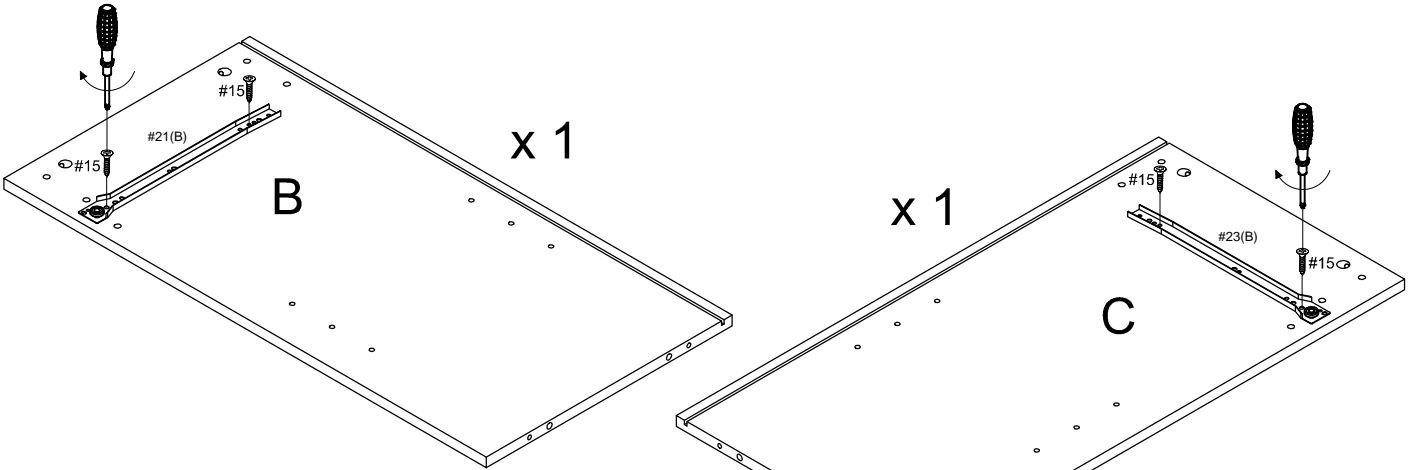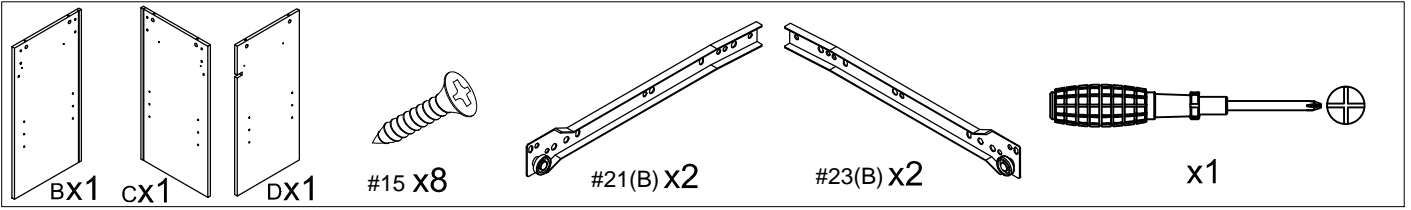

  
Step 3.

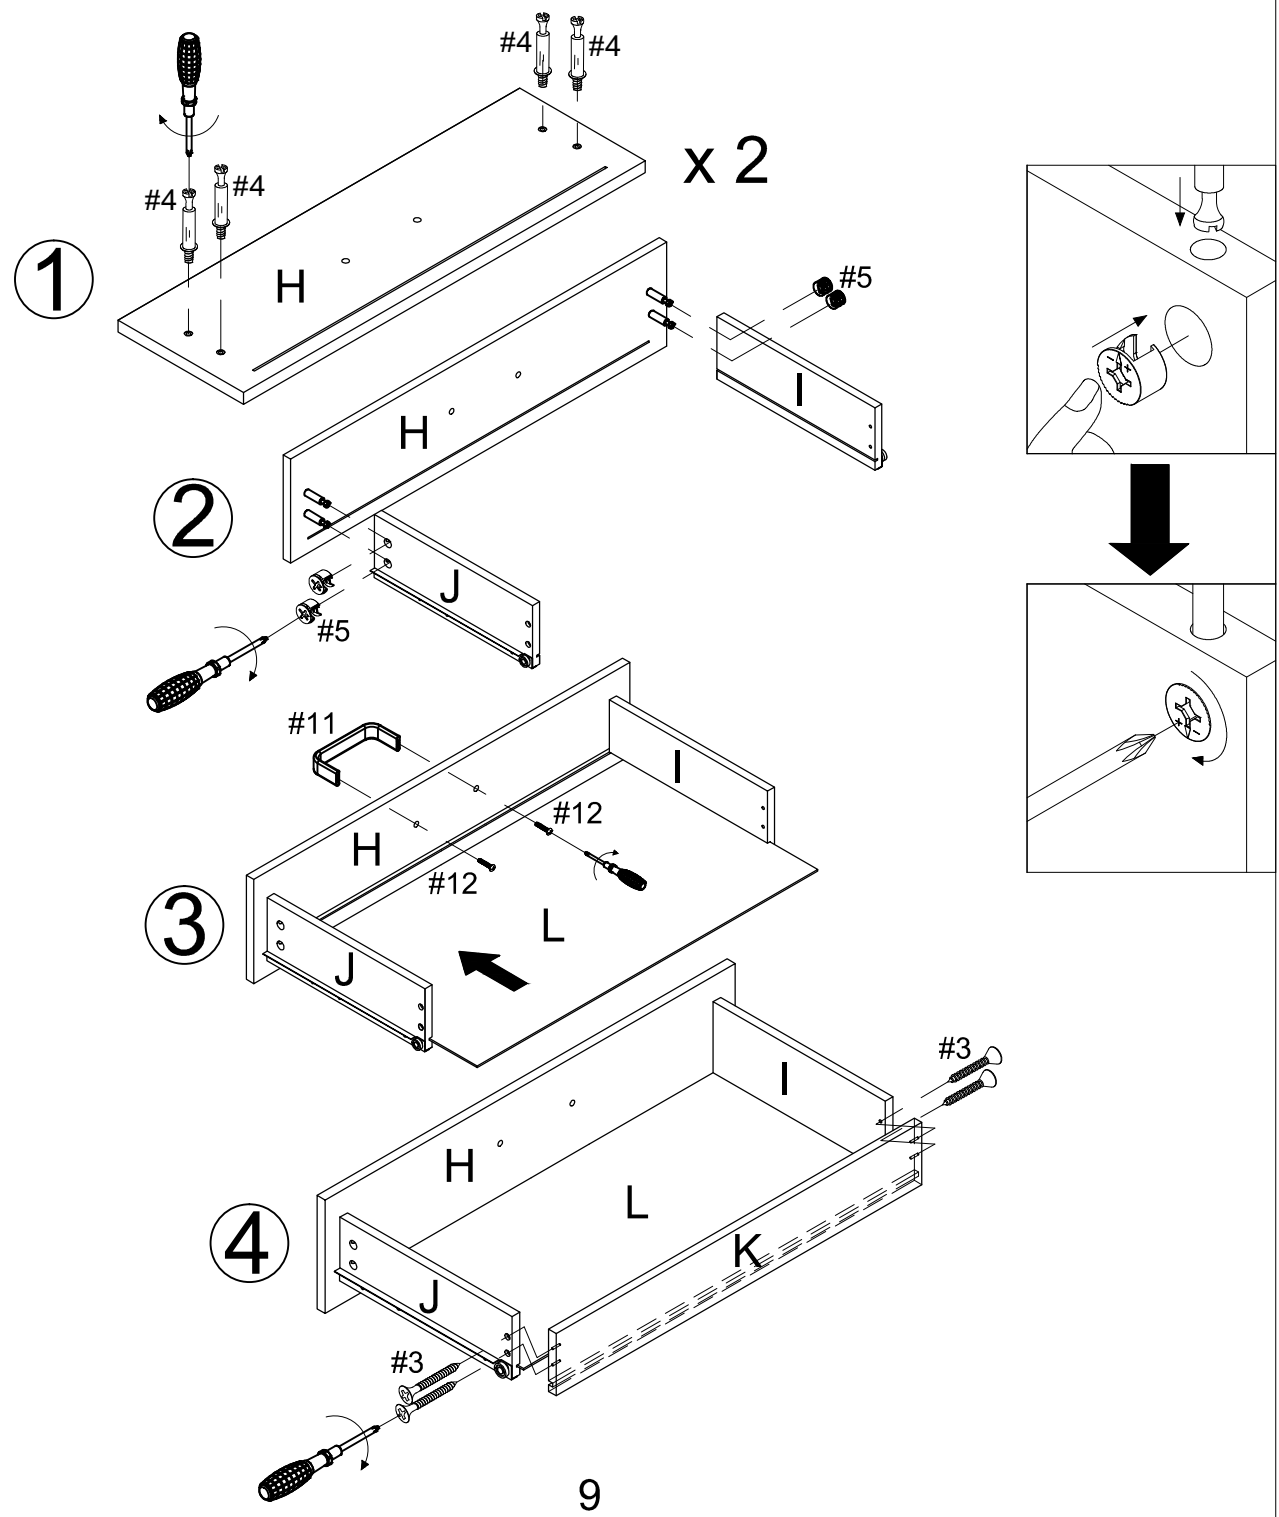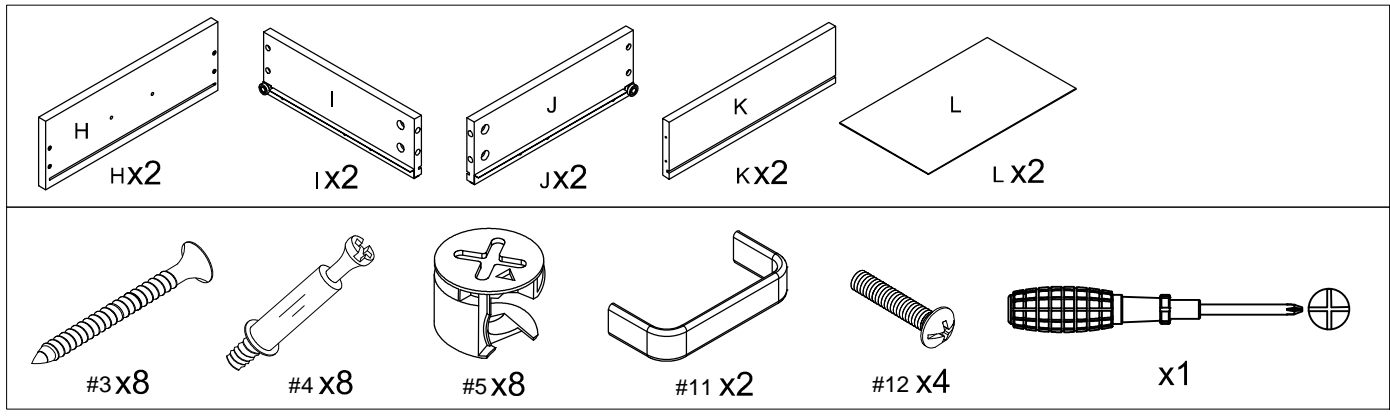

 
 
Step 4.

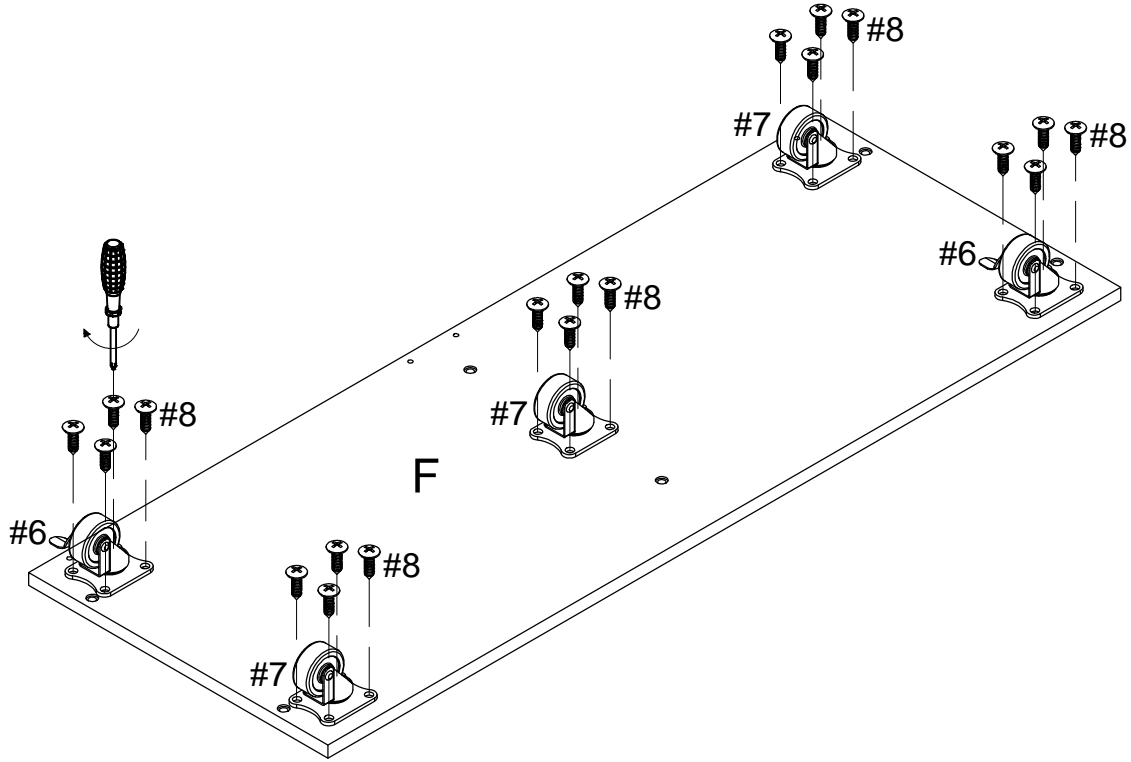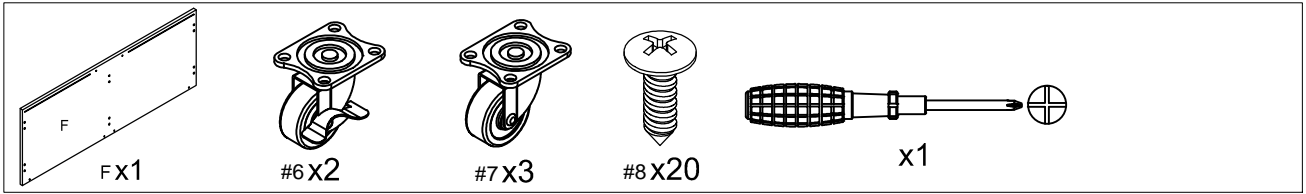


 
Step 5.

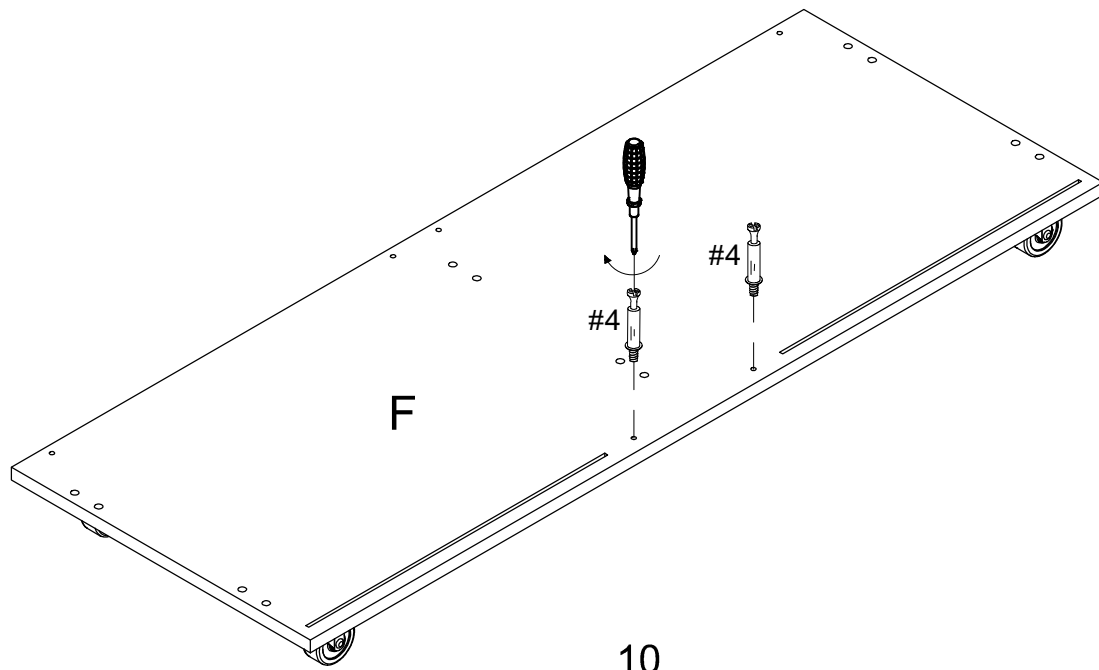

 
 
Step 6.

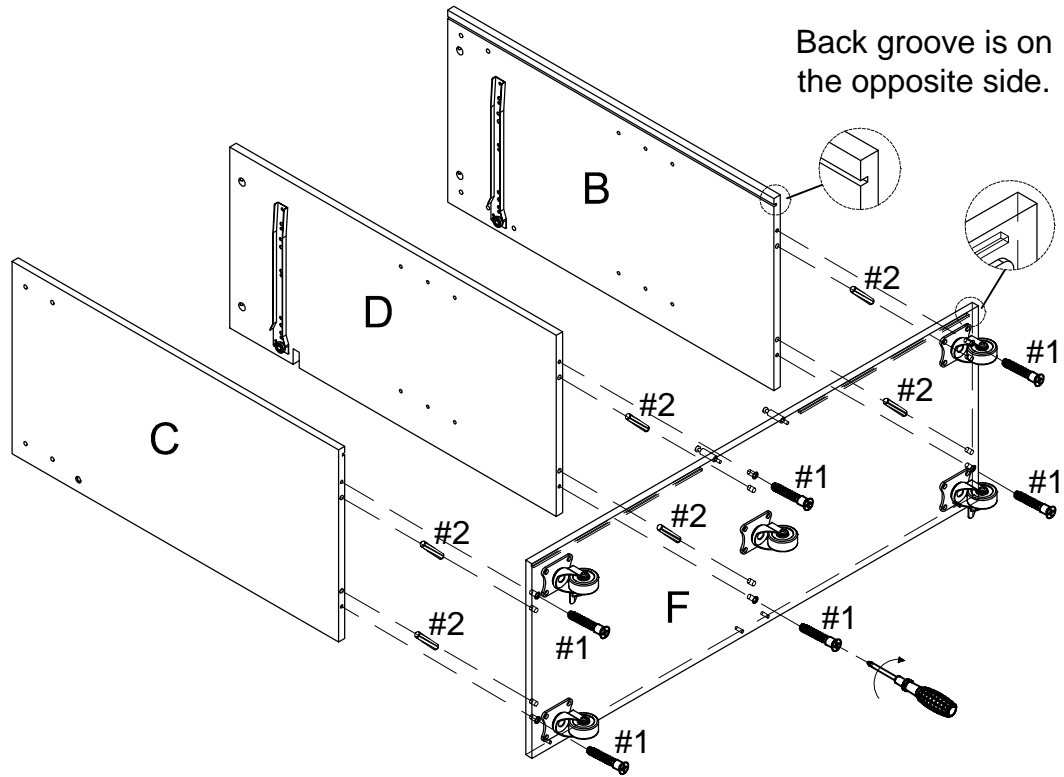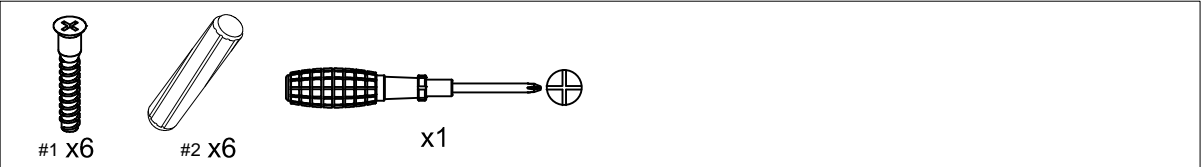



 
 
Step 7.

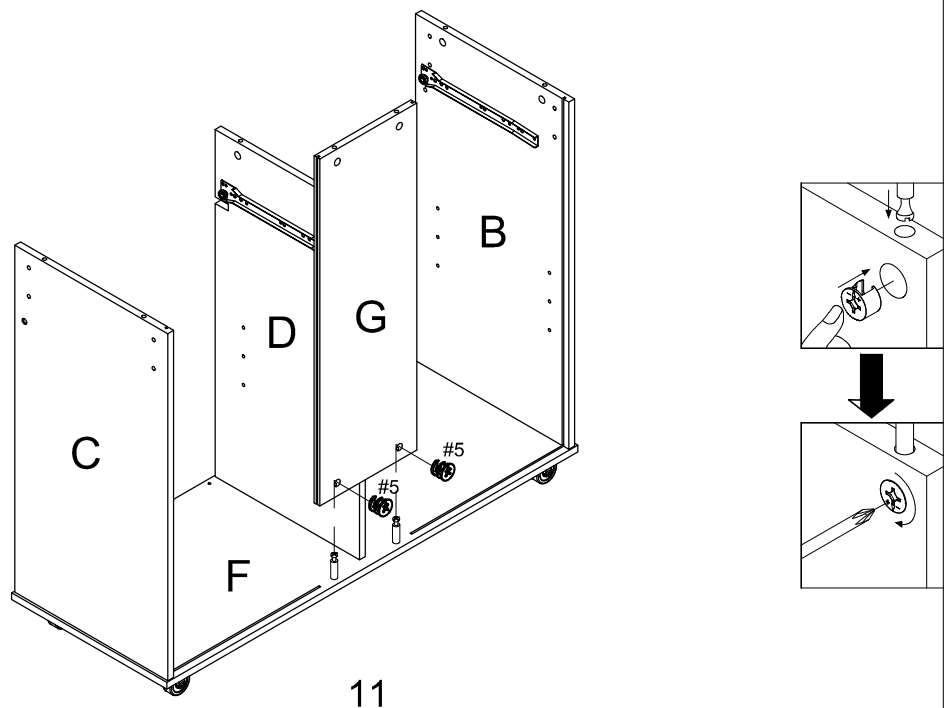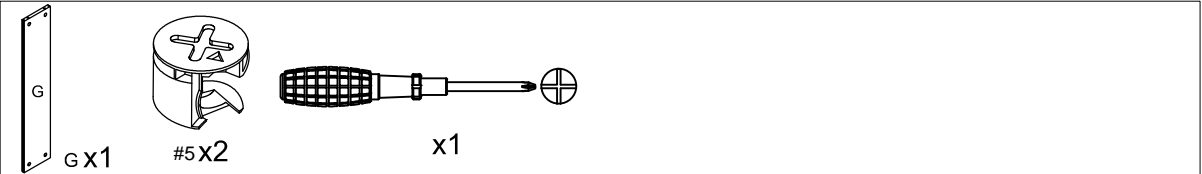

  
Step 8.

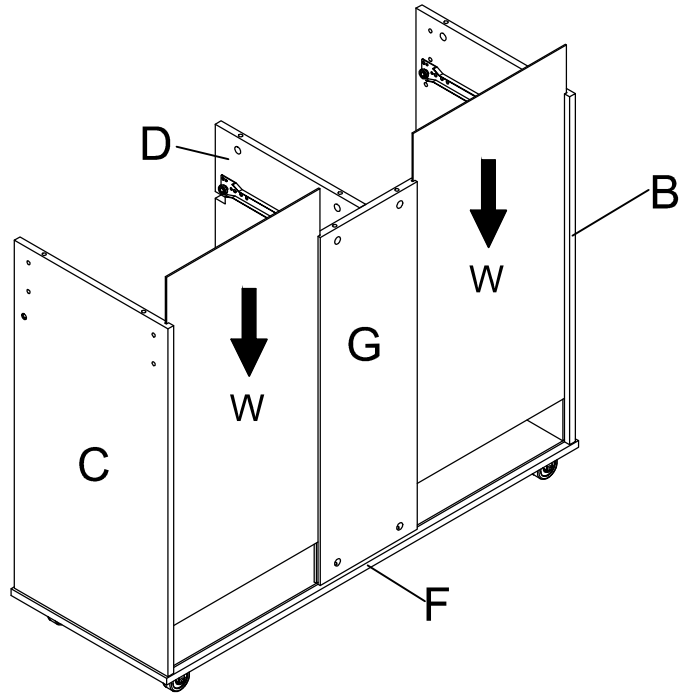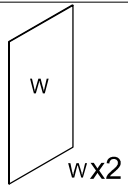

   
 
Step 9.

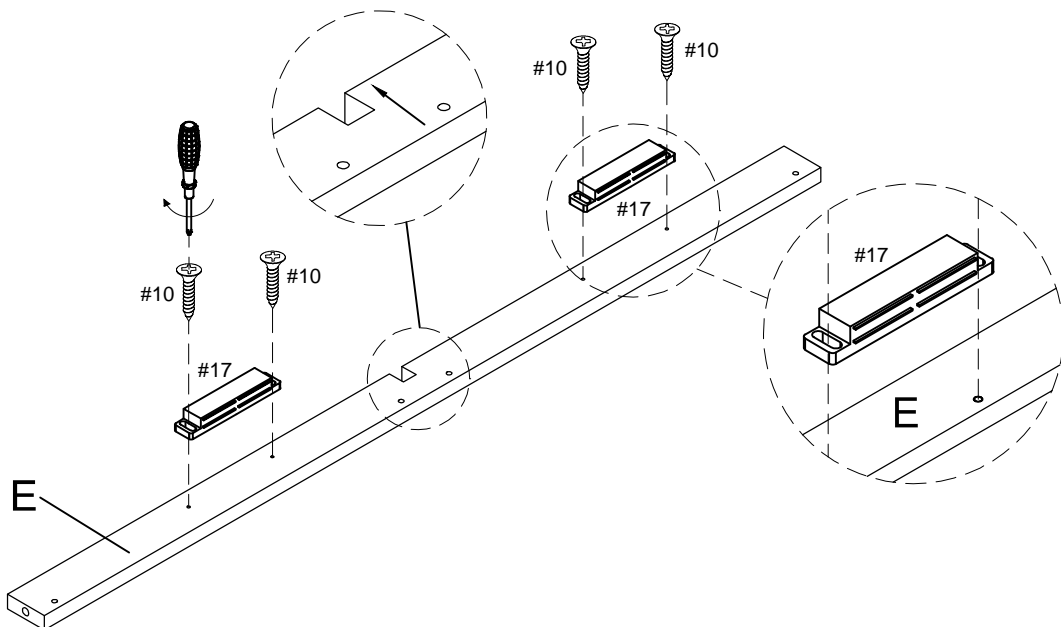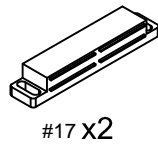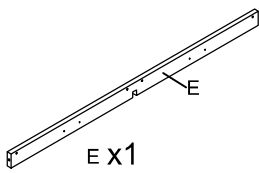

 Step 10.


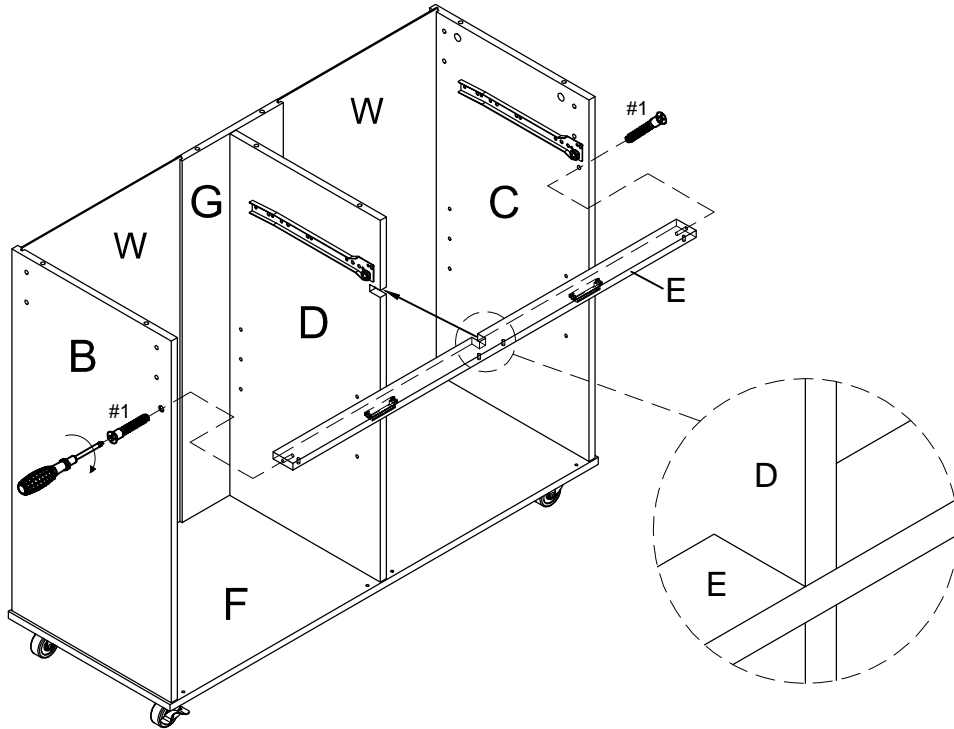


  Step 11.

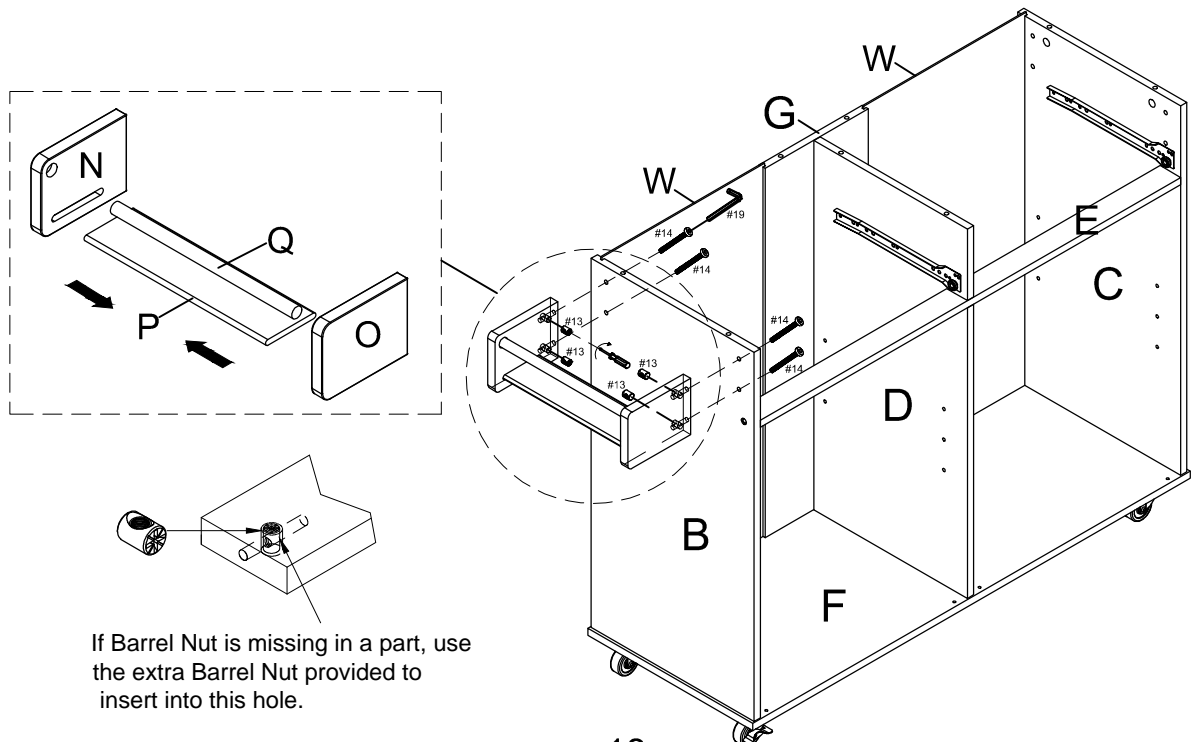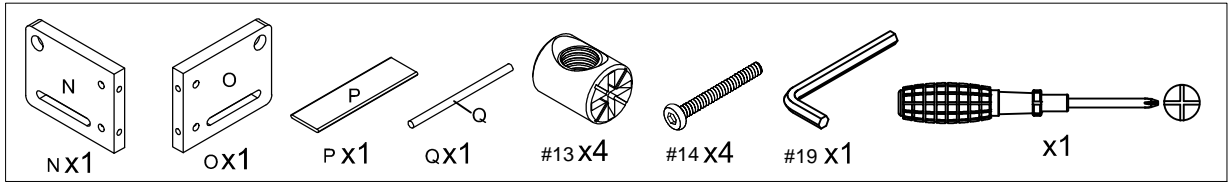


If Barrel Nut is missing in a part, use the extra Barrel Nut provided to insert into this hole.

 
 
Step 12.

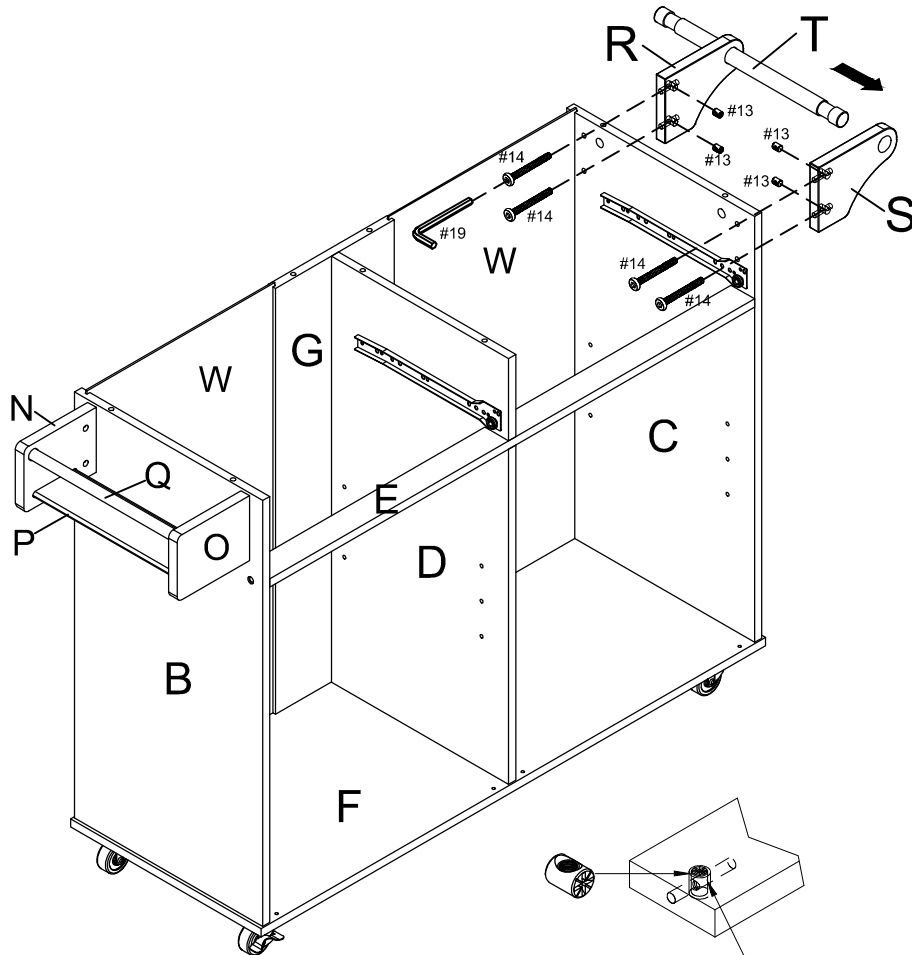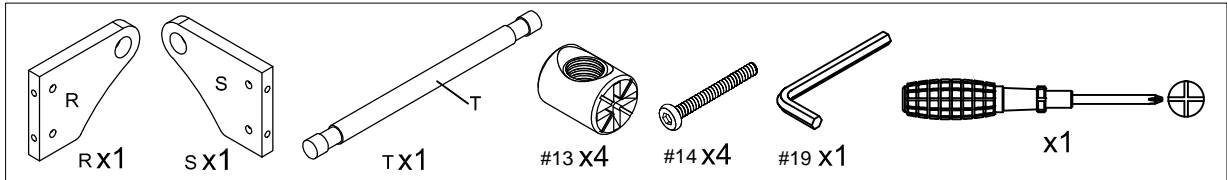


 
If Barrel Nut is missing in a part, use the extra Barrel Nut provided to insert into this hole.

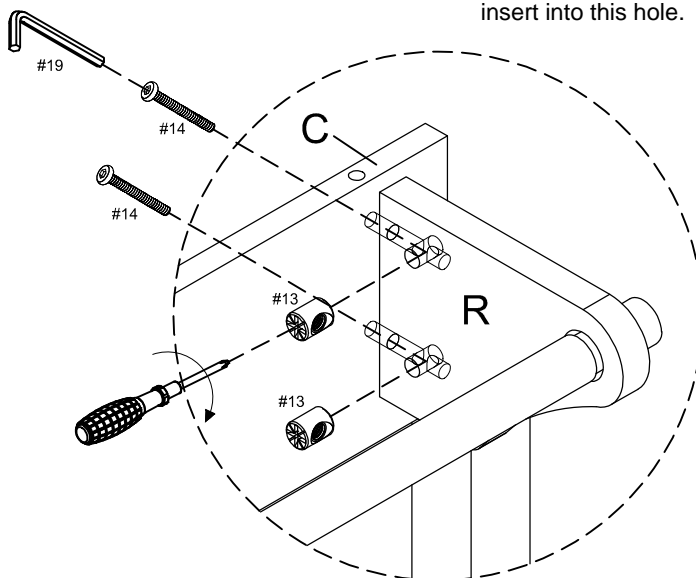


 
 
Step 13.

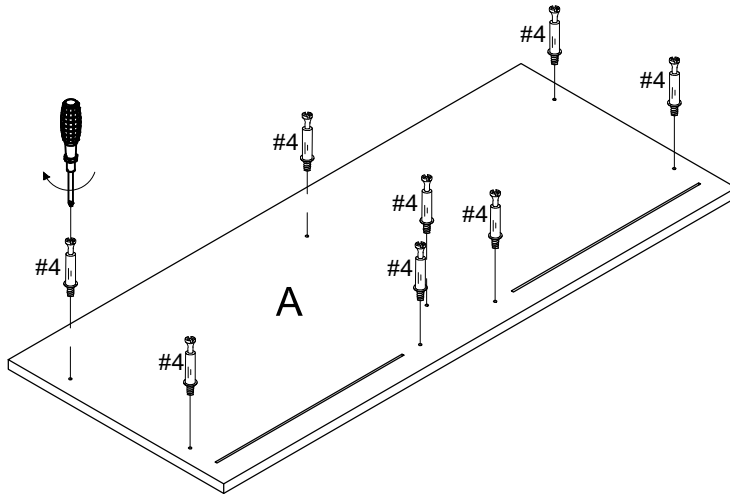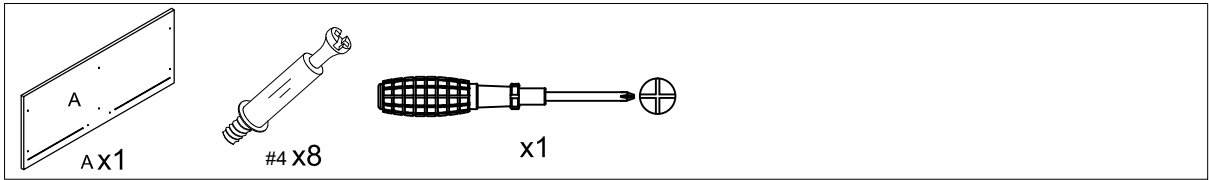

 
 
Step 14.

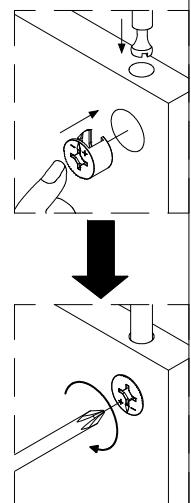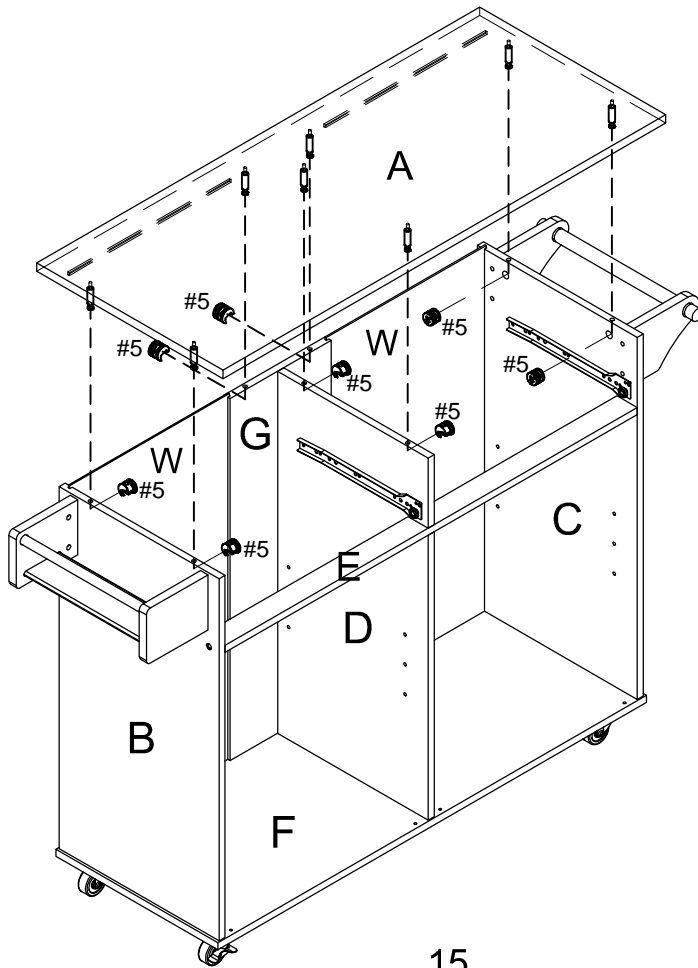

   Step 15.

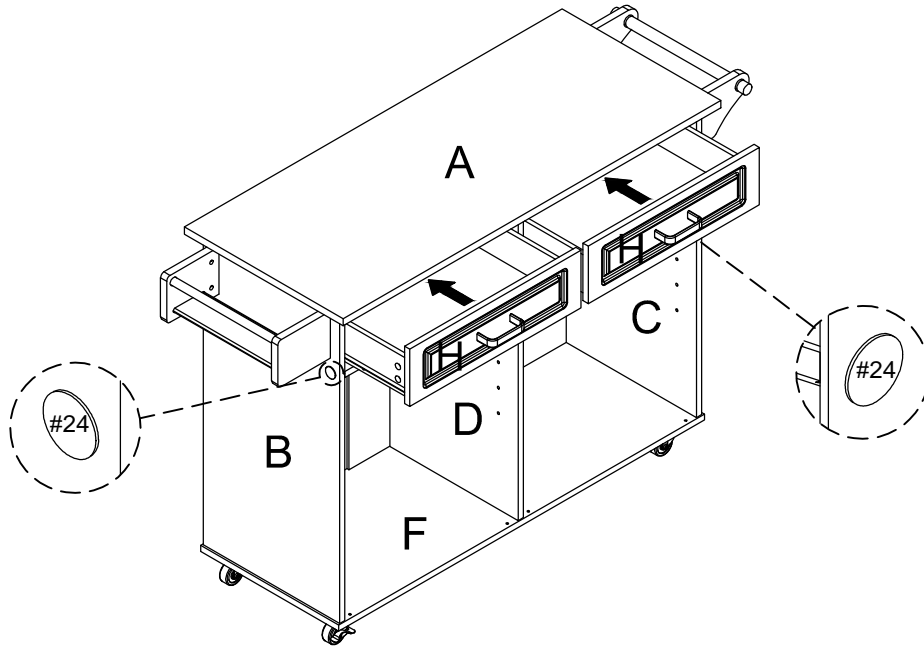

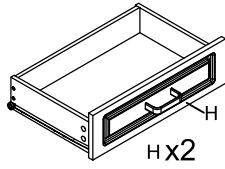


  Step 16.

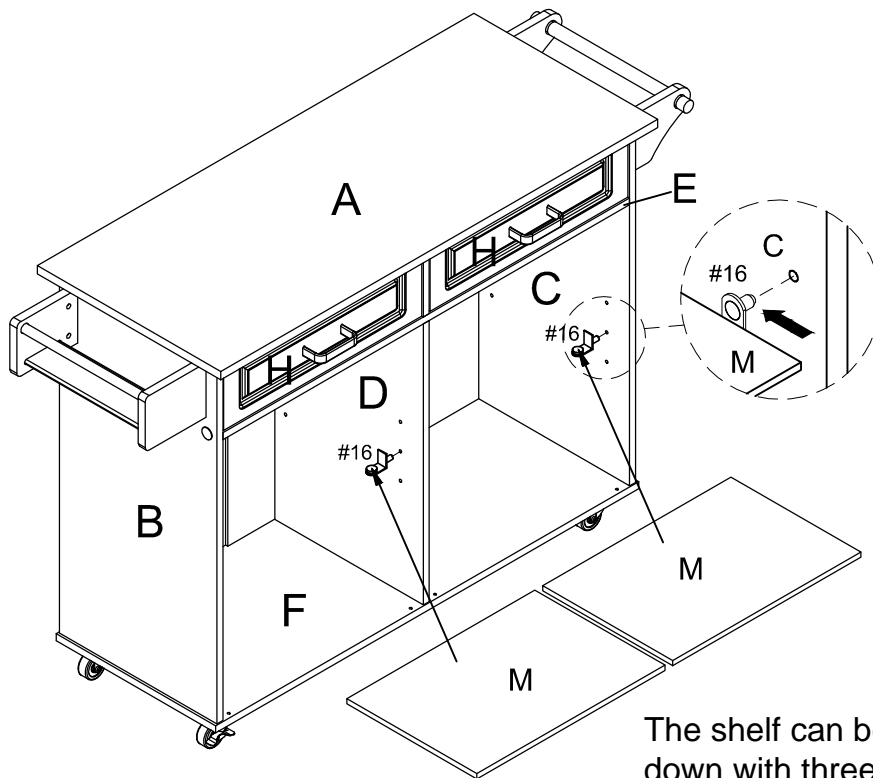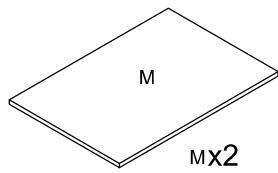


The shelf can be adjusted up and down with three heights.

   Step 17.

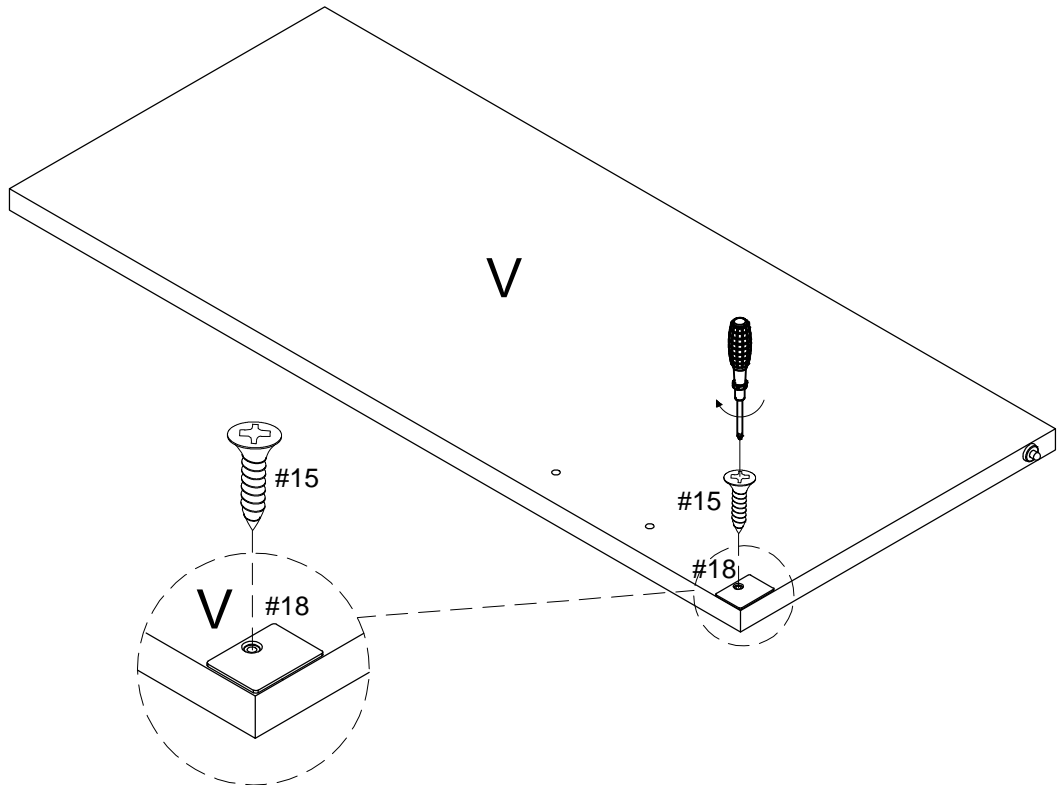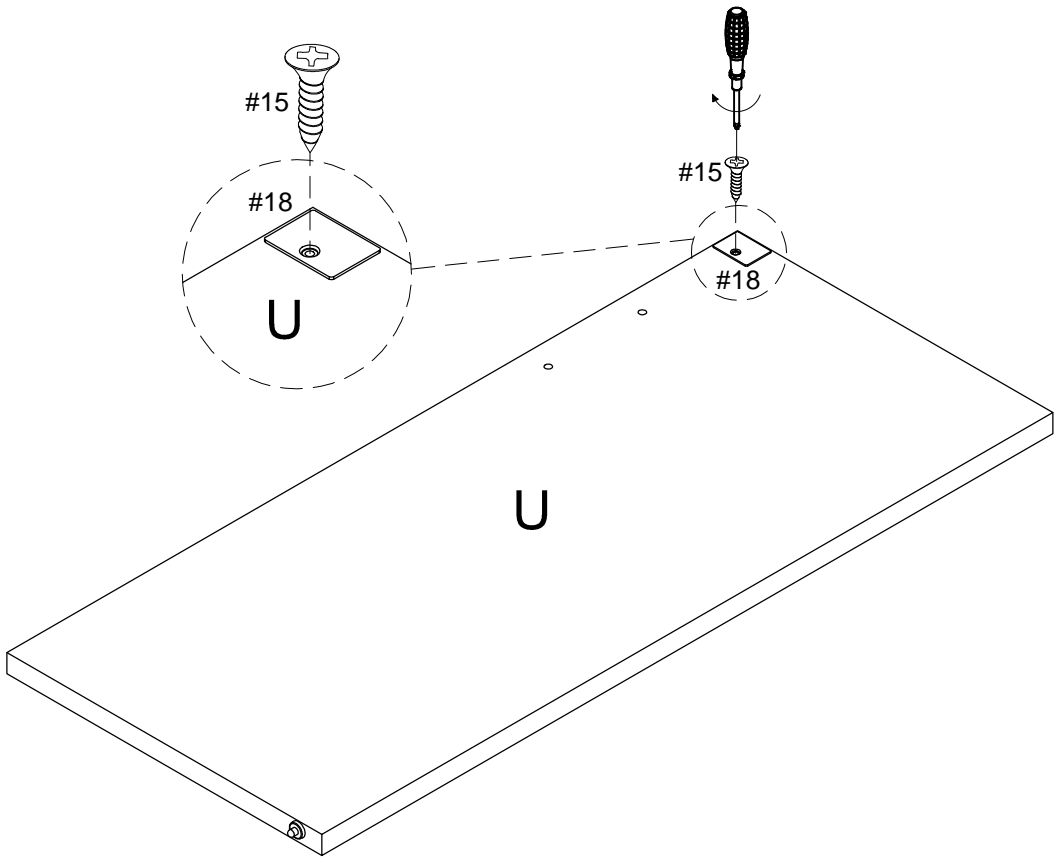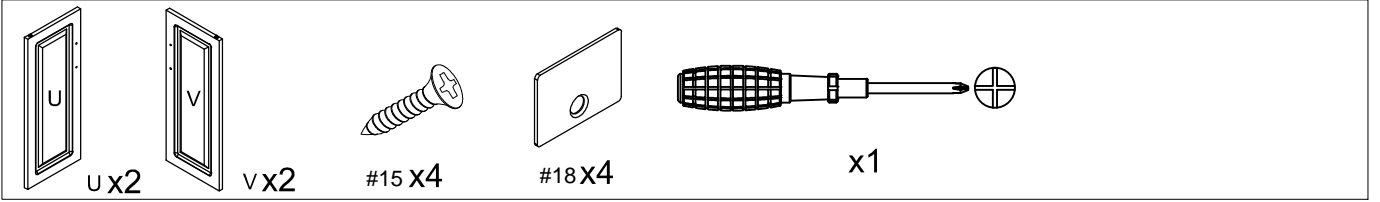

 
Step 18.

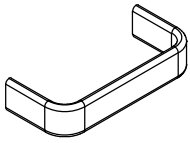


#11x4



 
#12x8



x1

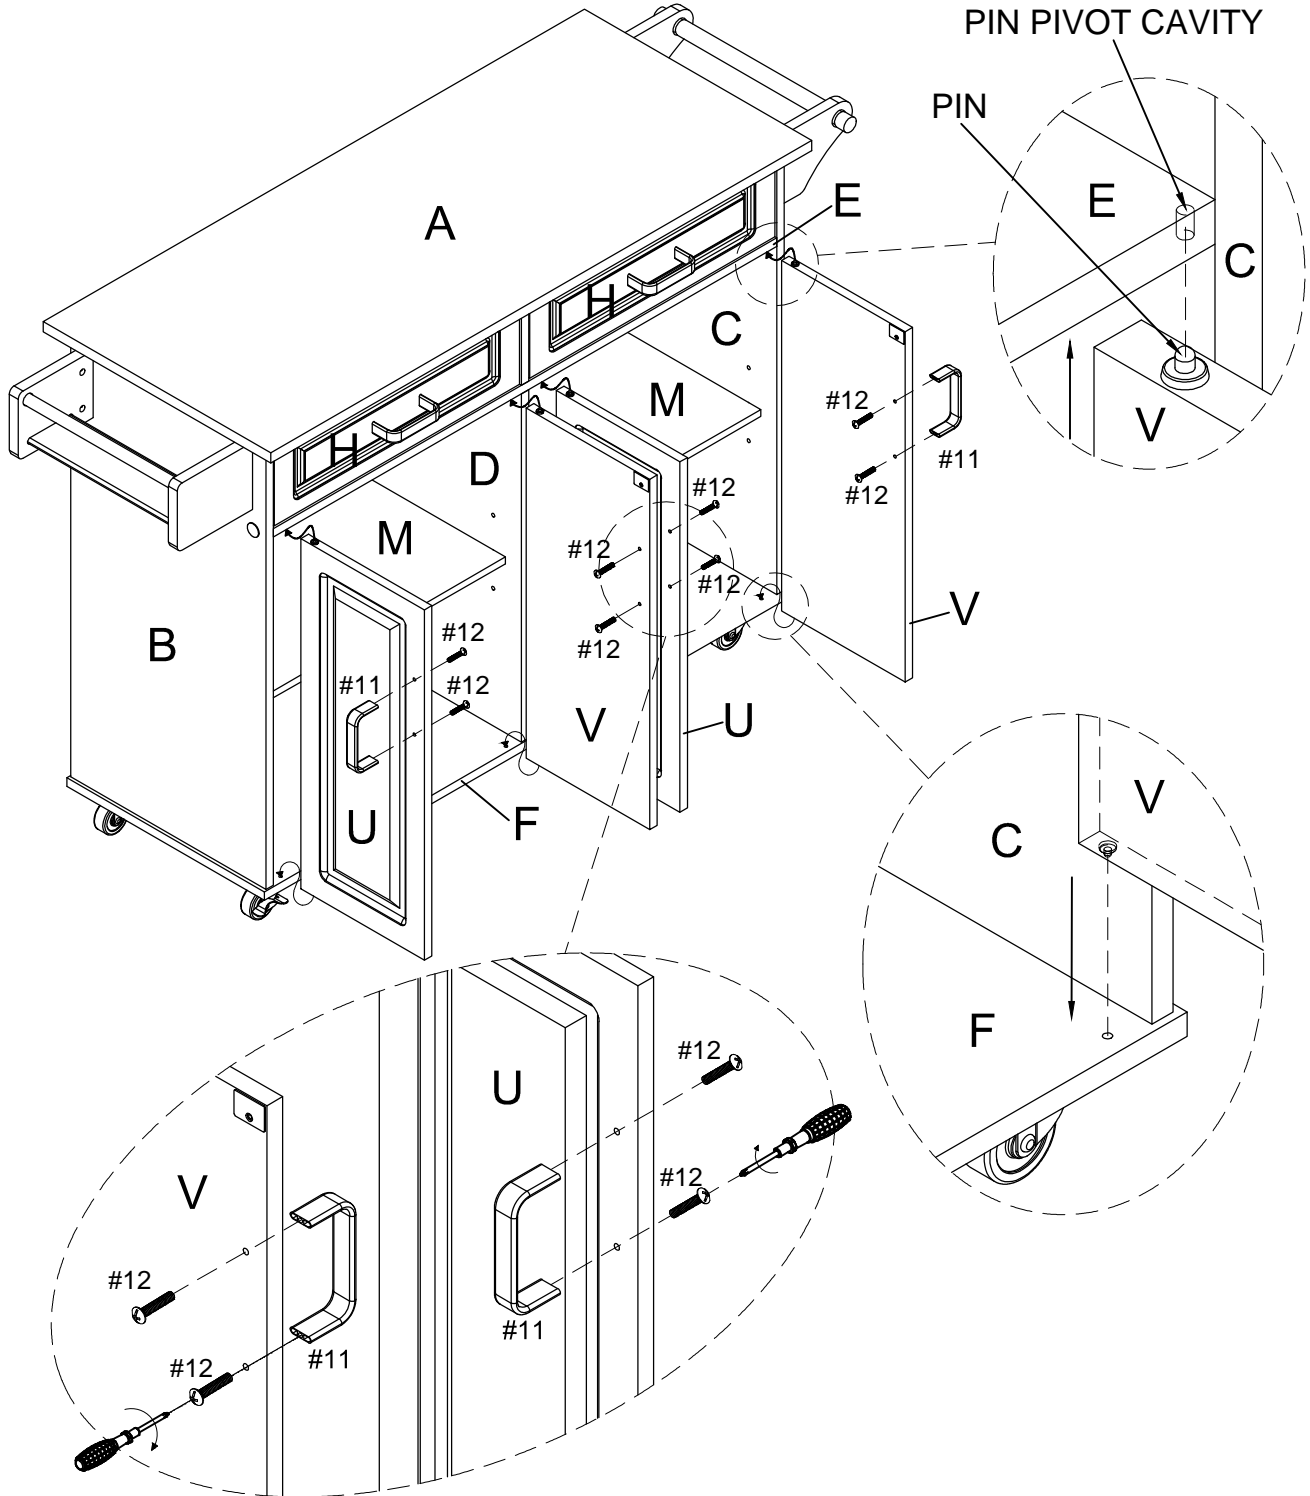 

 
Step 19.

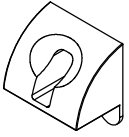

#9 x12


 
#10 x12



x1

