 


014-HG-44701
Otto Fish Tank Rack

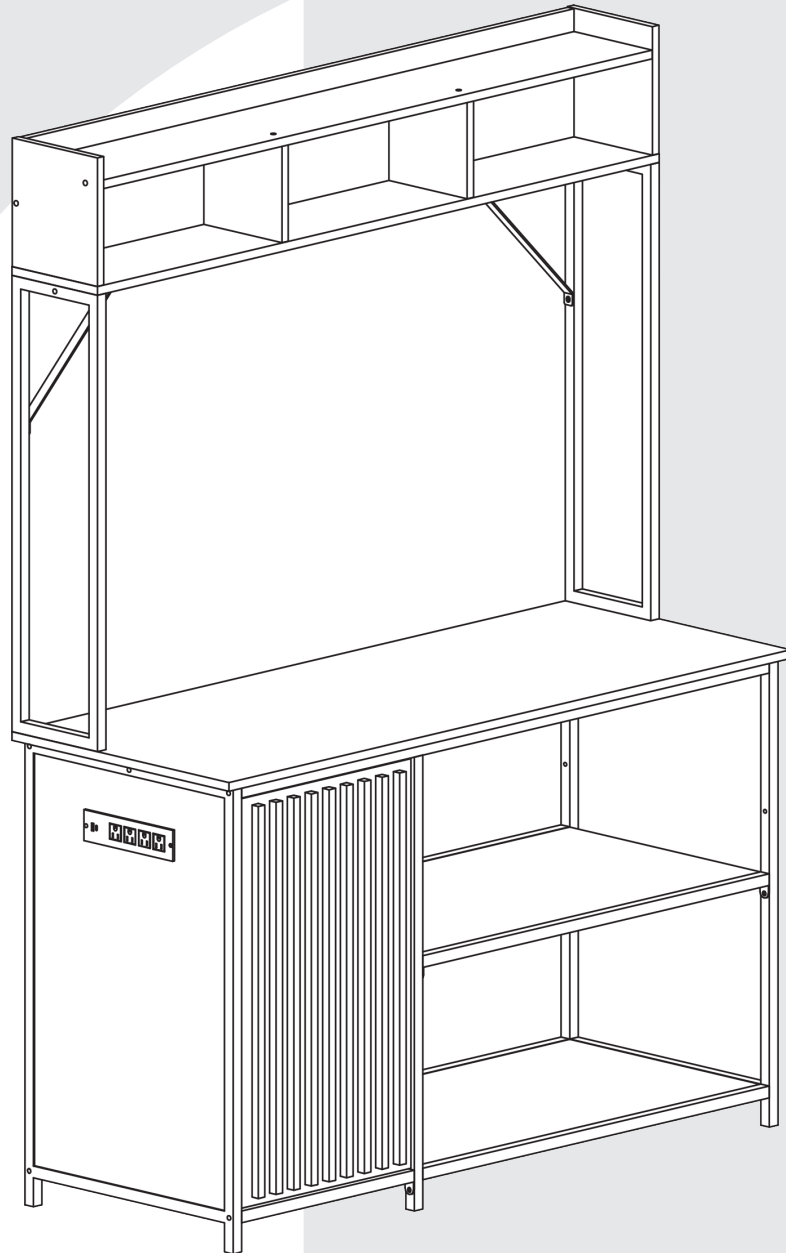

Belleze®

Instruction
Manual



 
 
 
Scan to view
online tutorial
or visit
www.belleze.com

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.





WARNING!

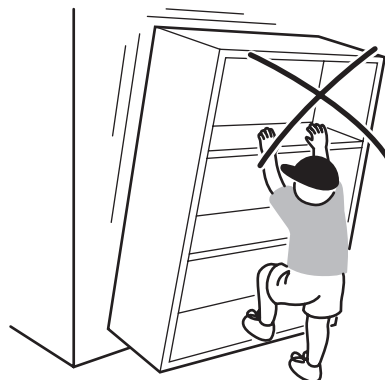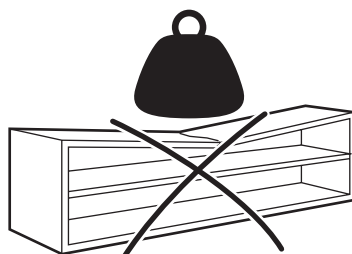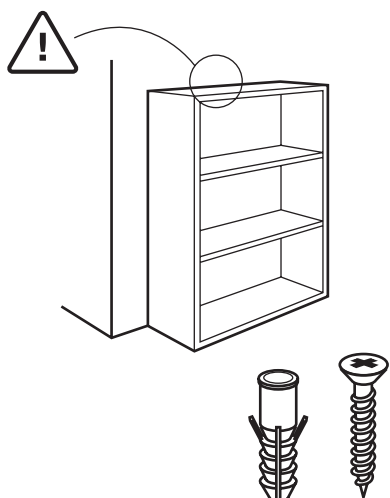

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



  CAUTION!

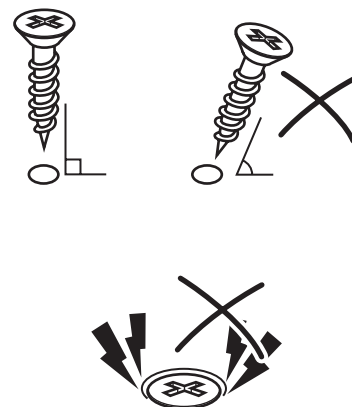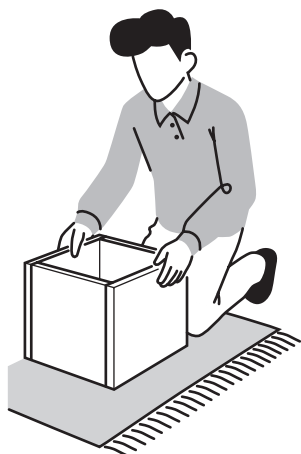

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly

100 mins




Weight Capacity Limitations are as Follows:

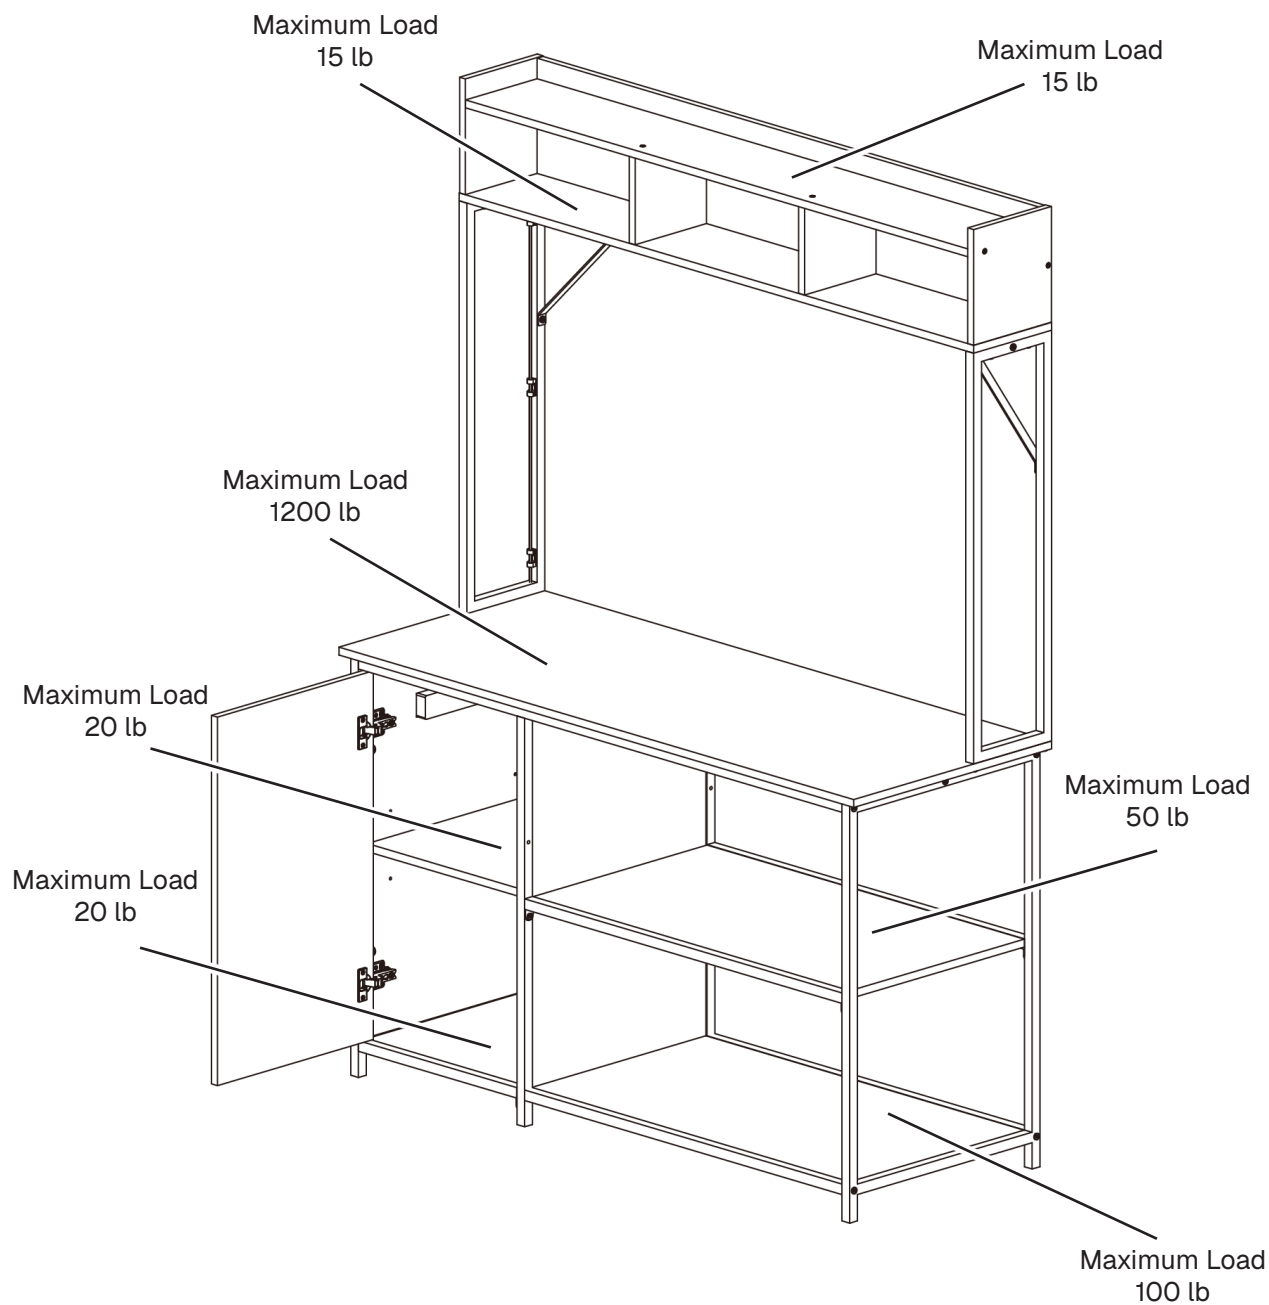


Tools Needed



 • Philips Screwdriver

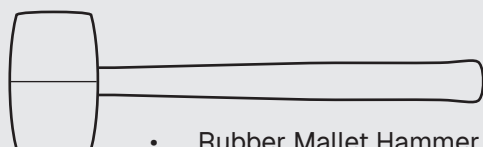


• Rubber Mallet Hammer

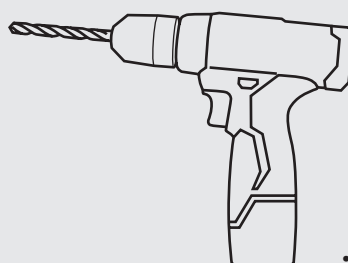 

• Electric Drill

 Package Contents

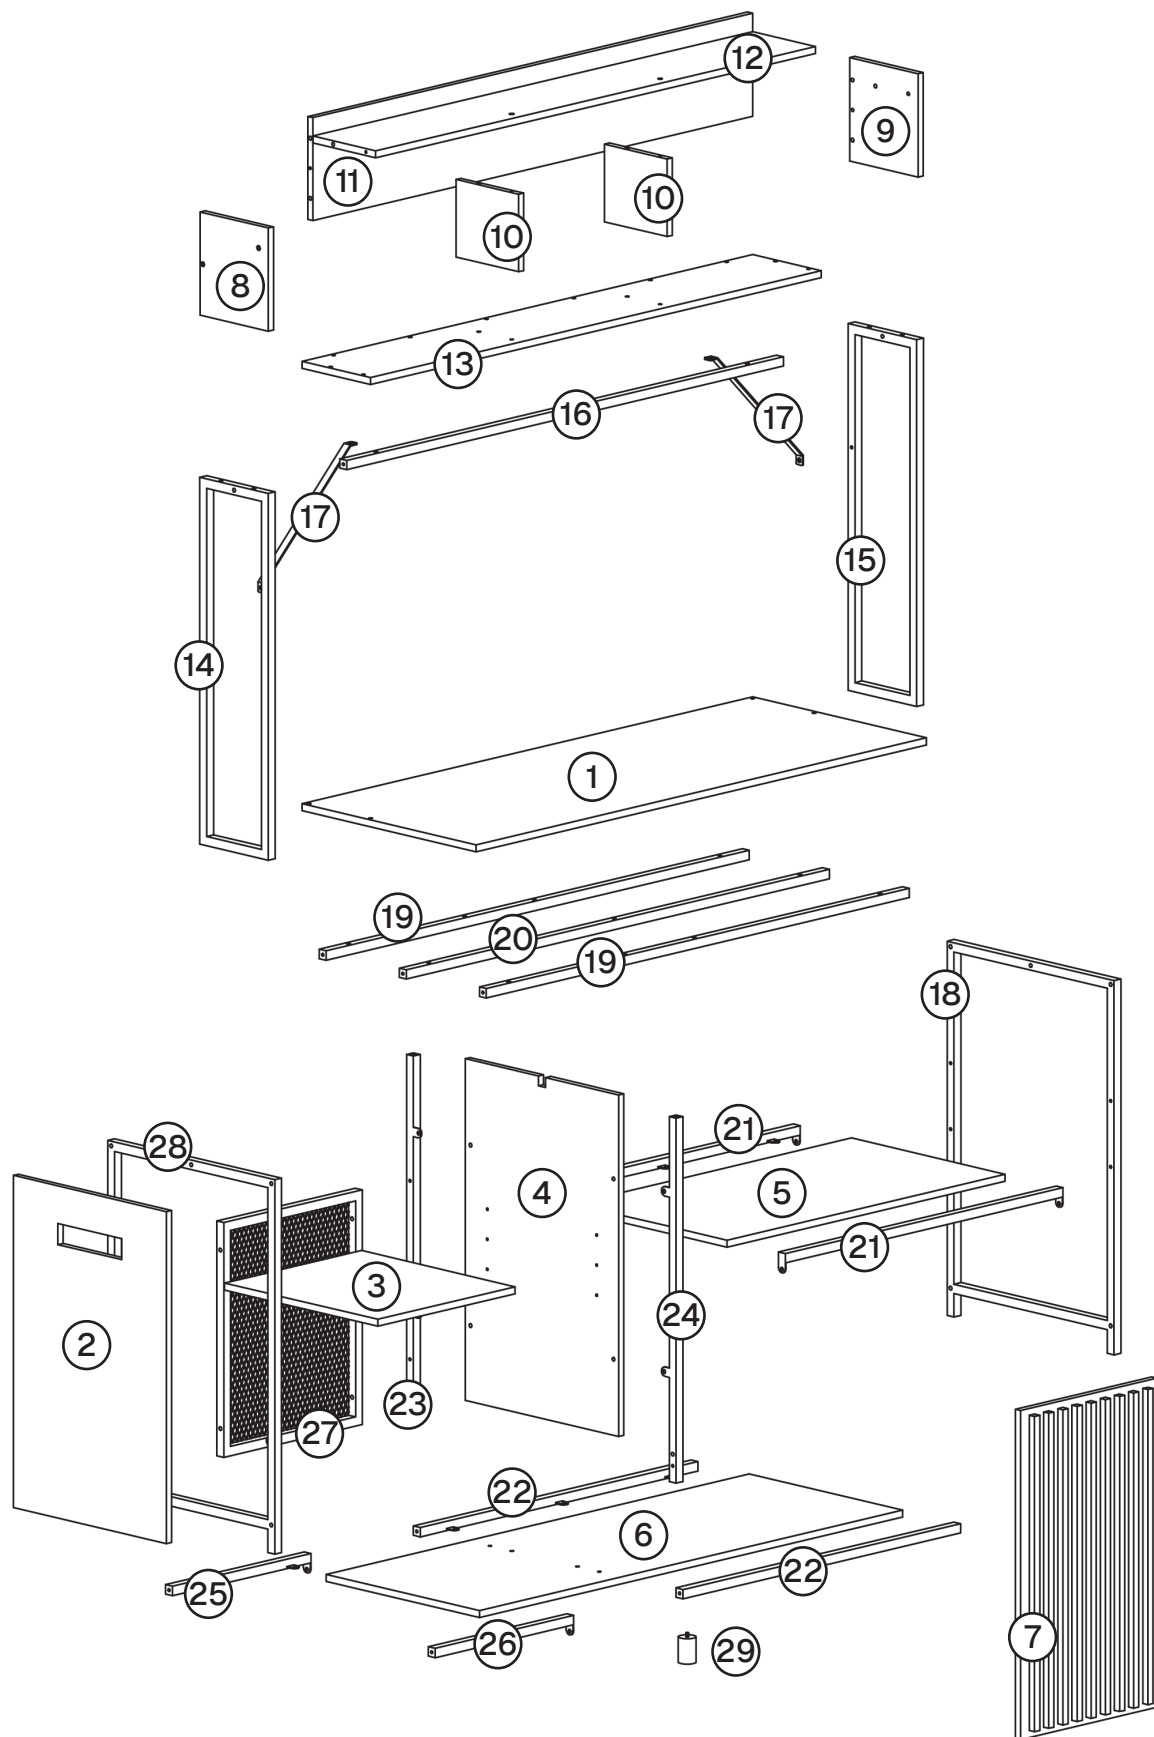


Package Contents

CODE	DESCRIPTION	QTY
1	Shelf Top Panel	1
2	Shelf Left Panel	1
3	Shelf Adjustable Storage Panel	1
4	Shelf Medial Panel	1
5	Shelf Panel	1
6	Shelf Bottom Panel	1
7	Cabinet Door	1
8	Hutch Left Panel	1
9	Hutch Right Panel	1
10	Hutch Medial Panel	2
11	Hutch Back Panel	1
12	Hutch Top Panel	1
13	Hutch Bottom Panel	1
14	Hutch Left Support Frame	1
15	Hutch Right Support Frame	1
16	Hutch Crossbar	1


Package Contents

CODE	DESCRIPTION	QTY
17	Hutch Corner Brace Frame	2
18	Shelf Right Frame	1
19	Shelf Crossbar	2
20	Shelf Crossbar	1
21	Shelf Frame	2
22	Shelf Frame	2
23	Shelf Frame	1
24	Shelf Frame	1
25	Shelf Frame	1
26	Shelf Frame	1
27	Shelf Back Panel	1
28	Shelf Left Frame	1
29	Support Leg	1

 
Package Contents




19x + 1x

 


38x + 3x

 

34x + 3x

 


18x + 1x

 


4x



 
12x + 1x

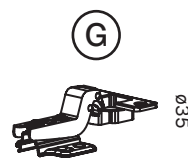


2x

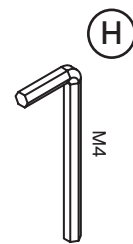 


1x

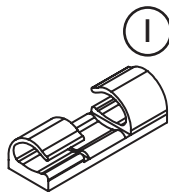 

4x

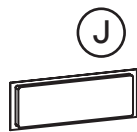 


4x

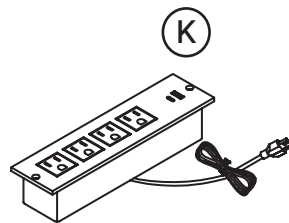 


1x



 2x



2x

 


2x




2x



 2x

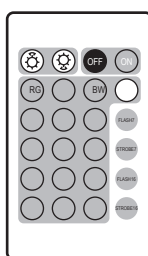


1x

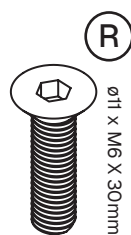 

2x



01

 Attach frame (23, 24) to the shelf medial panel (4).



ø11 x M6 X 12mm

  C 4x

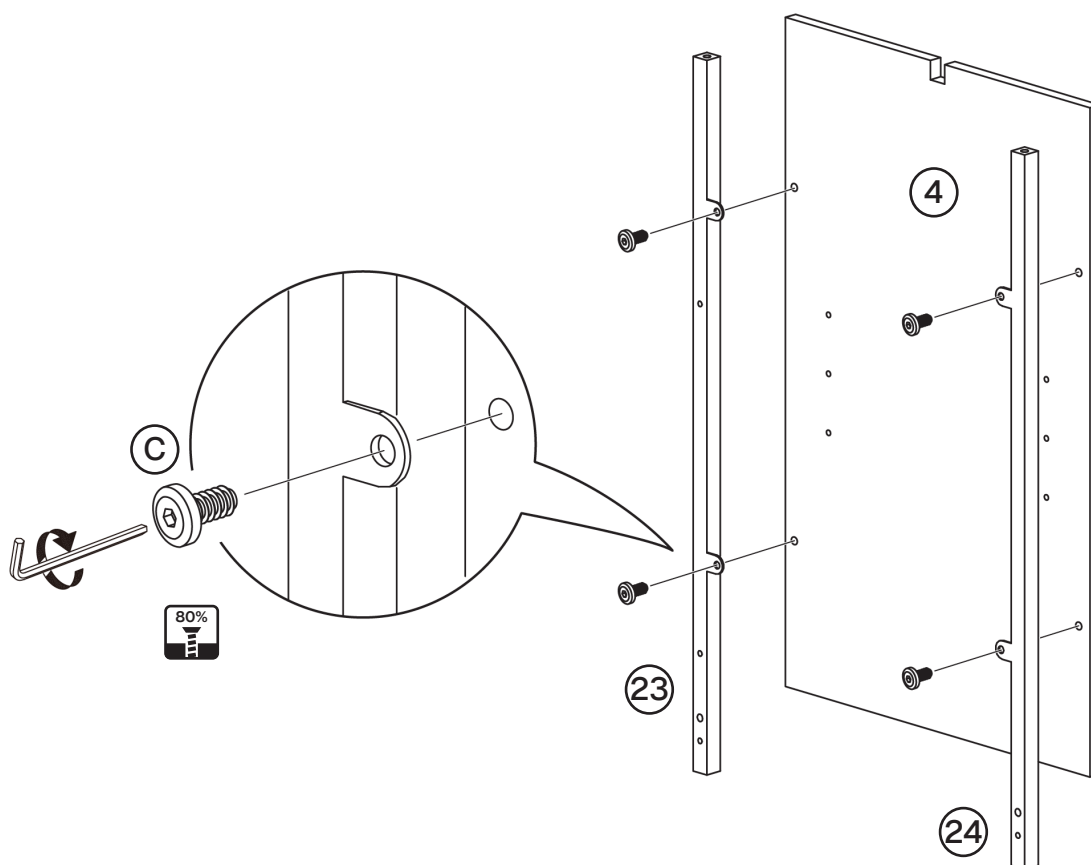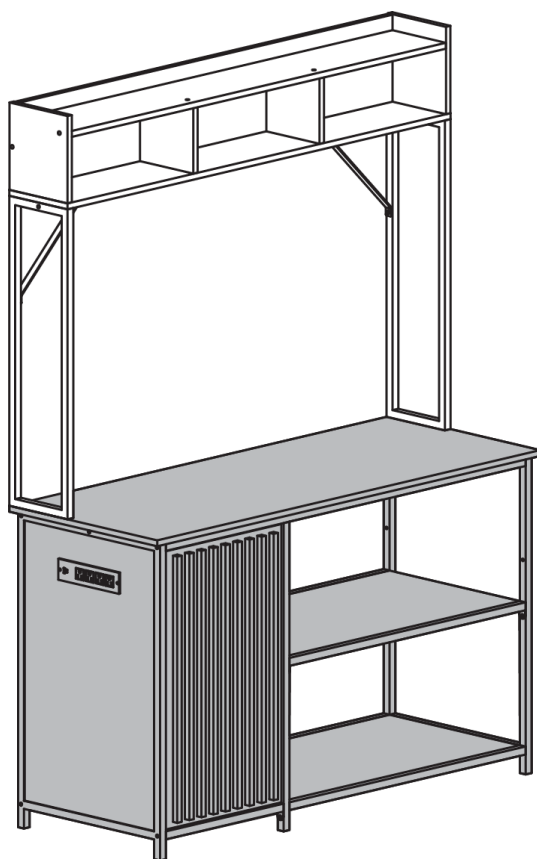


02

Insert wood dowels to the shelf medial panel (4).




 D 2x

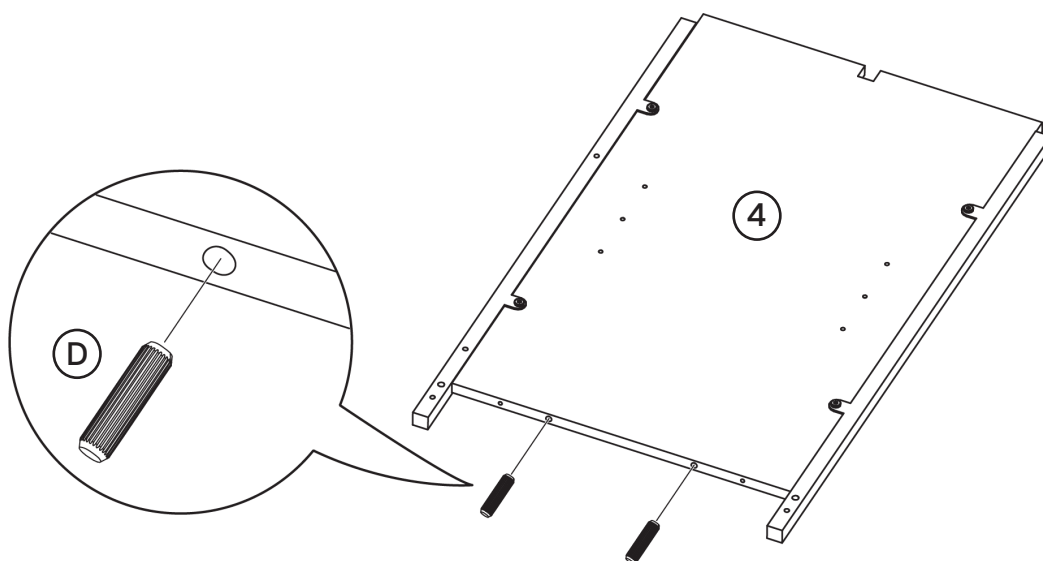


03

 
Assemble the shelf medial panel (4) to the shelf bottom panel (6).




A 2x

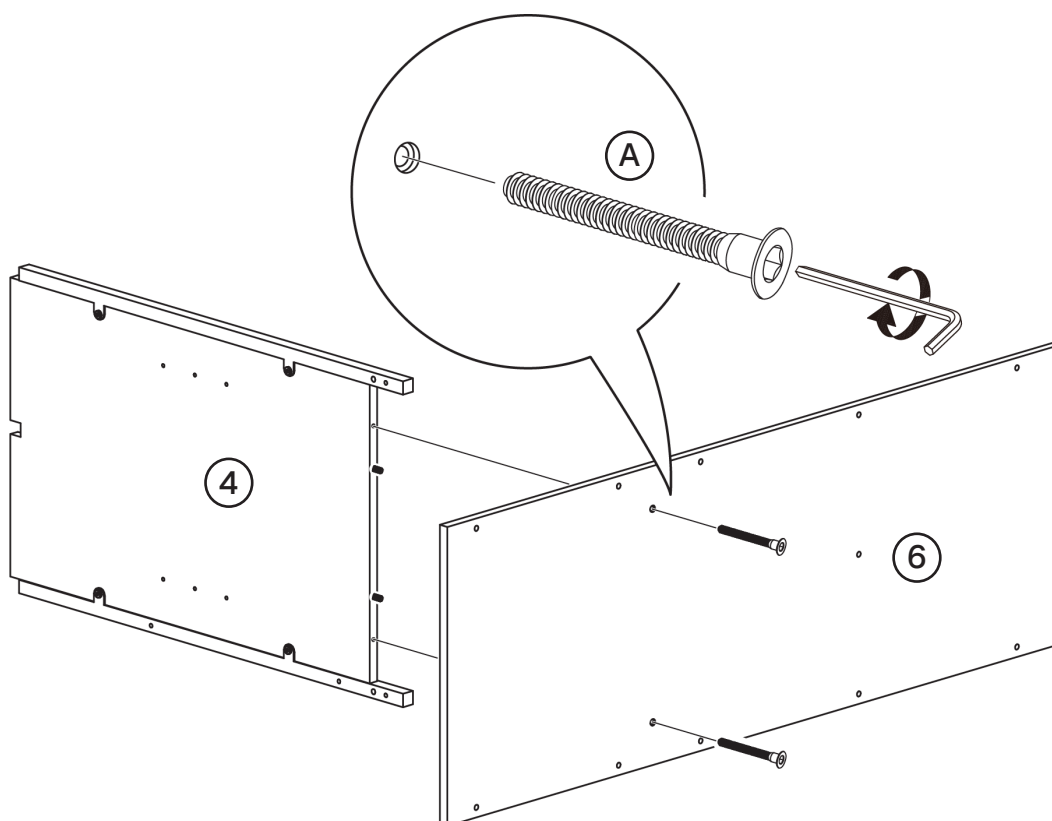 

 04 Assemble frames (22) to the shelf bottom panel (6).

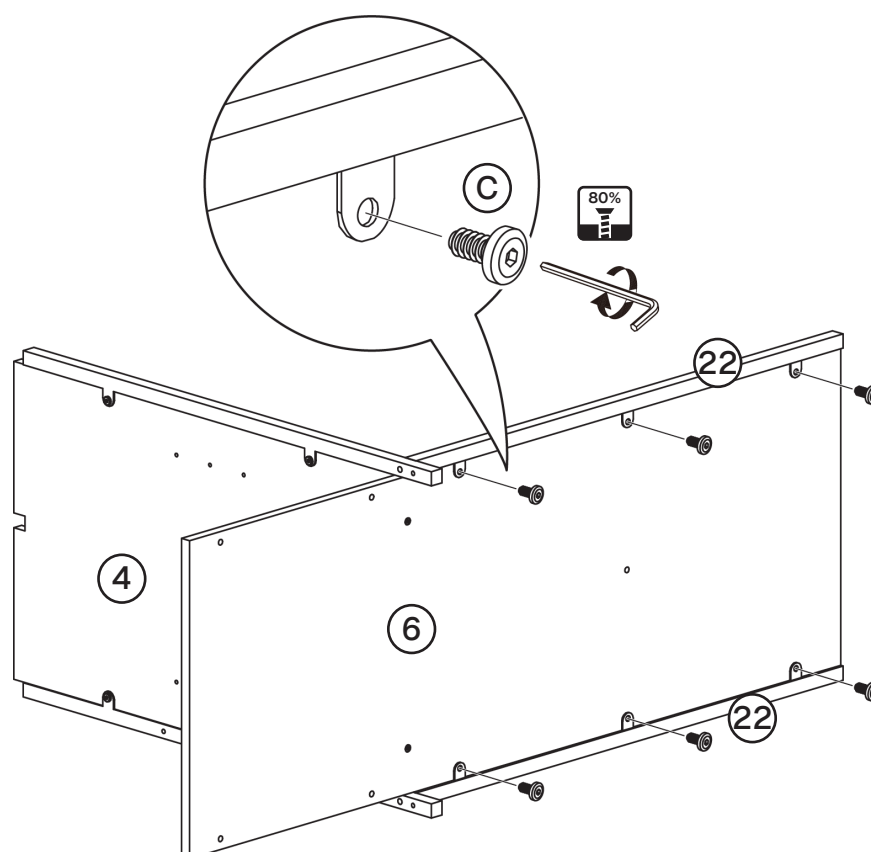


05 Connect the frames (22) to (23, 24).

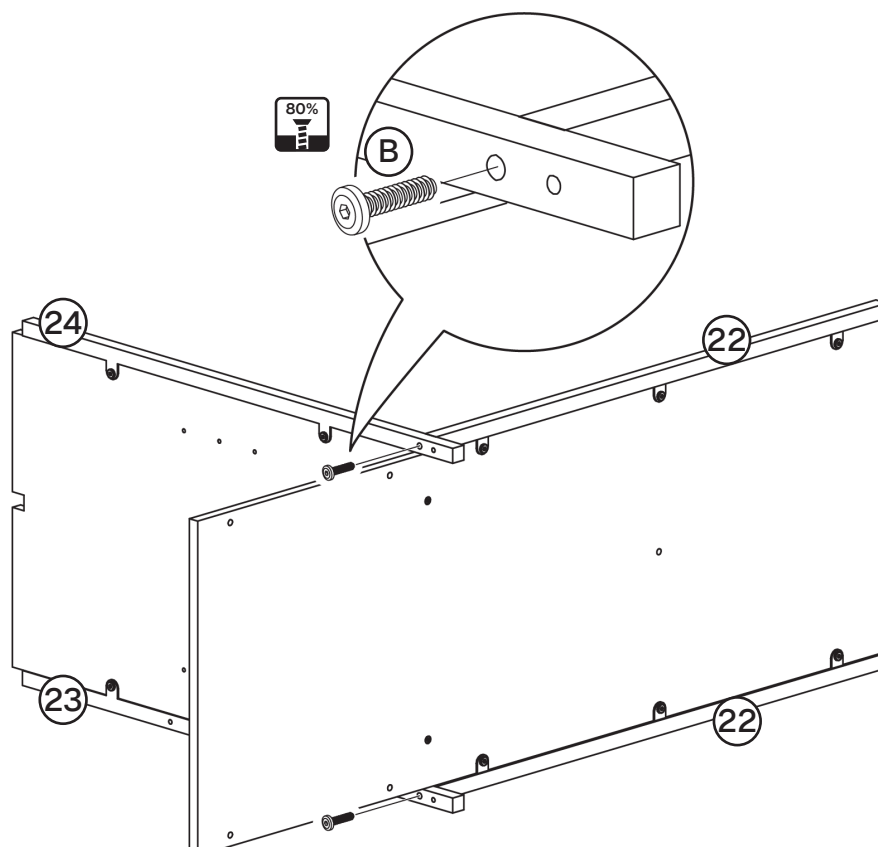 


06

 Assemble frames (25, 26) to the shelf bottom panel (6) and shelf frames

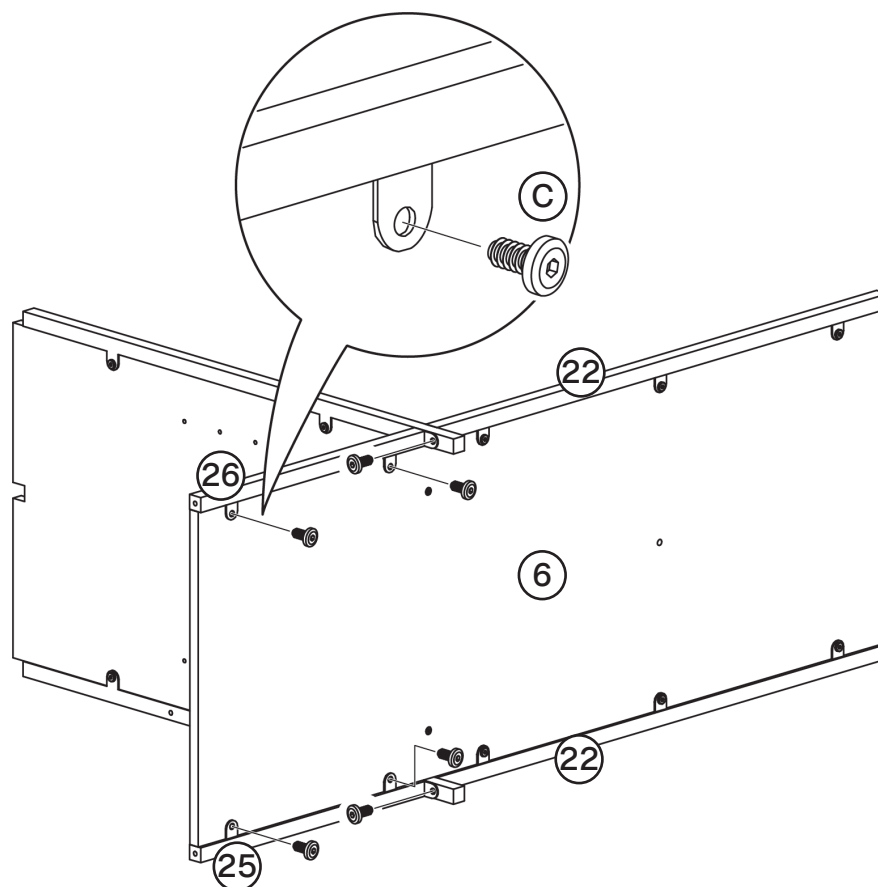

07

 Fully tighten all the bolts on the frame .

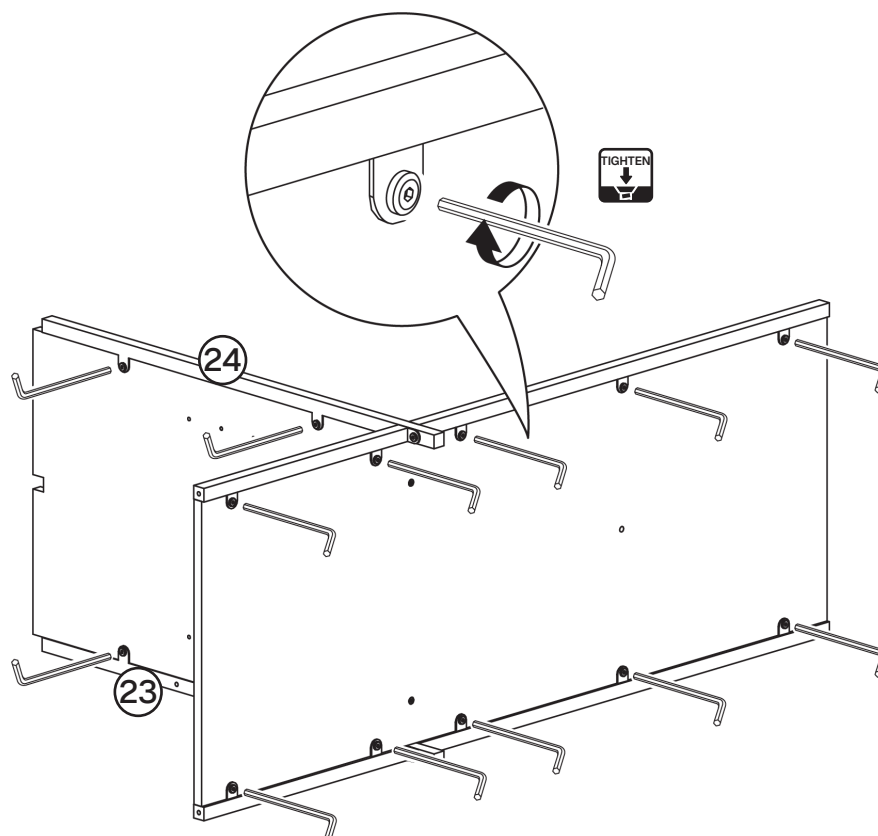

*Assembly symbols





Fully tighten bolts or screws.


014-HG-44701

13

  
08 Attach frames (21) to the shelf panel (5).

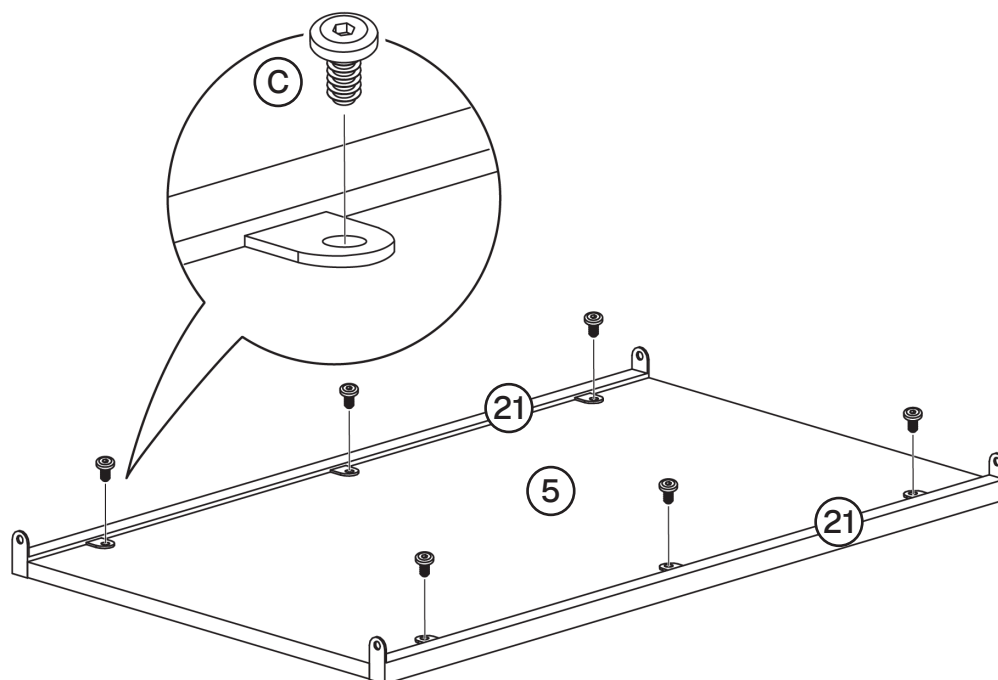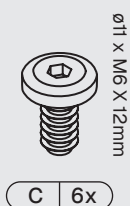

 09 Assemble the shelf frames(21) to the side of the shelf medial panel(4).

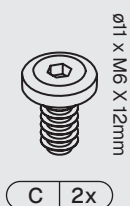


 ★ Note: The shelf panel is adjustable, the height of the shelf can be adjusted according to the need.

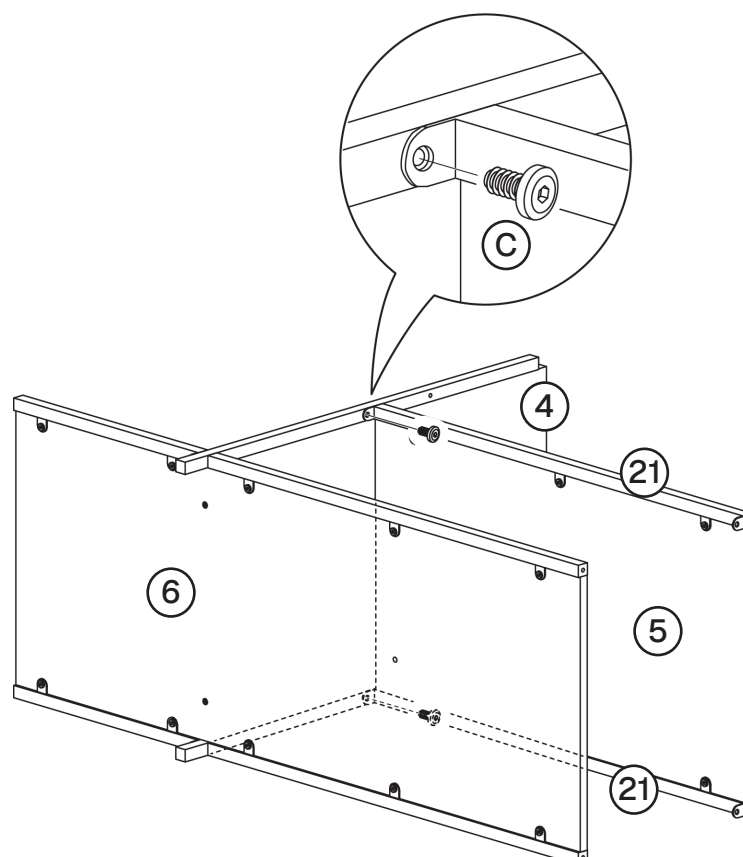



10

 Assemble the shelf right frame (18) to the other side of the shelf panel (5).

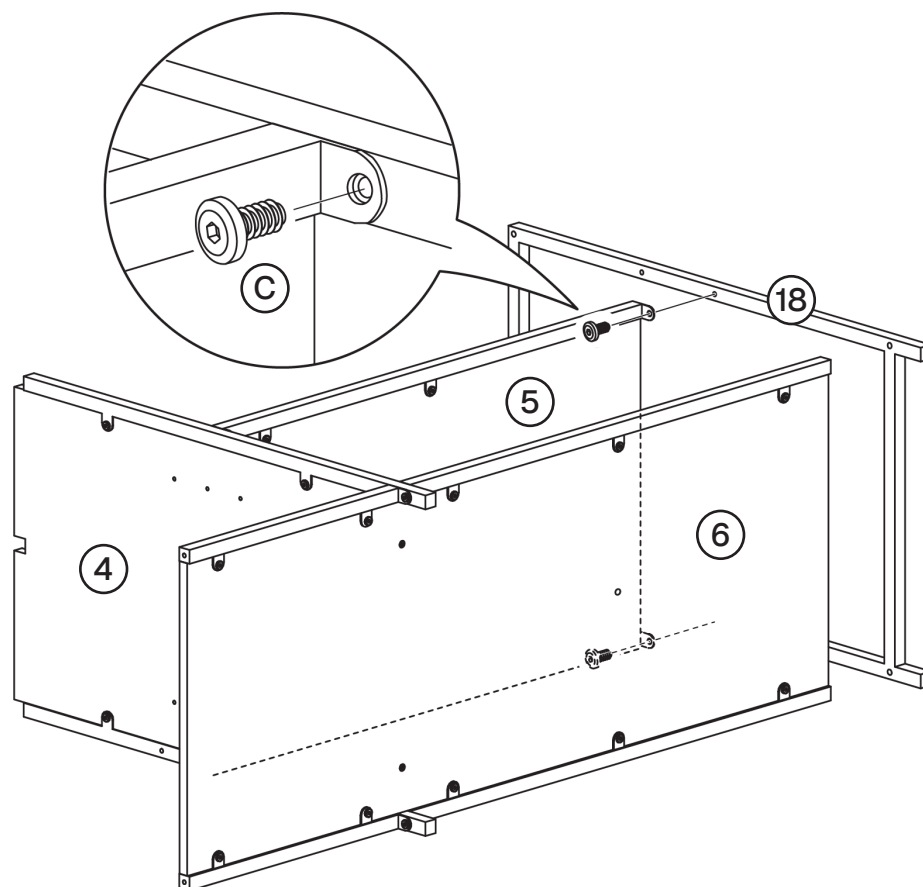


11

  Secure the shelf right frame (18) to the shelf bottom frames.

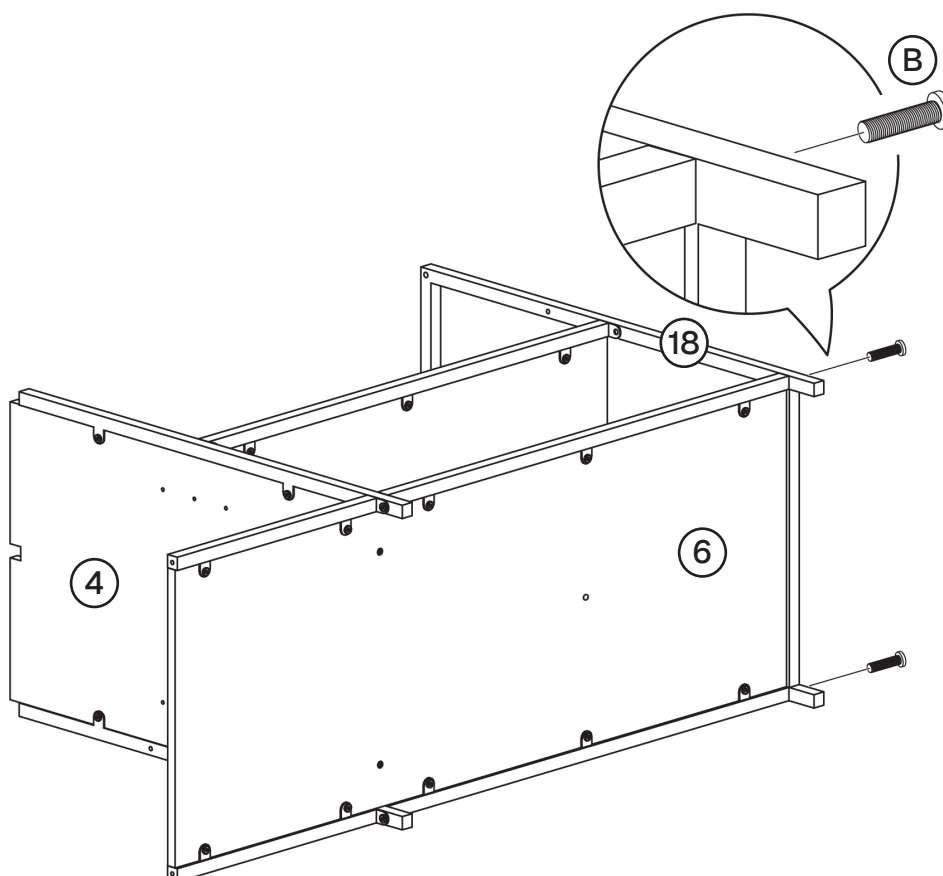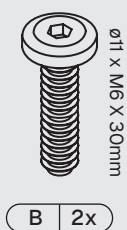

12

 Attach support leg (29) to the shelf bottom panel (6).

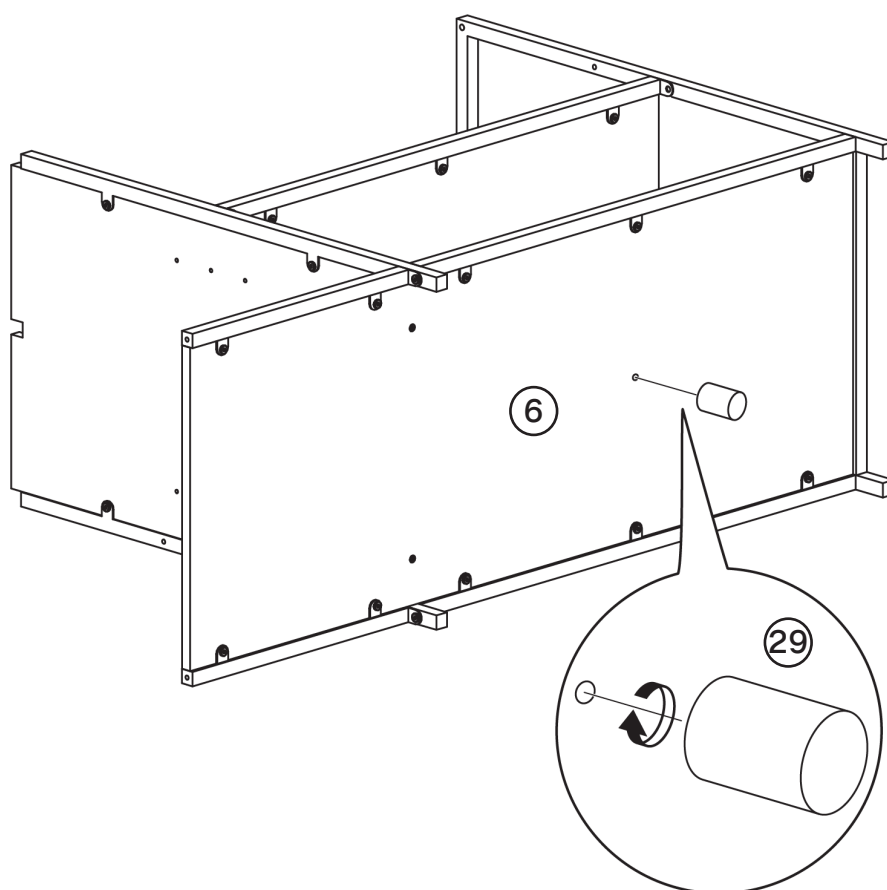


13

Assemble the shelf back panel (27) to the side of the shelf medial panel (4).



 B 2x

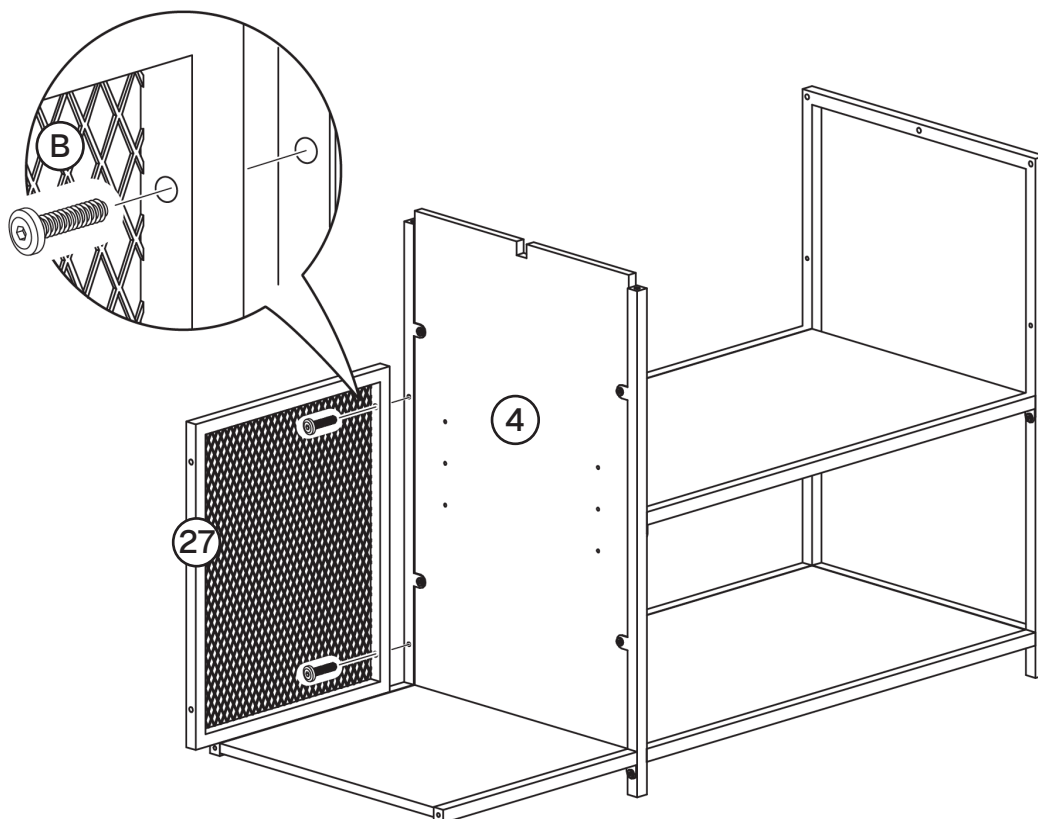


14

Assemble shelf crossbars (19, 20) on top of the shelf assembly.




 B 3x

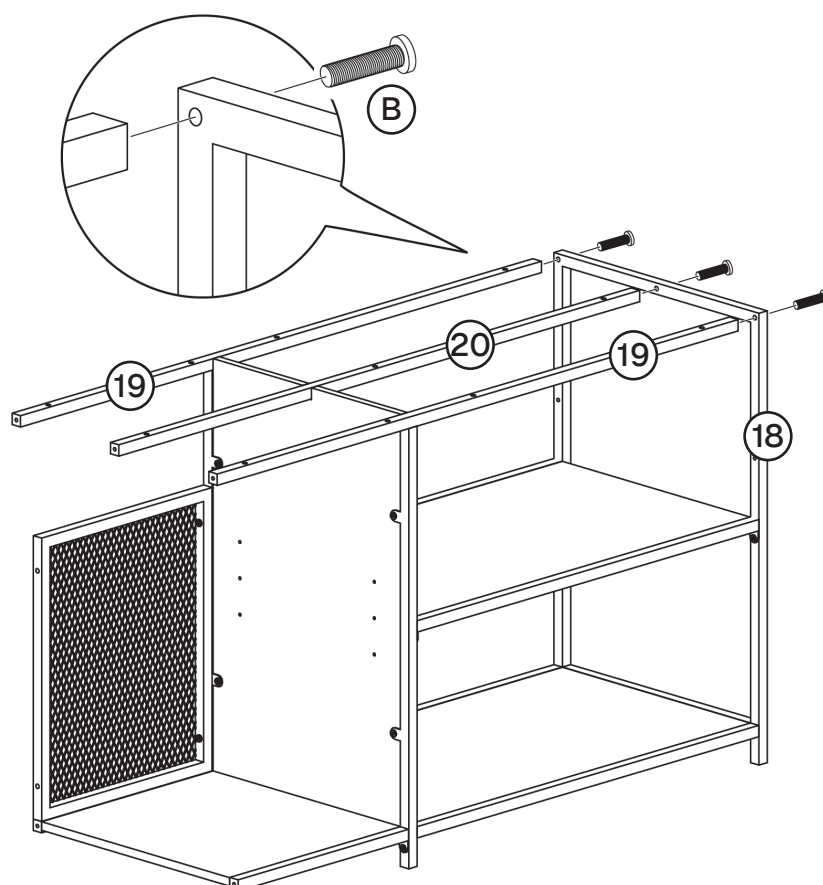


15

 Secure the shelf crossbars in place.


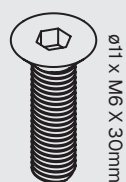


R 2x

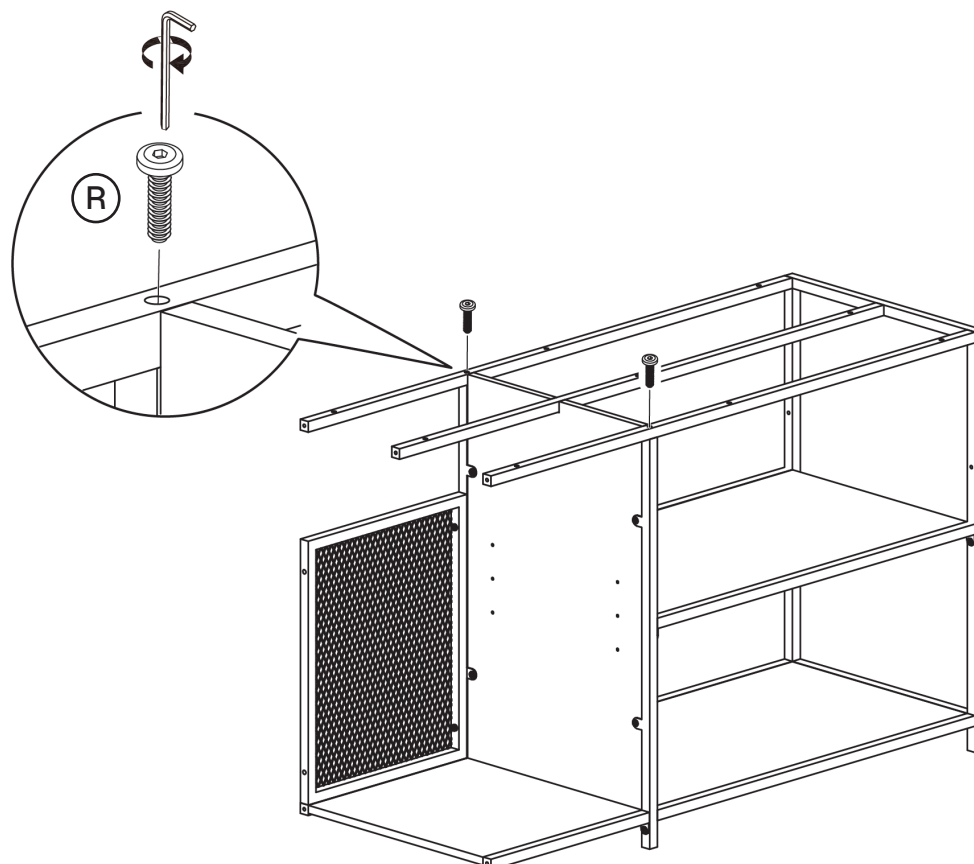 

16

  Assemble the shelf left frame (28) to the shelf left panel (2).

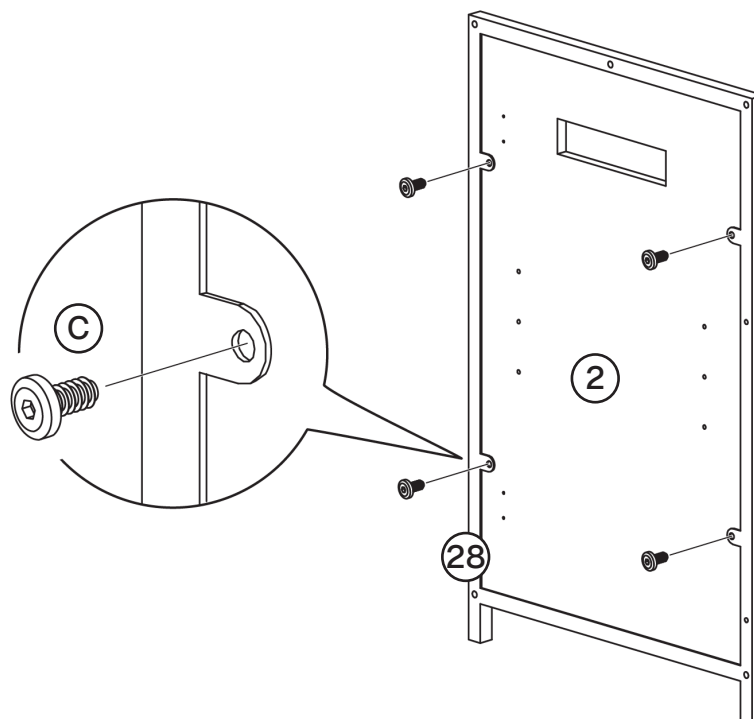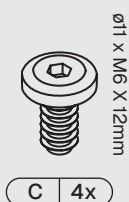


17

Assemble the shelf left frame (28) to the left of the shelf assembly.



 ★ Note: Assemble the shelf back panel (27) to the side of the shelf left frame (28)

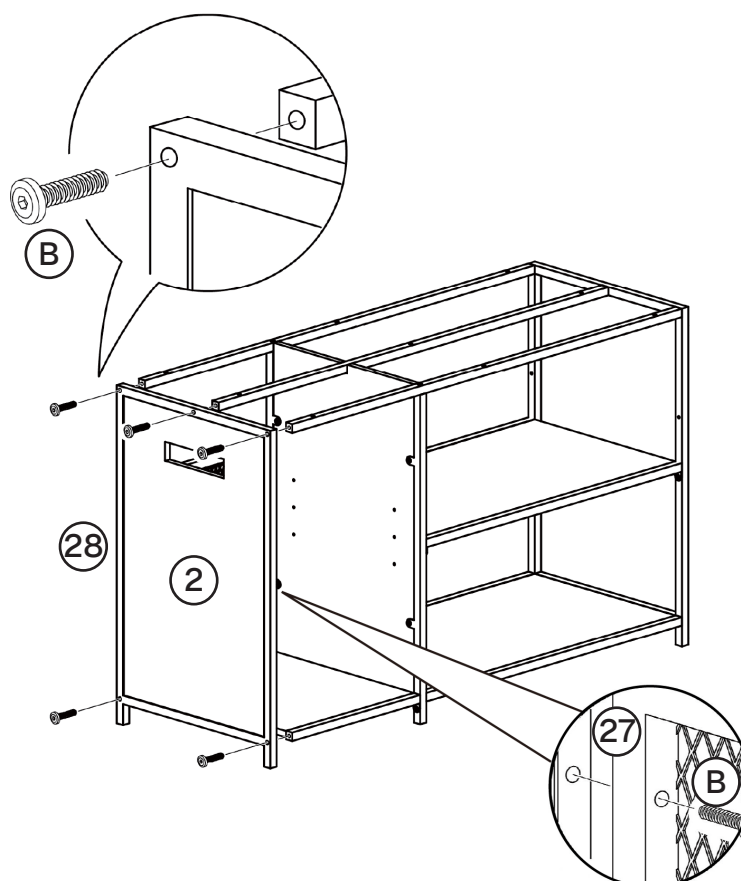


18

Assemble the shelf top panel (1) on top of the shelf assembly.



 B 9x

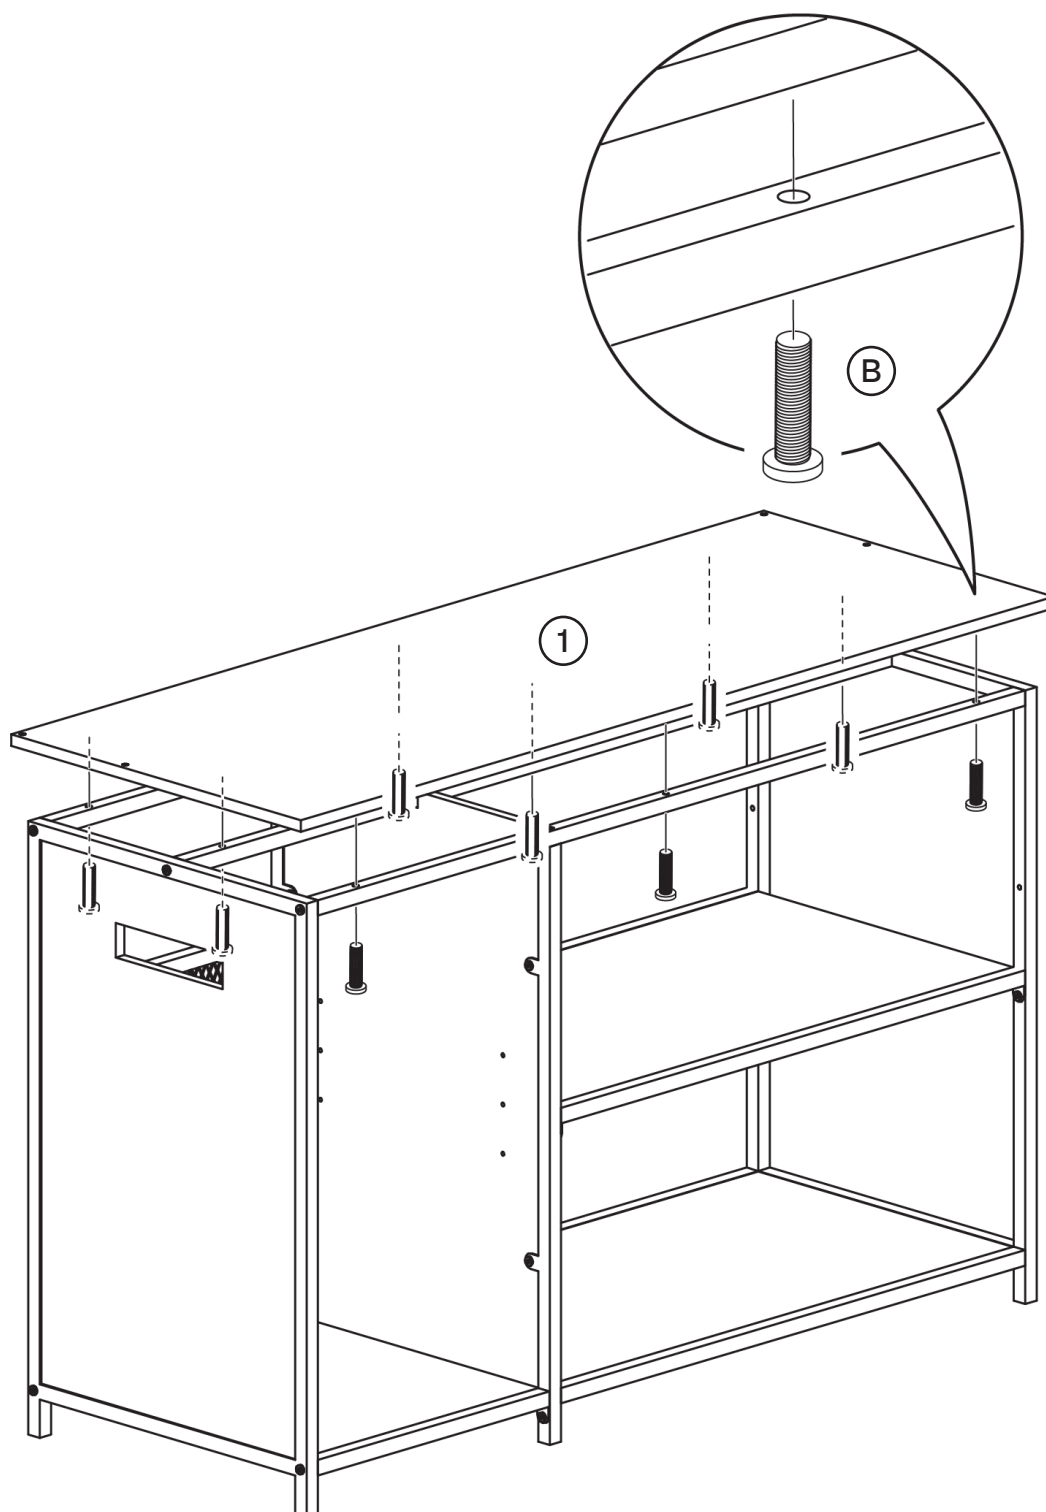

19

 
 
Insert and secure the power hub to the shelf left panel (2).



K 1x



L 2x

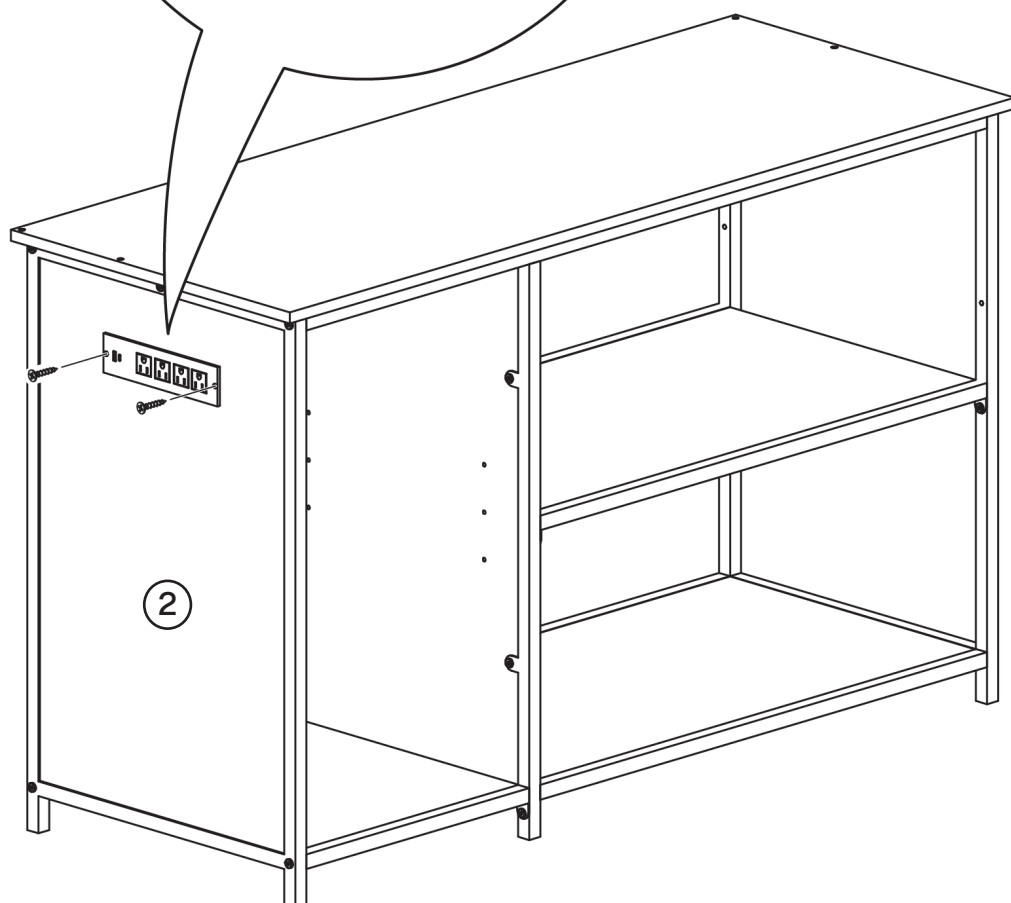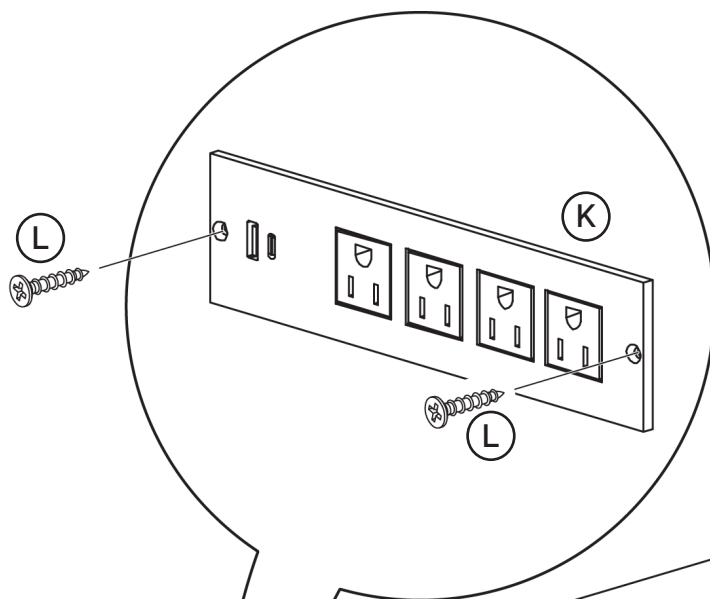


20

Insert wood dowels to the hutch metal panels (10).




 D 2x

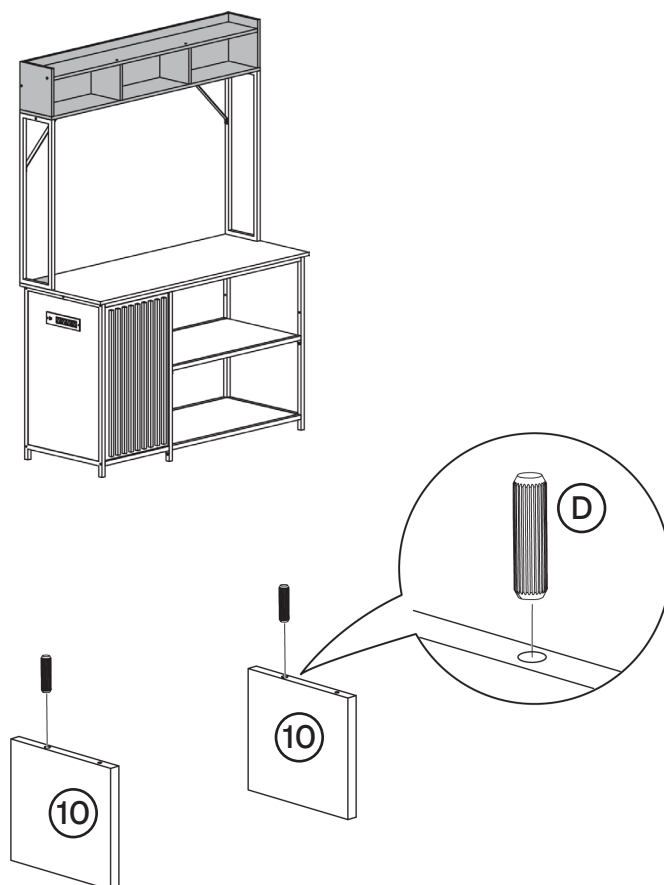


21

 Assemble the hutch top panel (12) on top of the hutch medial panels (10).



A 2x

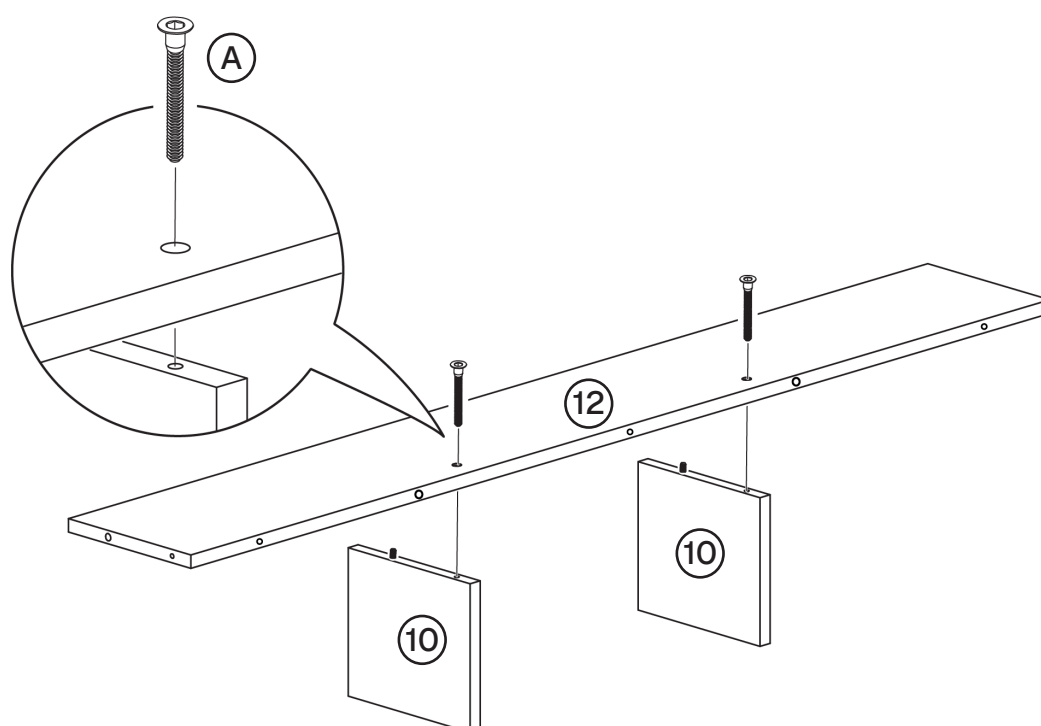 


22

Insert wood dowels to the hutch top panel (12).




 D 2x

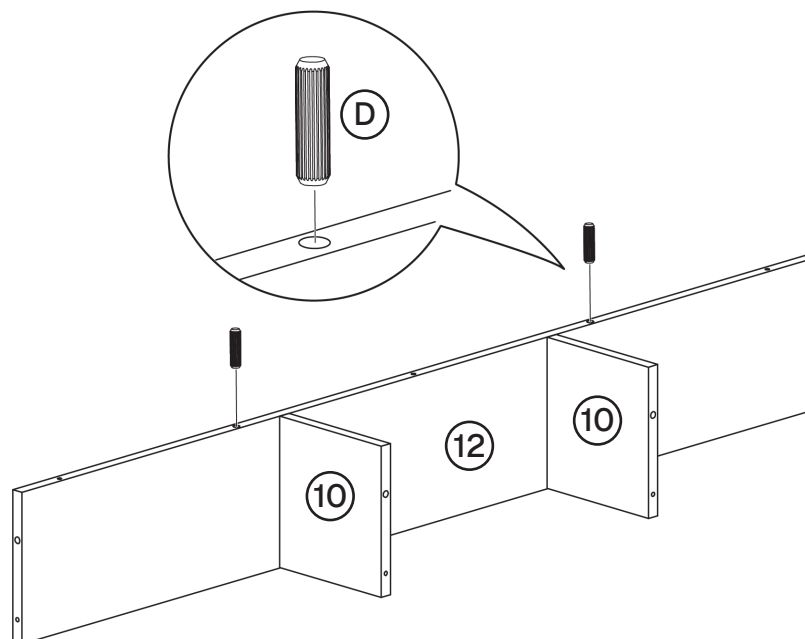


23

 Assemble the hutch back panel (11) to the hutch assembly.



A 3x

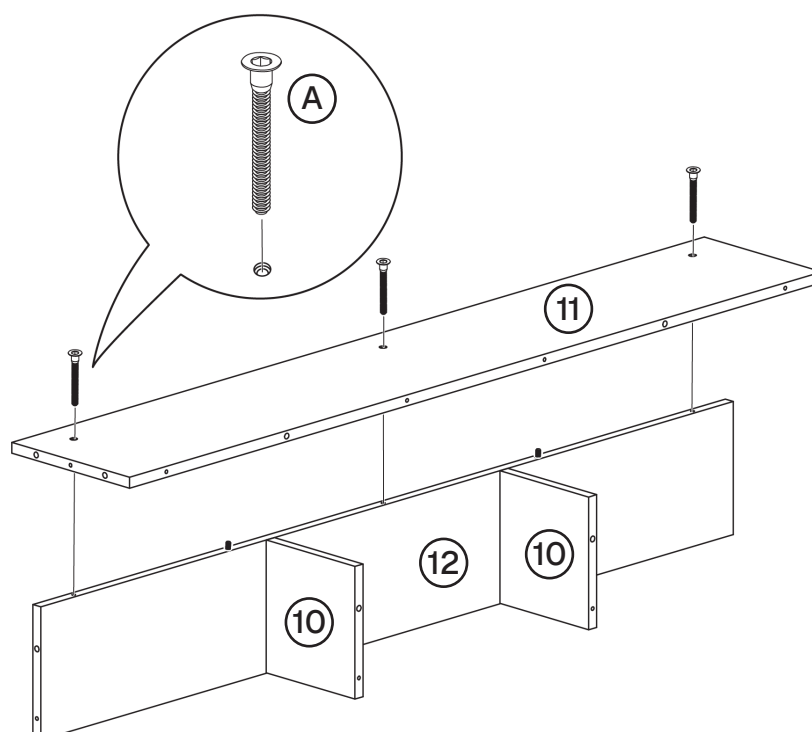 


24

Insert wood dowels to the hutch assembly.




Ø8 x 30mm

 D 6x

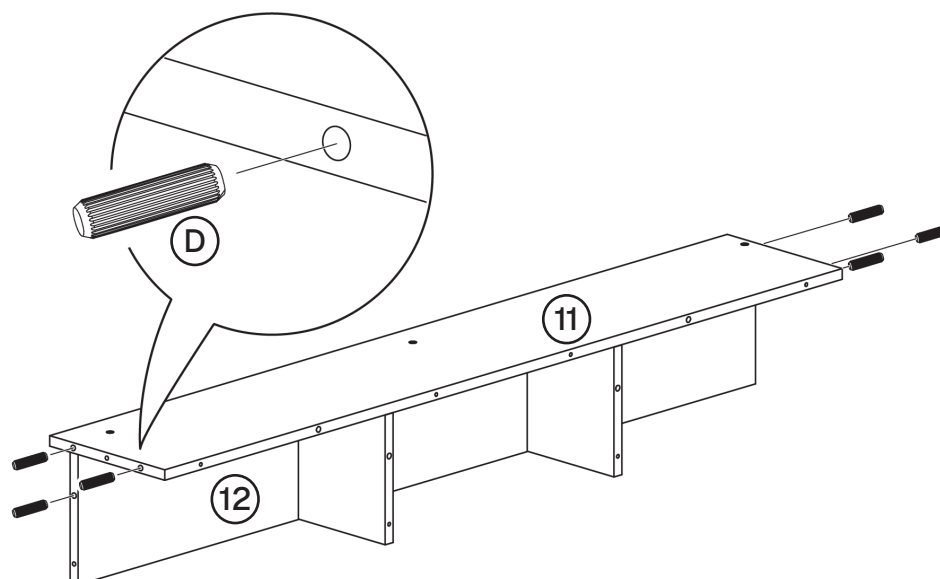


25

 Assemble the hutch side panels (8, 9) to the hutch assembly.



Ø6 x 48mm

 A 4x

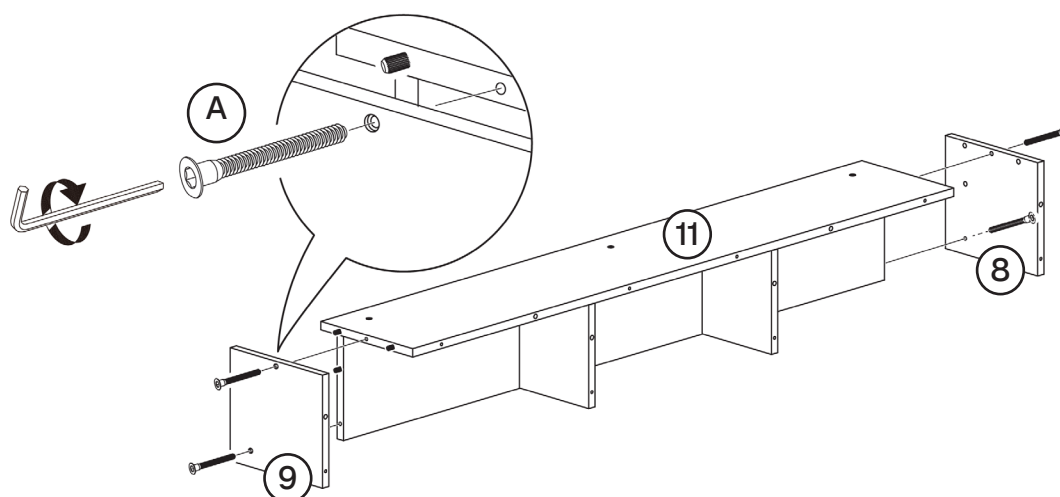


26

Insert wood dowels to the hutch assembly.




 D 6x

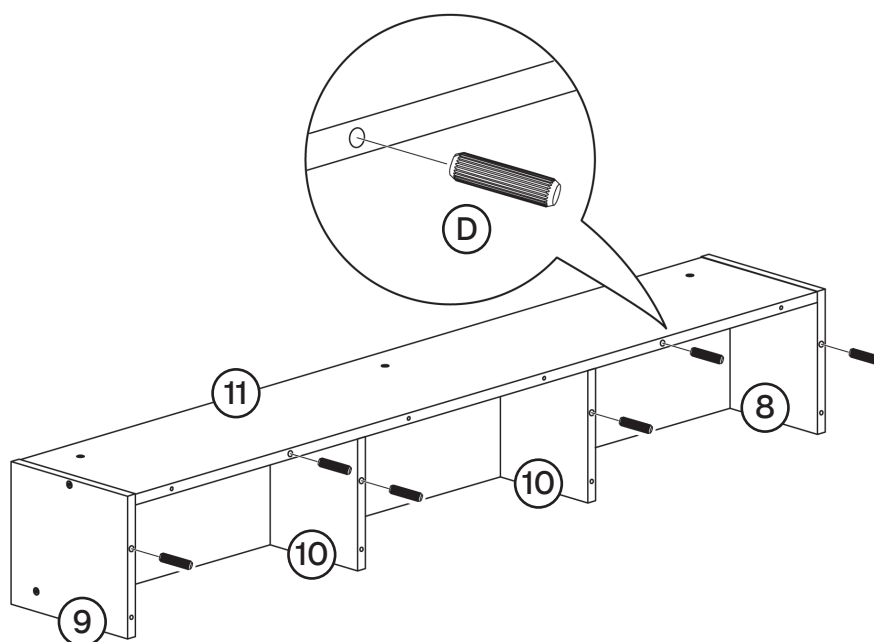


27

 Insert wood dowels to the hutch assembly.





A 8x

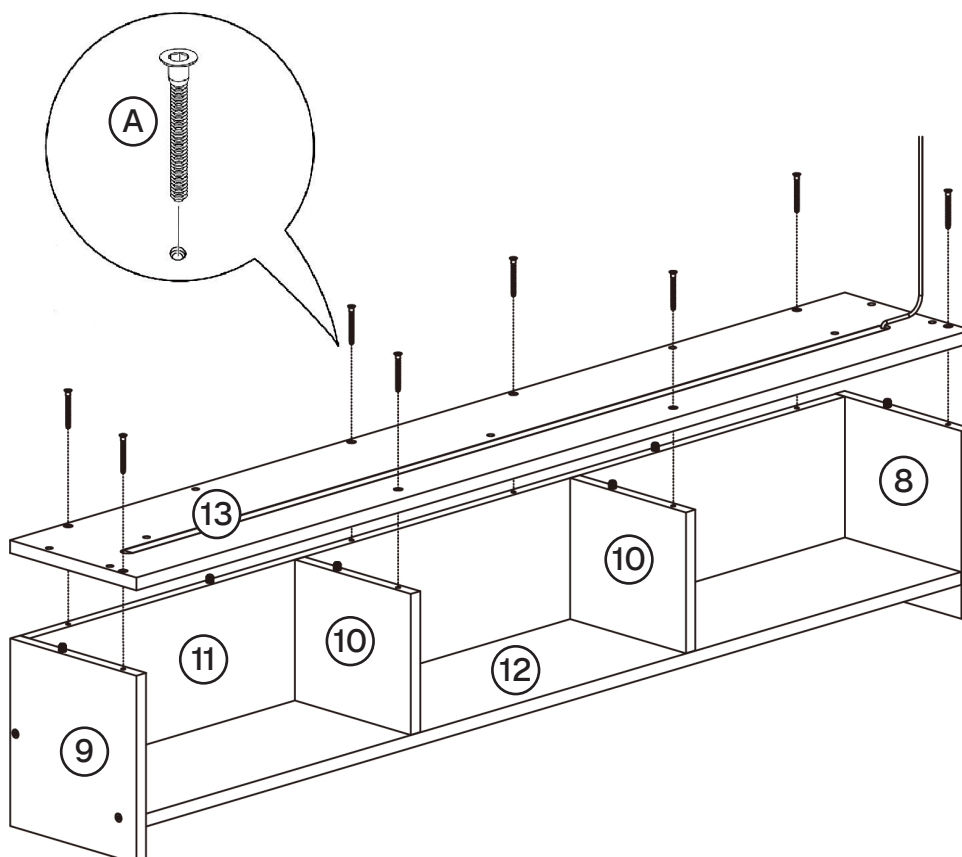 


28

  Insert wood dowels to the hutch assembly.

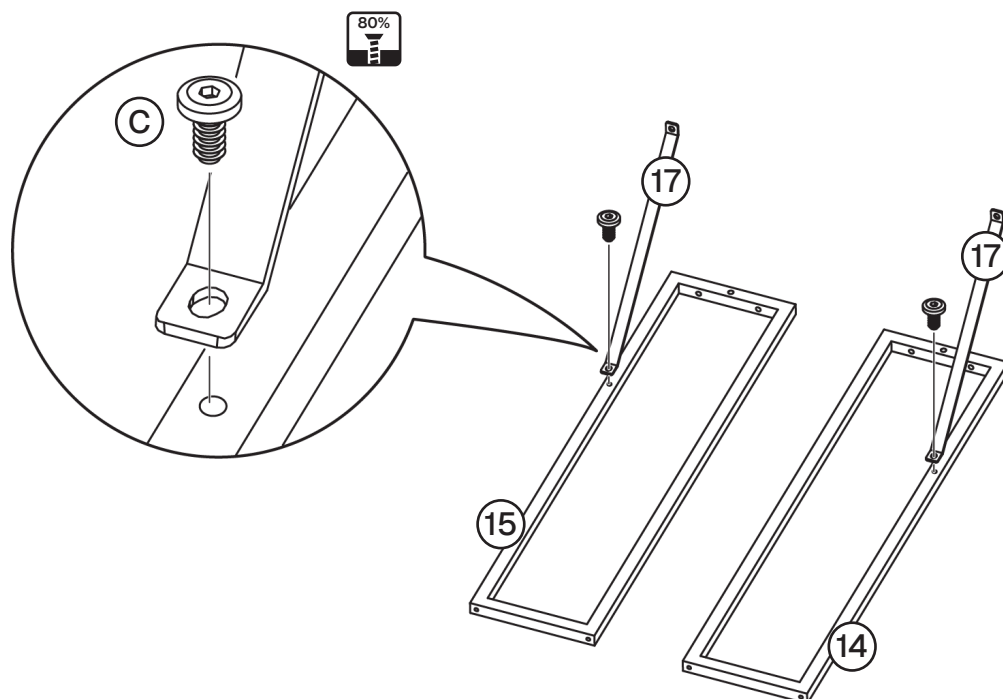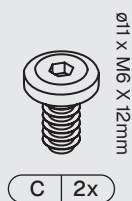

29

 Assemble the hutch crossbar (16) between the hutch support frames (14, 15).

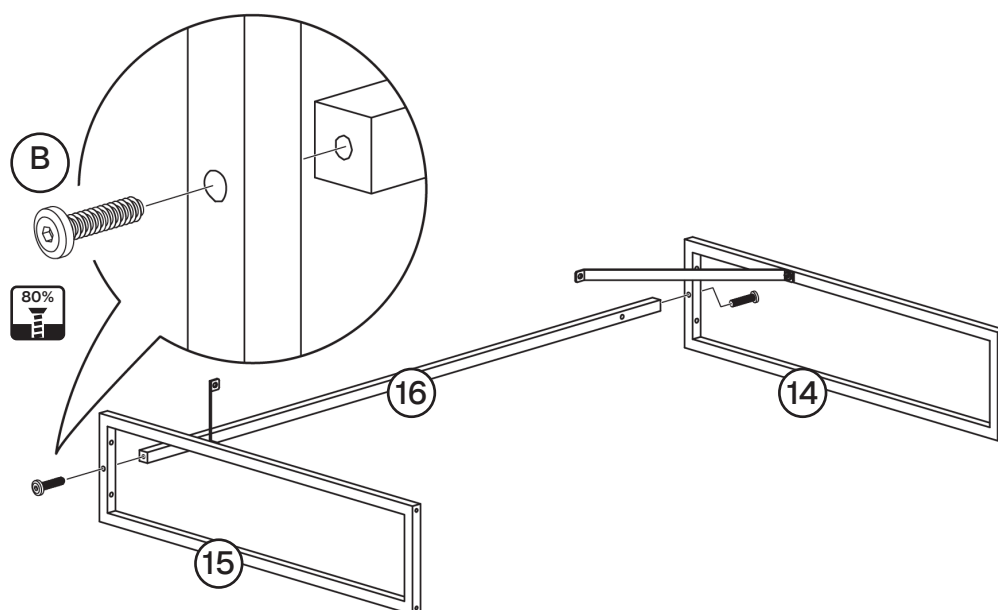


30

Attach the hutch support frame to the hutch shelf.



 B 7x

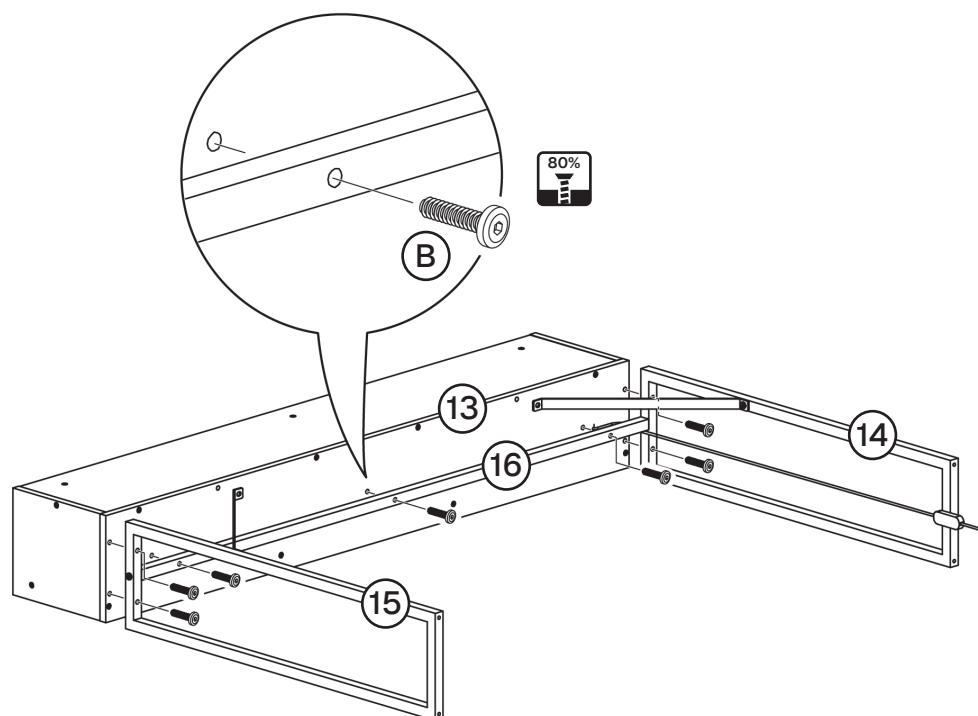


31

Further secure the corner brace frame to the hutch shelf.



 C 2x

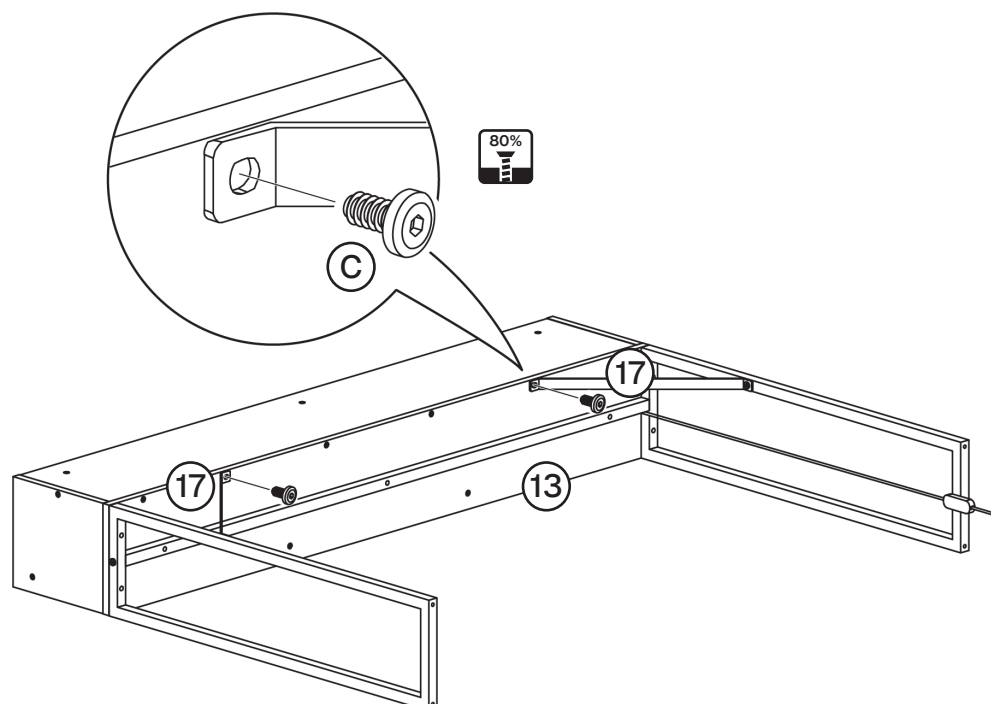


32

Assemble the whole hutch on top of the shelf assembly.




B 4x

 ★ Note: Fully tighten all the bolts on the frame.

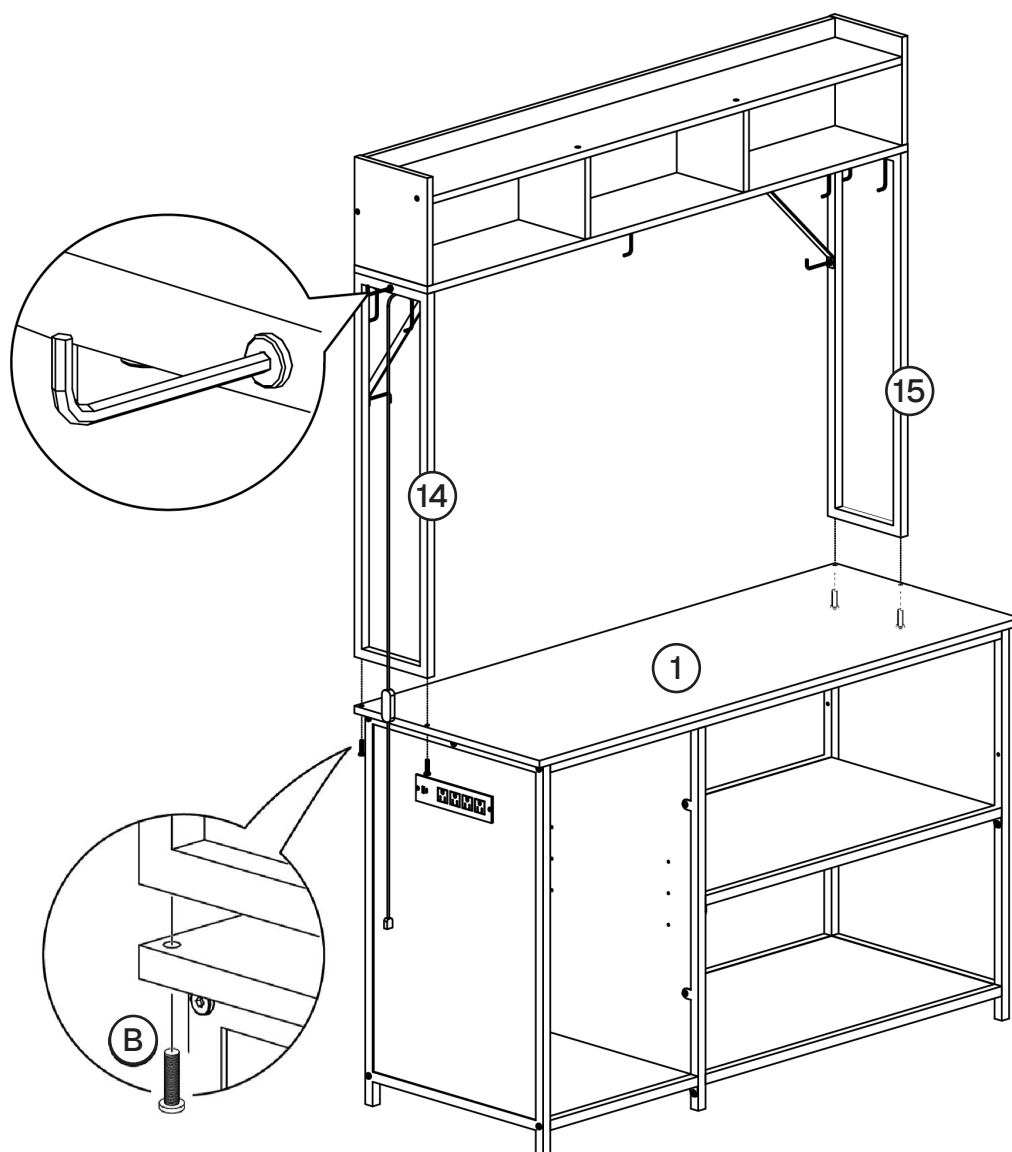



33

 Insert shelf pegs into the shelf and put the shelf panel (3) on top of the pegs.

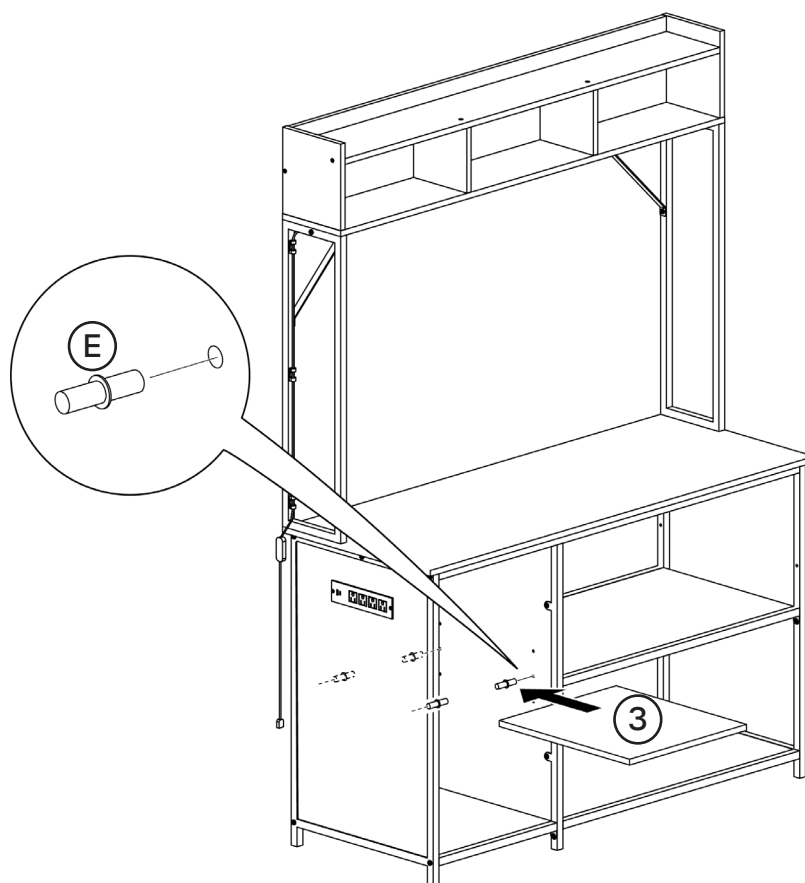

34

  Attach door hinges to the cabinet door (7).

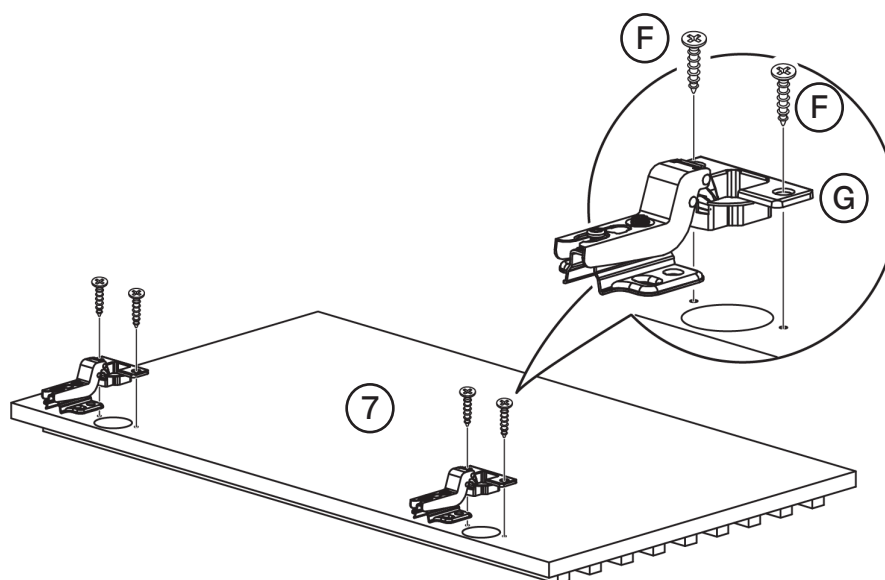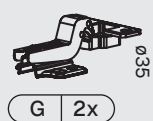


35





Install the cabinet door to the shelf.




 
F 8x

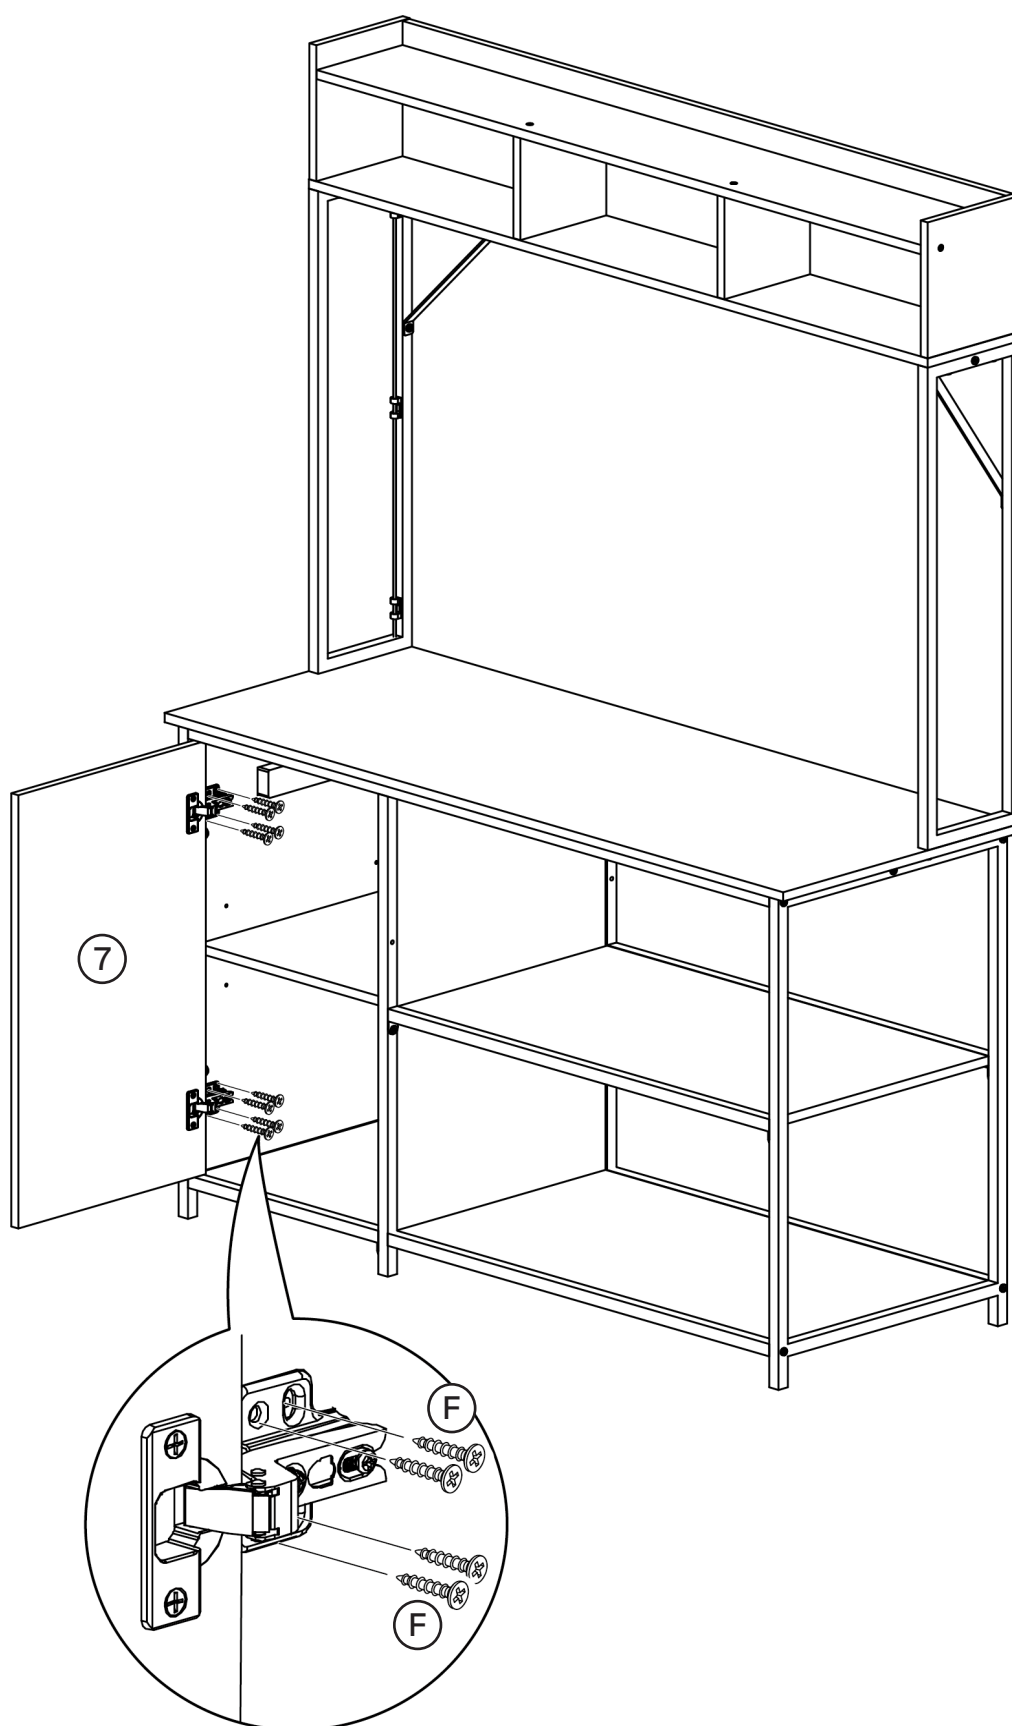





i

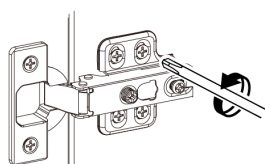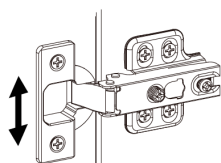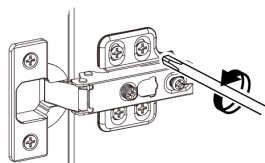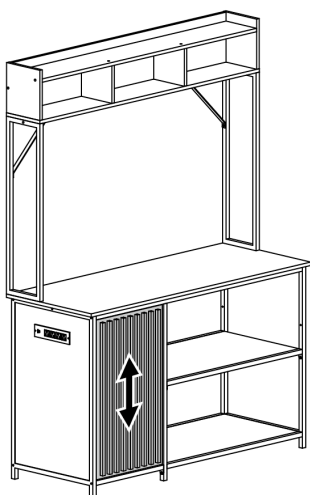    

  Loosen the screws on the mounting plate to adjust the door **up and down**.

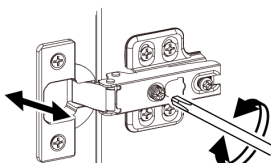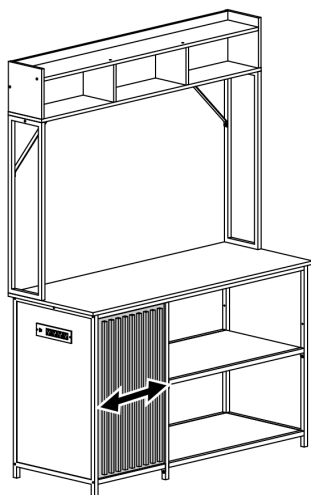

    Adjust the screw on the hinge to micro-adjust the door from **side to side**.

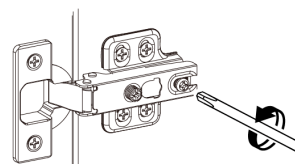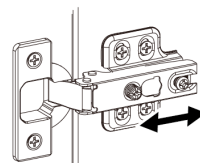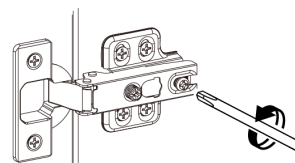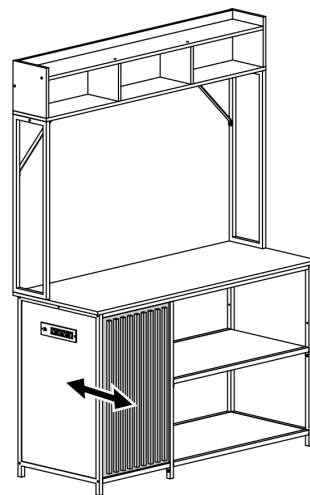

Loosen the screws on the hinge arm to adjust the door **in and out**.

36

 
Attach anti-tipping straps to the back of the rack.



O 2x



P 2x

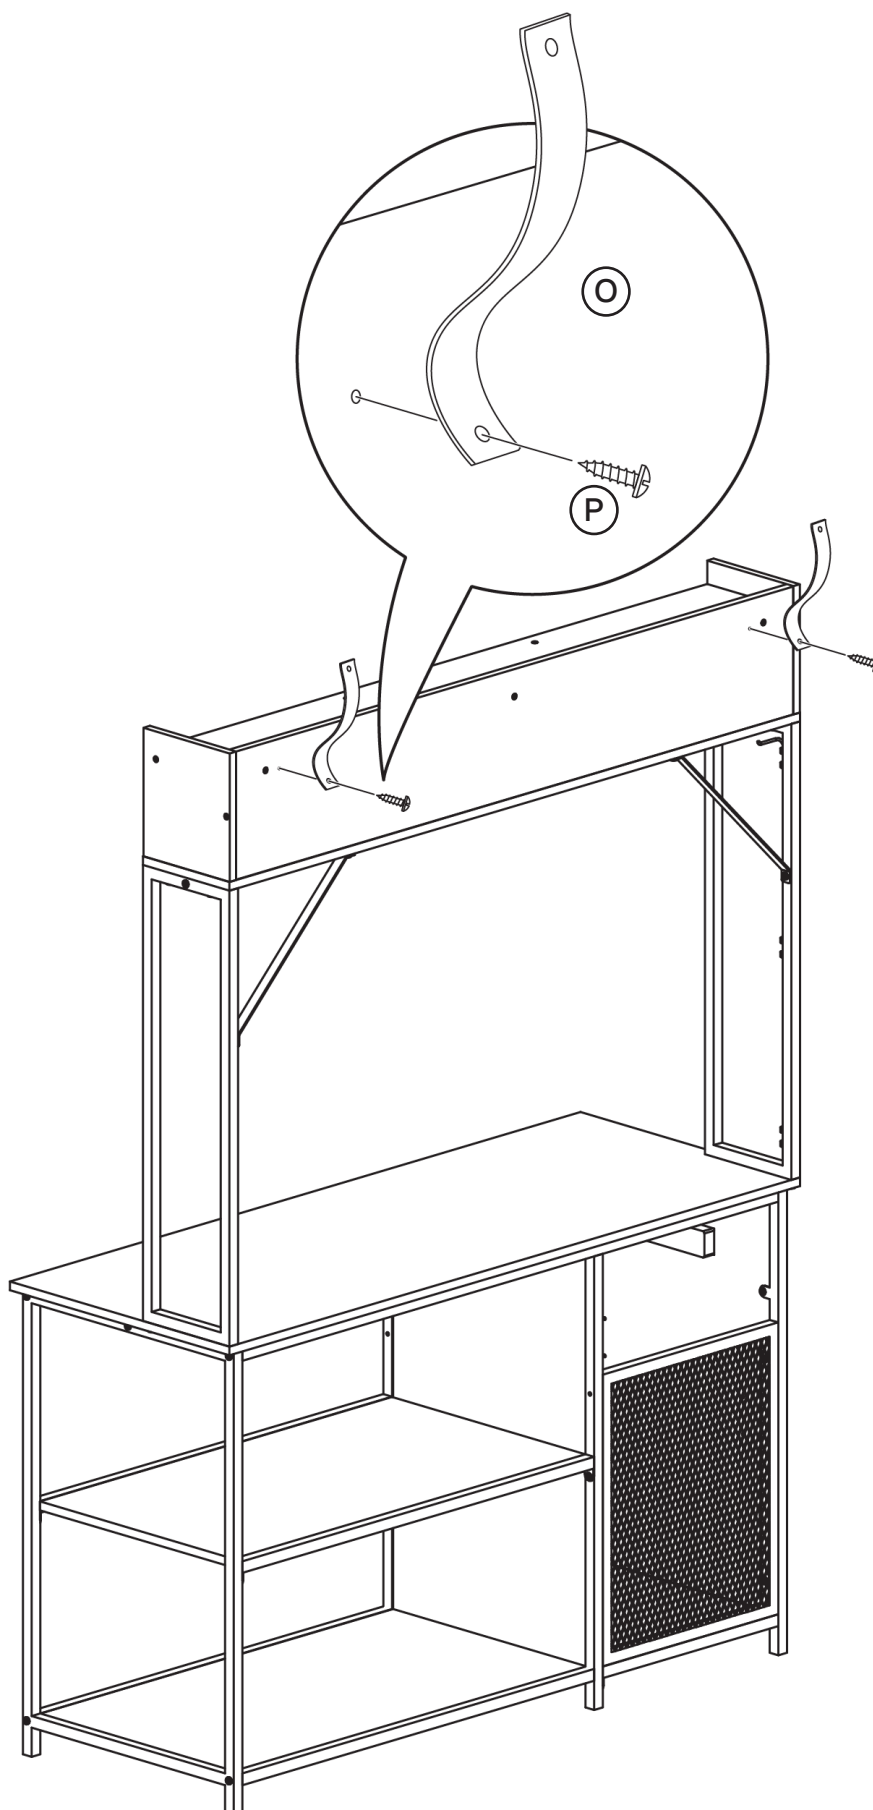

37

 
 
 
 
 
 
Affix the rack to a wall.



M 2x



N 2x

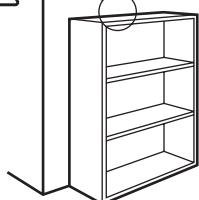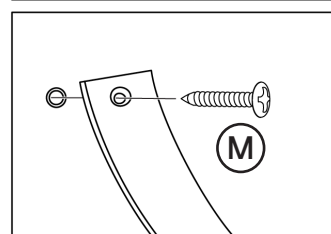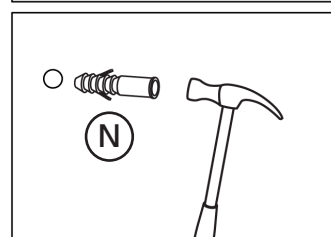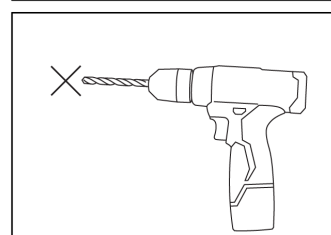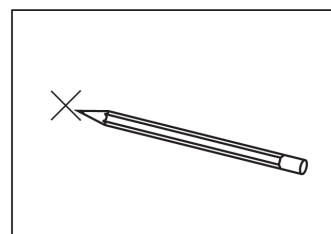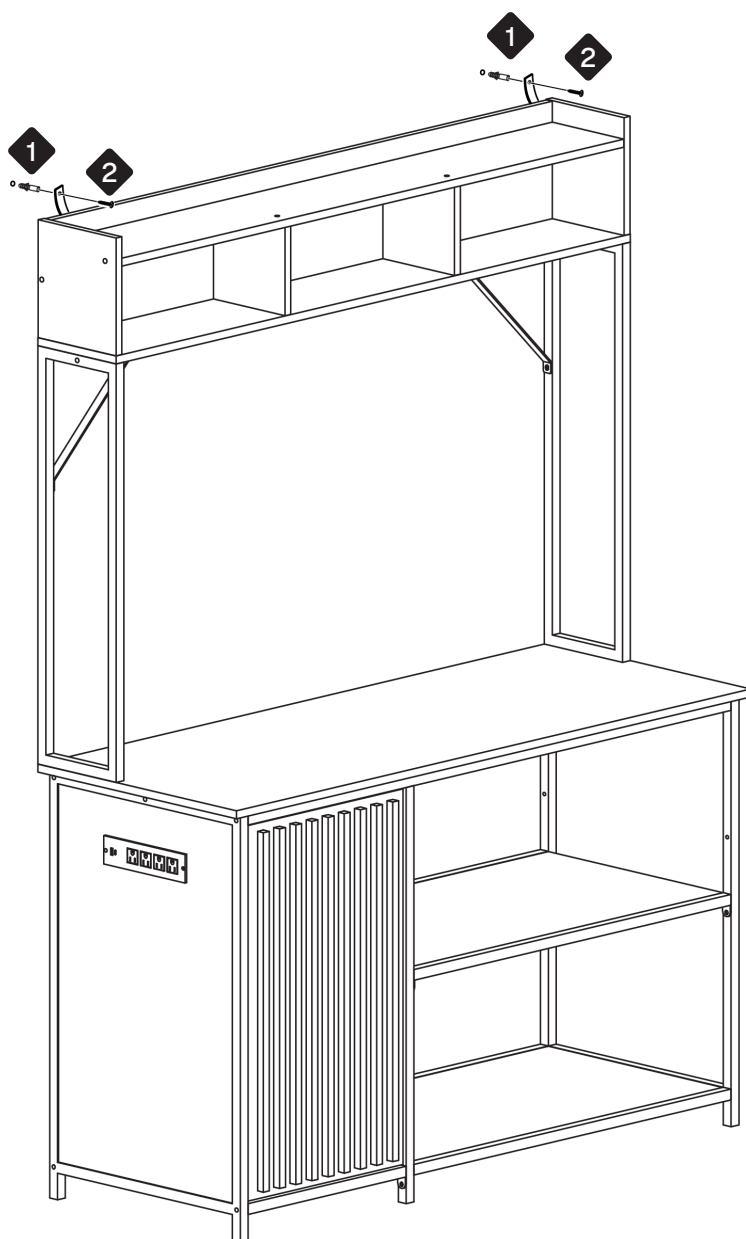


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

38

 Connect the LED light power cable to the USB power hub and use the cable management tools to attach the cable to the hutch support frame.

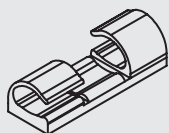






I 4x



J 4x



     Q 1x

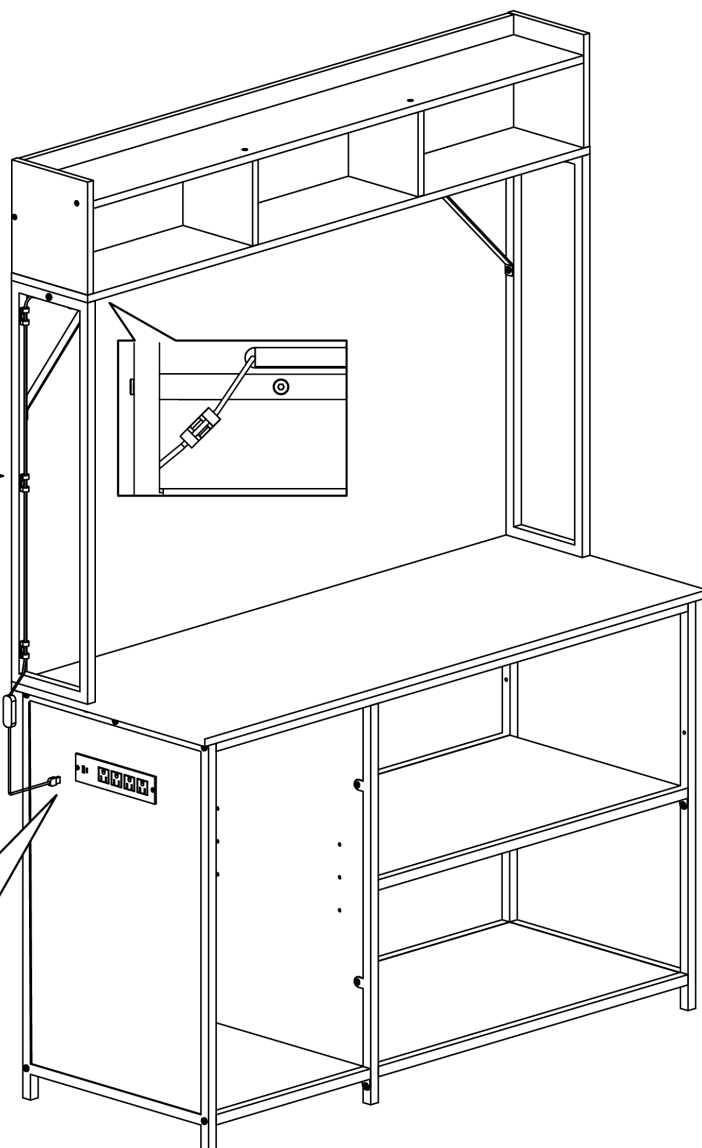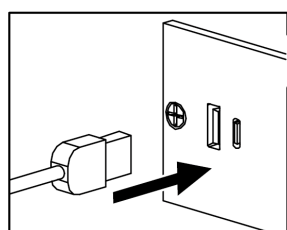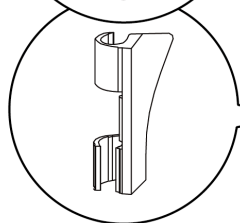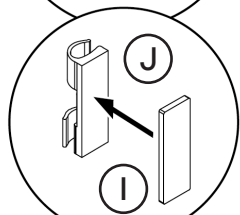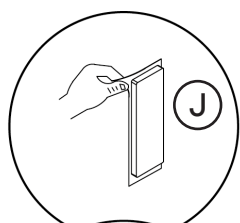


READ ALL INSTRUCTION BEFORE USE

- 1: Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Battery type: Button cell (CR2025).
5. Nominal battery voltage: (5-24)V.
6. Non-rechargeable batteries are not to be recharged.
7. Do not force discharge, recharge, disassemble, heat above 60 °C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -).
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children
11. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

 WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	 

 USER INSTRUCTION (REMOTE CONTROL)

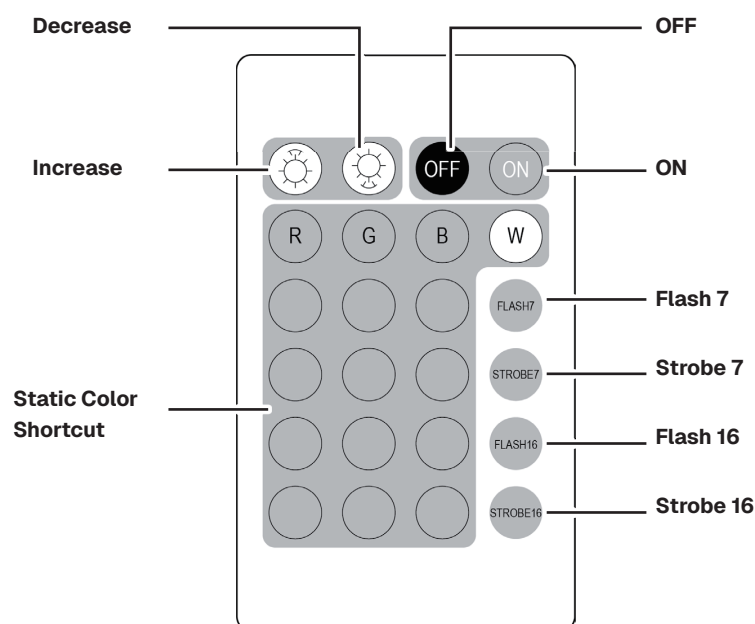

ON

Press the ON button to turn on the light.

OFF

Press the OFF button to turn off the light.

Static Color Shortcut

Each button is assign to a color, press the button to select your desire color.

Increase

Press the increase button to increase brightness in static color mode.
Press the increase button to increase effect speed in light effect mode.

Decrease

Press the increase button to decrease brightness in static color mode.
Press the increase button to decrease effect speed in light effect mode.

Flash 7

Press the button to enable spectrun cycle mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Strobe 7

Press the button to enable color breathing mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Flash 16

Press the button to enable spectrun cycle mode.
The colors will cycle between all 16 colors.

Strobe 16

Press the button to enable color breathing mode.
The colors will cycle between all 16 colors.

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.

Warranty

BELLEZE products comes with a 1-year warranty from the date of delivery.
Register your product on our website to enjoy out limited lifetime warranty!

After-Sale Service



Encounter any difficulties or missing parts?



Contact us at **1-800-682-6376** or email us at **support@belleze.com**



We will send you replacement.



Hassle free!
No need to worry about repackaging and sending your item back.

Contact Us



support@belleze.com



1-800-682-6376